


PASSENGER COMPARTMENT TEMPERATURE SENSOR: REMOVAL - REFITTING


REMOVAL

1. REMOVAL PREPARATION OPERATION

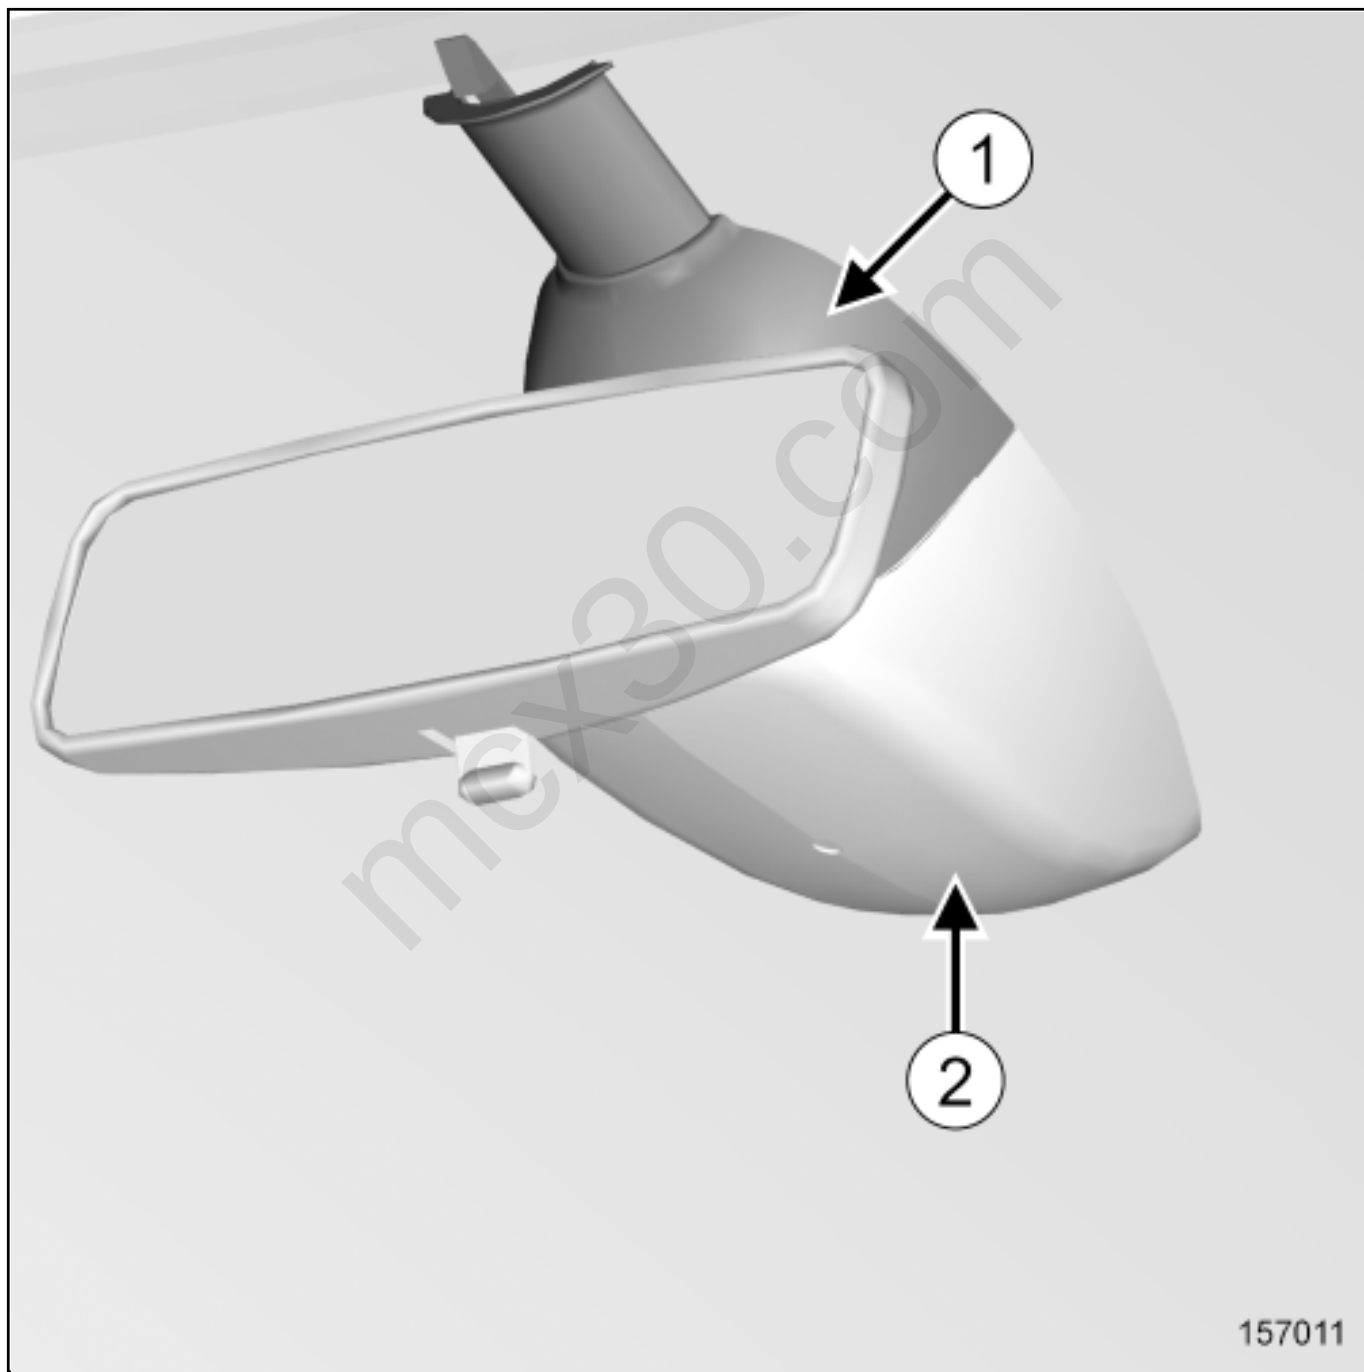

- Remove the interior rear view mirror trims(1) and (2) .

2. REMOVAL OPERATION

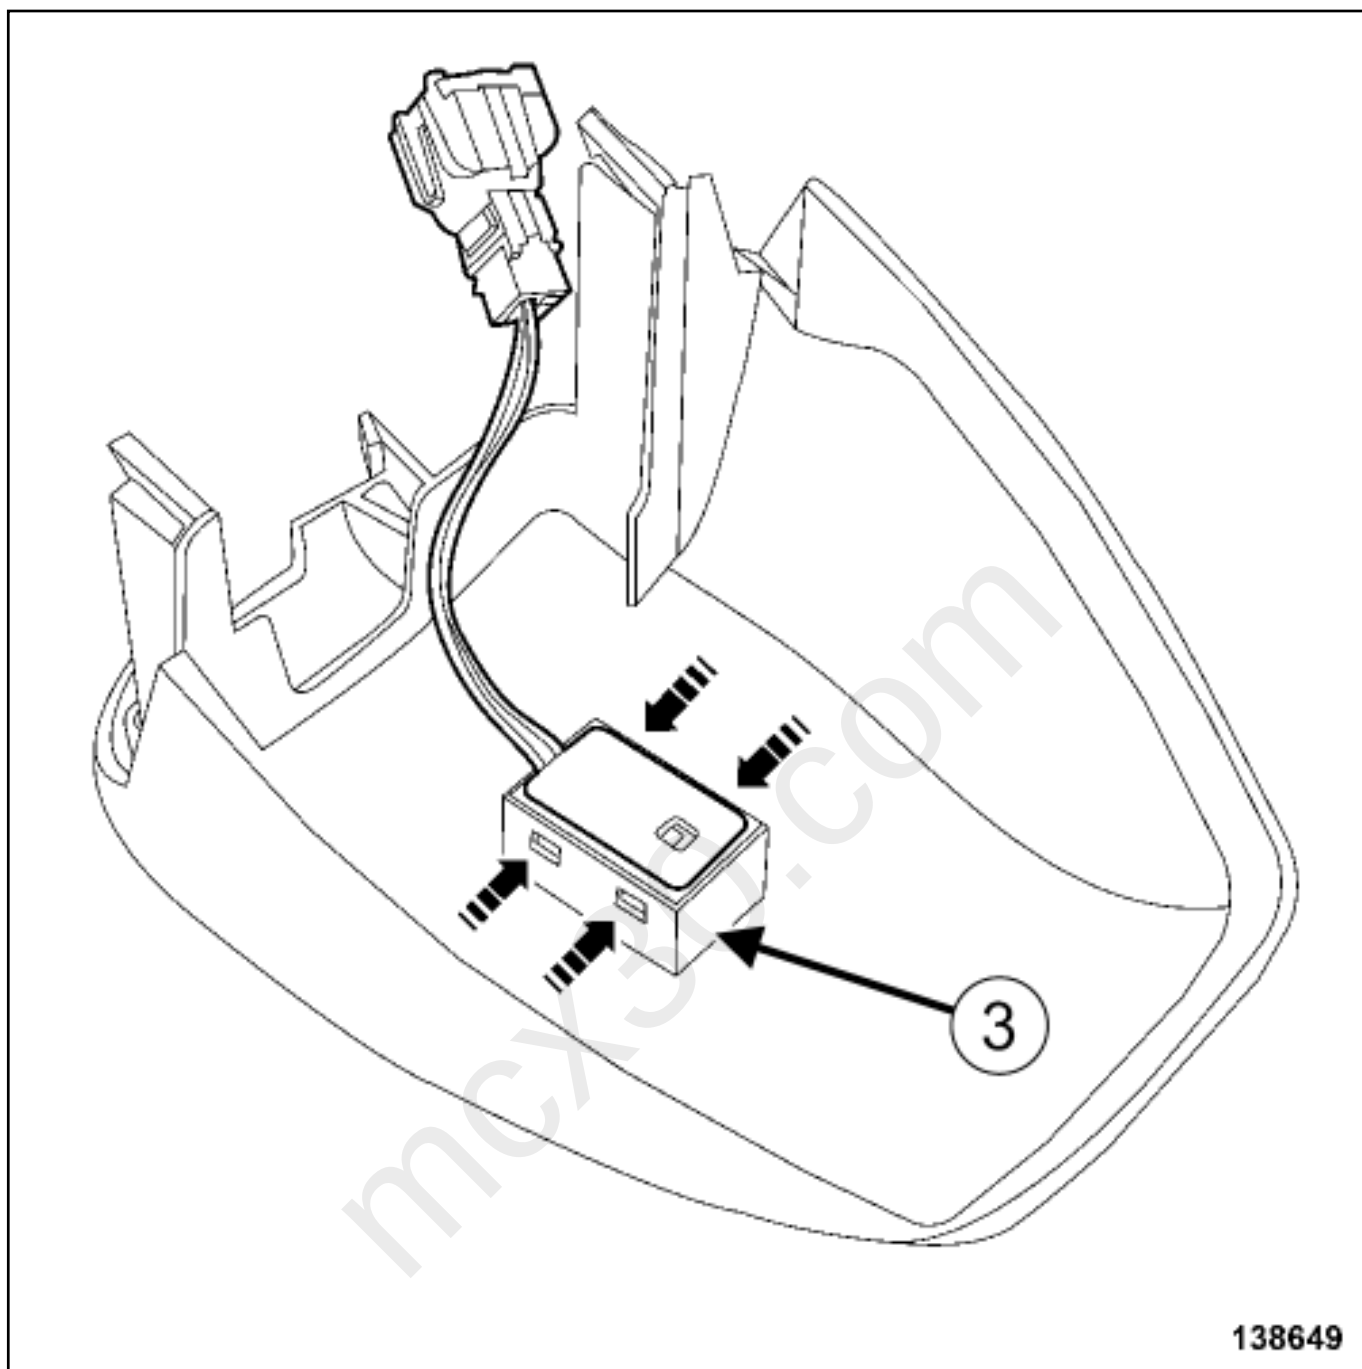

- Disconnect the passenger compartment temperature sensor connector.
- Unclip the passenger compartment temperature sensor(3) from the interior rear view mirror trim.

REFITTING

- Proceed in the reverse order to removal.



mcx30.com