

REAR AXLE ASSEMBLY: EXPLODED VIEW



Note, one or more warnings are present in this procedure



WARNING

- To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:
 - [\(see 33A, Rear axle components, Rear axle components: Precautions for the repair\)](#) .
 - [Vehicle: Precautions for the repair](#) .

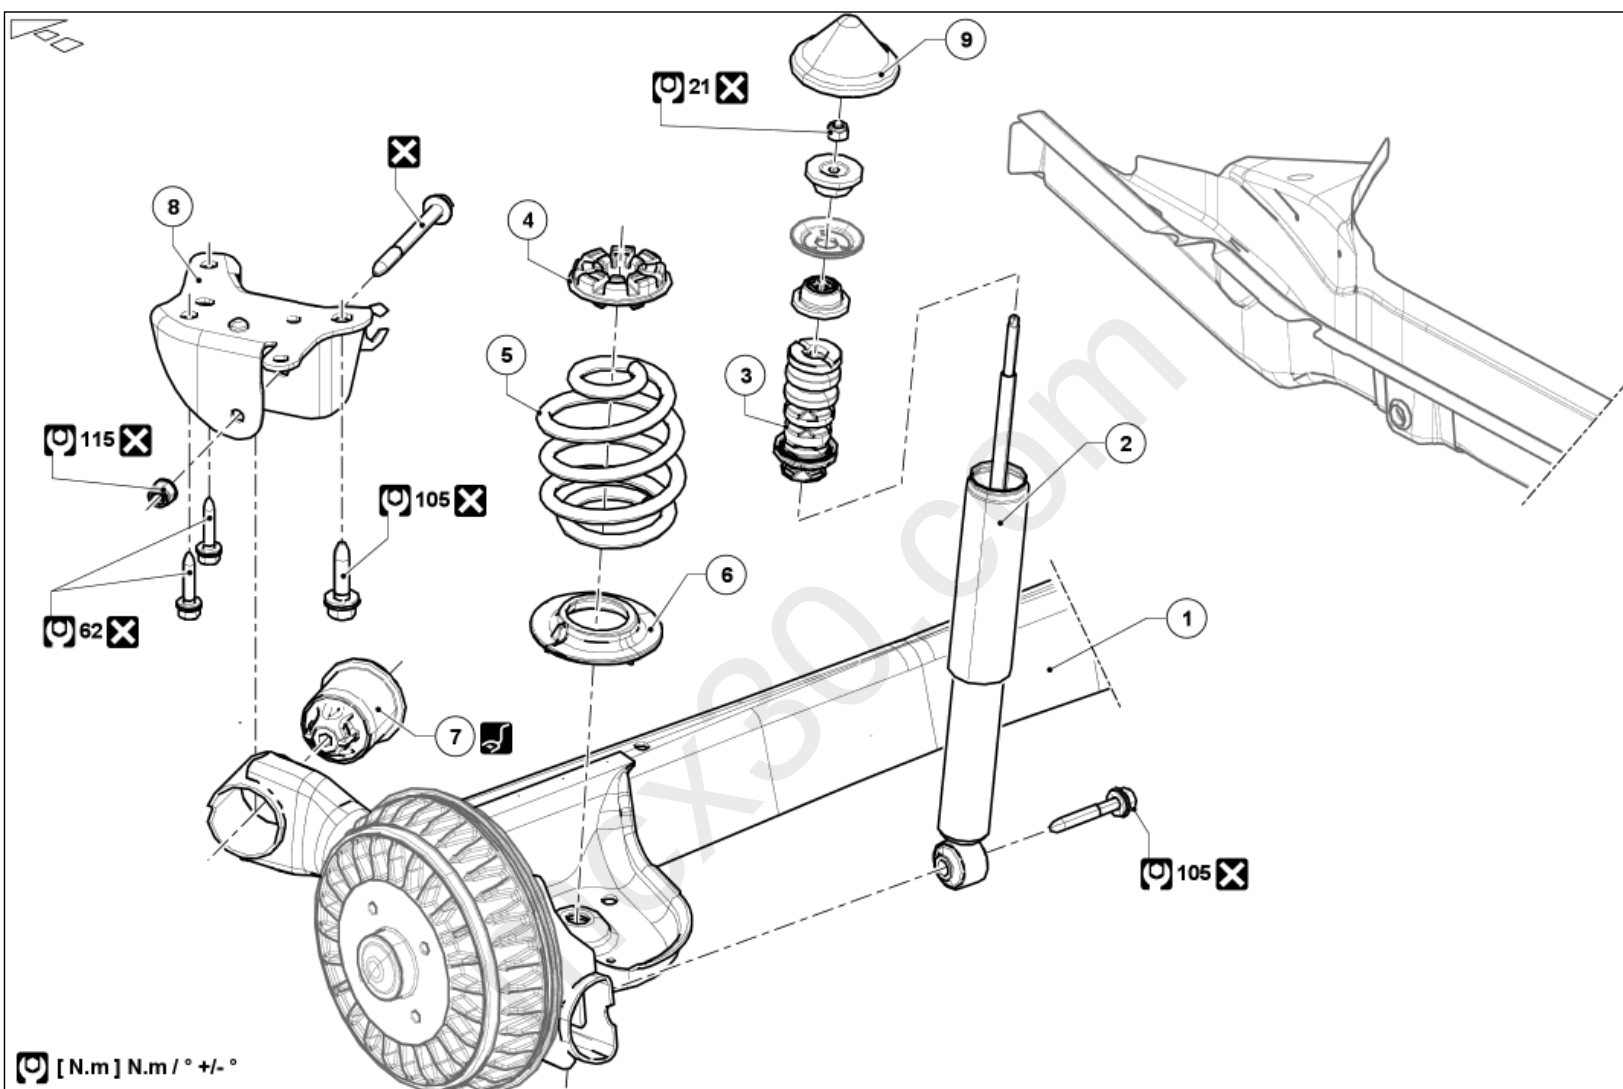


Illustration key: [Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Rear axle assembly	(see Complete rear axle system: Removal - Refitting)
2	Shock absorber	(see 33A, Rear axle components, Shock absorber: Removal - Refitting)
3	Rear axle stop	(see 33A, Rear axle components, Shock absorber: Removal - Refitting)
4	Upper spring support	
5	Spring	
6	Lower spring support	
7	Rear axle rubber bearing	(see 33A, Rear axle components, Rear axle rubber bearing: Removal - Refitting) (Tar. 1838)
8	Rear axle bearing	(see Complete rear axle system: Removal - Refitting)
9	Cap	

XSL version : 3.02 du 22/07/11

Repair-13x02x05-02x50-1-6-1.xml