

# REAR BENCH SEAT BASE: REMOVAL - REFITTING



parts always to be replaced:



Rear bench seat mounting on body


- Location and specifications (tightening torques, parts always to be replaced, etc.) ([see 76A, Rear seat frames and mechanisms, Rear bench seat assembly: Exploded view](#)) .

## REMOVAL

### 1. REMOVAL PREPARATION OPERATION

### 2. REMOVAL OPERATION

mcx30.com

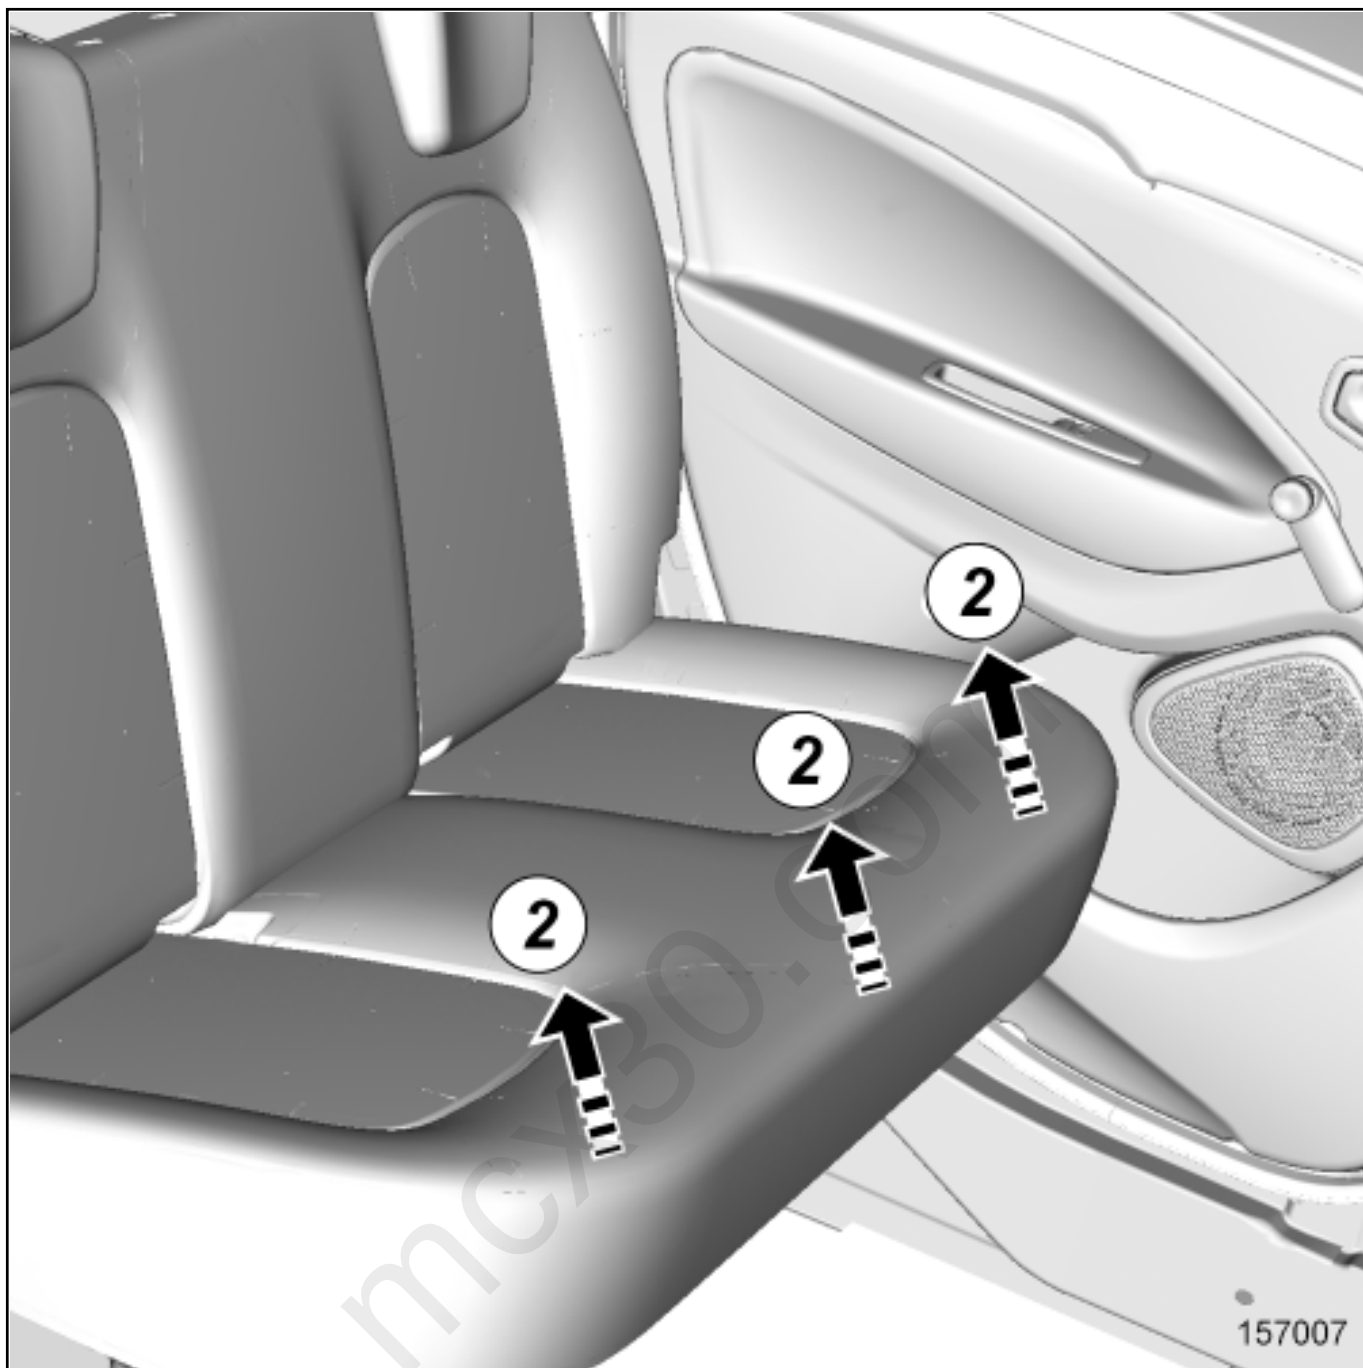

- Unclip the rear bench seat base by pulling it forcefully towards(2) .

Note:



The locking clip of the rear bench seat base mounting clips always breaks whenever the rear bench seat base is removed.

It is necessary to use a vacuum cleaner and an air gun to recover the clip pieces remaining in the body.

## REFITTING

### 1. REFITTING PREPARATION OPERATION



parts always to be replaced:  Rear bench seat mounting on body .

### 2. REFITTING OPERATION

 Proceed in the reverse order to removal.

Note:



When refitting the rear bench seat base, check that the mountings of the rear bench seat base frame are correctly locked on the body by listening for the "clip".

### 3. FINAL OPERATION

 Proceed in the reverse order to removal.



Repair-70x13x02x02-01x37-1-10-1.xml



XSL version : 3.02 du 22/07/11