

REAR BUMPER: REMOVAL - REFITTING


Location and specifications (tightening torques, parts always to be replaced, etc.) ([see 55A, Exterior protection, Rear bumper assembly: Exploded view](#)) .

REMOVAL


1. REMOVAL PREPARATION OPERATION

- Position the vehicle on a two-post lift [Vehicle: Towing and lifting](#) .
- Remove the rear wheels [Rear hub carrier assembly: Exploded view](#) .

mcx30.com

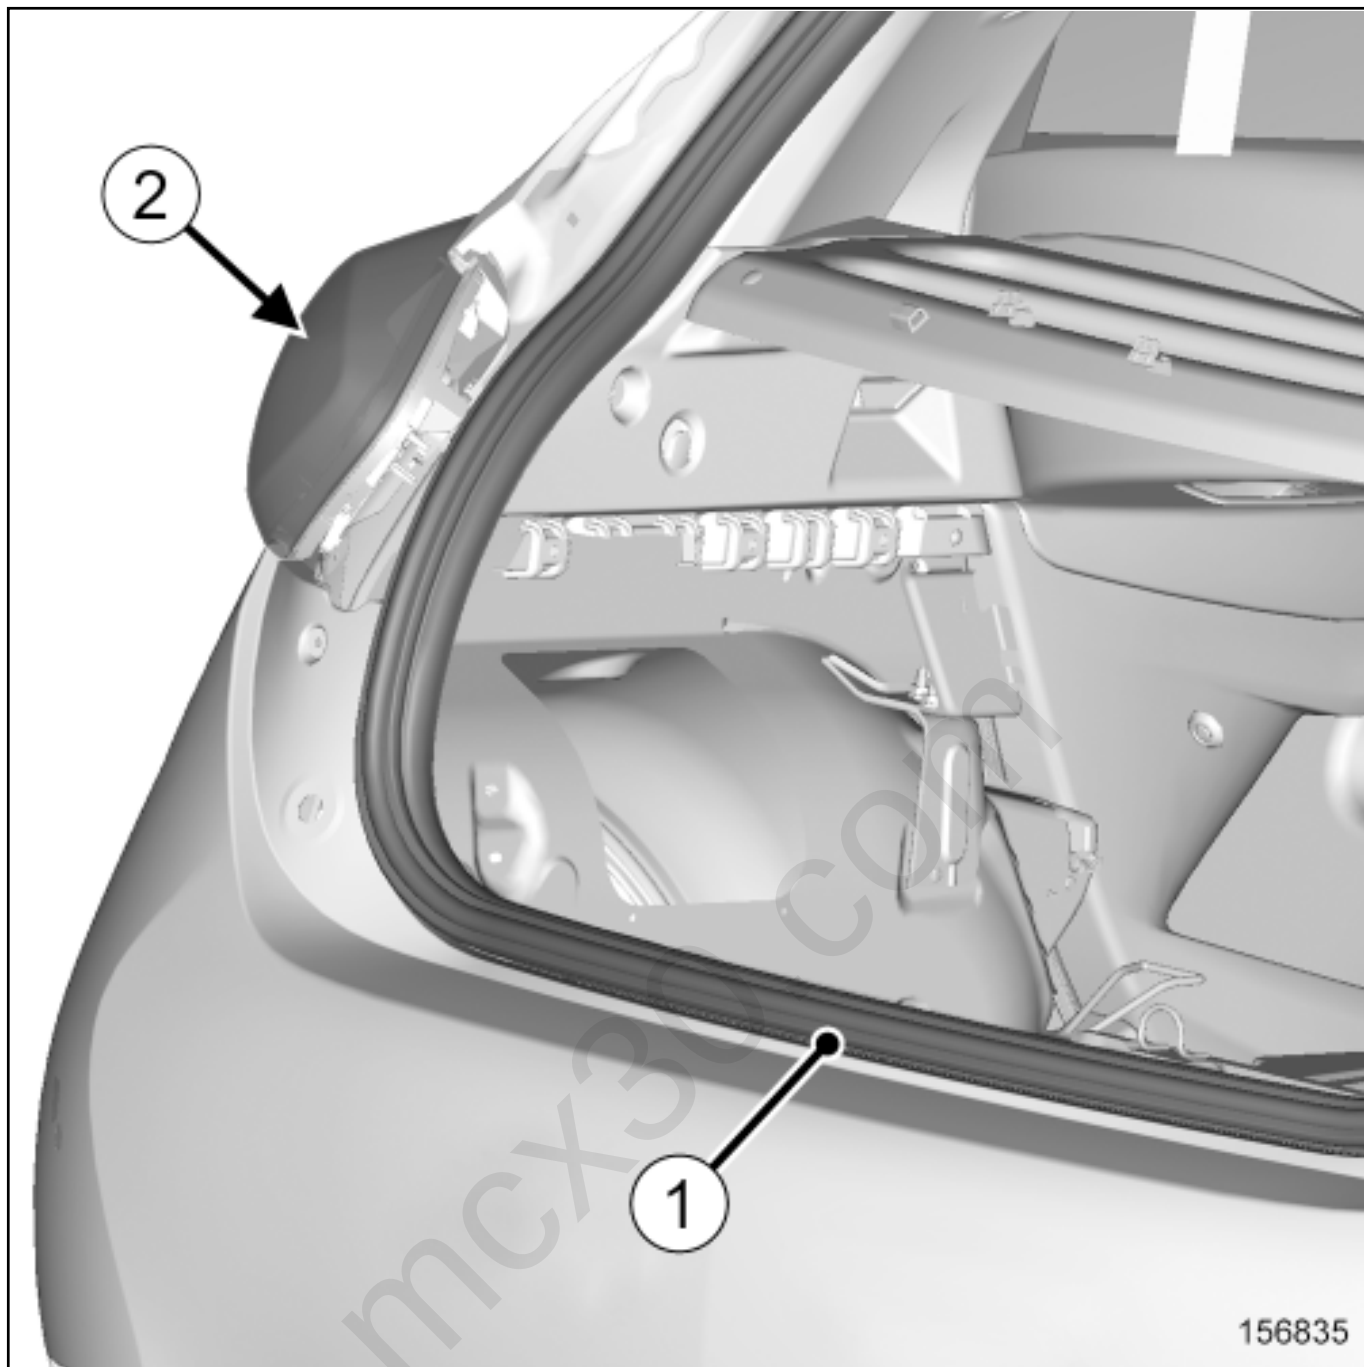


- Move aside the luggage compartment seal(1) .
- Remove the rear lights(2) [Rear signals - lighting assembly: Exploded view](#) .

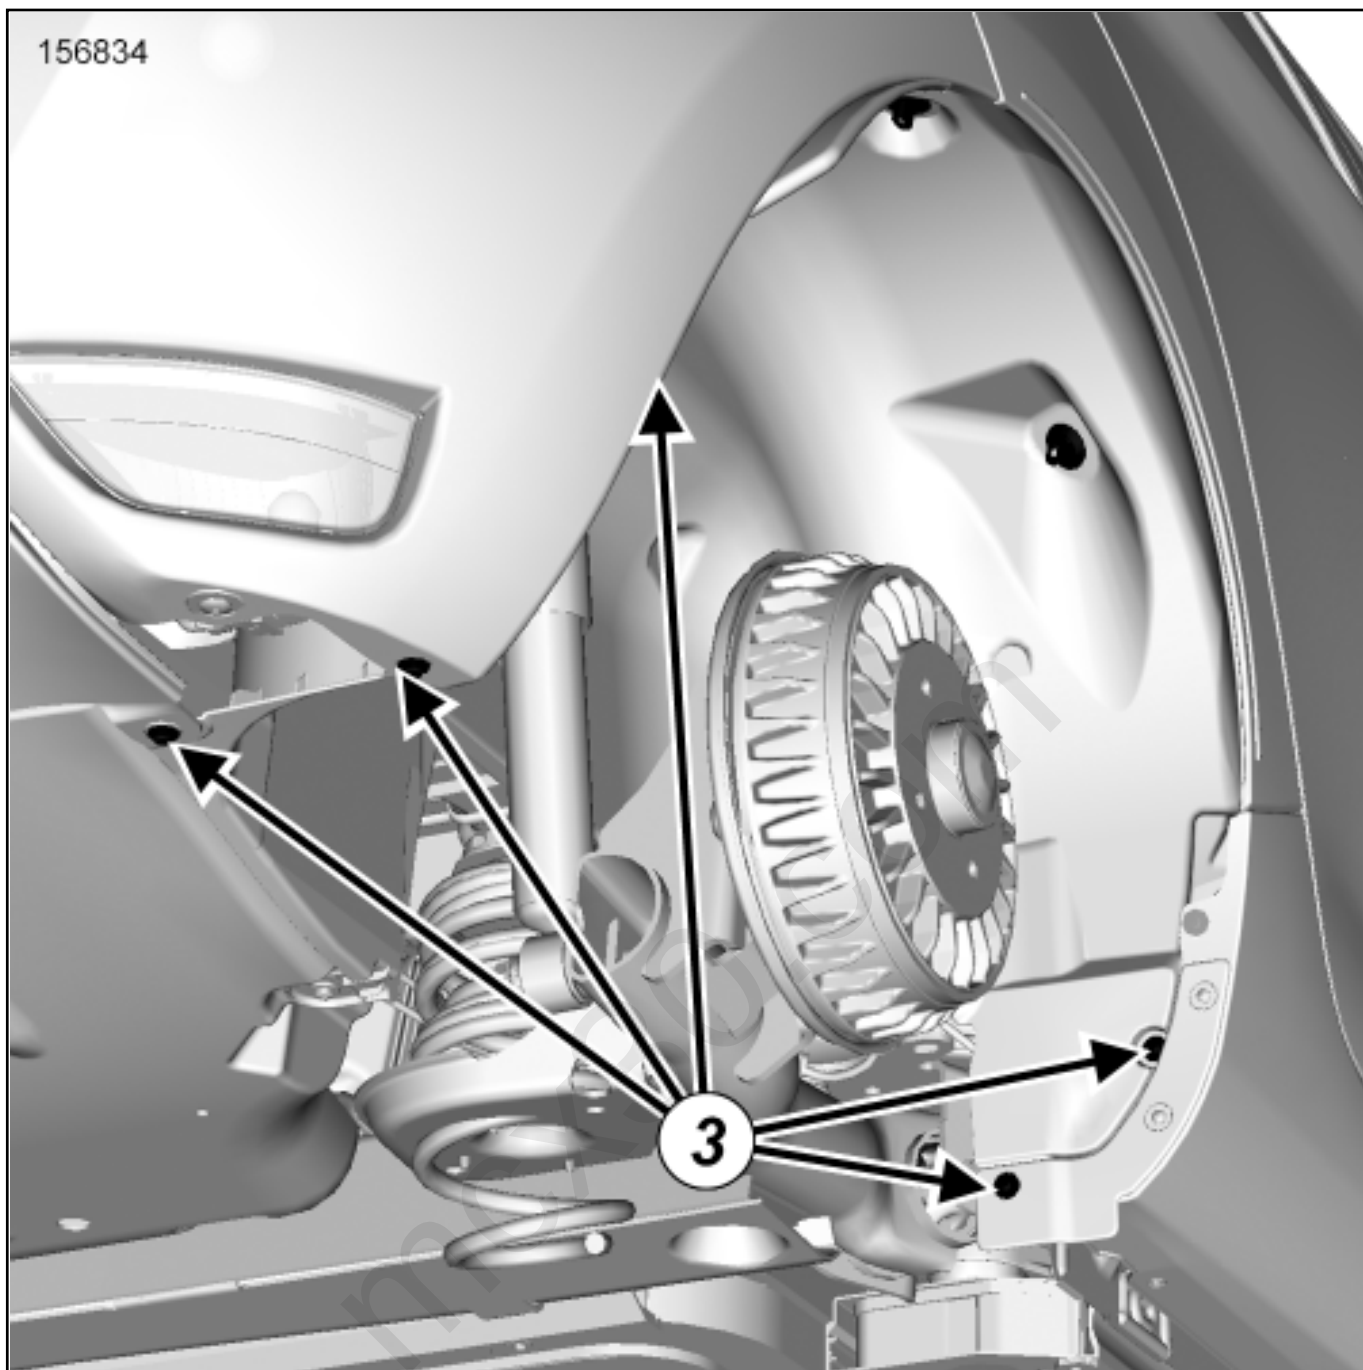


■ Remove:

- the rear wheel arch liners screws(3) ,
- the rear wheel arch liners.


2. REMOVAL OPERATION

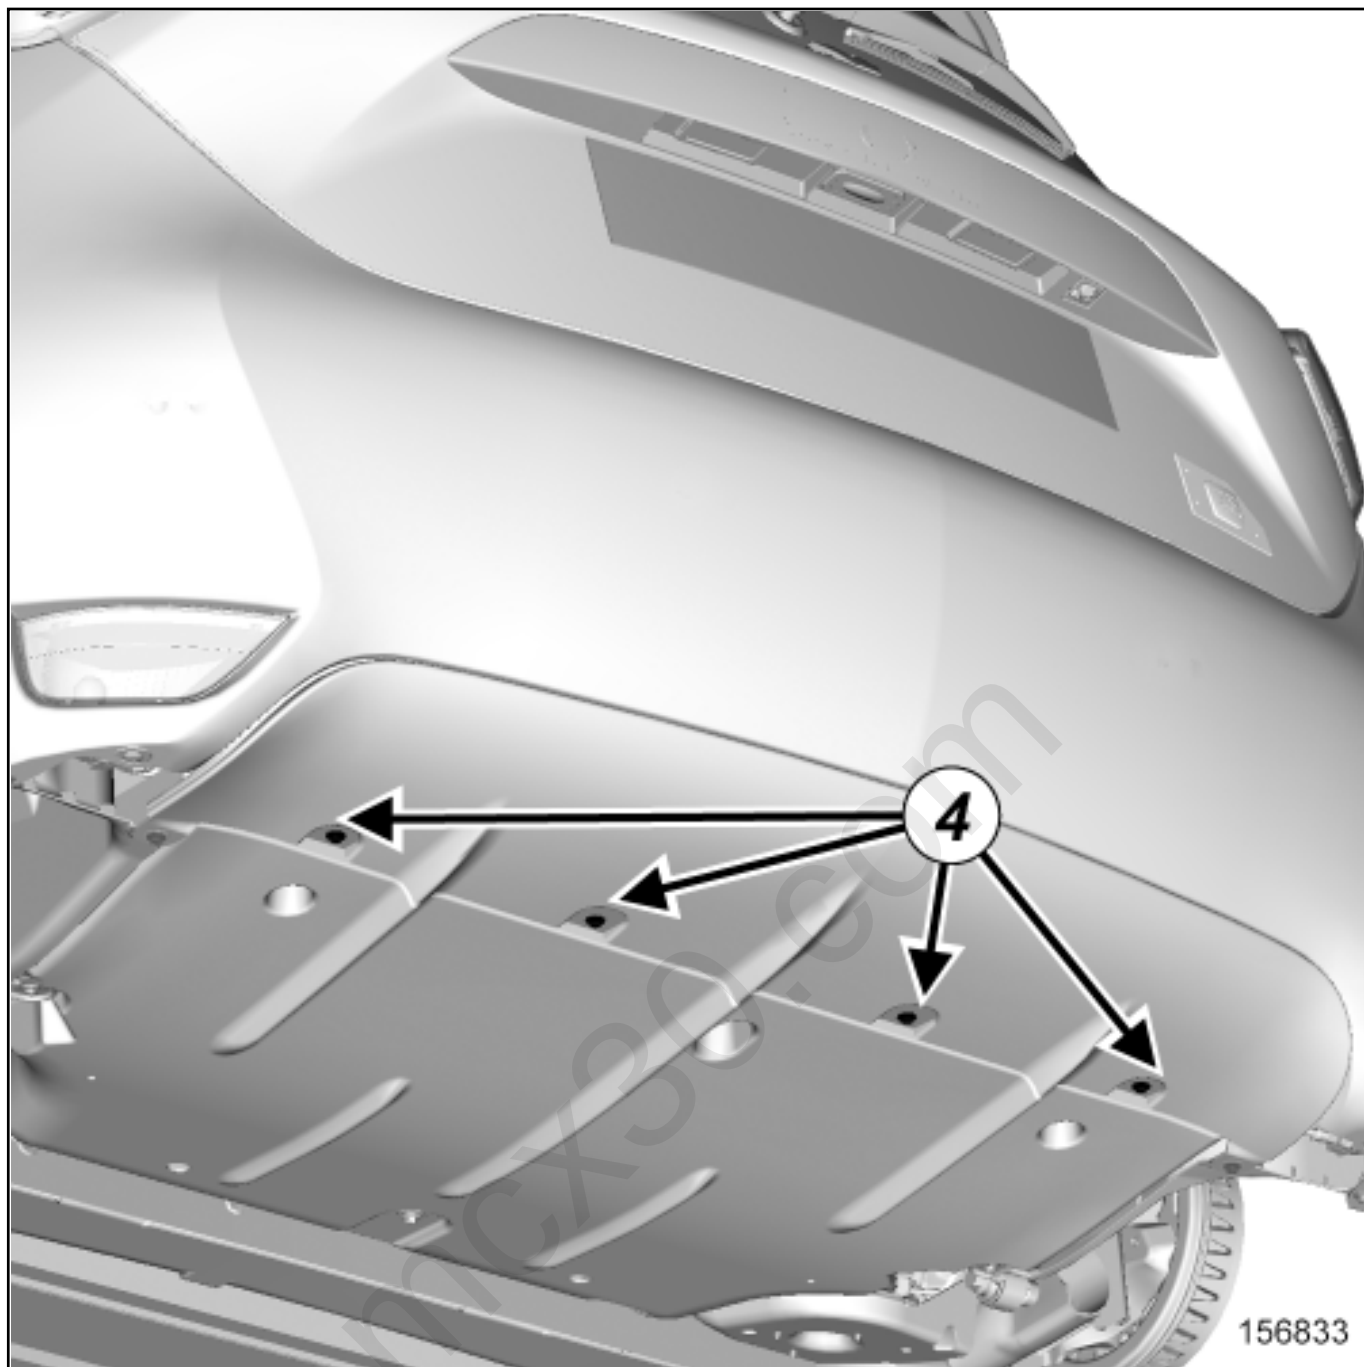

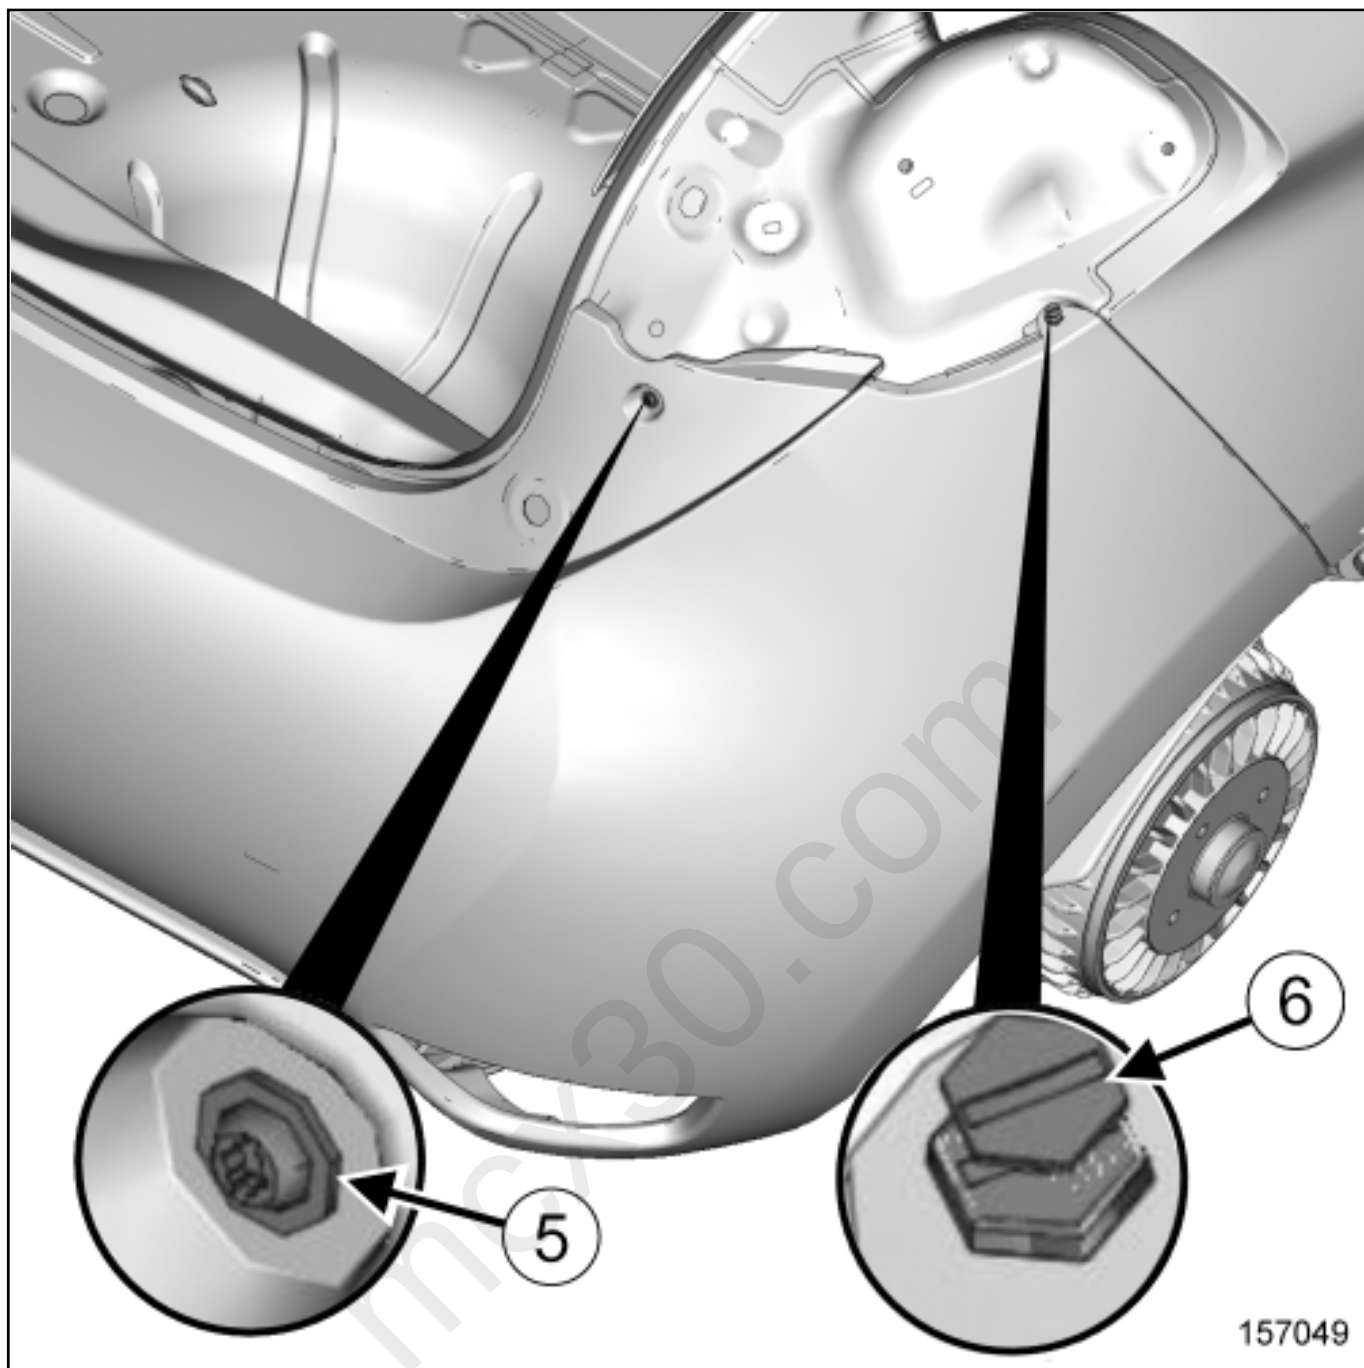

Remove:

- the rear bumper lower screws(4) ,
- the rear bumper upper screws on each side(5) ,
- the upper clips on each side(6) .

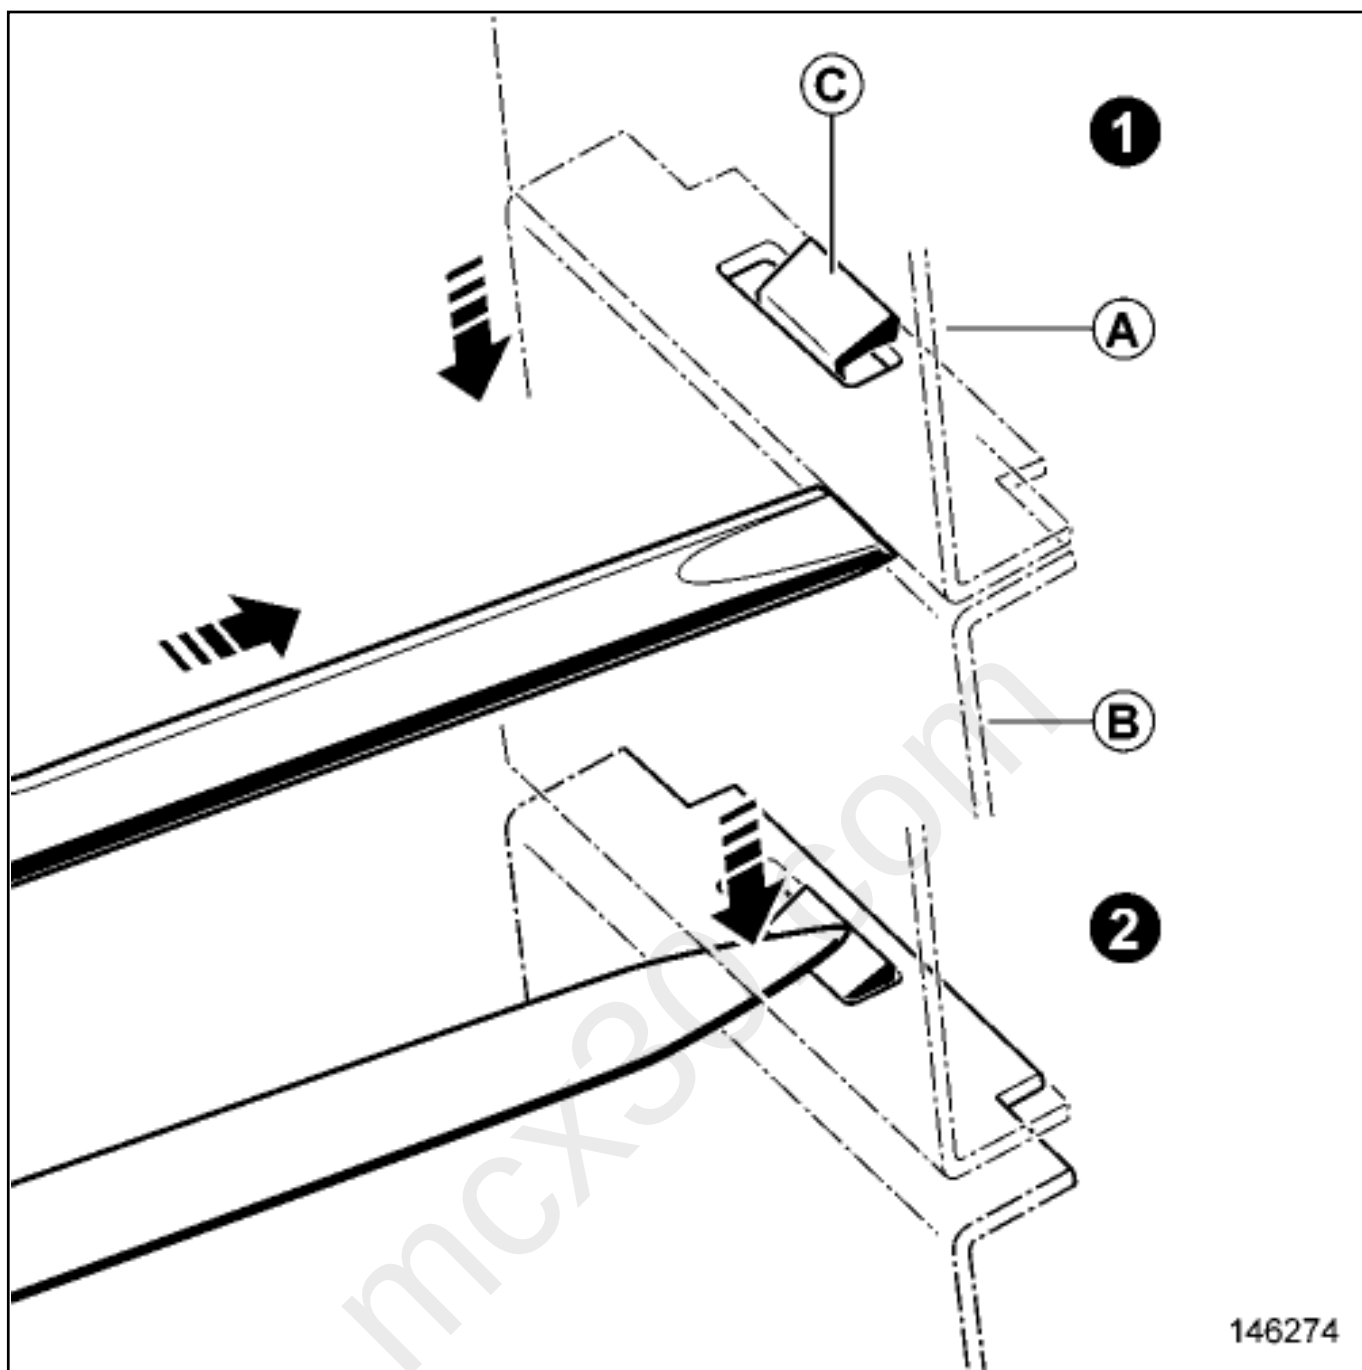

Unclip the rear bumper.

Partially remove the rear bumper (this operation requires two people).

Disconnect the rear bumper wiring connector([see 55A, Exterior protection, Rear bumper assembly: Exploded view](#)) .

Remove the rear bumper (this operation requires two people).

REFITTING



Proceed in the reverse order to removal.



Carry out a fonction test.



Repair-50x05x04-01x37-1-41-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com