

REAR HUB CARRIER ASSEMBLY: EXPLODED VIEW



Note, one or more warnings are present in this procedure



WARNING

To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- [\(see 33A, Rear axle components, Rear axle components: Precautions for the repair\)](#) .
- [Vehicle: Precautions for the repair](#) .

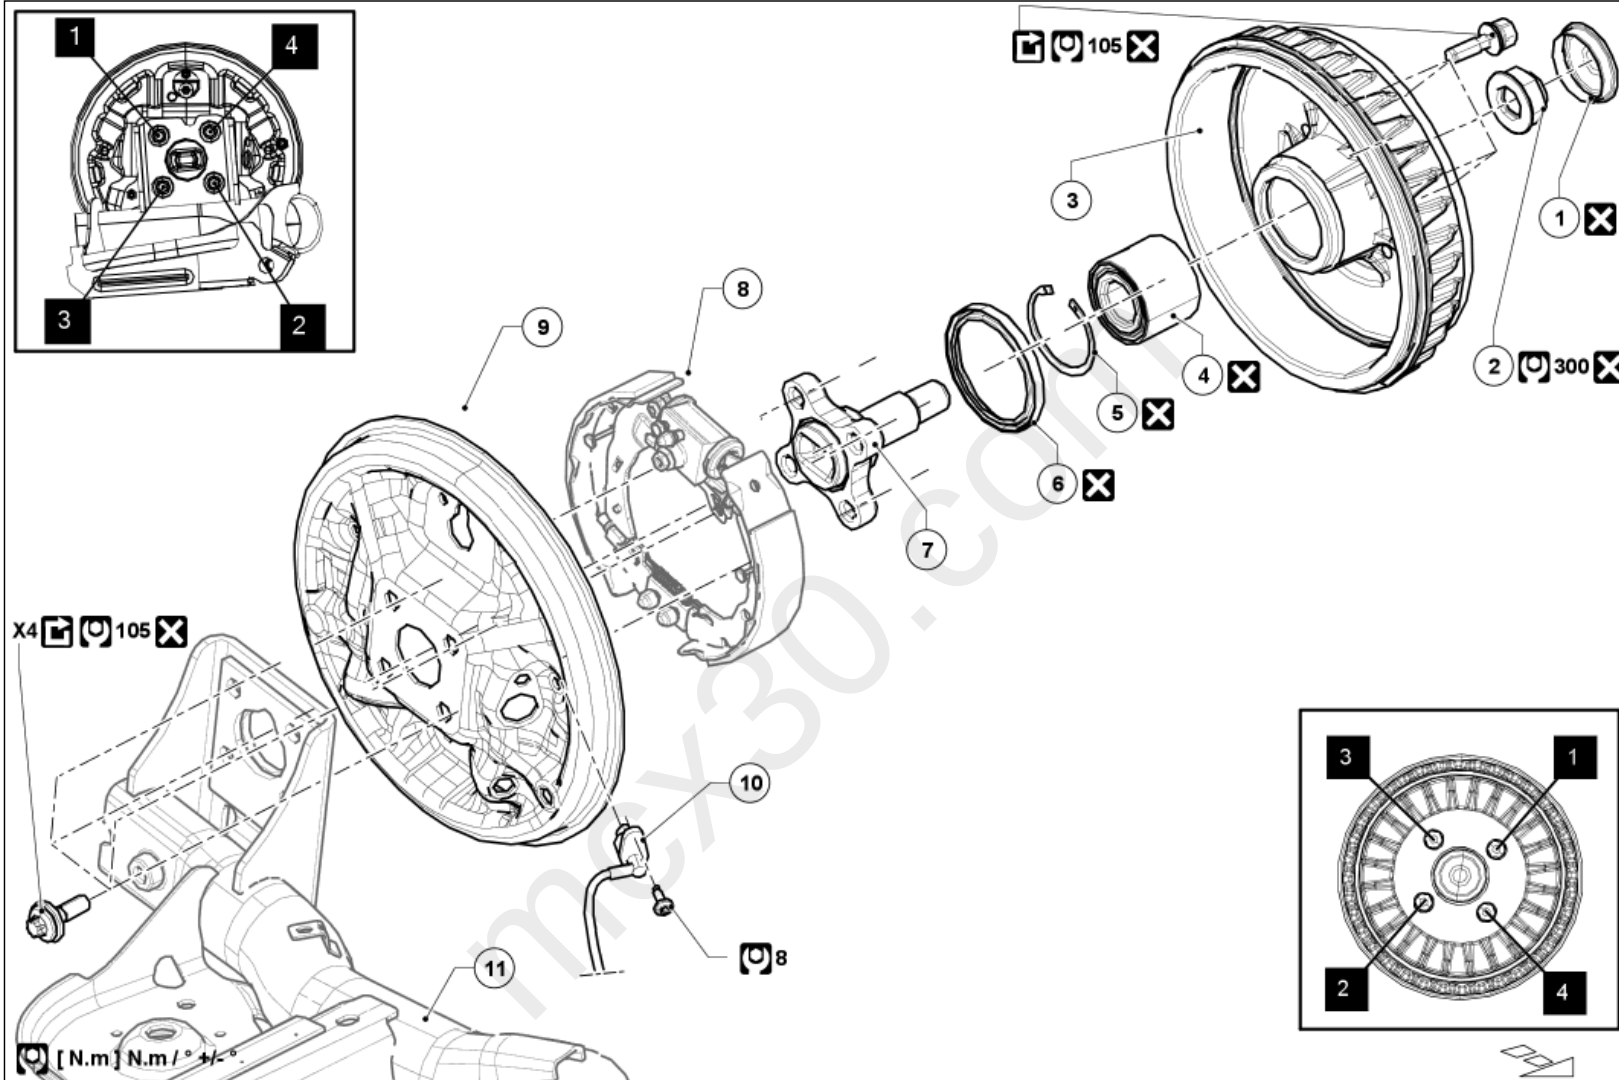


Illustration key: [Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Wheel hub cap	
2	Rear wheel axle nut	
3	Rear brake drum	(see Rear brake drum: Removal - Refitting)
4	Rear hub carrier bearing	(see Rear hub carrier bearing: Removal - Refitting)
5	Bearing snap ring	
6	Target of rear wheel speed sensor	
7	Rear wheel spindle	
8	Rear brake lining	(see 33A, Rear axle components, Rear drum brake assembly)
9	Plate of rear spindle	
10	Wheel speed sensor	Rear wheel speed sensor: Removal - Refitting
11	Rear axle	(see 33A, Rear axle components, Rear axle assembly: Exploded view)



Repair-13x02x05x24-02x50-1-6-1.xml



XSL version : 3.02 du 22/07/11