


Location and specifications (tightening torques, parts always to be replaced, etc.)[Rear opening element mechanism assembly: Exploded view](#) .

ADJUSTMENT VALUES

■ For all information about tailgate adjustment values[Vehicle panel gaps: Adjustment value](#) .


ADJUSTMENT

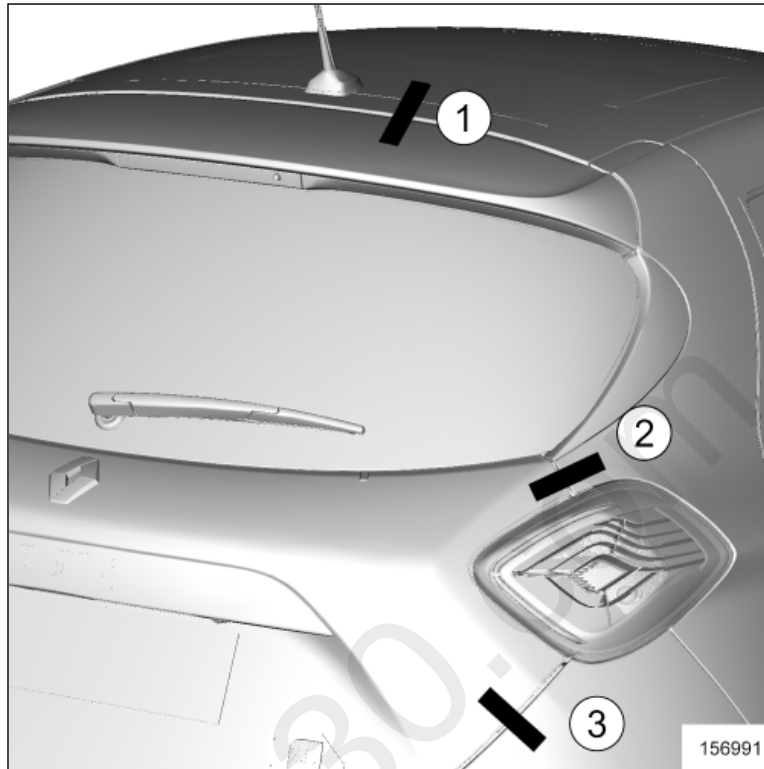

■ Observe the adjustment sequence(1) , (2) , (3) .

■ There are three options for adjusting the tailgate:

- using the tailgate bolts,
- using the tailgate hinge nuts,
- using the rear end panel striker plate.

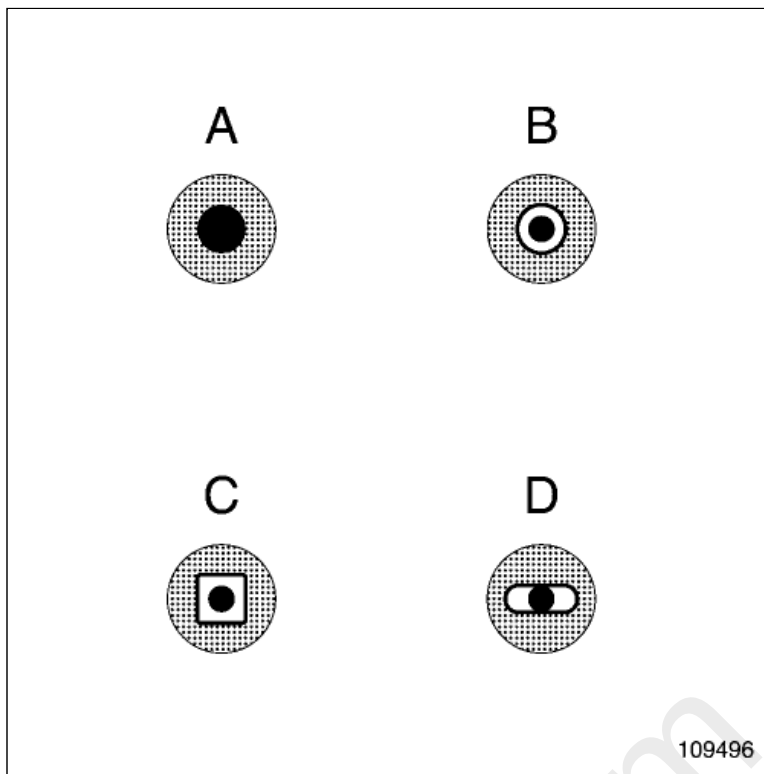


▣ Symbols A, B, C and D show the adjustment options.

The black dot in the centre represents the body of the bolt.

The grey section represents the component to be adjusted.

The white section represents the adjustment area.


1. ADJUSTMENT USING THE TAILGATE BOLTS

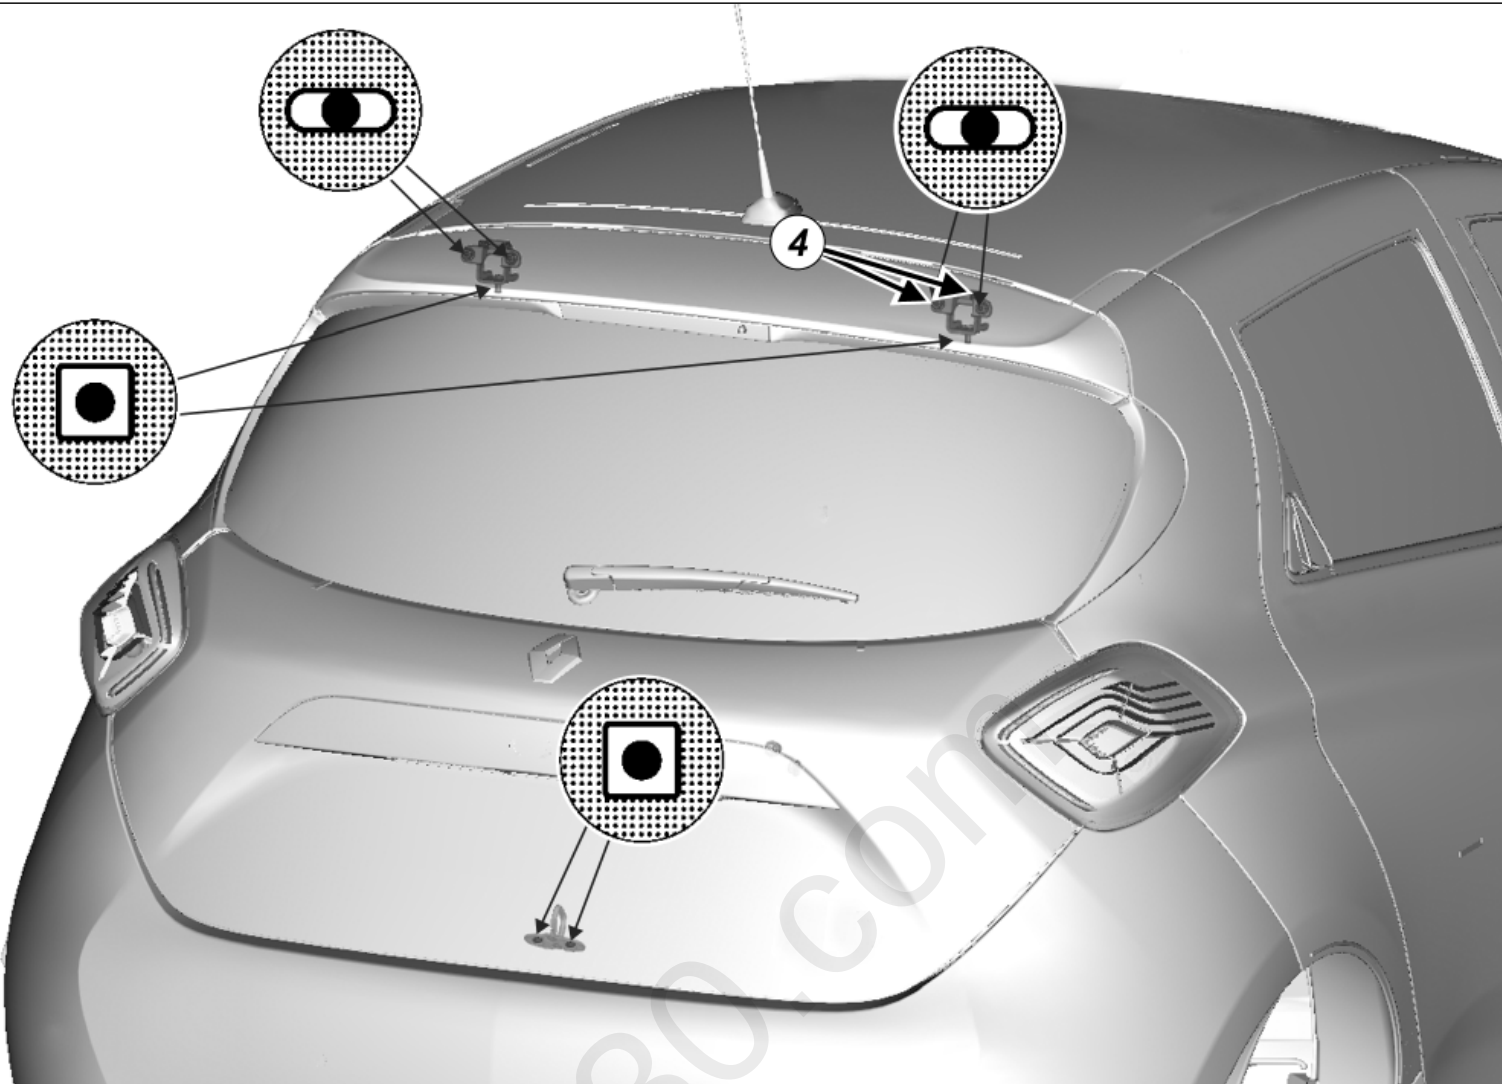

157000

- Loosen the tailgate bolts(4) on each side of the vehicle.
- Adjust the tailgate panel gaps.
- Tighten the tailgate bolts.

2. ADJUSTMENT USING THE HINGE NUTS

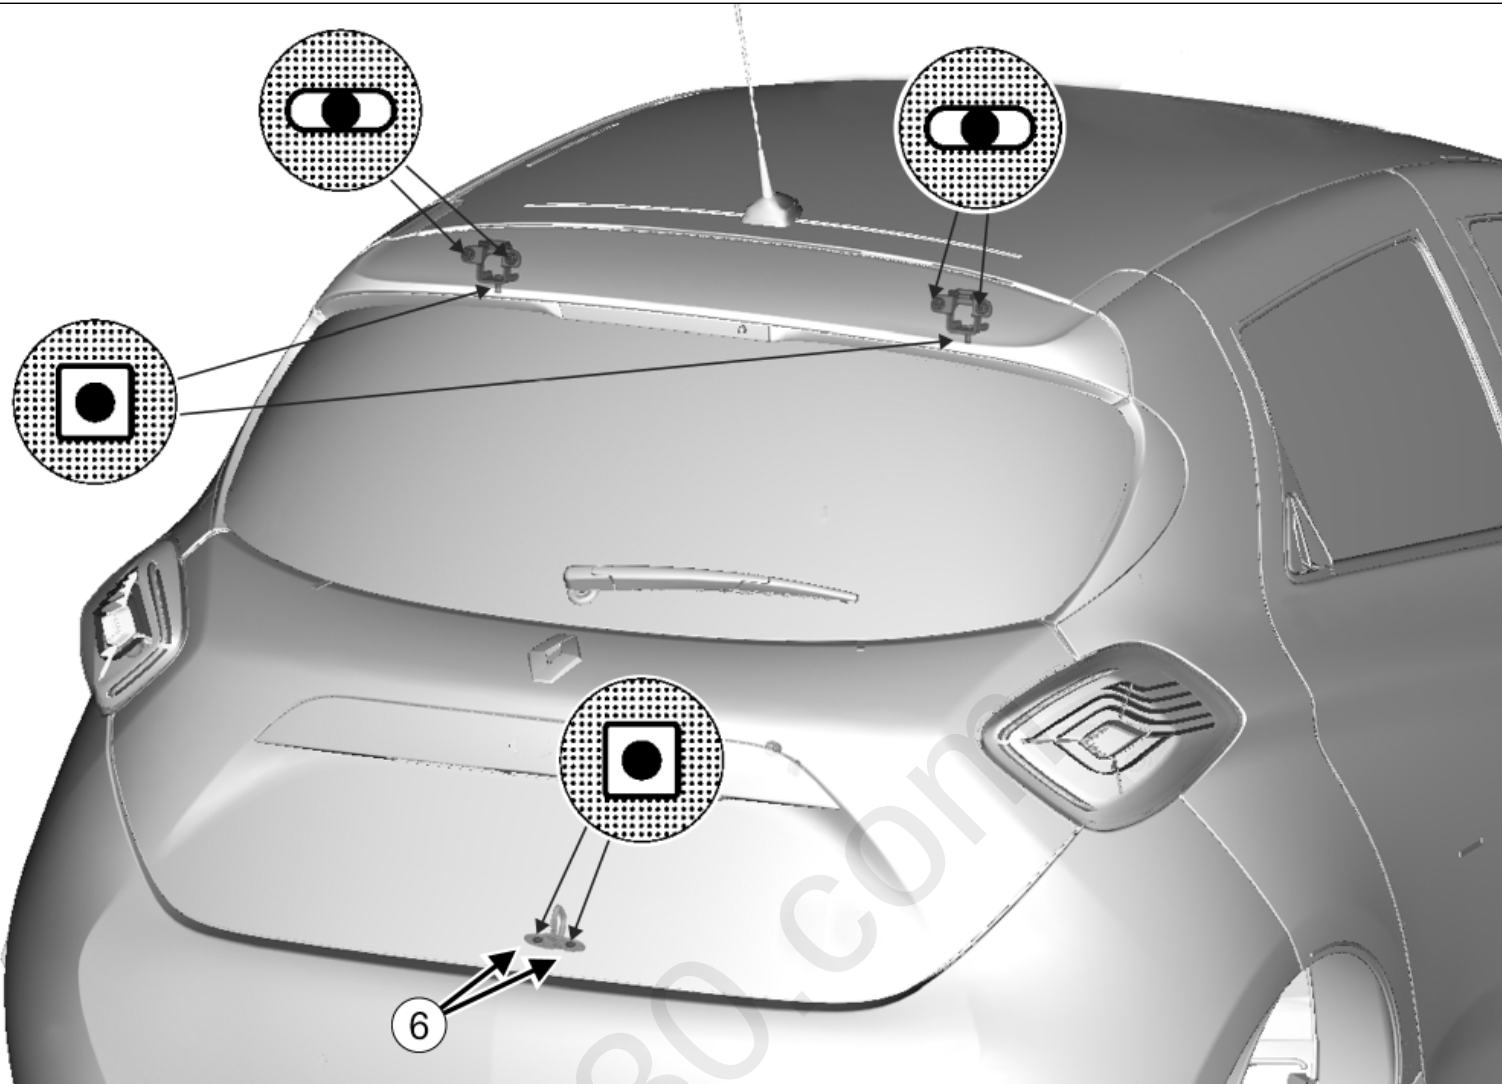

157000

Loosen the striker plate bolts(6) on the rear end panel.

Adjust the tailgate panel gaps.

Tighten the striker plate bolts.



Repair-40x10x25x01-01x67-1-5-1.xml



XSL version : 3.02 du 22/07/11