

SCREEN WASHER PUMP: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



WARNING


Before carrying out any operation on a vehicle fitted with the Stop & Start system, always follow the safety instructions Vehicle: Precautions for the repair

REMOVAL

1. REMOVAL PREPARATION OPERATION

- Position the vehicle on a two-post lift Vehicle: Towing and lifting .
- Remove:
 - the front right-hand wheel Wheel: Removal - Refitting ,
 - the front section of the front right-hand wheel arch liner (see **Front wheel arch liner: Removal - Refitting**) .

2. REMOVAL OPERATION

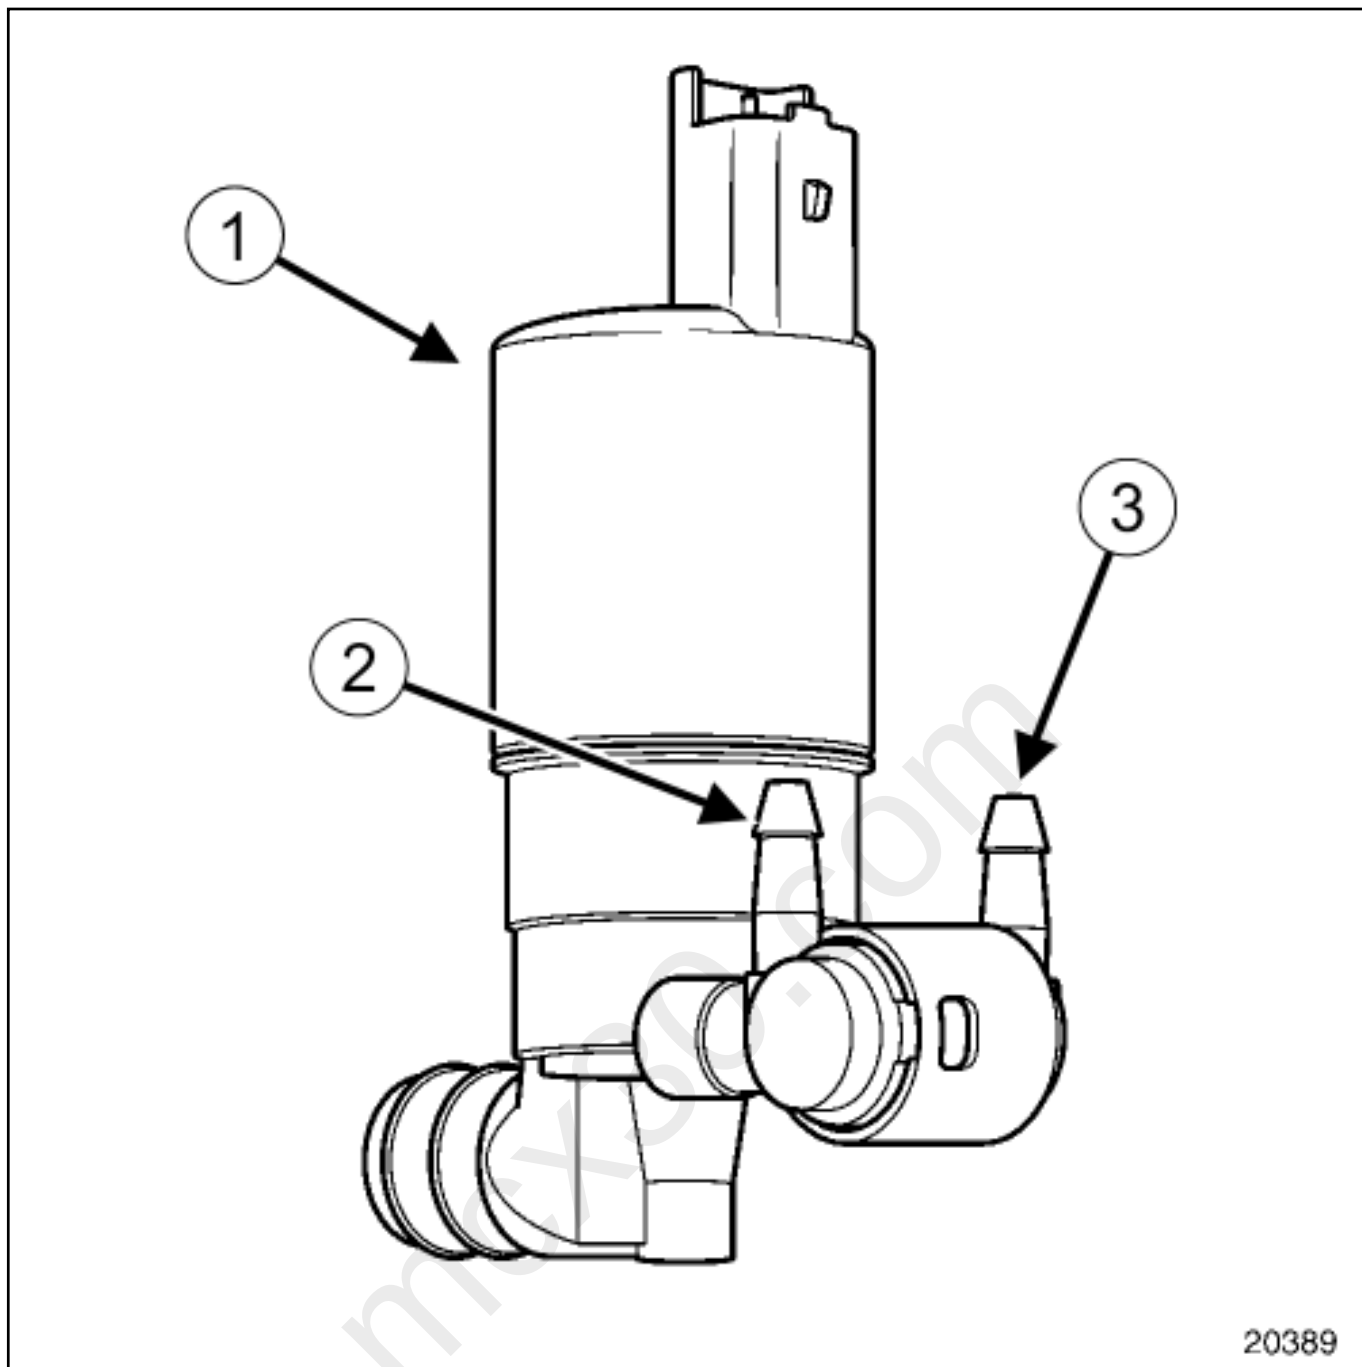

20389


Note:



When removing the windscreen washer pump, mark the two pipes before disconnecting them.

■ Disconnect:

- the connector(1) from the windscreen washer pump,
- the front jet supply pipe(2) ,
- the supply pipe from the rear jet(3) .

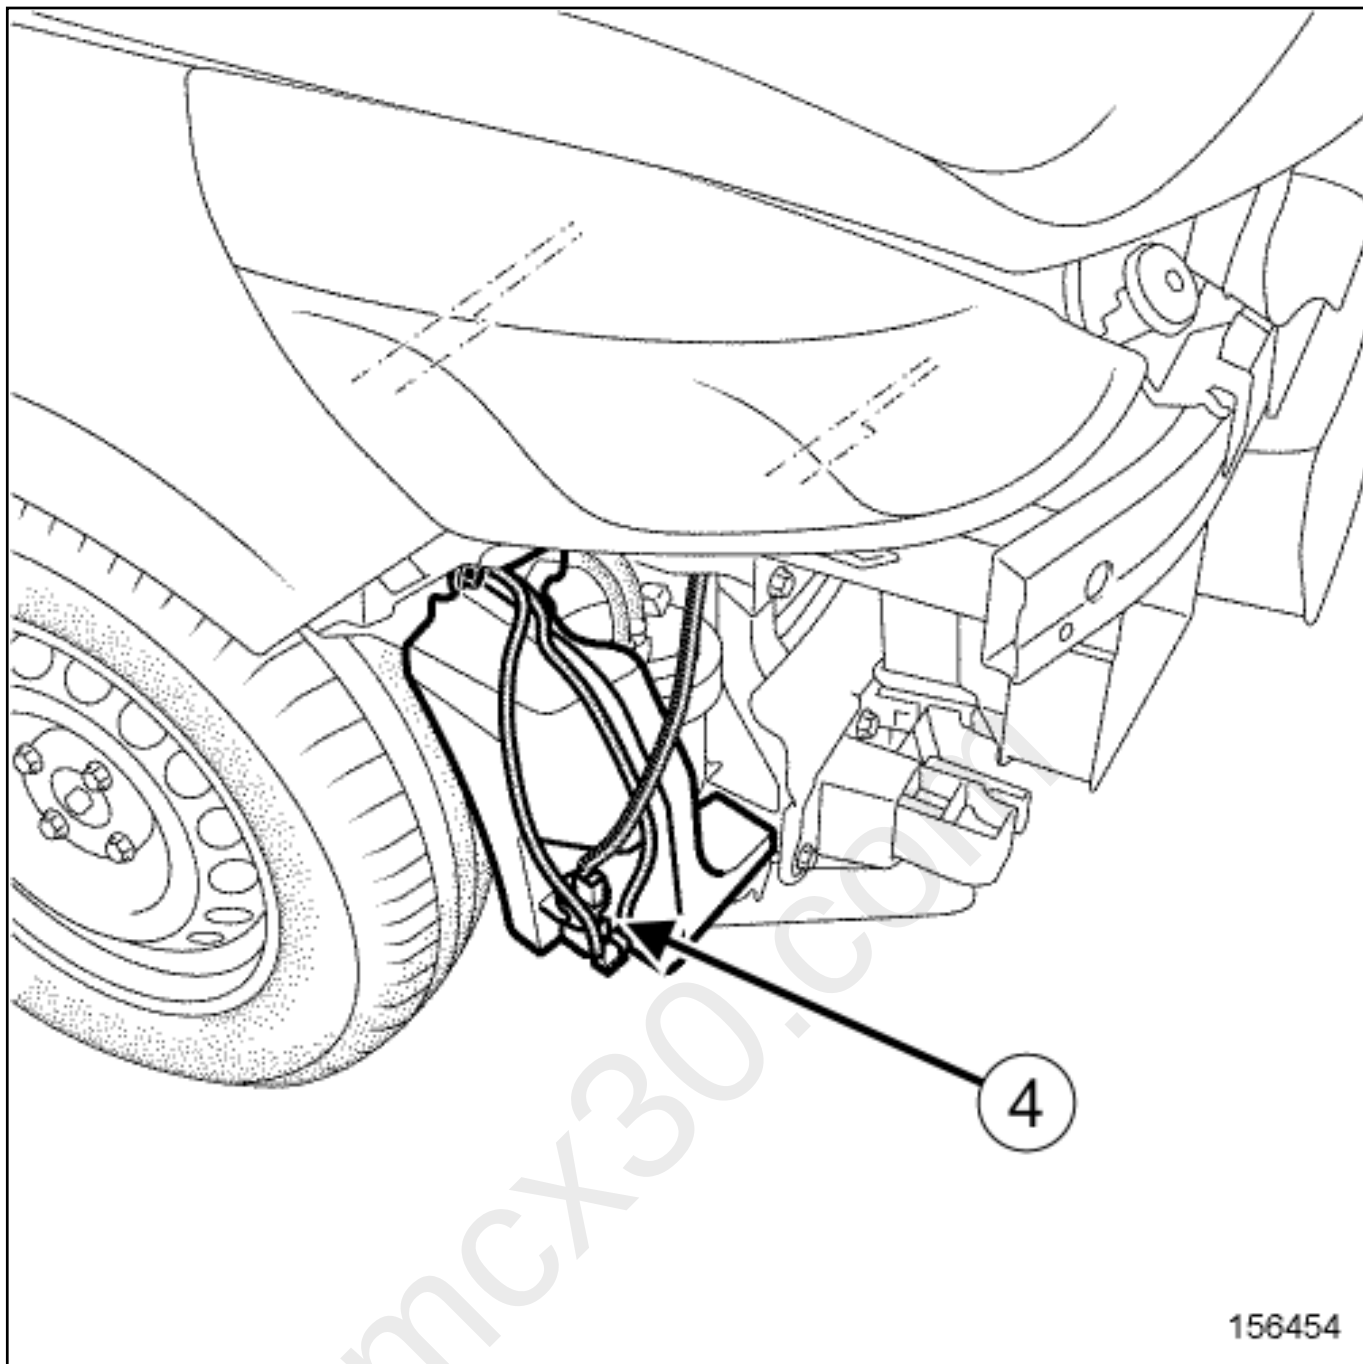

156454

Note:



When removing the windscreen washer pump, use a container to collect the windscreen washer fluid which will flow out of the bottle.

- Remove the windscreen washer pump(4) .

1. REFITTING OPERATION

 Refit the windscreen washer pump to the bottle.

 Connect:

- the rear jet supply pipe,
- the front jet supply pipe,
- the windscreen washer pump connector.

2. FINAL OPERATION

 Proceed in the reverse order to removal.

 Fill-up the windscreen washer bottle.



Repair-80x04x06x02-01x37-1-27-1.xml



XSL version : 3.02 du 22/07/11