

SIDE OPENING ELEMENTS: ADJUSTMENT

1. HINGED SIDE DOOR

- Check that the peripheral components are adjusted correctly.

Refit the heavy door fittings (closing system, window winder system).


Before carrying out the adjustments, release the striker panel and fit the hinges, pre-tightening in the middle of the adjustment.




Note:

For information about the adjustment zones, refer to the MR for the vehicle concerned.


1- ADJUSTMENT CHRONOLOGY

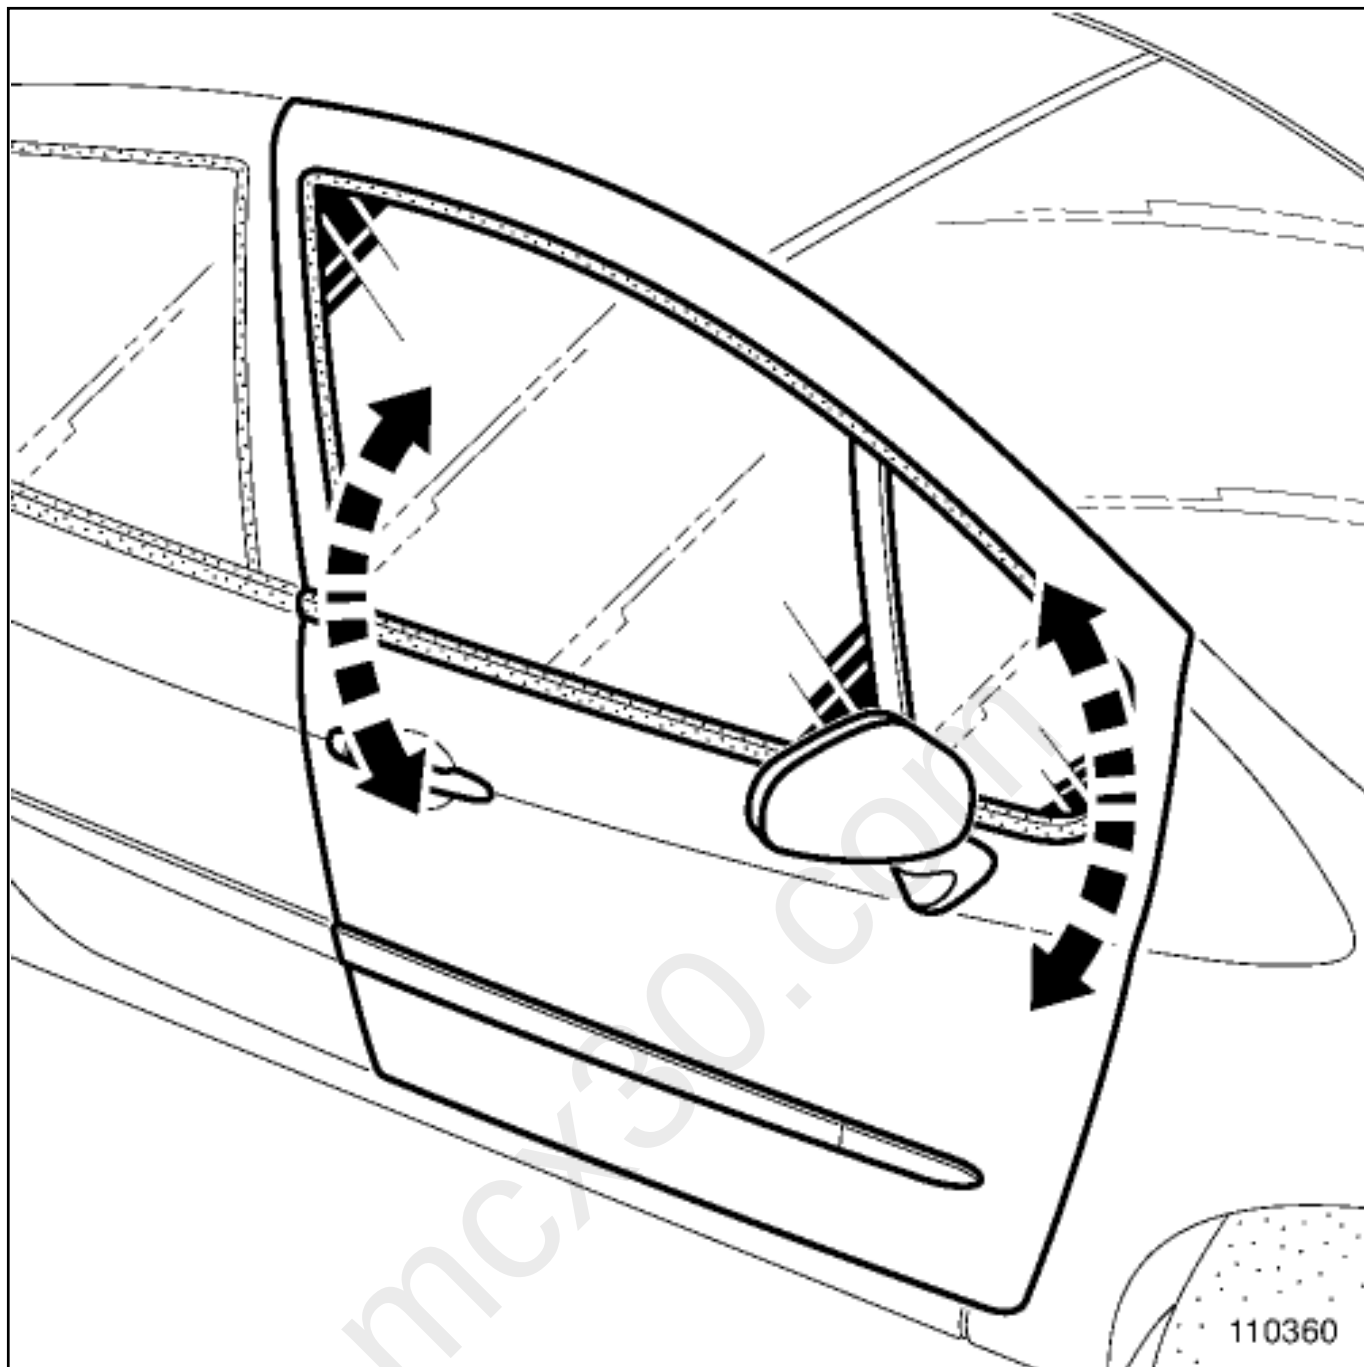


■ Adjust the centring of the door.

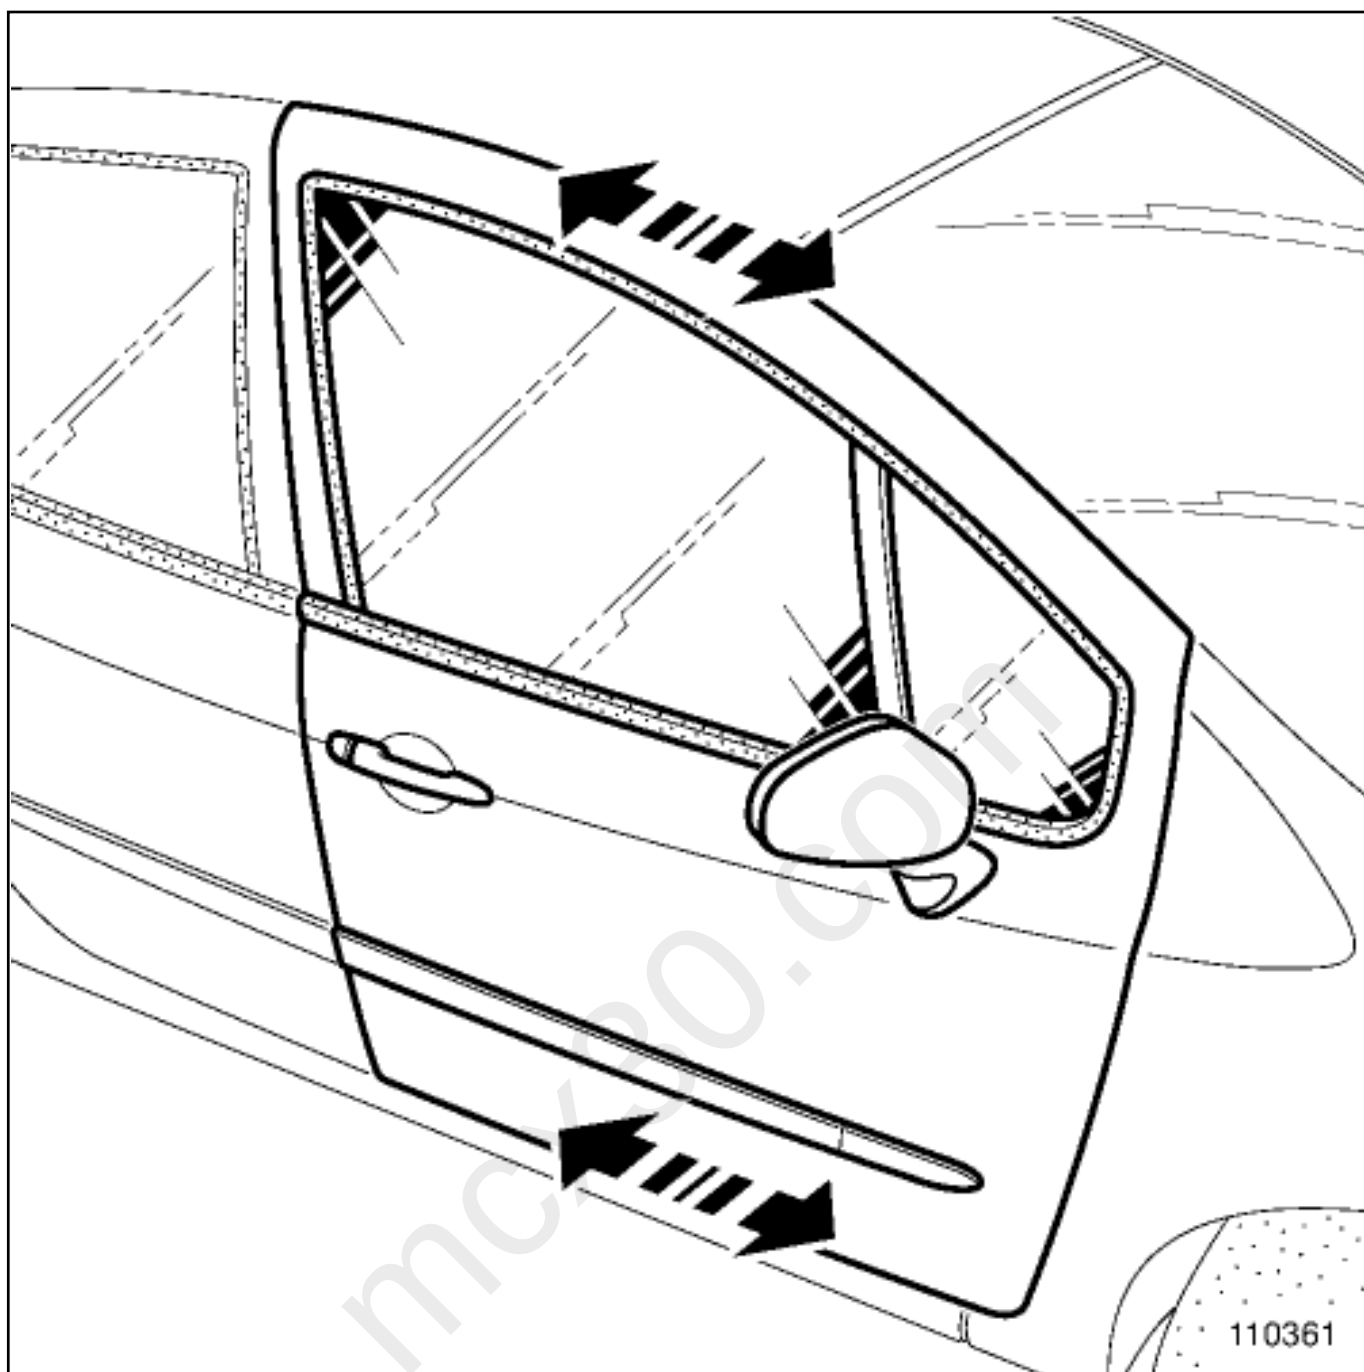


■ Adjust the side alignment of the door.

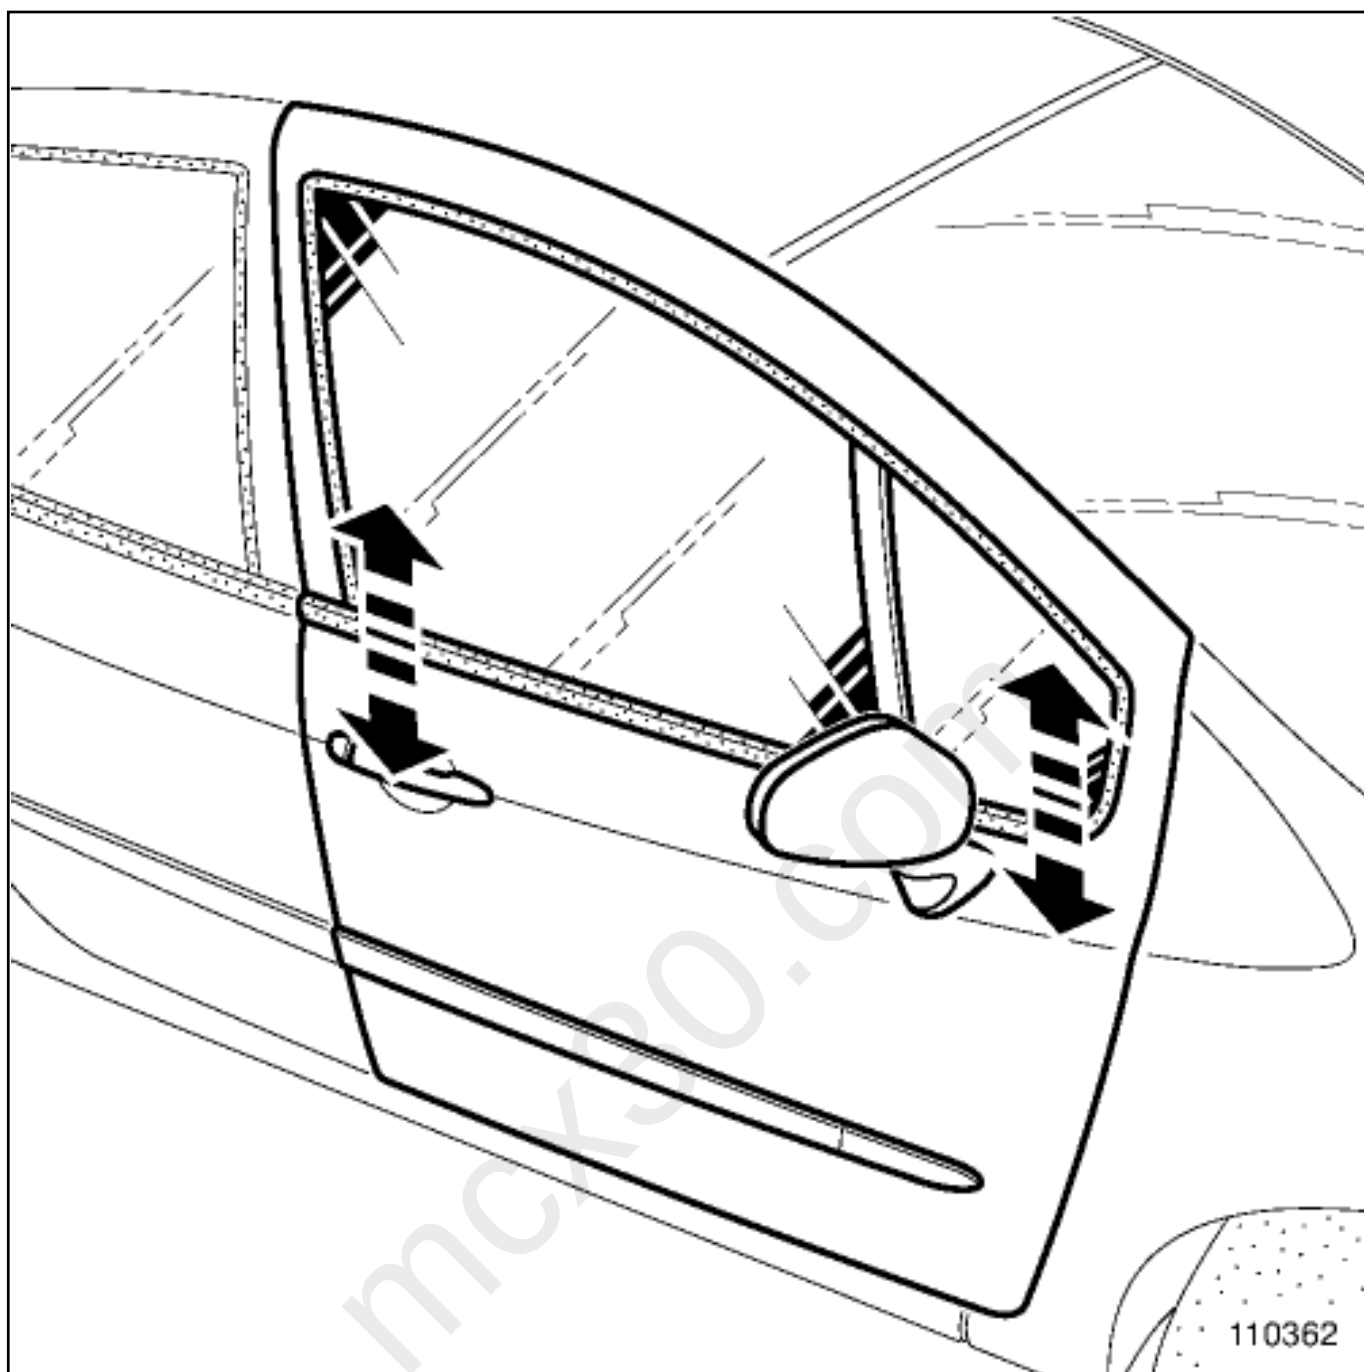

■ Adjust the alignment of the door height.

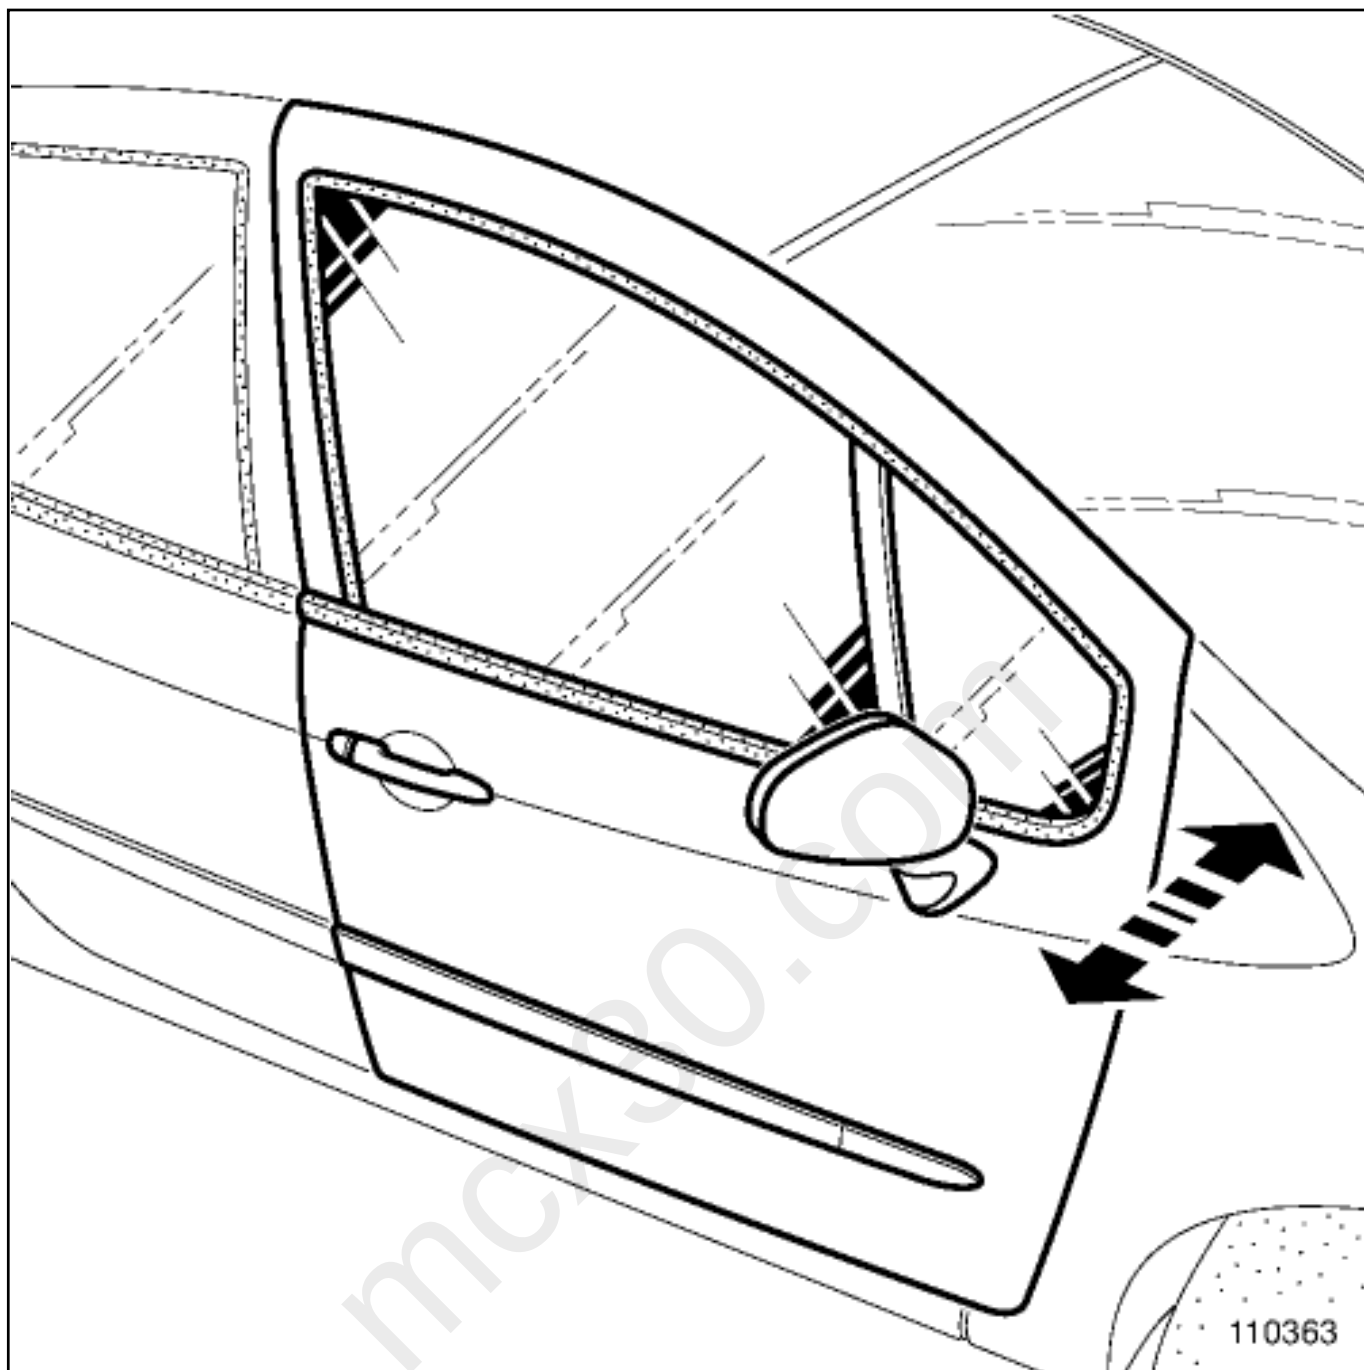

Adjust the front flush fitting of the door.

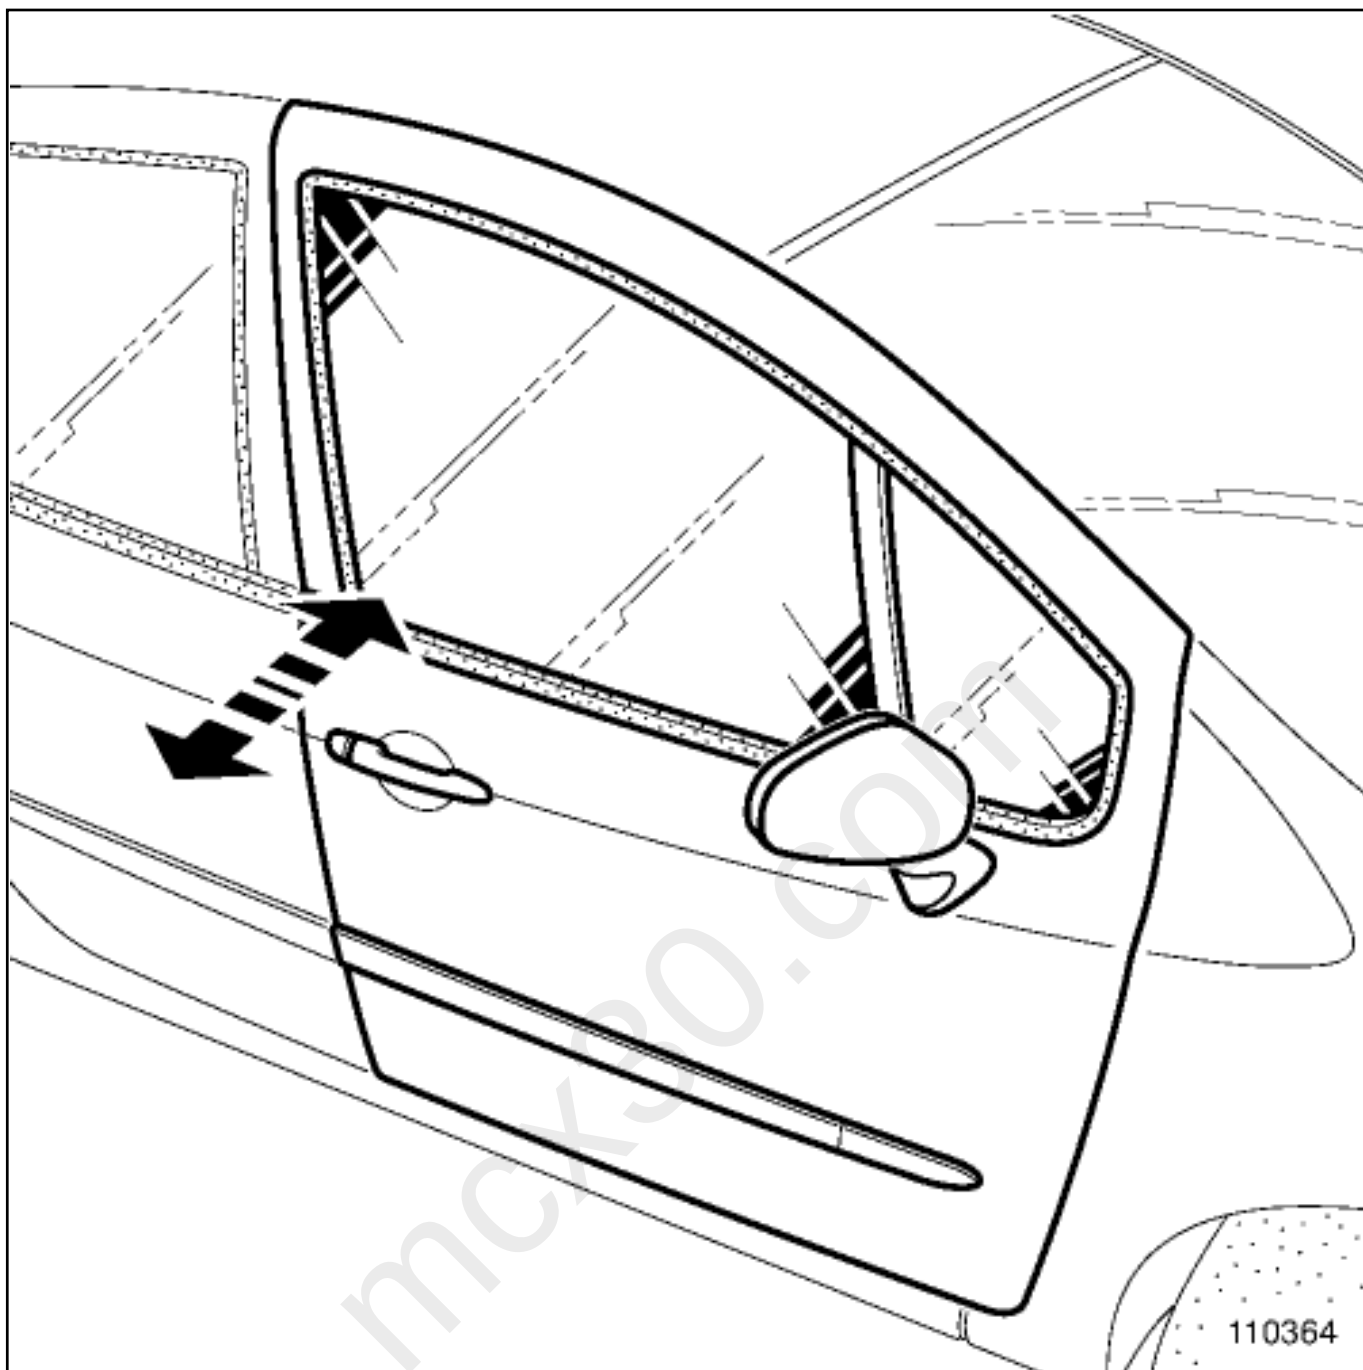

Adjust the rear flush fitting of the door, as well as the contact and the closure firmness.

Check the adjustment and the correct operation then tighten into position.

2. SLIDING SIDE DOOR

Check that the peripheral components are adjusted correctly.

Refit the heavy door fittings (closing system, window winder system).

Before carrying out the adjustments, release the striker panel and fit the hinges, pre-tightening in the middle of the adjustment.




Note:


For information about the adjustment zones, refer to the MR for the vehicle concerned.

1- ADJUSTMENT CHRONOLOGY


mcx30.com

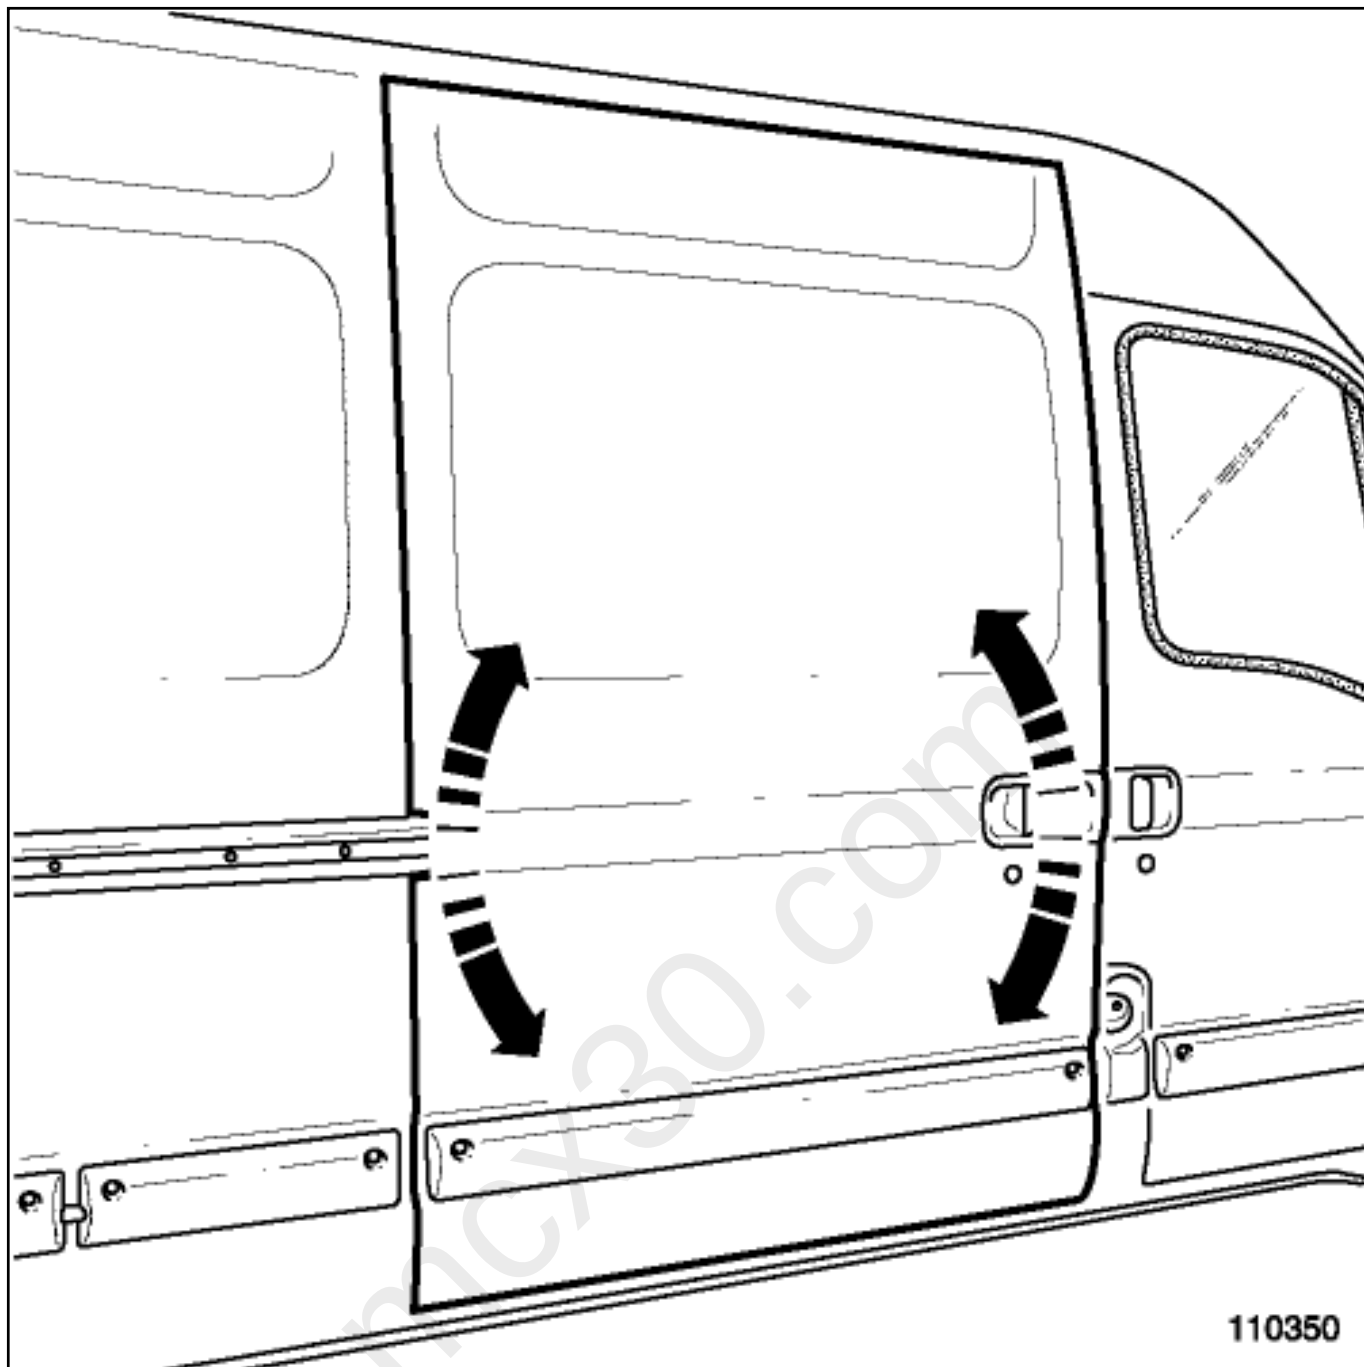


Adjust the centring of the door.

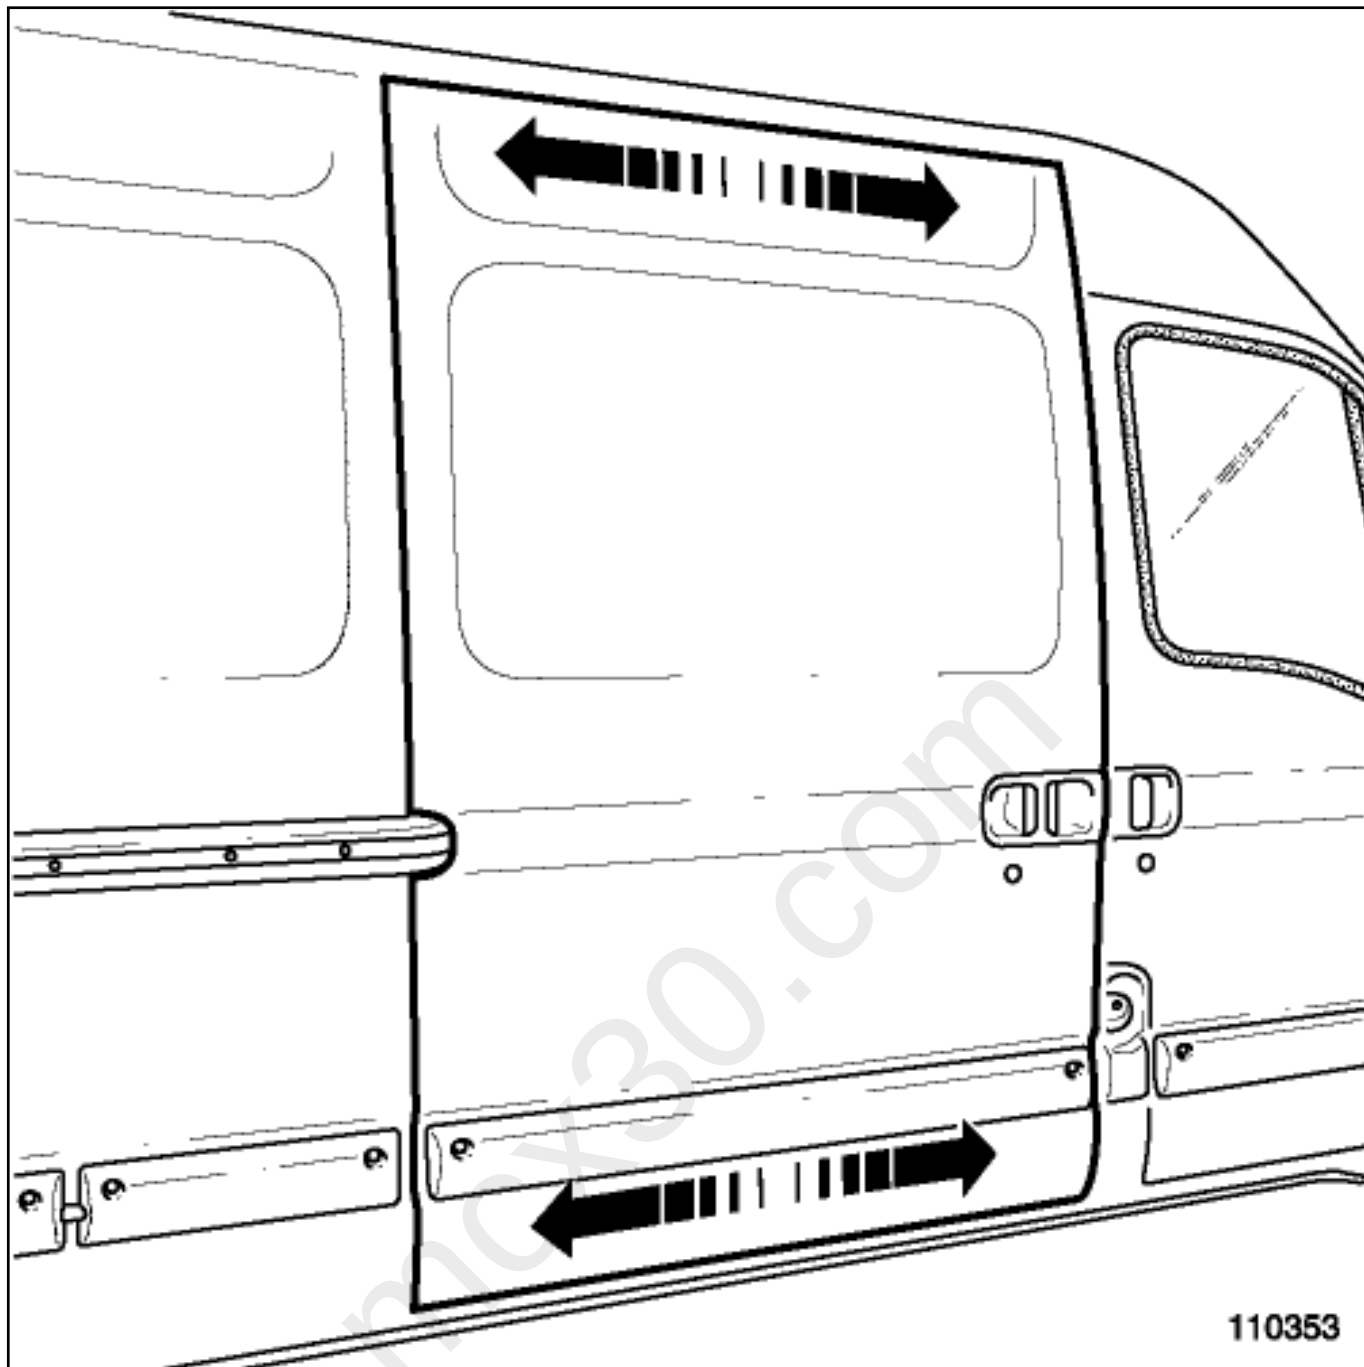


Adjust the side alignment of the door.

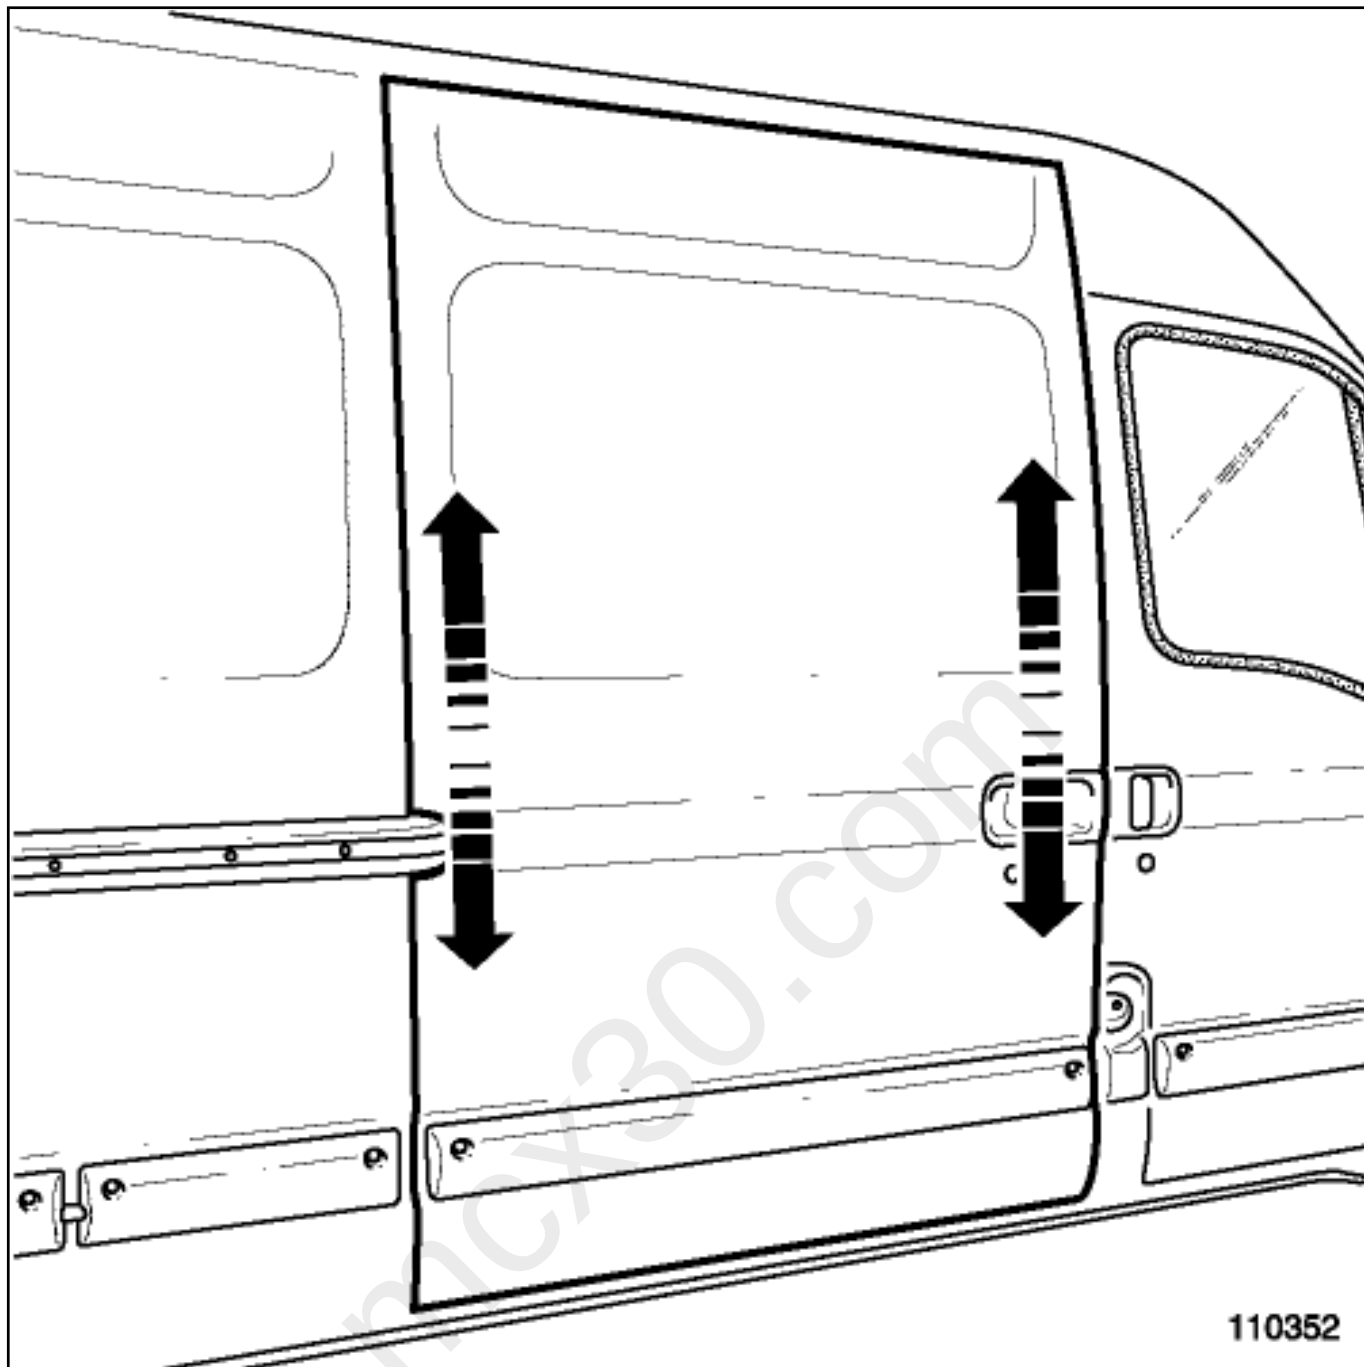


Adjust the alignment of the door height.

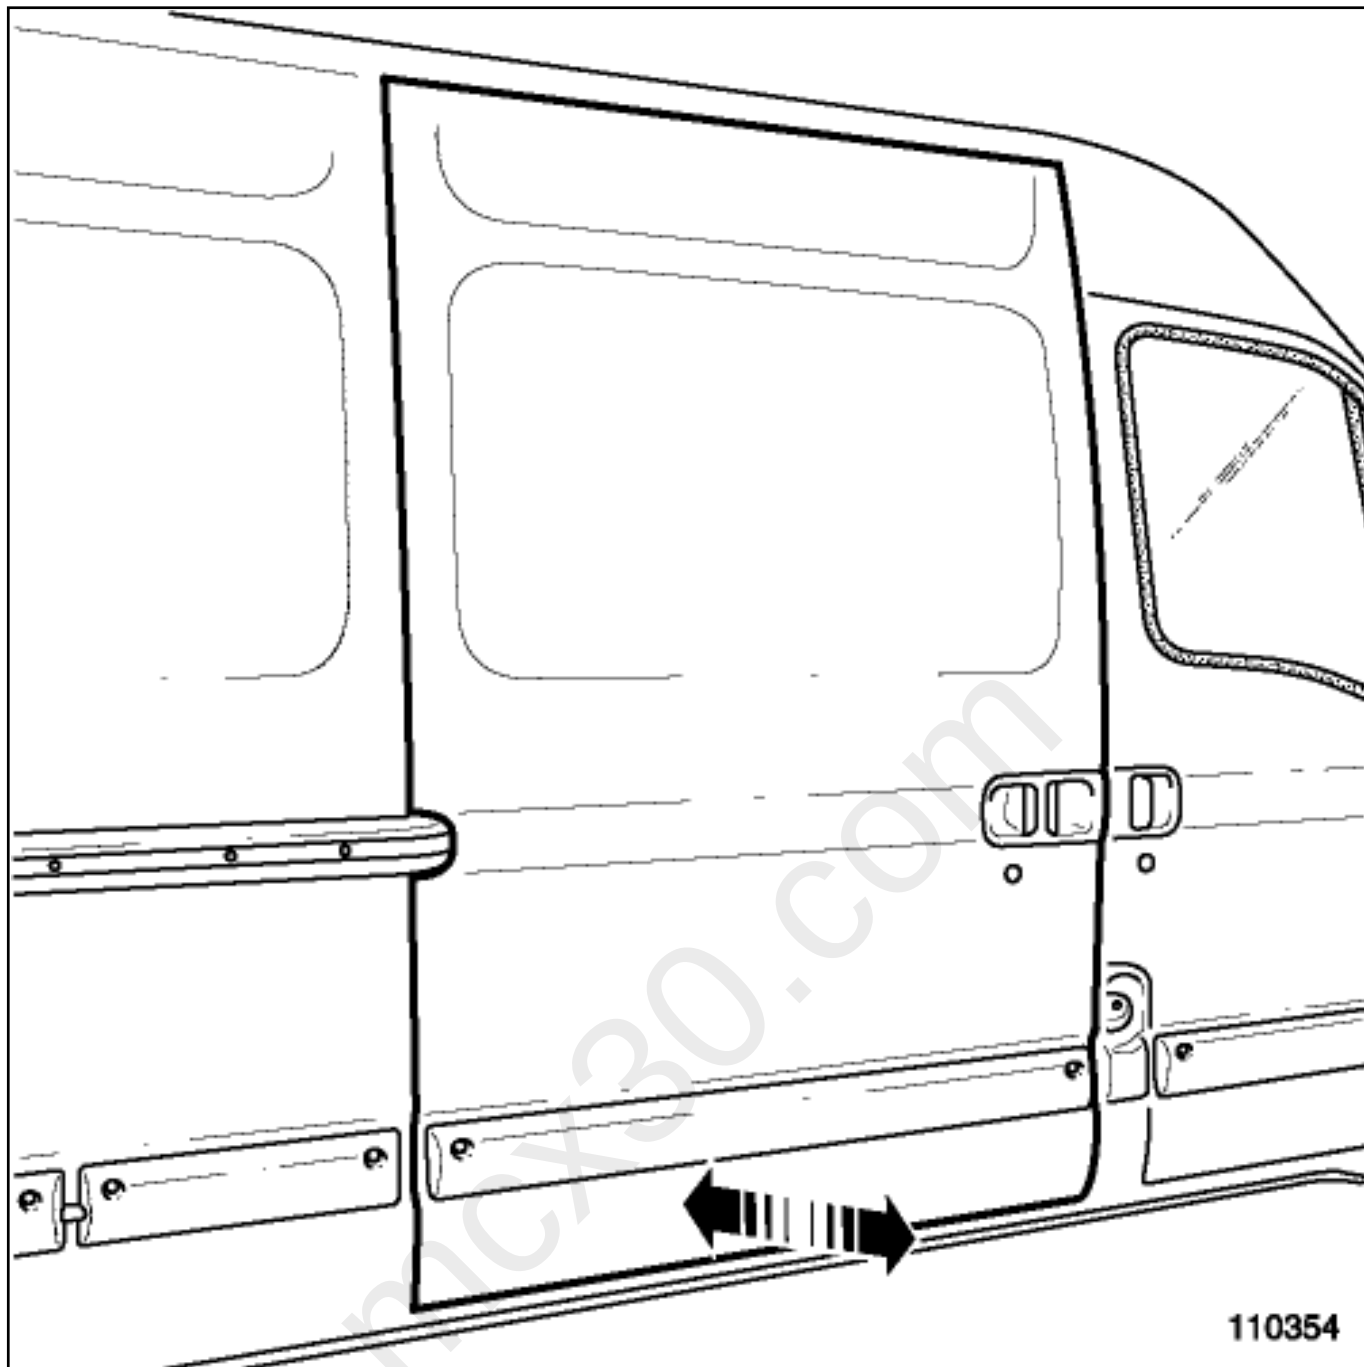


Adjust the flush fitting of the bottom section of the door.

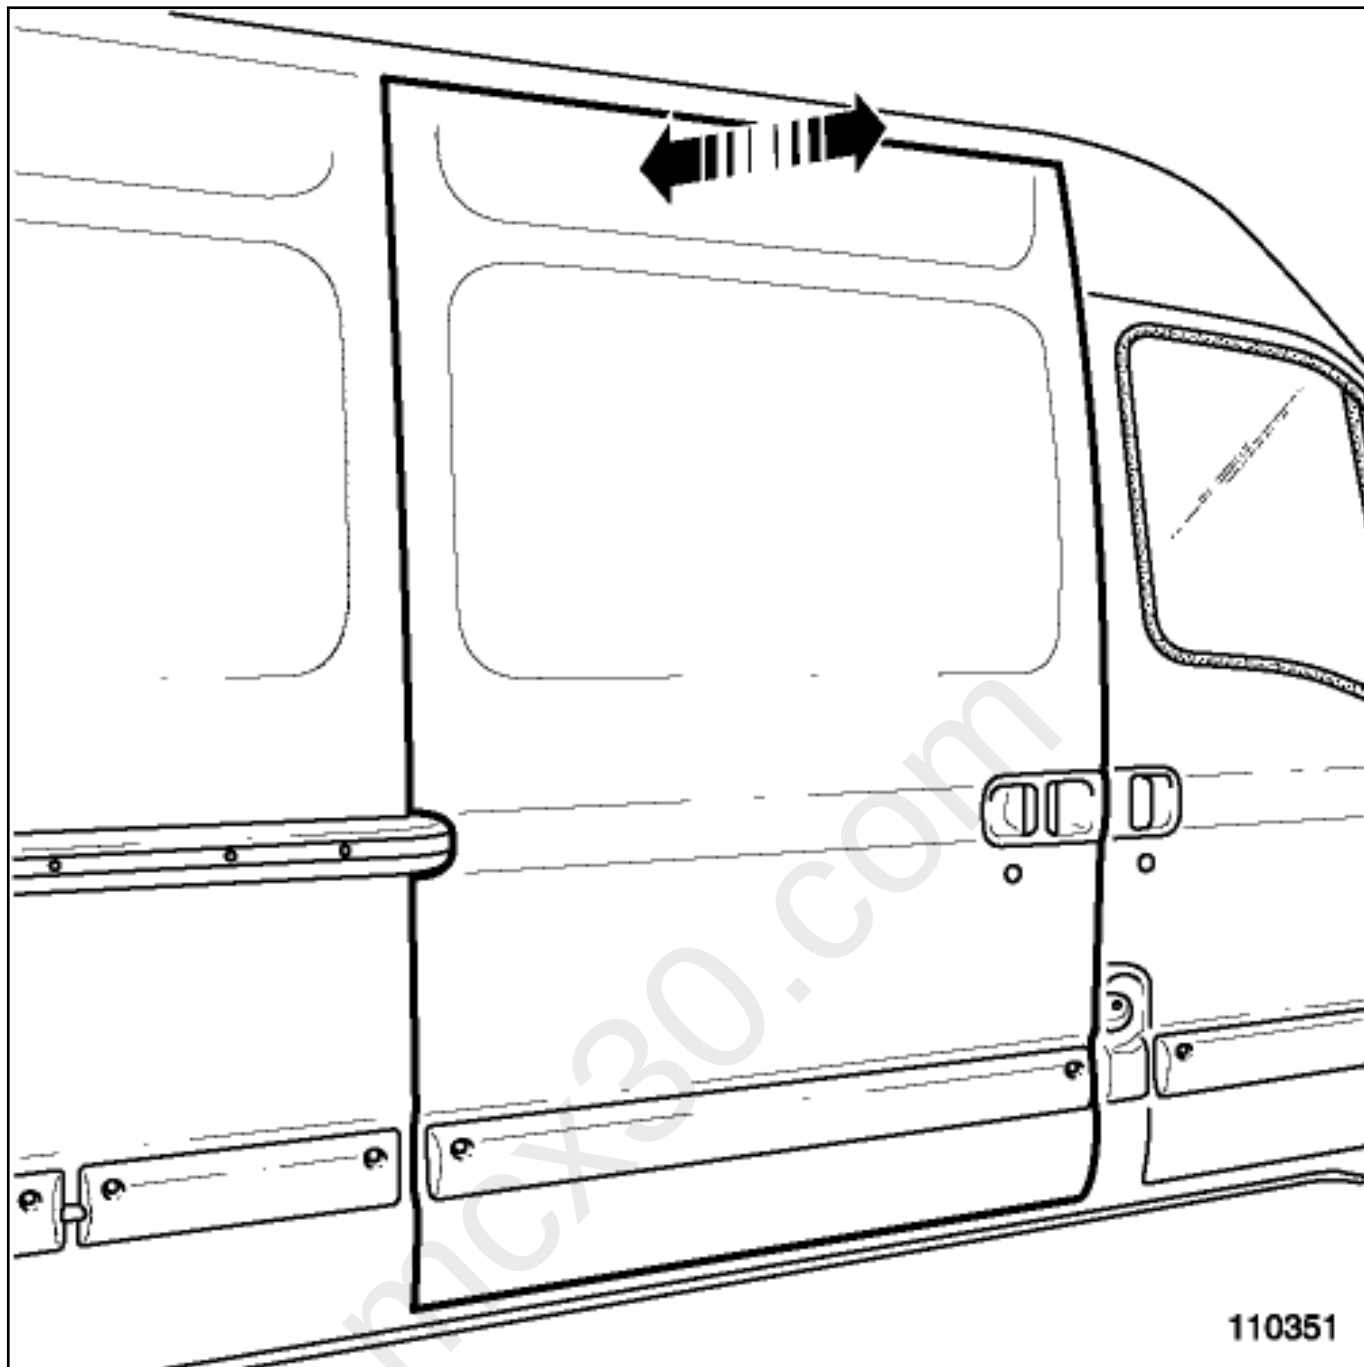

Adjust the flush fitting of the top section of the door.

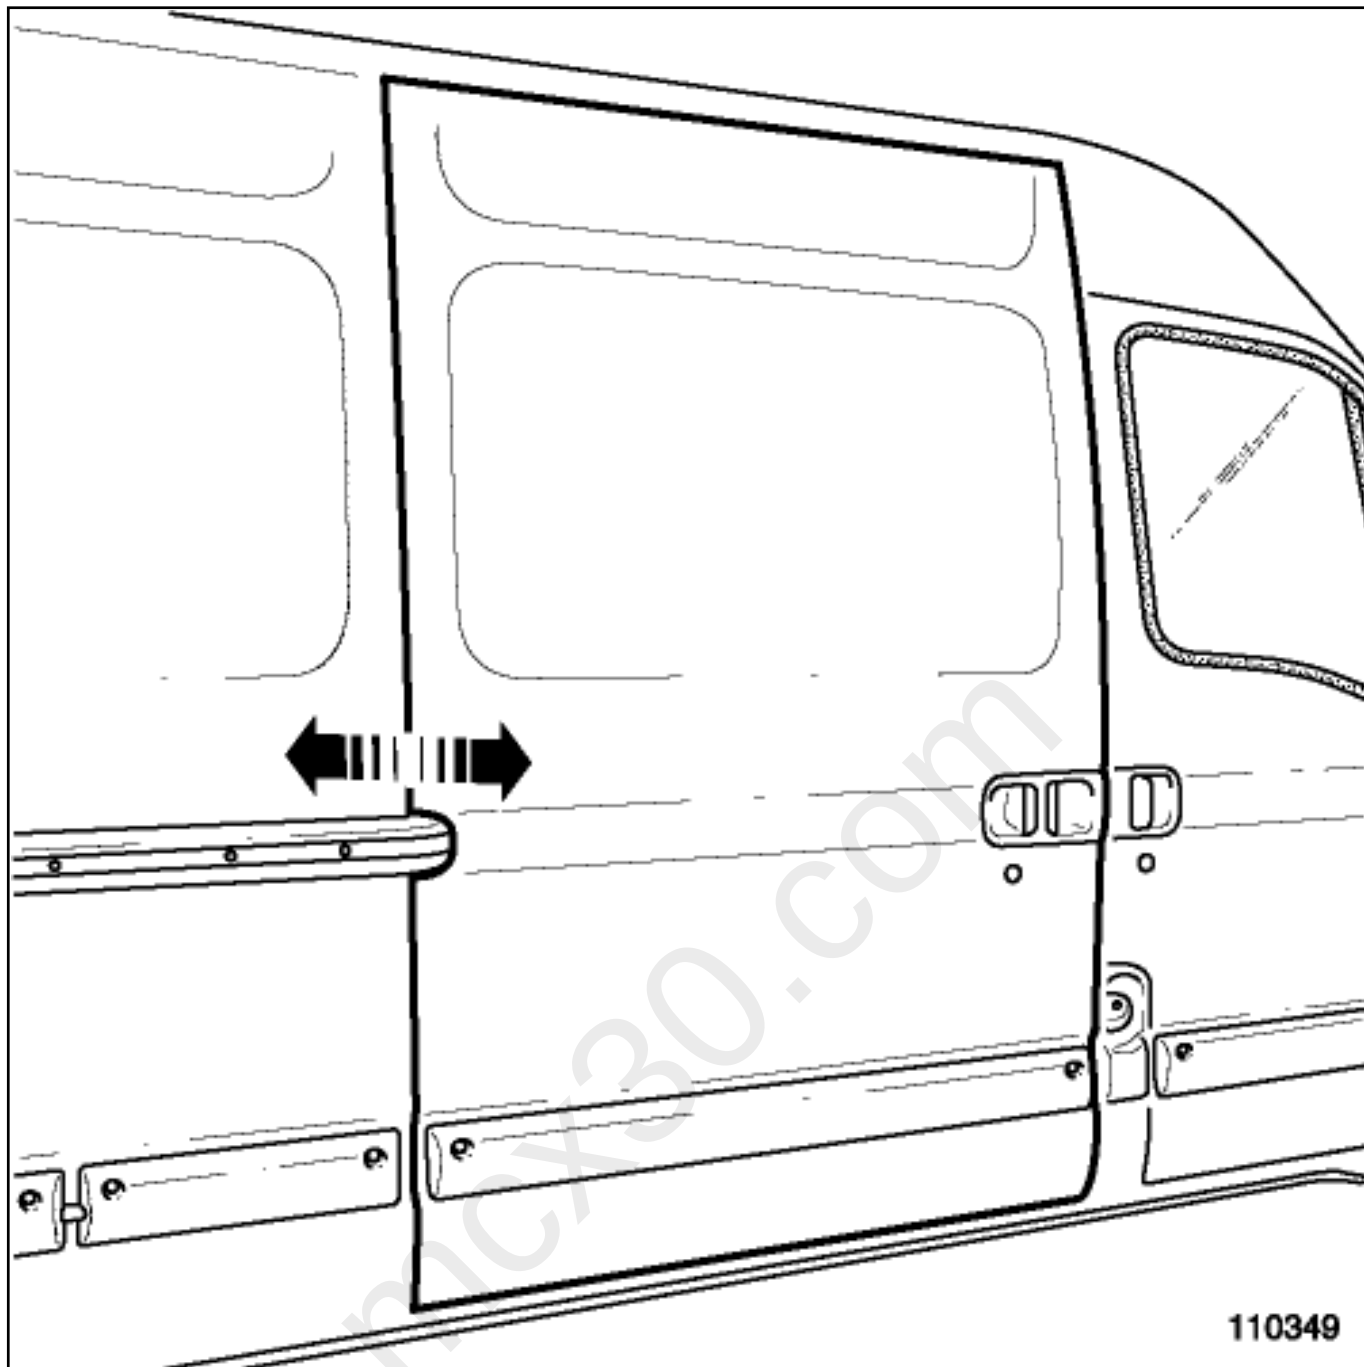

Adjust the rear flush fitting of the door.

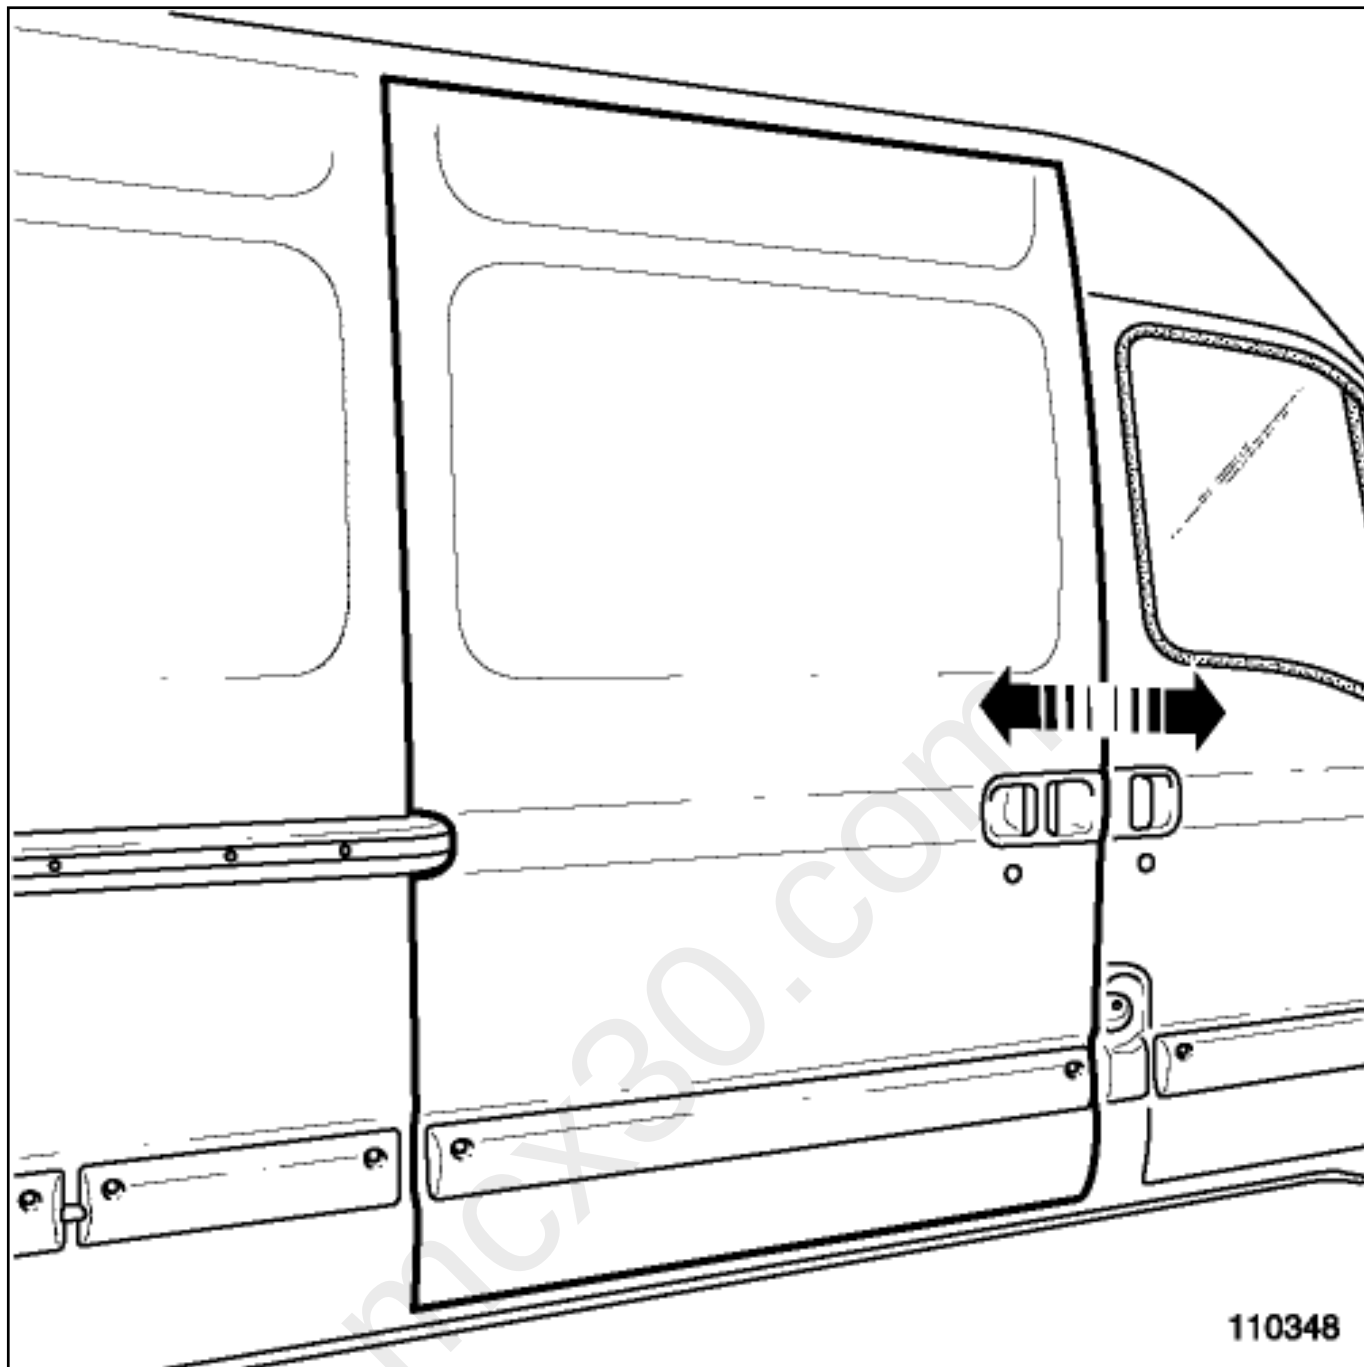

Adjust the front flush fitting of the door.

Check the adjustment and the correct operation then tighten into position.



mcx30.com