

STEERING ASSEMBLY: EXPLODED VIEW



Note, one or more warnings are present in this procedure



WARNING

To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- [\(see 36A, Steering assembly, Steering: Precautions for the repair\)](#),
- [Vehicle: Precautions for the repair](#).

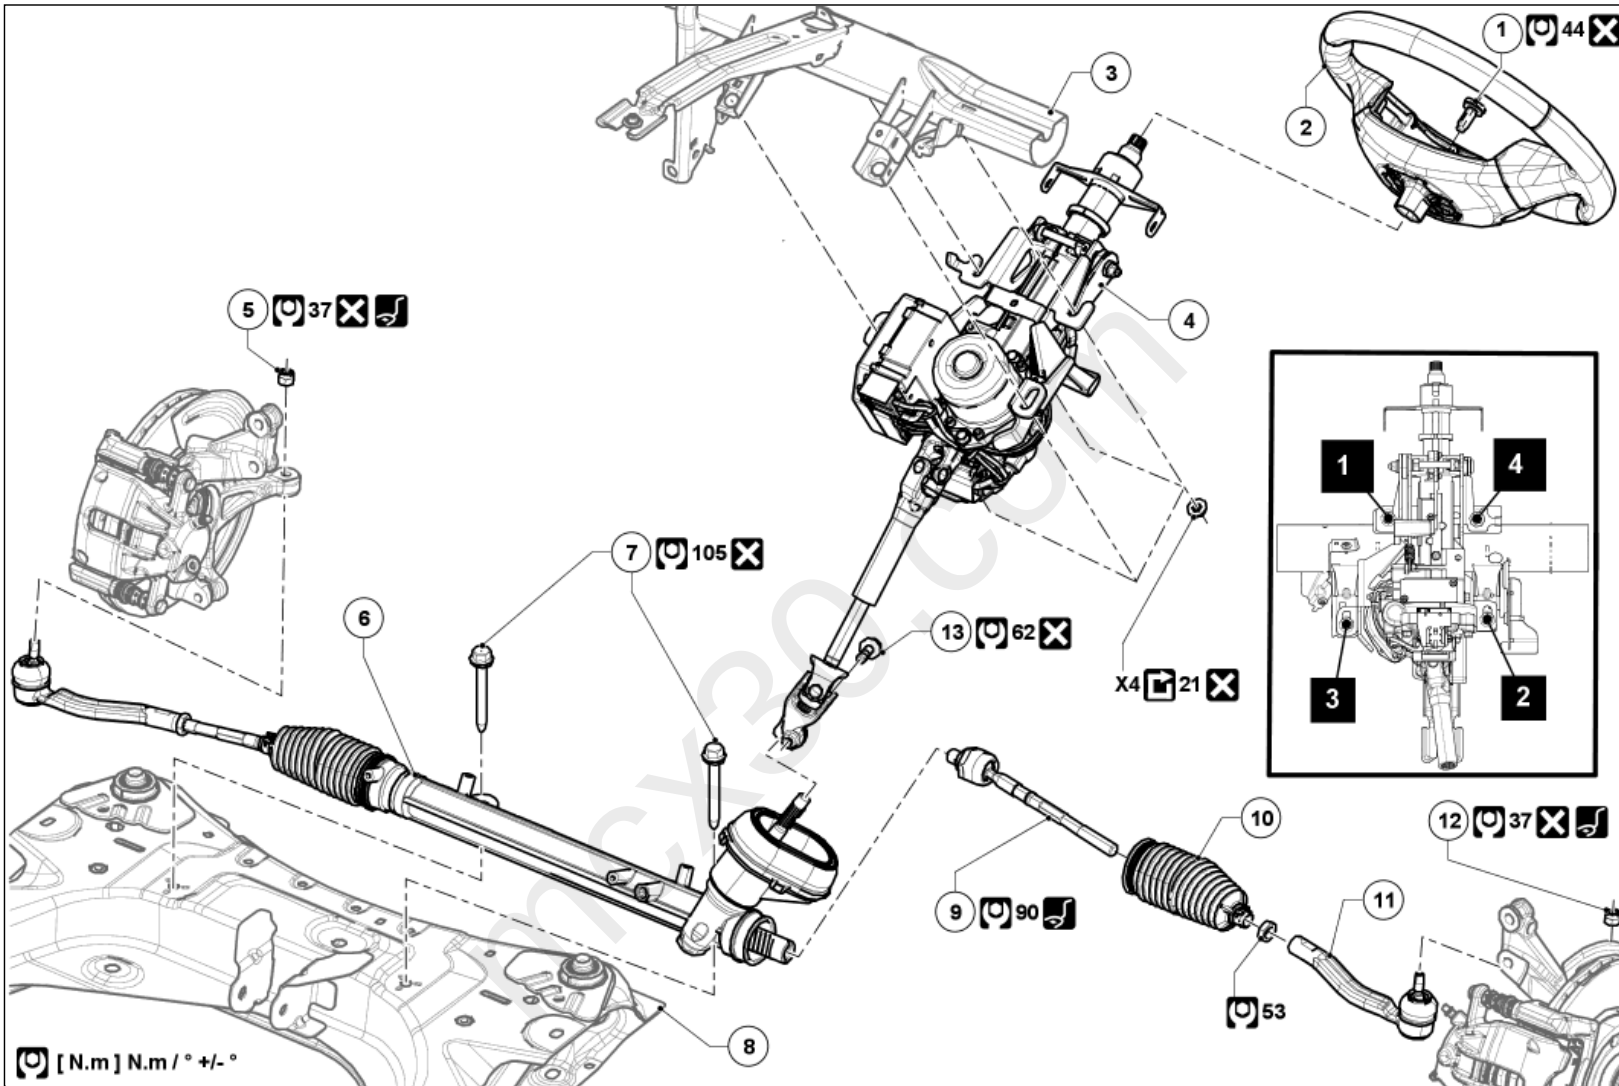


Illustration key: [Description](#).

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#).

Marks	Designations	Informations
1	Steering wheel bolt	
2	Steering wheel	
3	Dashboard cross member	
4	Steering column	(see 36A, Steering assembly , Steering column: Removal - Refitting)
5	Track rod end nut	(Tav. 476)
6	Steering box	
7	Steering box bolts	
8	Front axle subframe	(see Front axle subframe: Removal - Refitting)
9	Axial ball joint linkage	(Dir. 1305-01) (Dir. 1741)
10	Steering box gaiter	(see Steering box gaiter: Removal - Refitting)
11	Track rod	(see Track rod: Removal - Refitting)
12	Track rod end nut	(Tav. 476)
13	Universal joint bolt	