


TRACTIONBATTERY AIRCONDITIONING ASSEMBLY :EXPLODEDVIEW

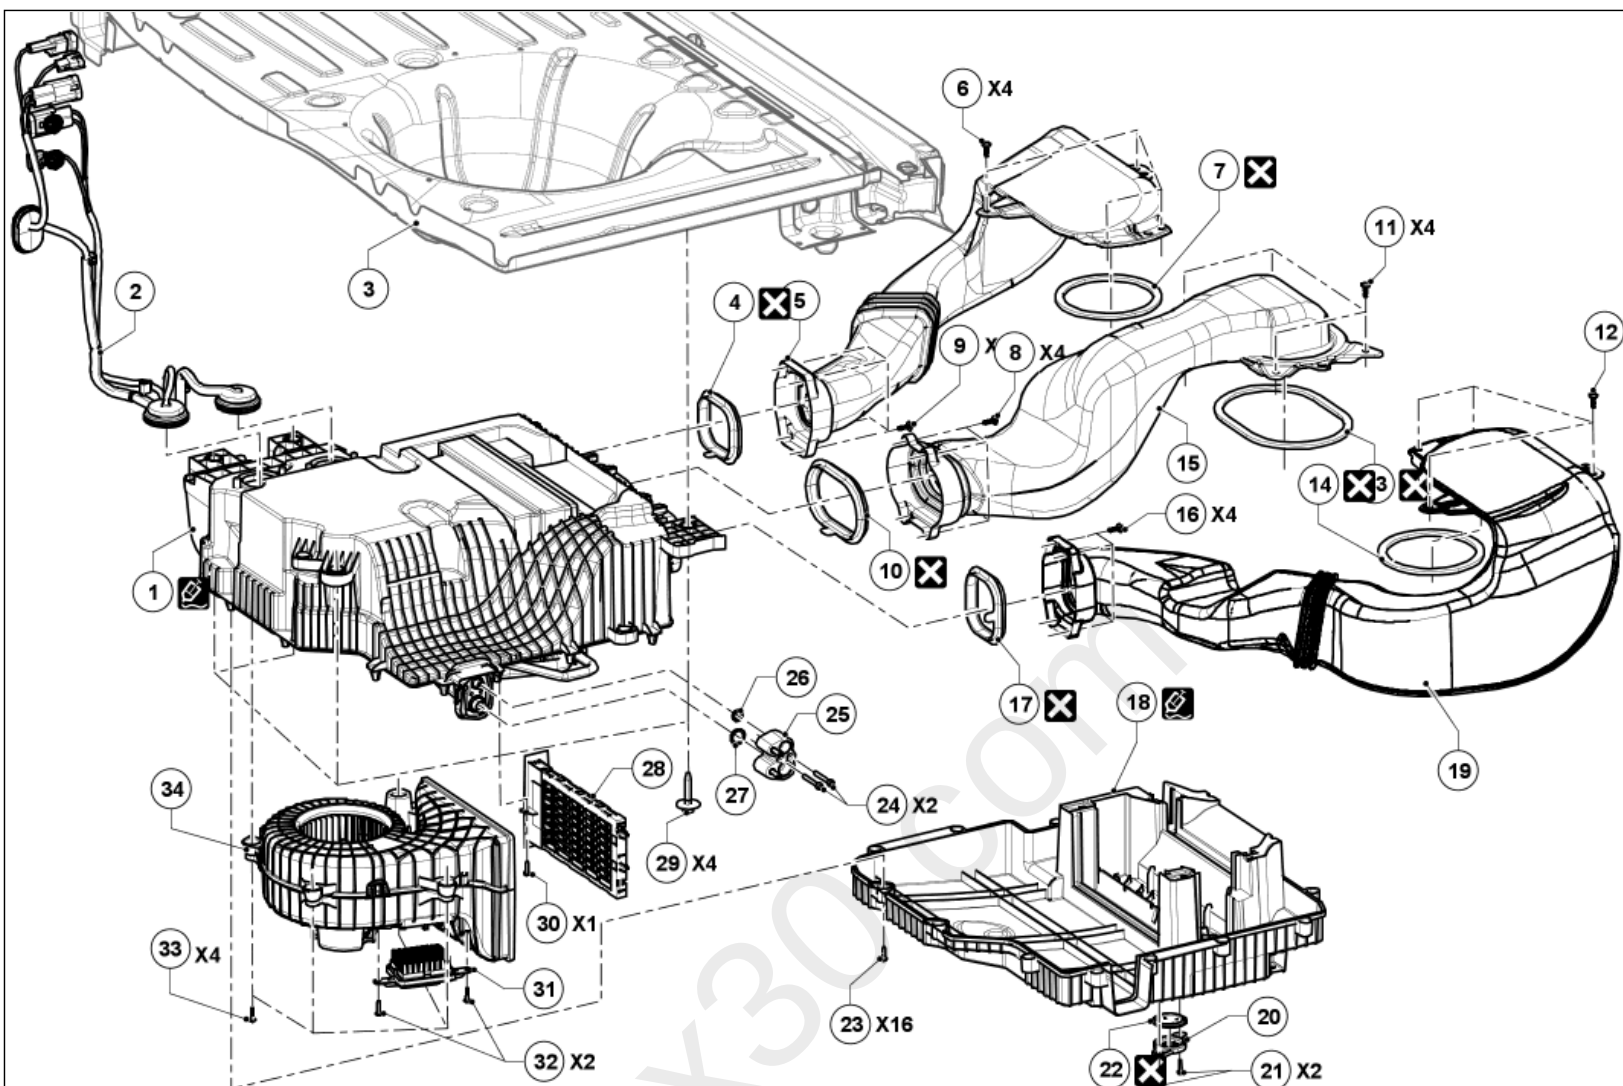

[Illustration key: Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Traction battery air conditioning distribution unit	(see 62D, Traction battery air conditioning, Traction battery air conditioning distribution unit : Removal - Refitting)
2	Wiring	
3	Rear floor	
4	Seal	
5	Traction battery air conditioning air inlet duct	(see 62D, Traction battery air conditioning, Traction battery air conditioning air inlet duct : Removal - Refitting)
6	Bolt	
7	Seal	
8	Bolt	
9	Bolt	
10	Seal	
11	Bolt	
12	Bolt	
13	Seal	
14	Seal	
15	Traction battery air conditioning air inlet duct	(see 62D, Traction battery air conditioning, Traction battery air conditioning air inlet duct : Removal - Refitting)
16	Bolt	
17	Seal	
18	Traction battery air conditioning distribution unit lower cover	(see)
19	Traction battery air conditioning air inlet duct	(see 62D, Traction battery air conditioning, Traction battery air conditioning air inlet duct : Removal - Refitting)
20	Condensate drain	
21	Bolt	
22	Condensate drain seal	
23	Bolt	
24	Bolt	
25	Expansion valve	(see Expansion valve: Removal - Refitting)
26	Refrigerant pipe seal	Refrigerant pipe seal: Removal - Refitting
27	Refrigerant pipe seal	Refrigerant pipe seal: Removal - Refitting
28	Traction battery resistor unit	(see)
29	Bolt	
30	Bolt	

31	Modulate variation of speed of fan assembly for traction battery	(see)
32	Bolt	
33	Bolt	
34	Traction battery air conditioning blowing fan assembly	(see 62D, Traction battery air conditioning, Traction battery air conditioning blowing fan assembly : Removal - Refitting)



Repair-30x02x20x08-02x50-1-2-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com