

TRACTION BATTERY AIR CONDITIONING TEMPERATURE SENSOR : REMOVAL-REFITTING



Note, one or more warnings are present in this procedure



Location and specifications (tightening torques, parts always replaced, etc.)[\(see 62D, Traction battery air conditioning, Traction battery air conditioning assembly : Exploded view\)](#) .

WARNING



■ To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- [Air conditioning: Precautions for the repair](#)
- [Vehicle: Precautions for the repair](#)



CAUTION

To prevent moisture from entering the system, place plugs on the cold loop components which are open to the air.

REMOVAL

1. REMOVAL PREPARATION OPERATION

- Position the vehicle on a two-post lift [Vehicle: Towing and lifting](#) .
- Lockout the 12V supply circuit [Vehicle: Lockout - Removal of lockout](#) .
- Remove:
 - the rear left-hand wheel [Wheel: Removal - Refitting](#) ,
 - the rear left-hand wheel arch liner [Exterior body front trim assembly: Exploded view](#) ,
 - the rear underbody protector.
- Remove [\(see 62D, Traction battery air conditioning, Traction battery air conditioning assembly : Exploded view\)](#) :
 - the screws of the traction battery air conditioning distribution unit lower cover,
 - the traction battery air conditioning distribution unit lower cover.
- Apply super cleaning agent for joint faces [Vehicle: Parts and consumables for the repair](#) to the joint faces of the traction battery air conditioning distribution unit lower cover and the traction battery air conditioning

distribution unit ([see 62D, Traction battery air conditioning, Traction battery air conditioning assembly : Exploded view](#)) .



WARNING

Wear leaktight gloves (Nitrile type) for this operation.


- Wait approximately 10 min.
- Remove the residue using a wooden spatula.
- Finish cleaning the parts using a grey abrasive pad [Vehicle: Parts and consumables for the repair](#) .
- Degrease and clean the joint faces using surface cleaner [Vehicle: Parts and consumables for the repair](#) .




CAUTION


To ensure proper sealing, the gasket surfaces must be clean, dry and not greasy (avoid any finger marks).

2. REMOVAL OPERATION

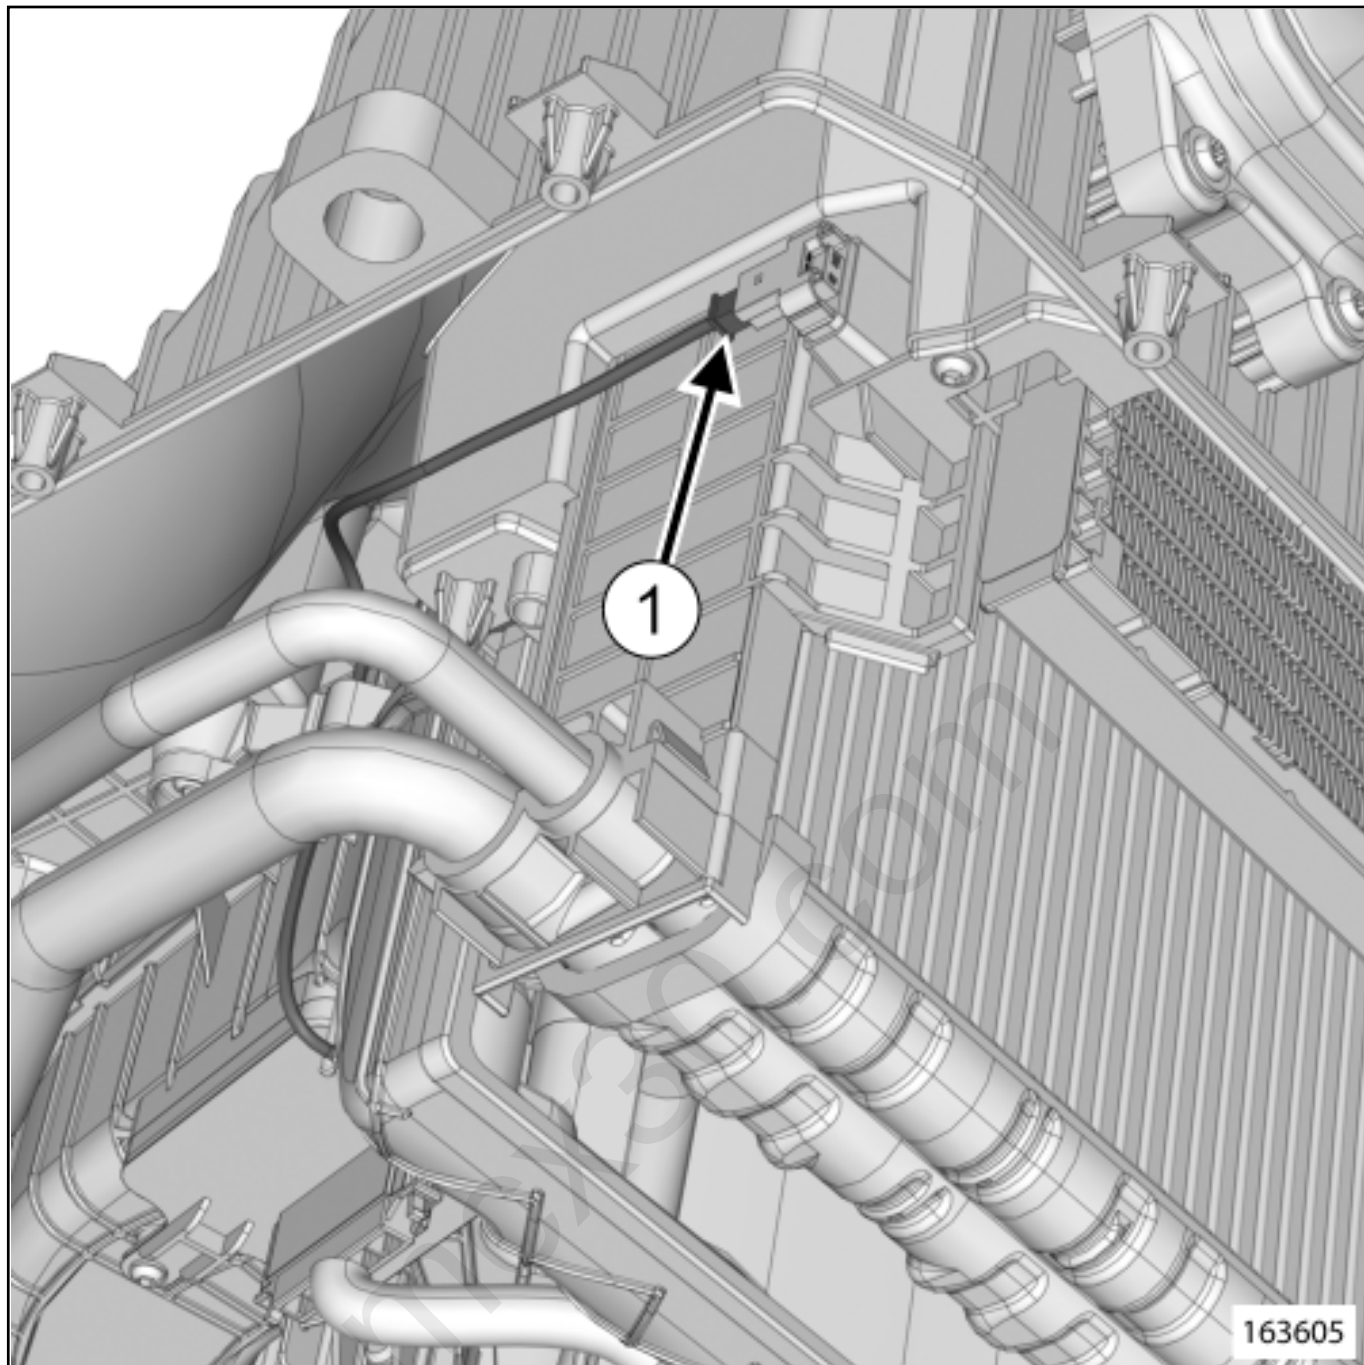

- Disconnect the traction battery air conditioning temperature sensor connector(1) .

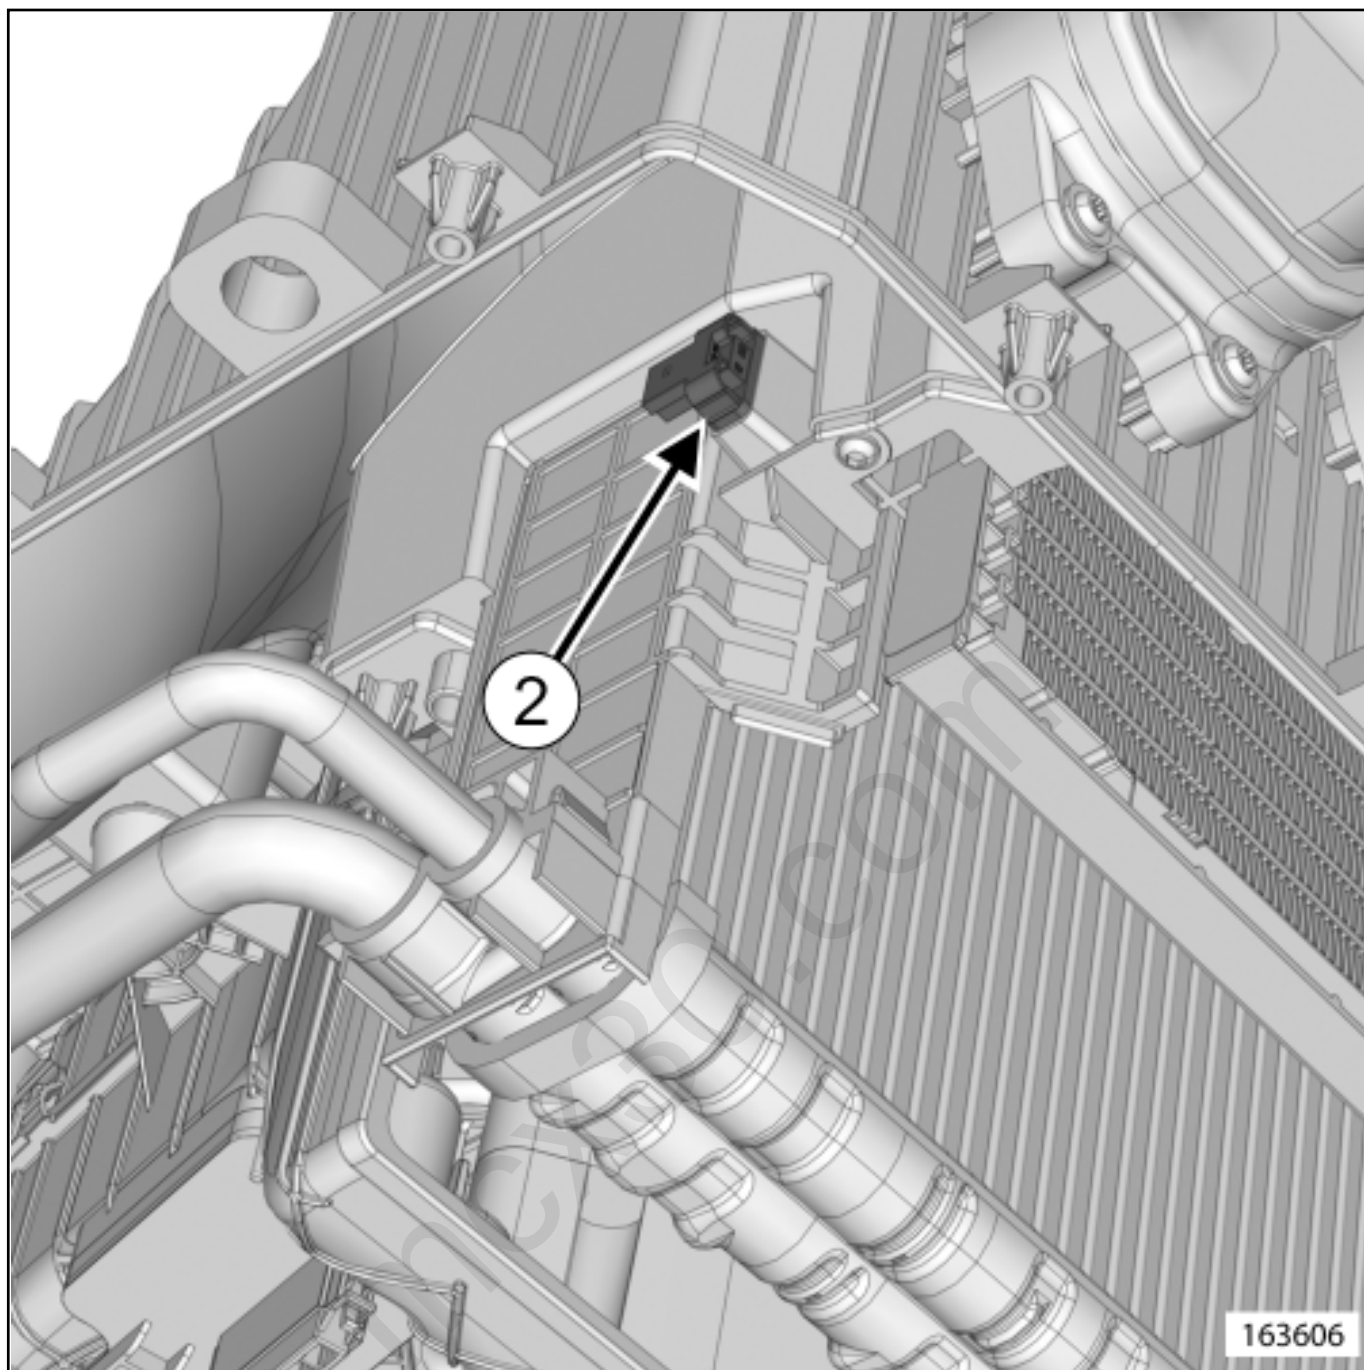

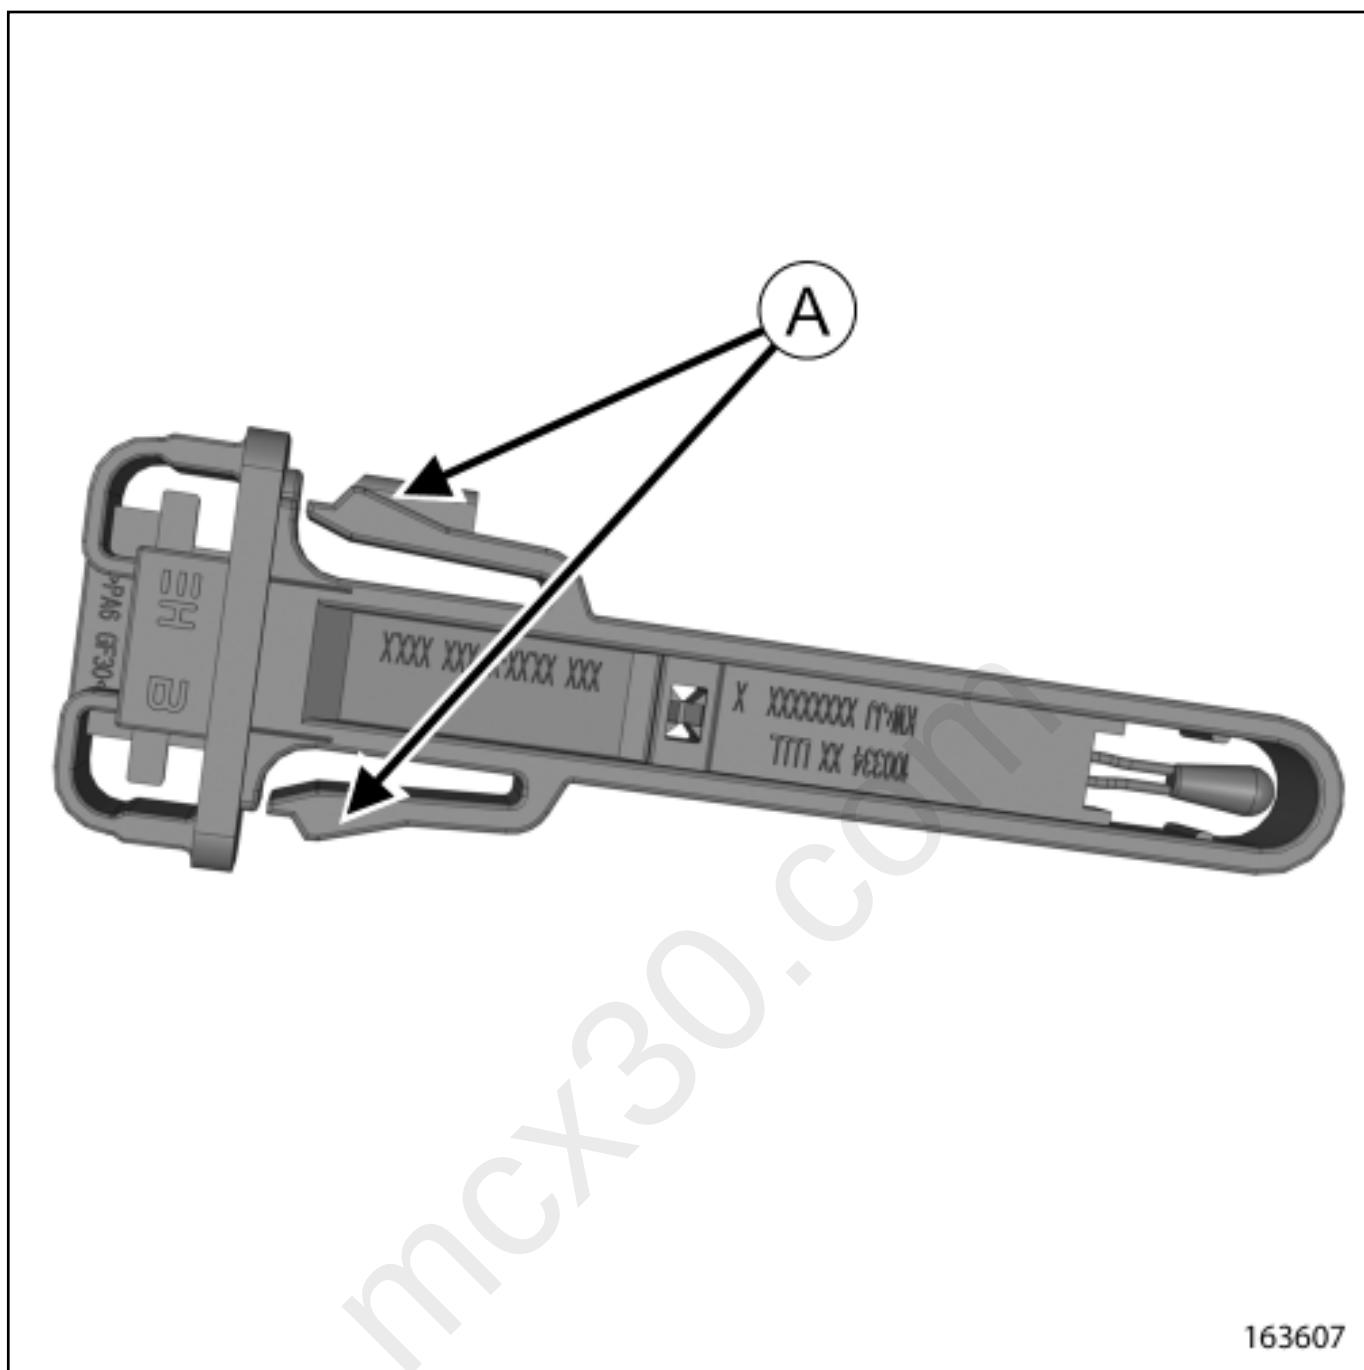

- Remove the traction battery air conditioning temperature sensor(2) by pressing at(A) .

REFITTING

1. REFITTING OPERATION



Refit the traction battery air conditioning temperature sensor.

Connect the traction battery air conditioning temperature sensor connector.

2. FINAL OPERATION

Apply a bead of silicone adhesive sealant [Vehicle: Parts and consumables for the repair](#) on the traction battery air conditioning distribution unit lower cover [\(see 62D, Traction battery air conditioning, Traction battery air conditioning assembly : Exploded view\)](#) .

Proceed in the reverse order to removal.

Remove the lockout of the 12V supply circuit [12 V supply circuit : Lockout - Removal of lockout](#) .



Repair-30x02x20x03-01x37-1-2-1.xml



XSL version : 3.02 du 22/07/11