

VEHICLE: SEALING CHECK

Note:



In order to make the sealing check easier, the vehicle has been divided into several zones.

These zones are split specifically to allow for a focused search.


Note:




You will find below the links to access the methods for checking the sealing of the zones concerned.

1. DISTRIBUTION OF ZONES

ZONE 1

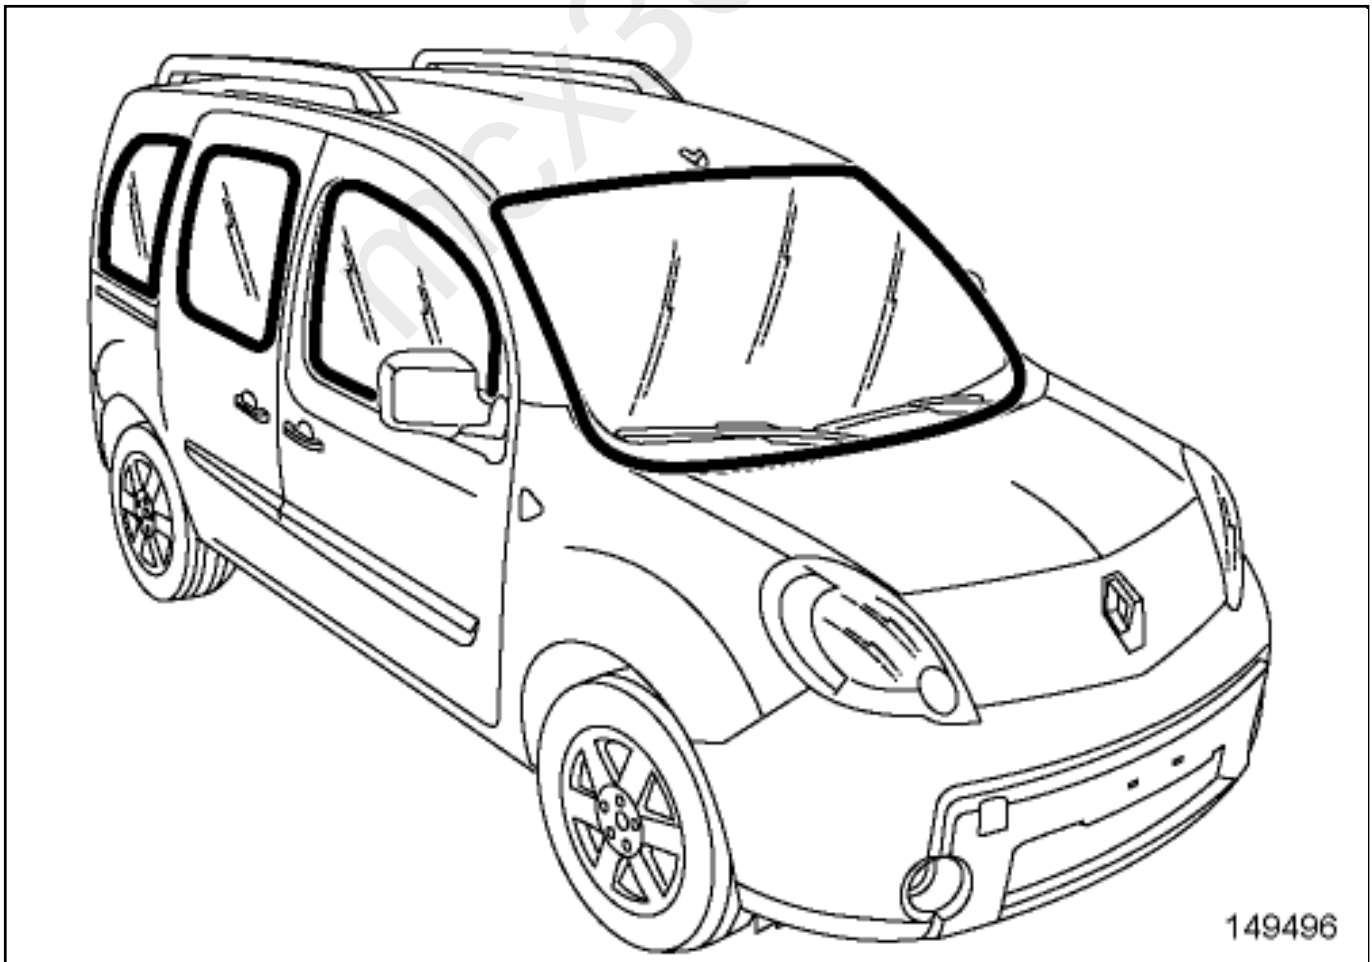


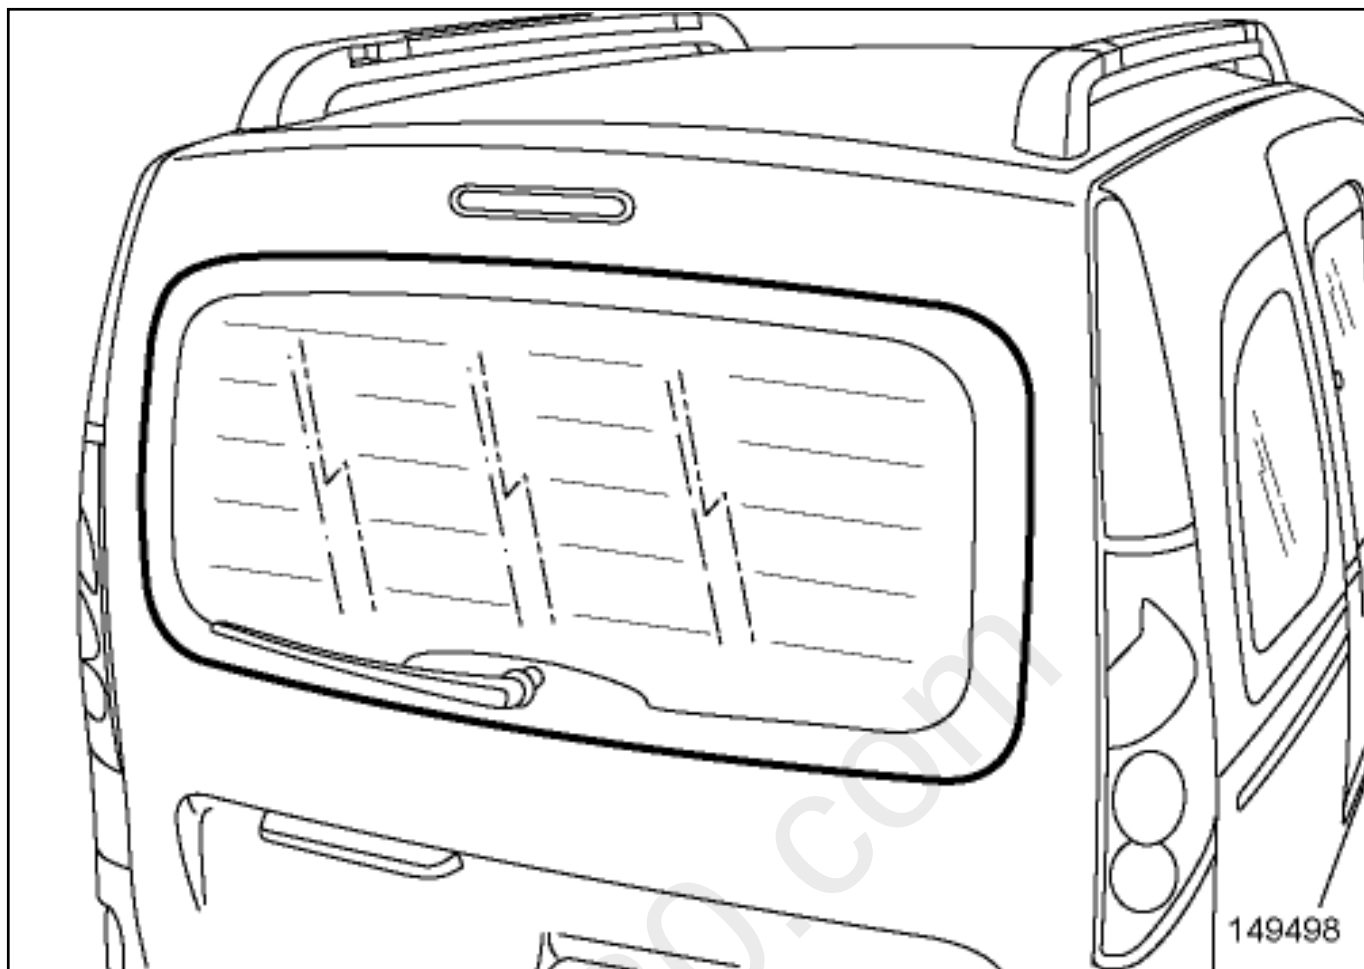

■ Zone 1:

- Windows([see 60A, General information, Windows: Sealing check](#))


ZONE 2

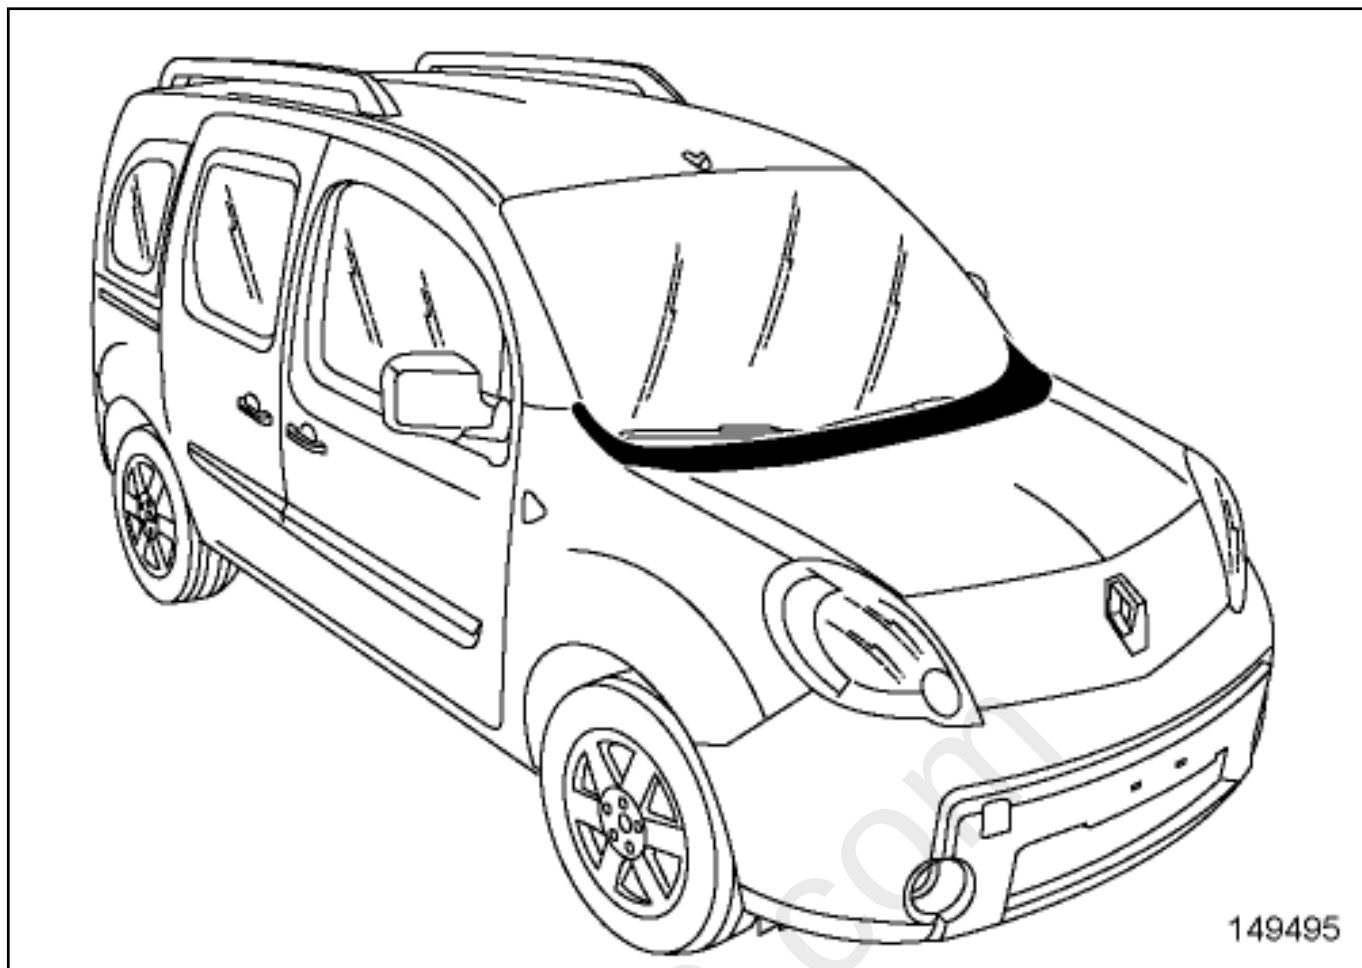

■ Zone 2:

- Front section of the vehicle: Checking the sealing([see 60A, General information, Front section of the vehicle: Sealing check](#)).


ZONE 3

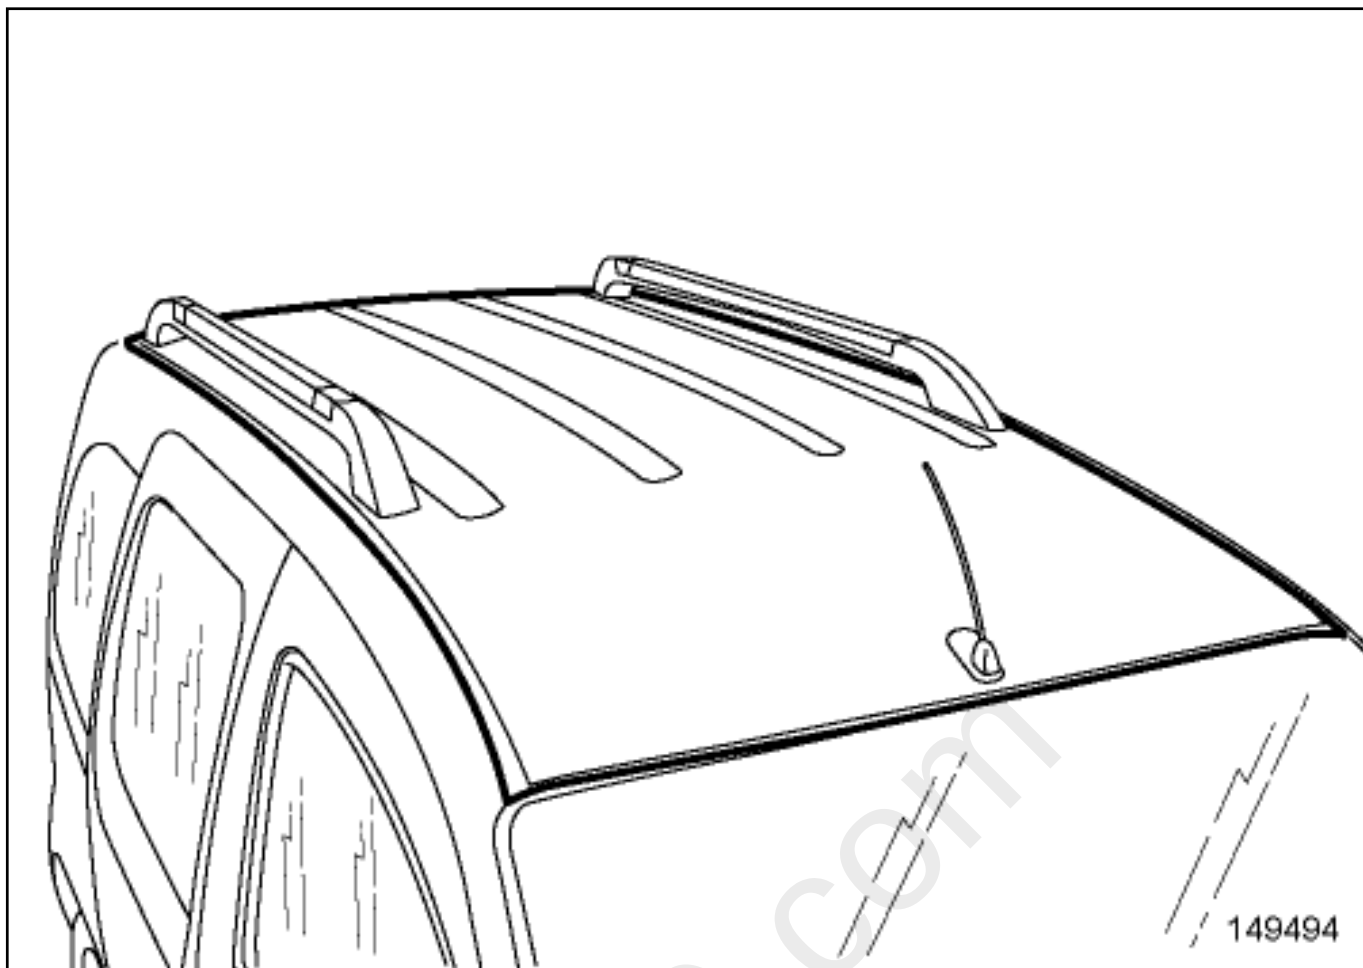

■ Zone 3:

- Roof([see 60A, General information, Roof: Sealing check](#)) and retractable roof([see 60A, General information, Retractable roof: Sealing check](#)) .


ZONE 4

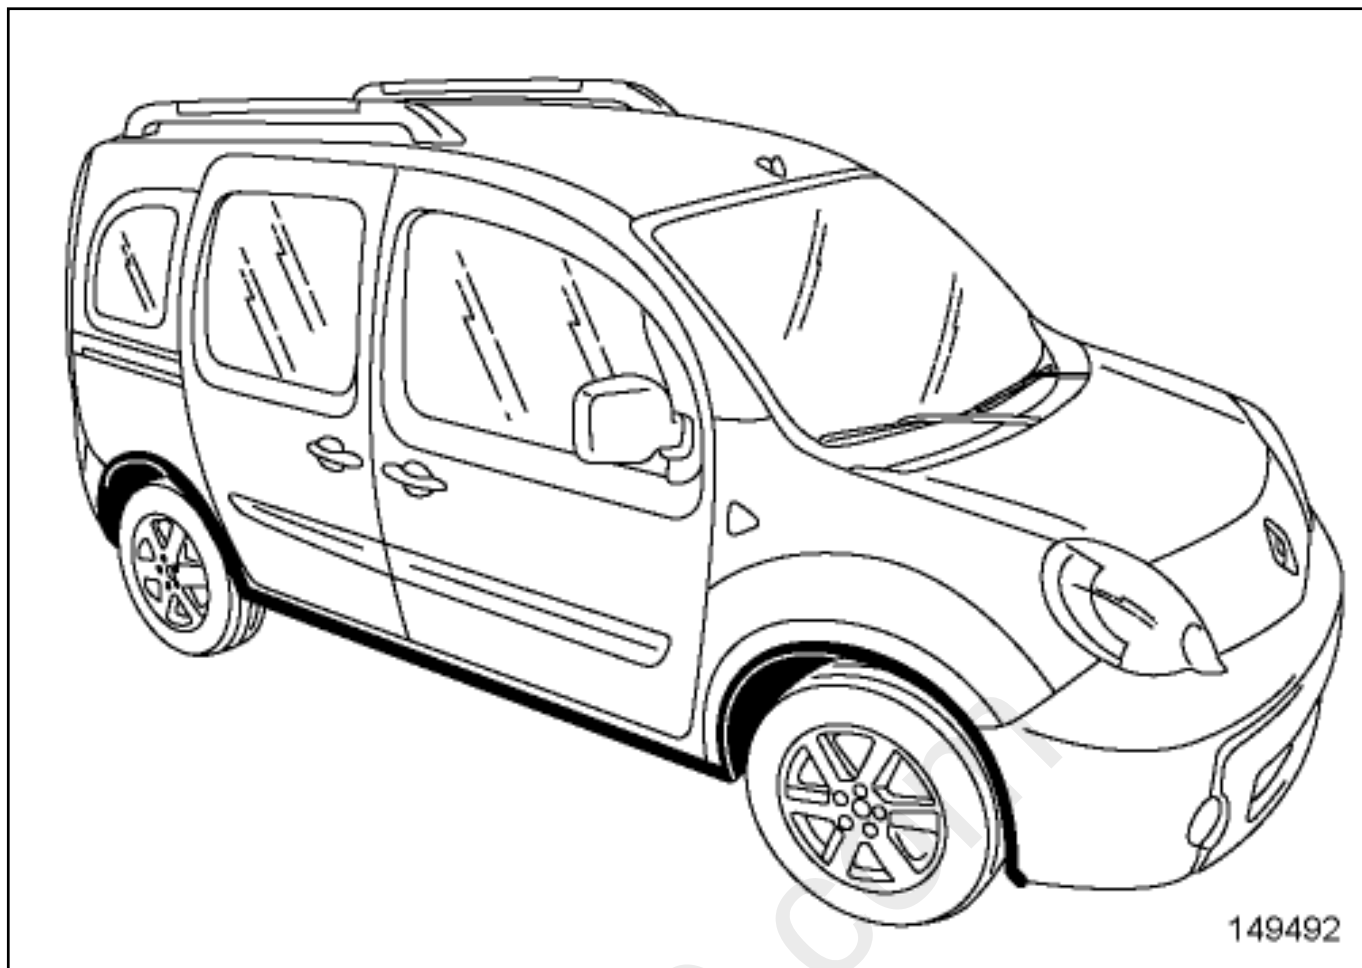

■ Zone 4:

- Underside of the vehicle: Checking the sealing([see 60A, General information, Underside of the vehicle: Sealing check](#)) .


ZONE 5

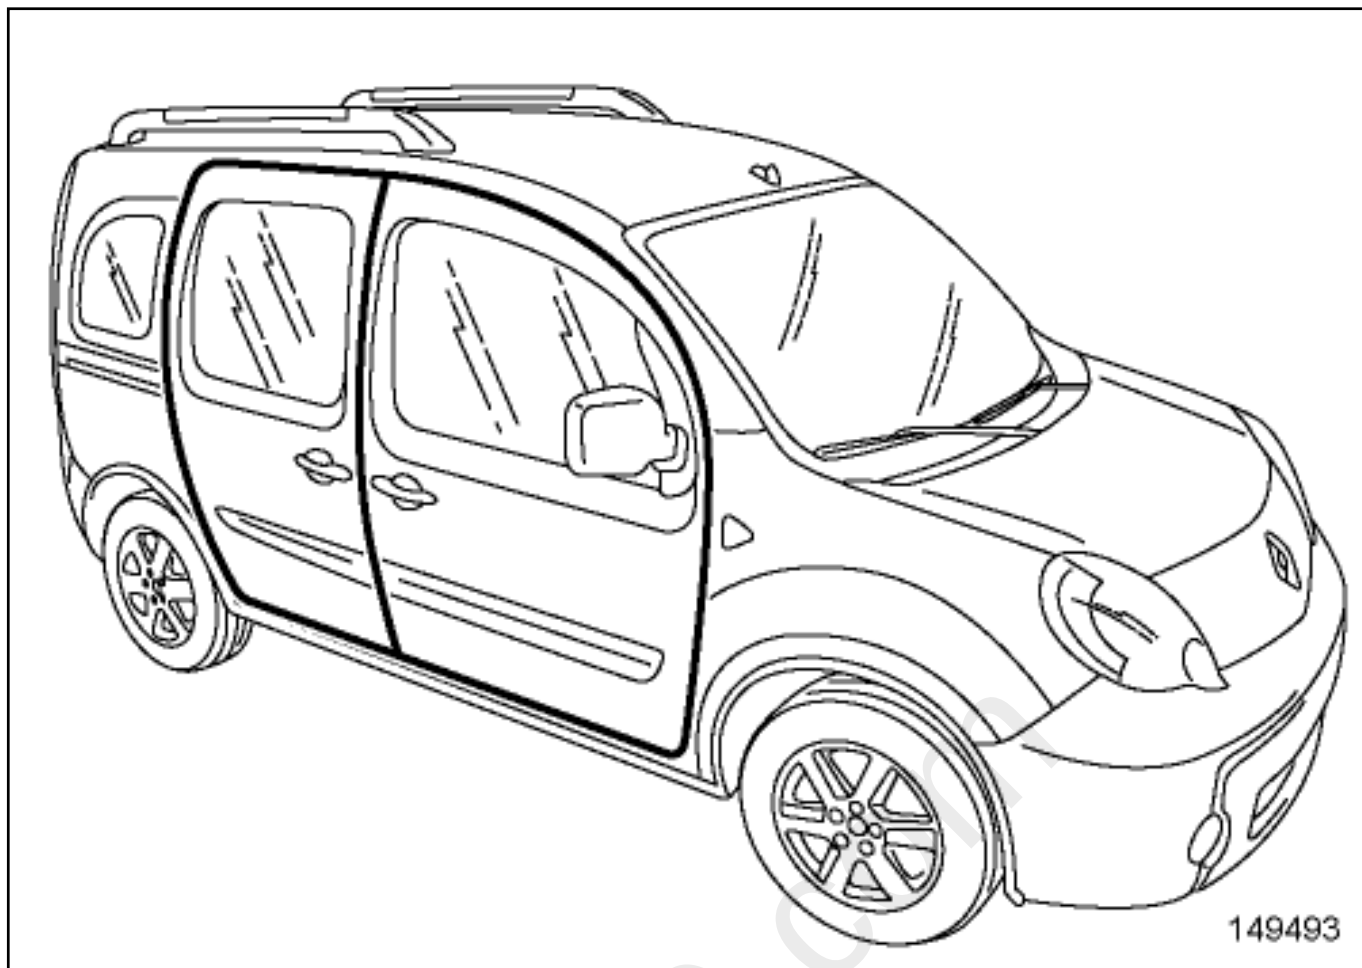

■ Zone 5:

- Side opening elements: Checking the sealing([see 60A, General information, Side opening elements: Sealing check](#)) .

ZONE 6

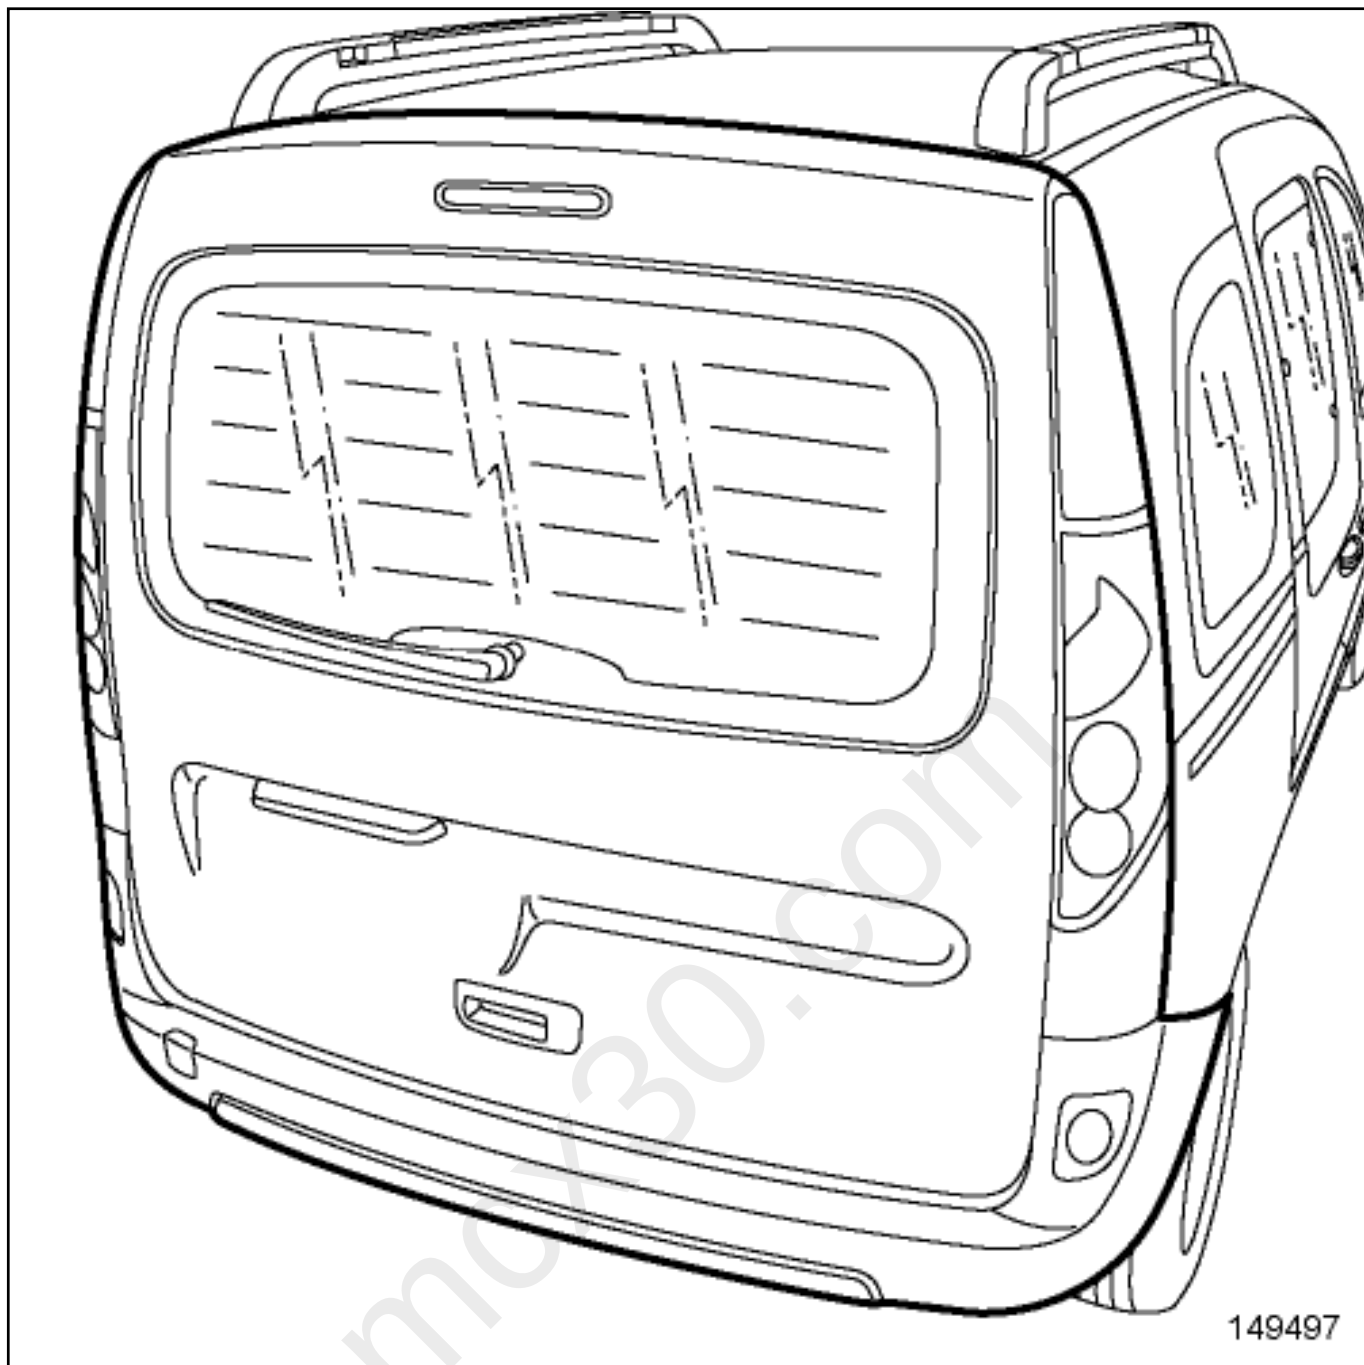

Zone 6:



Rear section of the vehicle: Checking the sealing([see 60A, General information, Rear section of the vehicle: Sealing check](#)) .

Note:



When checking the sealing of a zone, if the customer complaint was not reproduced, extend the sealing check to neighbouring zones.

As the flow of water can sometimes be complex, water may enter through a zone opposite to where the water is actually present.



Repair-00x01x01-01x94-1-1-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com