

Components



- 1. Front propeller shaft
- 2. Center bearing bracket

- 3. Rear propeller shaft

Removal



- When lifting a vehicle using a lift, be careful not to damage the lower parts of the vehicle (floor under cover, fuel filter, fuel tank, canister).

(Refer to General Information - "Lift Point")


1. After making a match mark on the flange yoke and transaxle companion, remove the propeller shaft mounting bolts (A).

Tightening torque :


49.0 - 68.6 N.m(5.0 - 7.0 kgf.m, 36.2 - 50.6 lb-ft)



- Use a hexagon socket to prevent damage to the head when removing and installing bolts.
- Mark the location and direction of bolt and washer before removing the propeller shaft.
- Installing the bolt and washer differently from the initial state can result in unbalanced propeller shaft causing abnormal vibration of propeller shaft at high speed.
- If abnormal vibration and noise occur at high vehicle speeds after replacing propeller shaft with a new one, balance the propeller shaft with a balancing machine.
- The bolt is a special bolt applied with bond, so do not reuse.

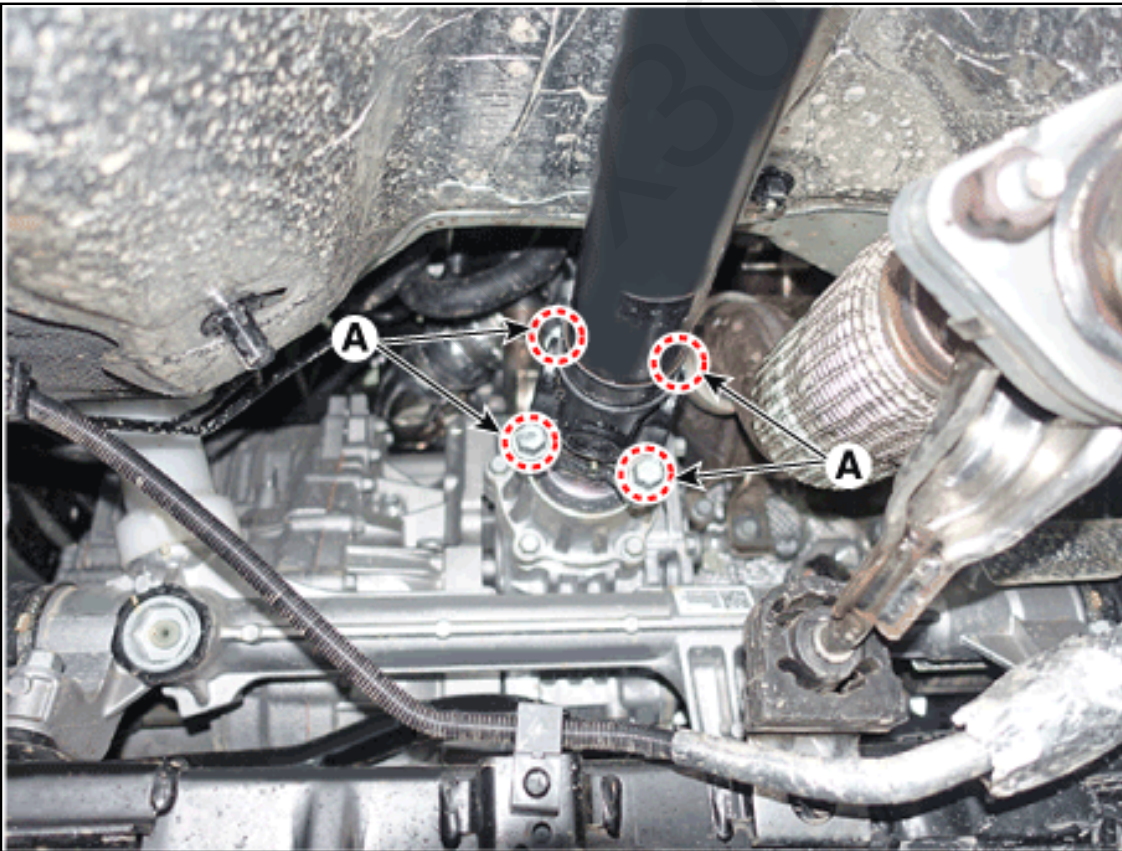

2. Remove the bracket (A) after loosening the mounting bolts.

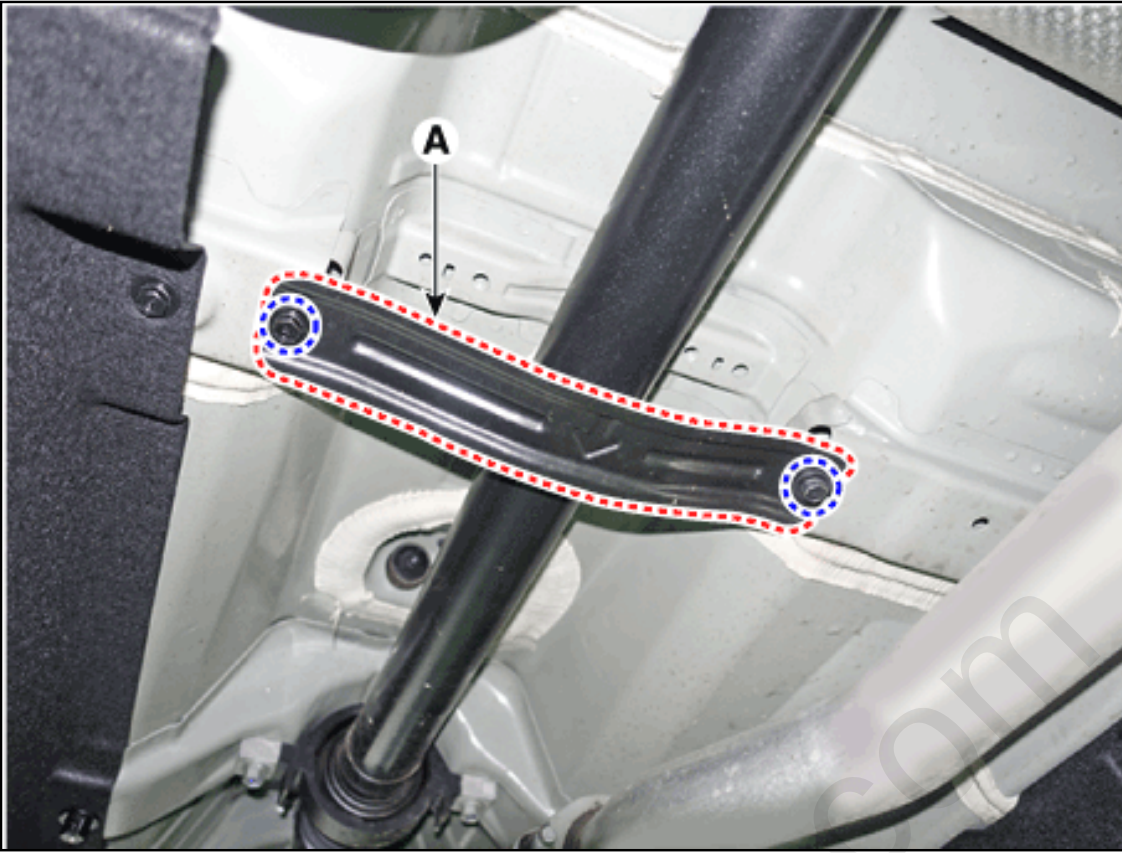


3. Loosen the center bearing bracket mounting bolts (A).

Tightening torque :

49.0 - 68.6 N.m(5.0 - 7.0 kgf.m, 36.2 - 50.6 lb-ft)



- Mark the location and direction of bolt and washer before removing the propeller shaft.
- Installing the bolt and washer differently from the initial state can result in unbalanced propeller shaft causing abnormal vibration of propeller shaft at high speed.

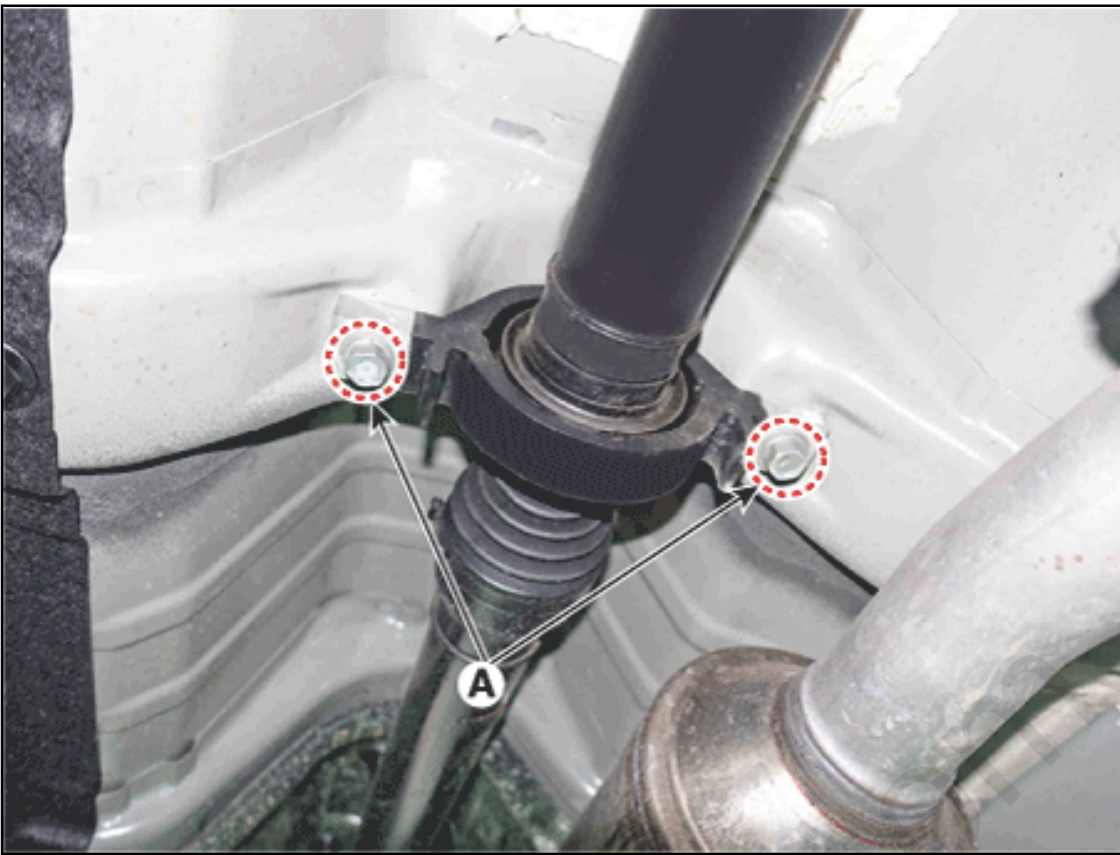


4. After making a match mark on the constant velocity joint and rear differential companion, remove the propeller shaft mounting bolts (A).

Tightening torque :

49.0 - 68.6 N.m(5.0 - 7.0 kgf.m, 36.2 - 50.6 lb-ft)



- Use a hexagon socket to prevent damage to the head when removing and installing bolts.
- Mark the location and direction of bolt and washer before removing the propeller shaft.
- Installing the bolt and washer differently from the initial state can result in unbalanced propeller shaft causing abnormal vibration of propeller shaft at high speed.
- If abnormal vibration and noise occur at high vehicle speeds after replacing propeller shaft with a new one, balance the propeller shaft with a balancing machine.
- The bolt is a special bolt applied with bond, so do not reuse.

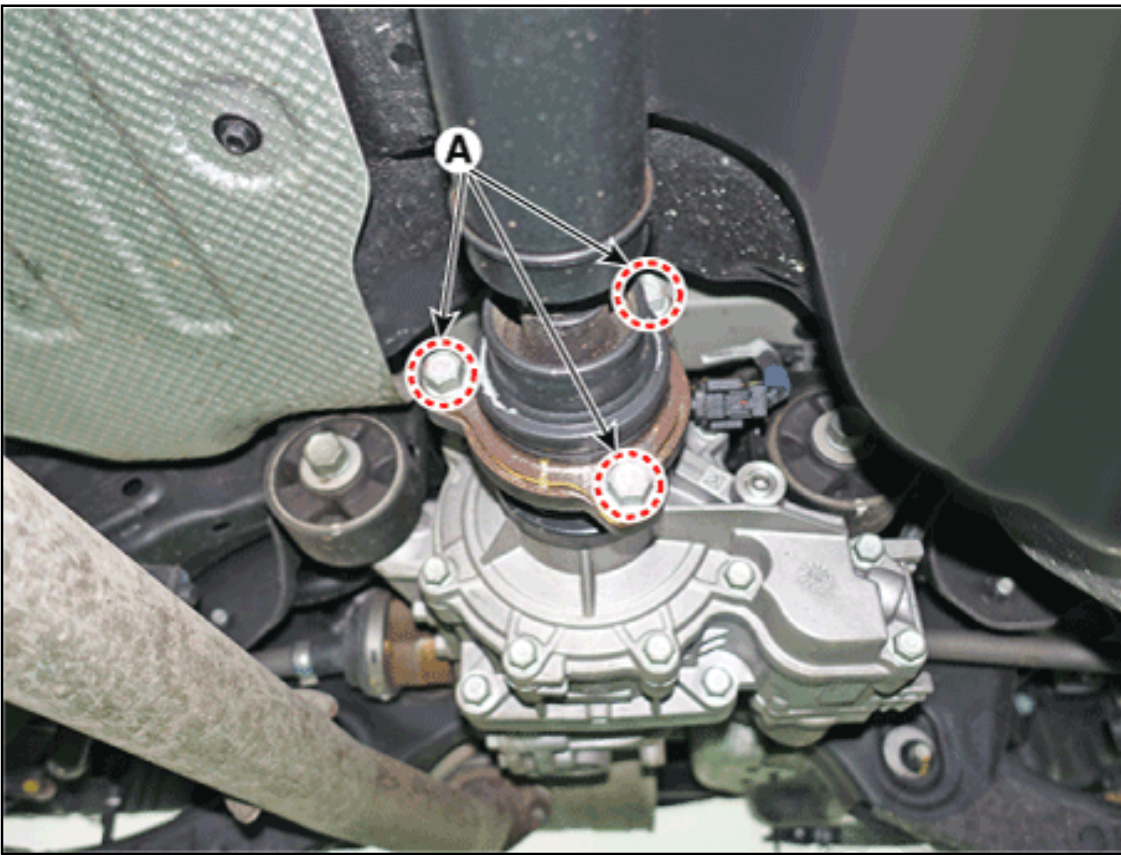

Installation

1. To install, reverse the removal procedures.