

PUBLISHED: 24-AUG-2020
2020.0 DEFENDER (LE), 501-30

REAR END SHEET METAL REPAIRS

QUARTER PANEL - 110 (G2400727)

mcx30.com

REMOVAL

**NOTE:**

In this procedure the quarter panel is installed in conjunction with:

- Tailgate
- Rear armature
- Tail lamp assembly
- Rear door
- Headliner
- Loadspace trim panel
- Rear quarter window
- Second row seat
- Third row seat
- Second row seatbelt retractor
- Third row seatbelt retractor
- Fuel filler neck.

1.



The quarter panel is serviced as indicated.

2.

Before commencing this procedure make sure that you are aware of all Health and Safety requirements. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

3.



NOTES:

- Where Breakstem Fastener (BSF) removal is instructed remove the fastener shaft with a 4 mm punch and remove the head with a 6.5 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Where Self Piercing Rivet (SPR) removal is instructed use either the Jaguar Land Rover (JLR) approved SPR tool or a 5.3 mm drill bit. Clean all the drilled holes to make sure they are free from debris.
- Where Flow Form Rivet (FFR) removal is instructed, remove the head and then remove the shaft with a punch. Clean the holes to make sure they are free from debris.
- Any joints sealed as part of vehicle manufacture must be sealed as part of the repair.

When installing the quarter panel make sure that you are aware of the methods, tools and fixings used in this procedure.

Refer to: [Body Repairs](#) (501-25A Body Repairs - General Information, Description and Operation).

Refer to: [Adhesives, Fixings and Consumables](#) (501-25A Body Repairs - General Information, Description and Operation).

-
4. For additional information on the fixings required to complete this procedure
Refer to: [Specifications - 110](#) (501-30 Rear End Sheet Metal Repairs, Specifications).
-
5. For additional removal information
Refer to: [Tailgate](#) (501-03 Body Closures, Removal and Installation).
-
6. For additional removal information
Refer to: [Rear Armature](#) (501-19 Bumpers, Removal and Installation).
-
7. For additional removal information
Refer to: [Tail Lamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
-
8. For additional removal information
Refer to: [Rear Door](#) (501-03 Body Closures, Removal and Installation).
-
9. For additional removal information
Refer to: [Headliner - 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
-
10. For additional removal information
Refer to: [Left Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Right Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Left Loadspace Trim Panel - 110, Vehicles With: 5 Seats](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
Refer to: [Right Loadspace Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
-
11. For additional removal information
Refer to: [Rear Quarter Window](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).
-
12. For additional removal information
Refer to: [Second Row Left Seat - 110](#) (501-10 Seating, Removal and Installation).
Refer to: [Second Row Right Seat - 110](#) (501-10 Seating, Removal and Installation).
-
13. For additional removal information
Refer to: [Third Row Seat](#) (501-10 Seating, Removal and Installation).
-
14. For additional removal information
Refer to: [Second Row Seatbelt Retractor - 110](#) (501-20A Seatbelt System, Removal and Installation).
-
15. For additional removal information
Refer to: [Third Row Seatbelt Retractor](#) (501-20A Seatbelt System, Removal and Installation).
-

16. For additional removal information

Refer to: [Fuel Filler Neck - INGENIUM I4 2.0L Petrol](#) (310-01A Fuel Tank and Lines - INGENIUM I4 2.0L Petrol/INGENIUM I4 2.0L Petrol - PHEV, Removal and Installation).

Refer to: [Fuel Filler Neck](#) (310-01C Fuel Tank and Lines - INGENIUM I4 2.0L Diesel, Removal and Installation).

17. Remove the rear door striker from the C-pillar.


18. Release and position the floor carpet to one side.

19. Release and position the floor Noise, Vibration and Harshness (NVH) material to one side.

20. Release and position the wiring harness to one side.

21. **⚠ CAUTION:**


Care should be taken not to cut through into the inner reinforcements.

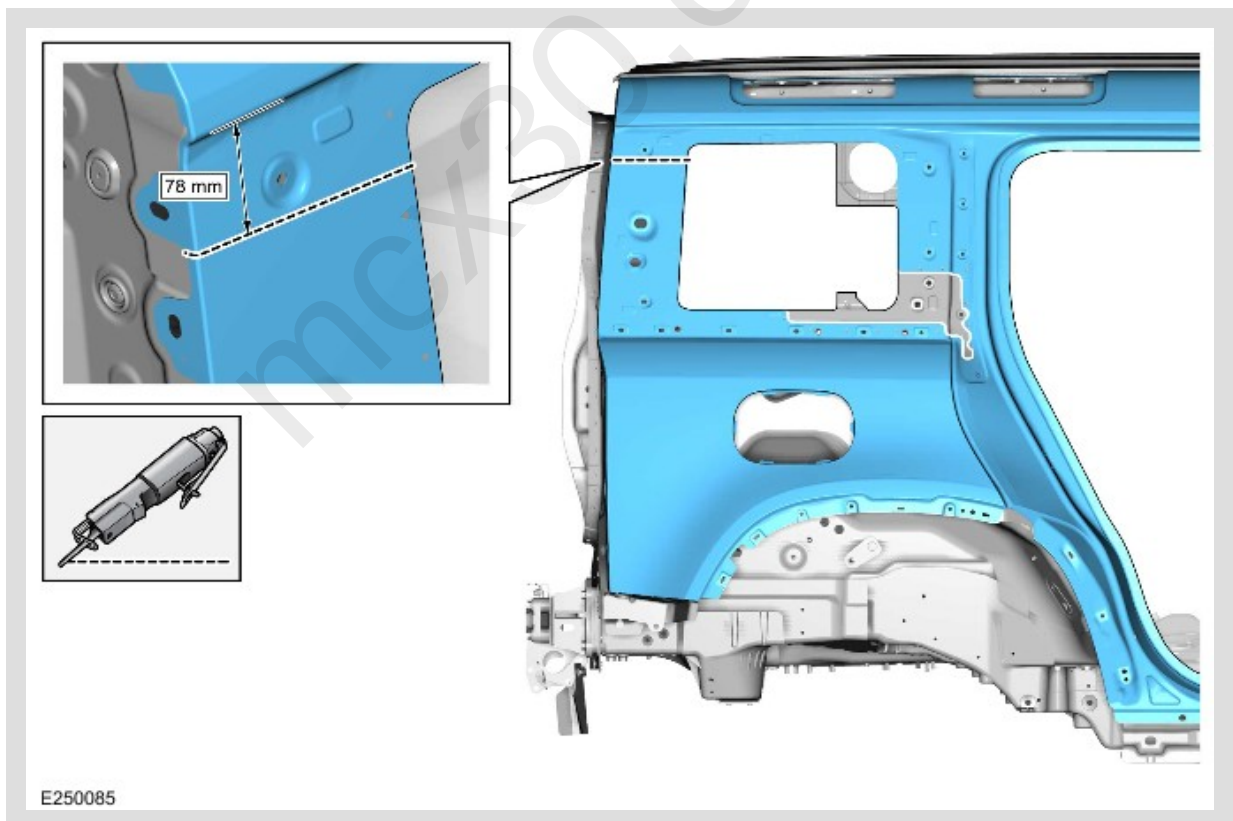

Use a combination of the new quarter panel and the data supplied to measure, mark and cut the remaining panel for the Metal Inert Gas (MIG) welded butt joint.


⚠ CAUTION:

Care should be taken not to cut through into the inner reinforcements.

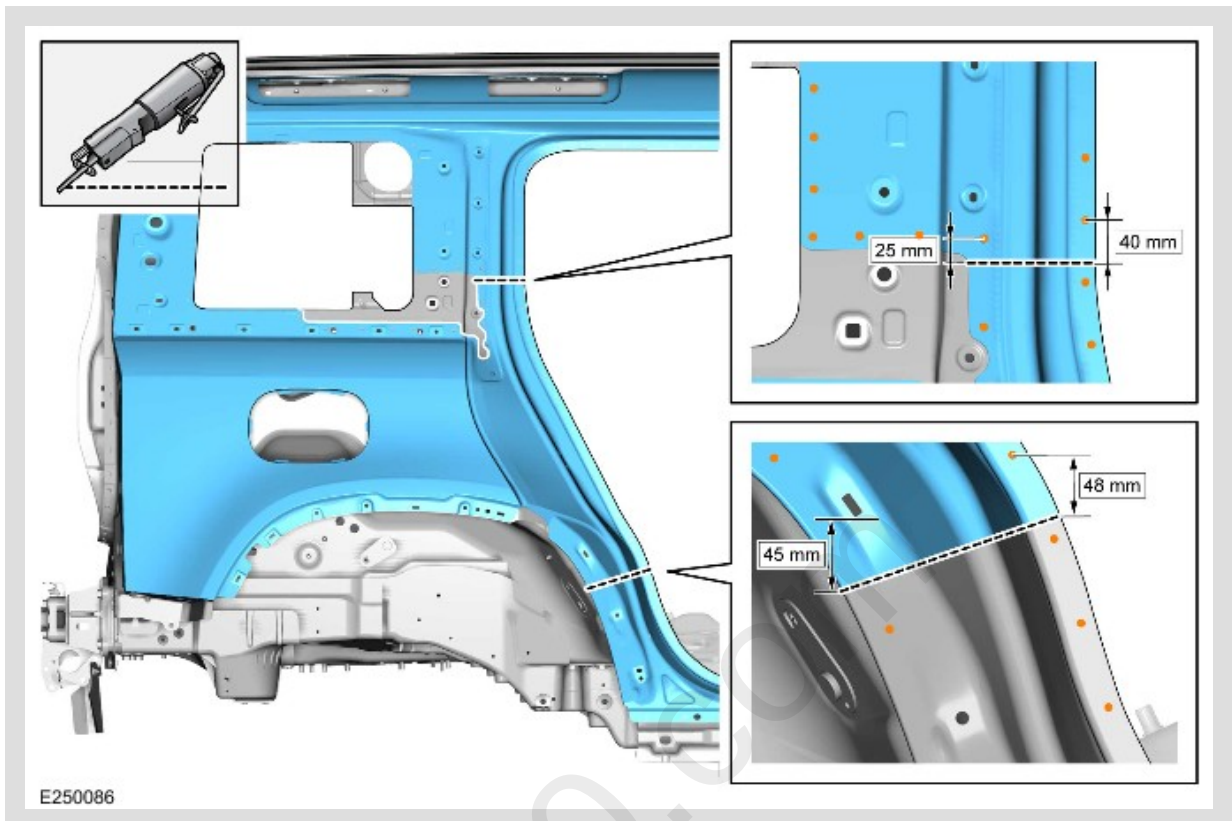


Use a combination of the new quarter panel and the data supplied to measure, mark and cut the remaining panel for the MIG welded butt joints.

23.

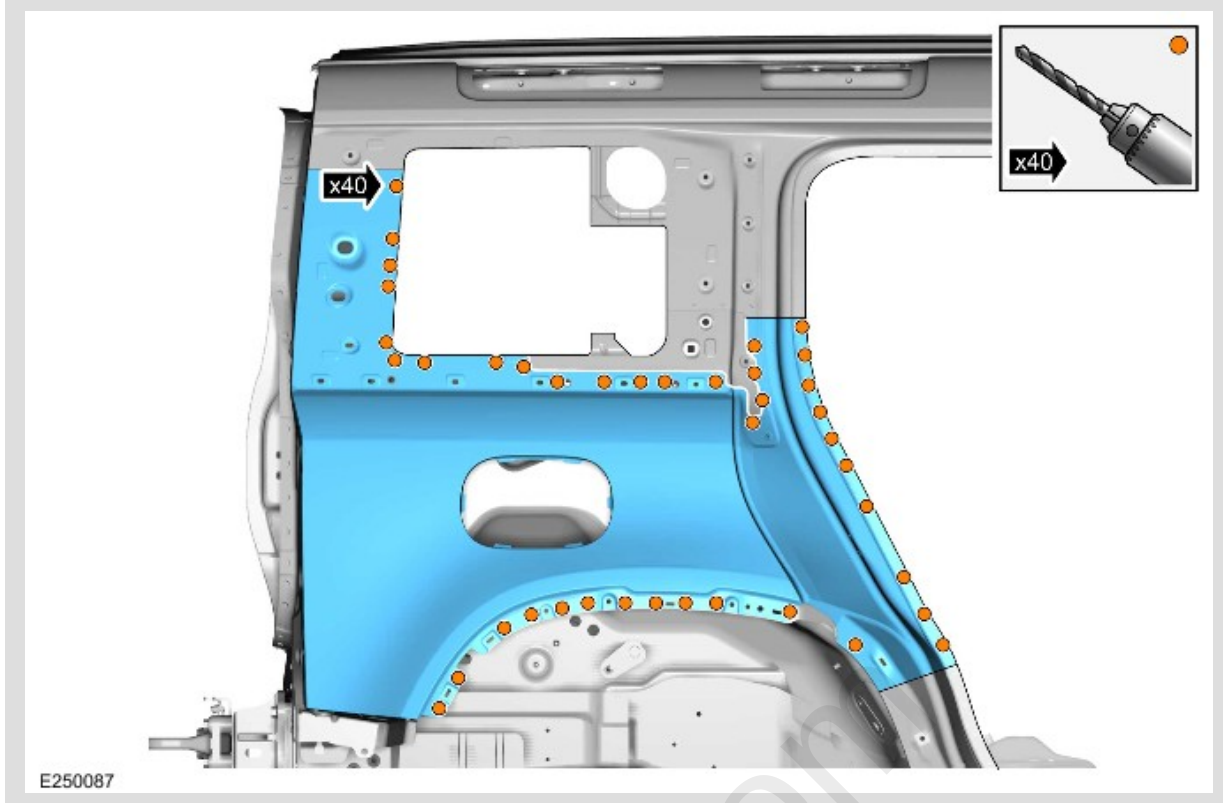

Remove the Self Piercing Rivets (SPRs) as indicated.


24.

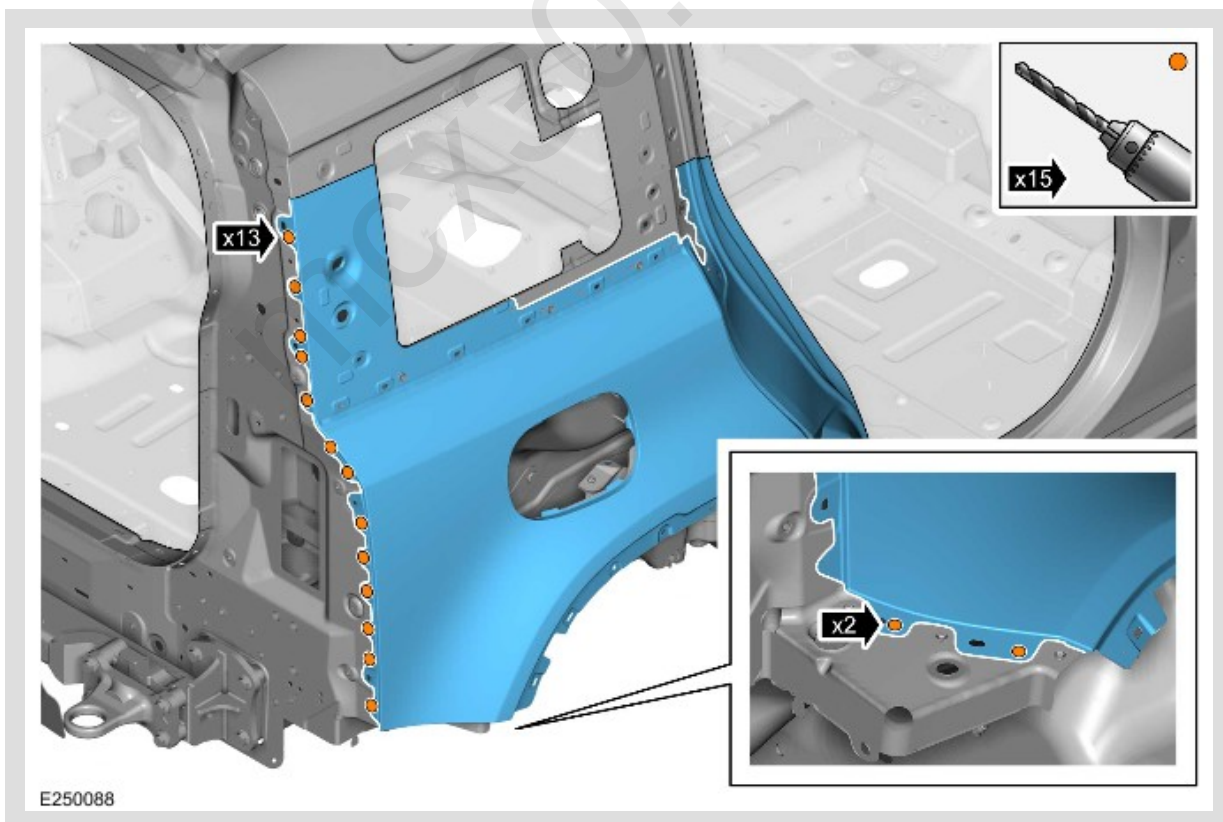


Remove the SPRs as indicated.

NOTE:

Where Flow Form Rivet (FFR) installation is indicated. Make sure that the panel is planished before removal.

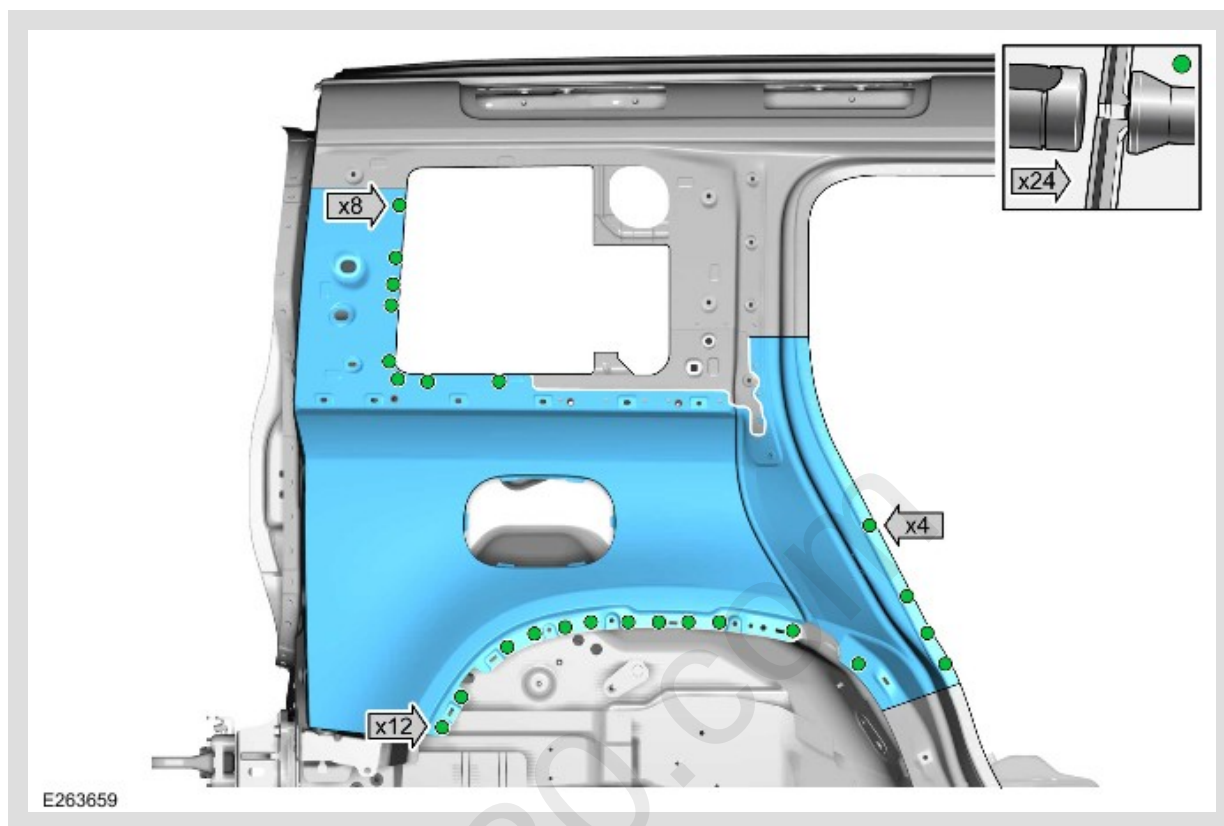

Planish the panel as indicated.

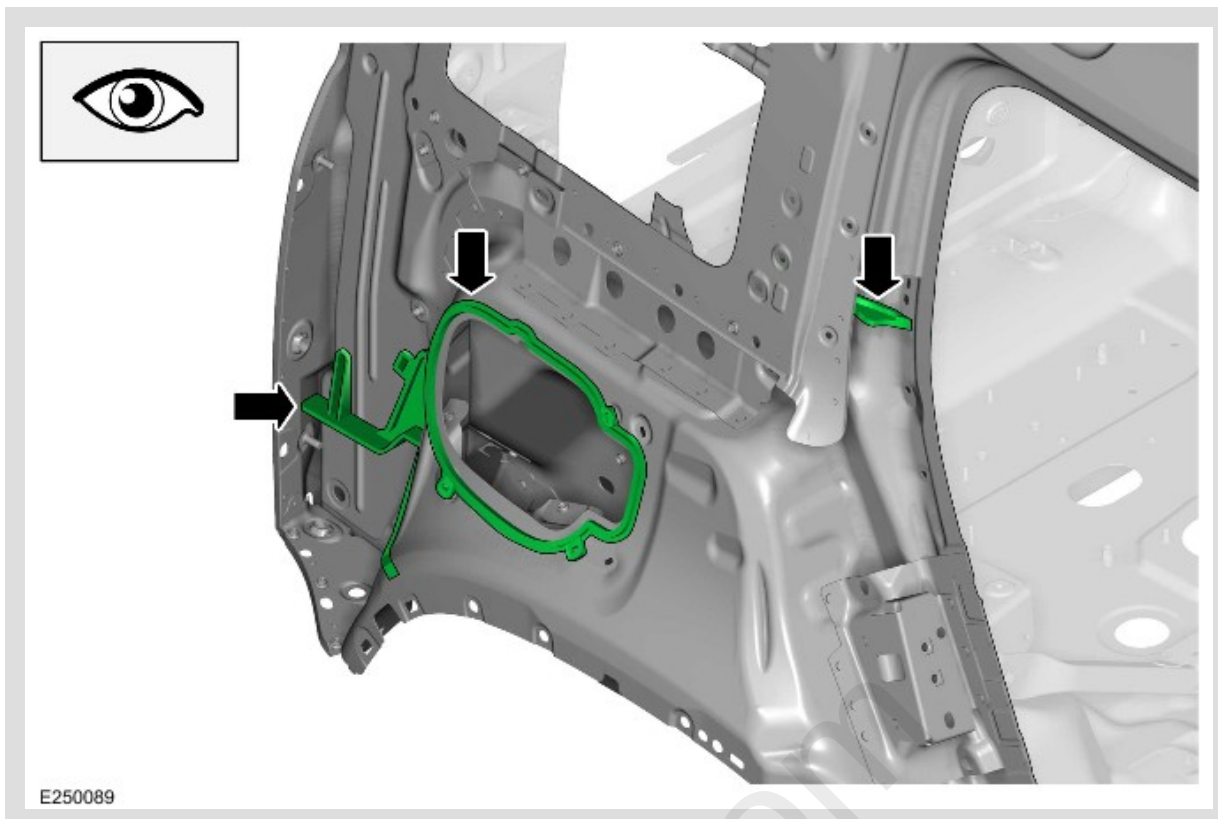

Carefully separate the joints and remove the quarter panel avoiding damage to the NVH material as indicated.

INSTALLATION

⚠ CAUTION:

Where structural adhesive is to be applied between surfaces it is essential compression is applied to the joints during the curing period.


△ NOTES:

- Breakstem Fastener (BSF) installation involves using the JLR approved BSF installation tool and requires a hole diameter of 6.5 mm.
- Self Piercing Rivet (SPR) installation requires using the JLR approved SPR tool.
- Flow Form Rivet (FFR) installation requires using the JLR approved FFR tool.
- Refer to Adhesive, Fixings and Consumables for further information on Flow Form Rivets (FFRs).

1. Remove the rivet remnants.

2. Dress the flanges where necessary.

3.

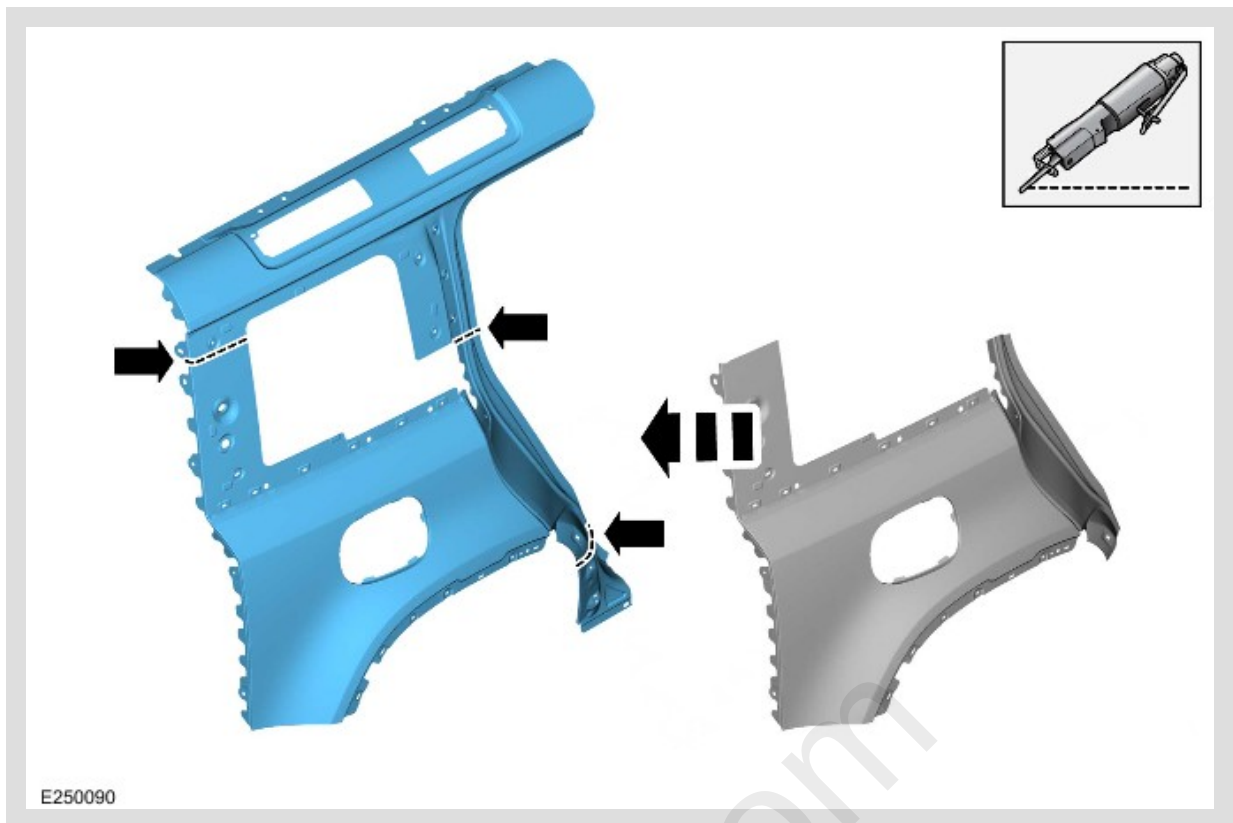


Use the old quarter panel as a guide. Measure, mark and cut the new quarter panel, where the MIG butt joints are to be made as indicated.

4.


Offer up the new quarter panel and clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.

5.

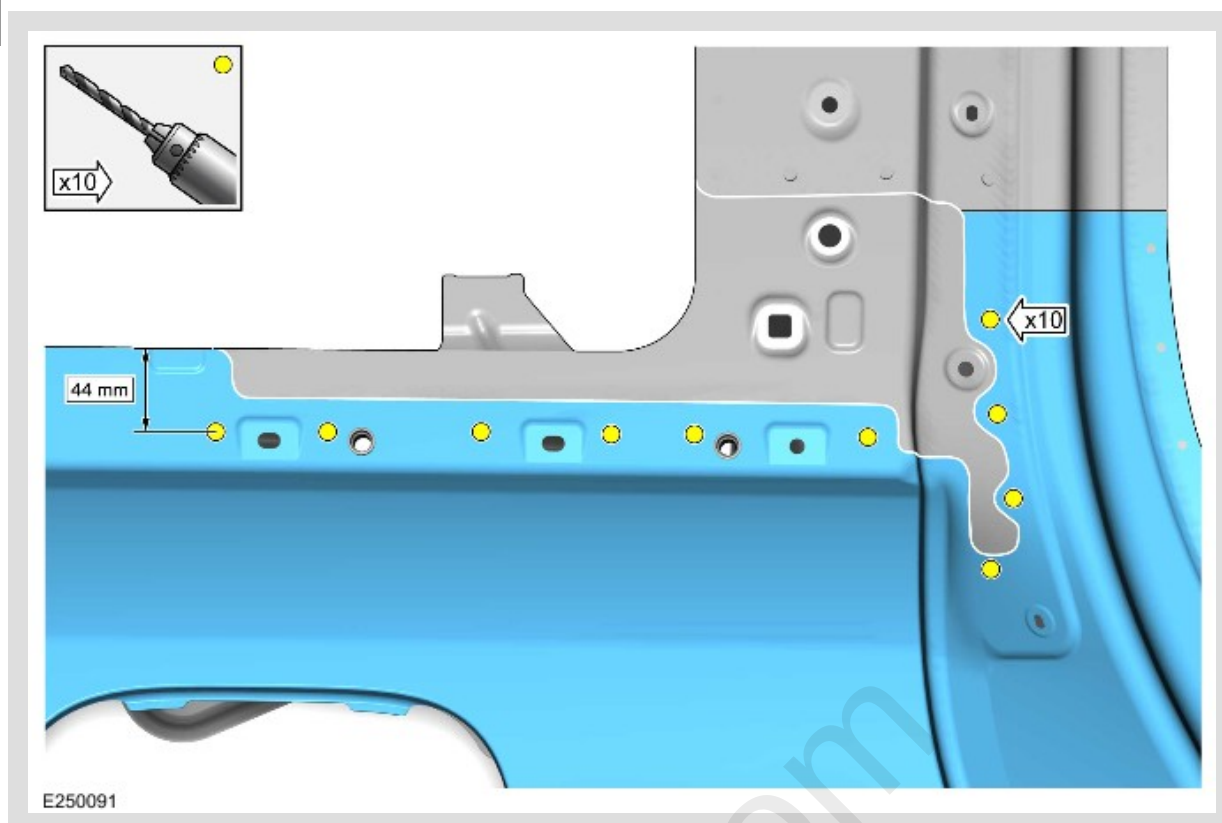


Drill holes where Breakstem Fasteners (BSFs) are to be installed as indicated.

6.

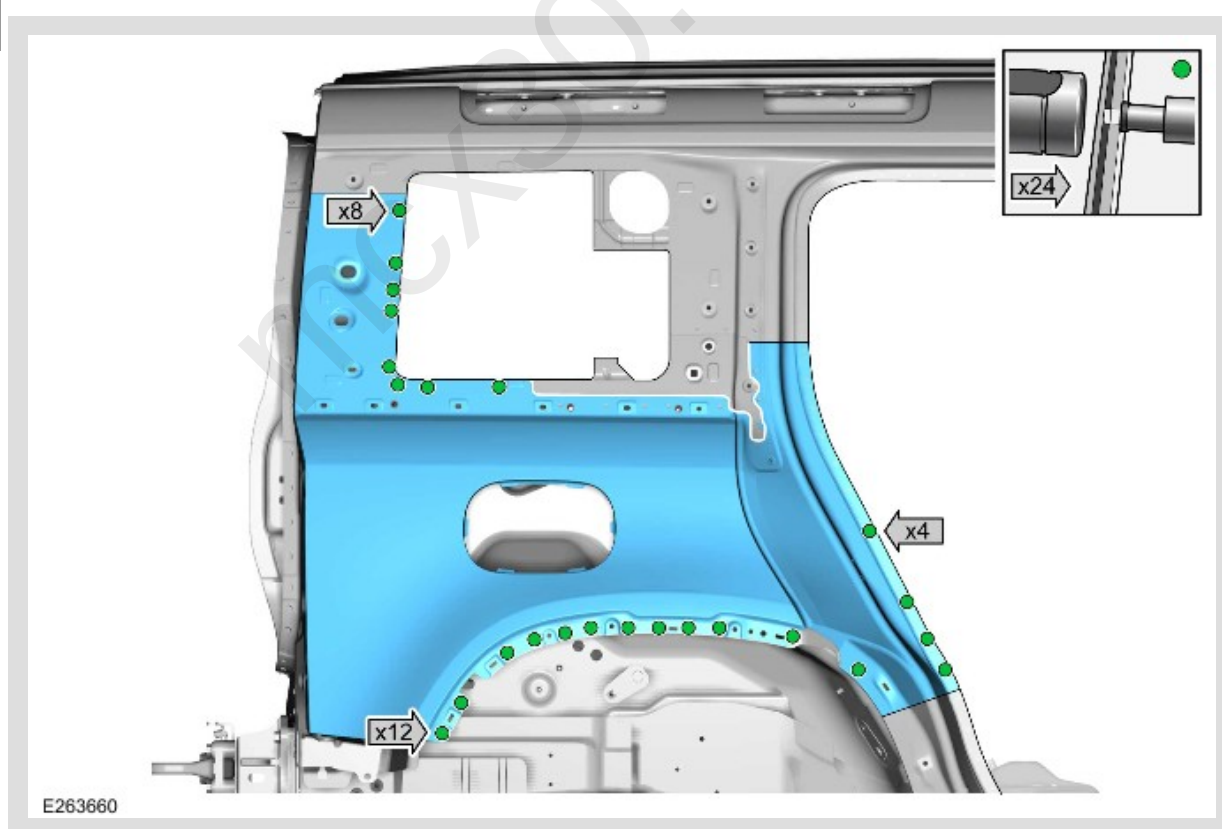


Punch calibrated holes where the Flow Form Rivets (FFRs) are to be installed as indicated.

7.

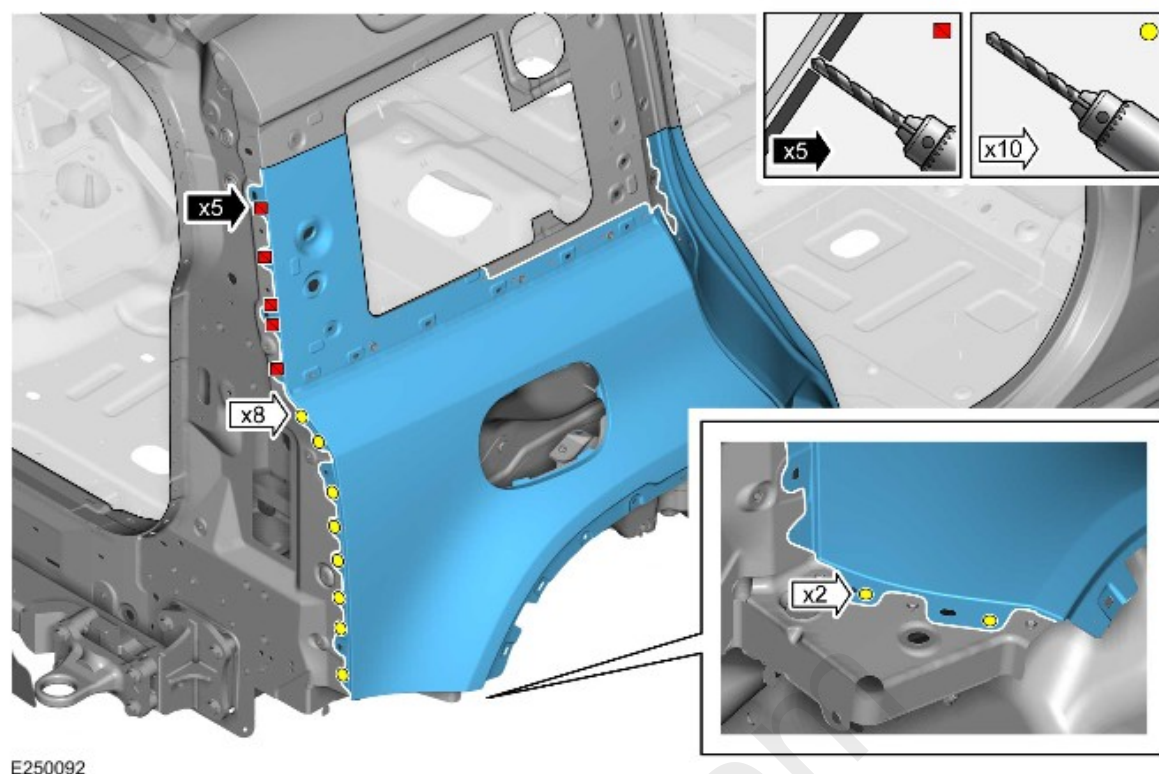


Drill holes where the BSFs and MIG plug welds are to be installed as indicated.

8.

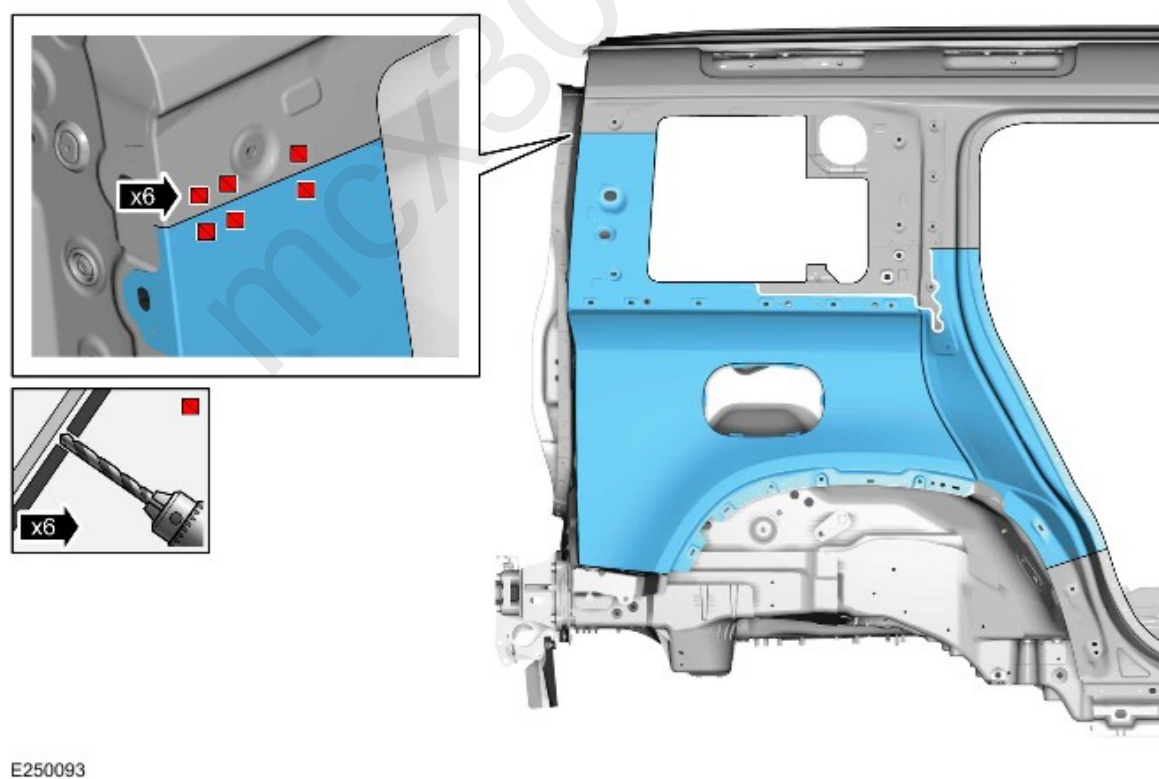

Drill holes for where the backing plates are to be installed as indicated.

9.

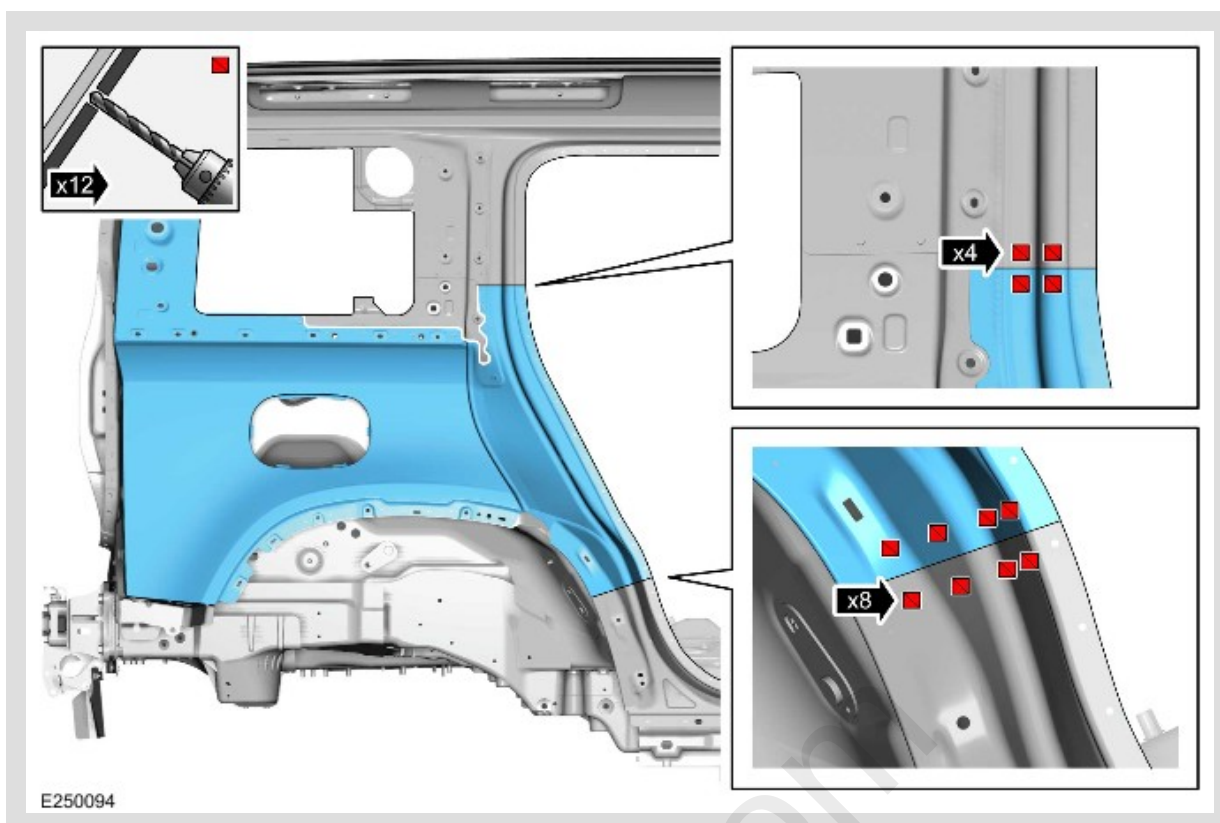

Drill holes for where the backing plates are to be installed as indicated.

10. Remove the new quarter panel.


11. Deburr the drilled holes.

12. Measure and cut 3 backing plates 50 mm wide, 25 mm each side of the MIG butt joints from the quarter panel remnant.

13. Cut 4 run on/run off tabs from the quarter panel remnant.

14. Clean and prepare the panel surfaces.


15.

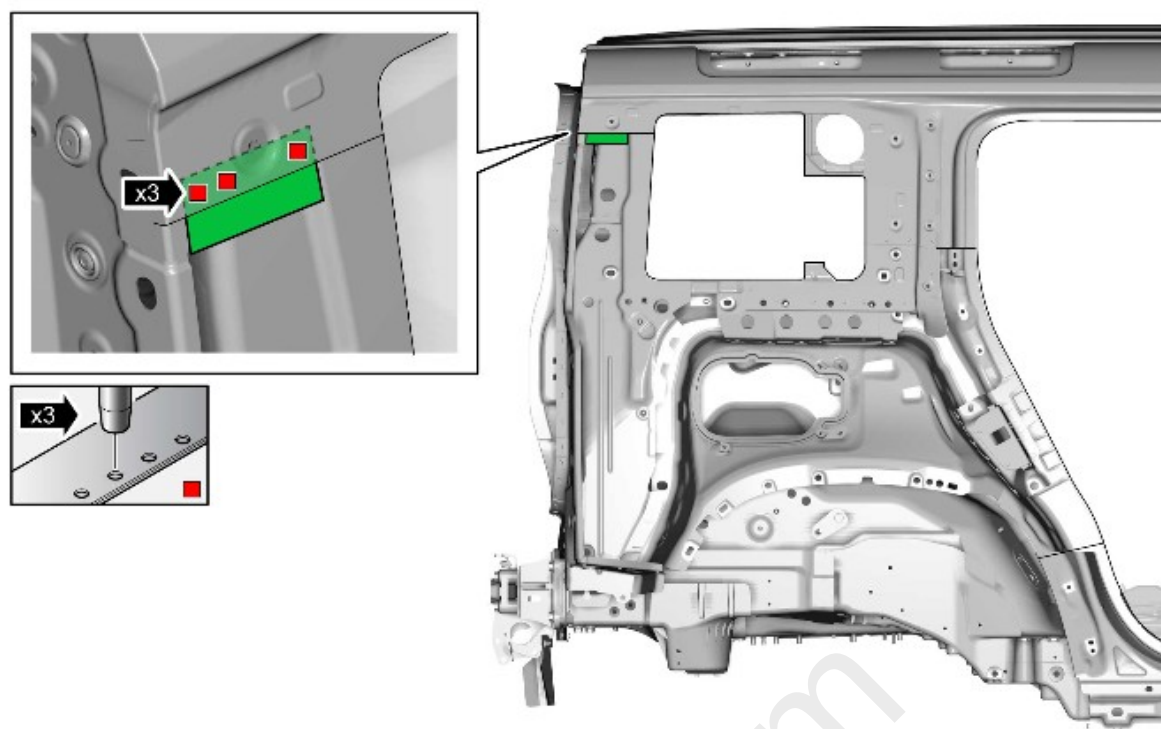

E250095

Install and MIG plug weld the backing plate as indicated.

16.

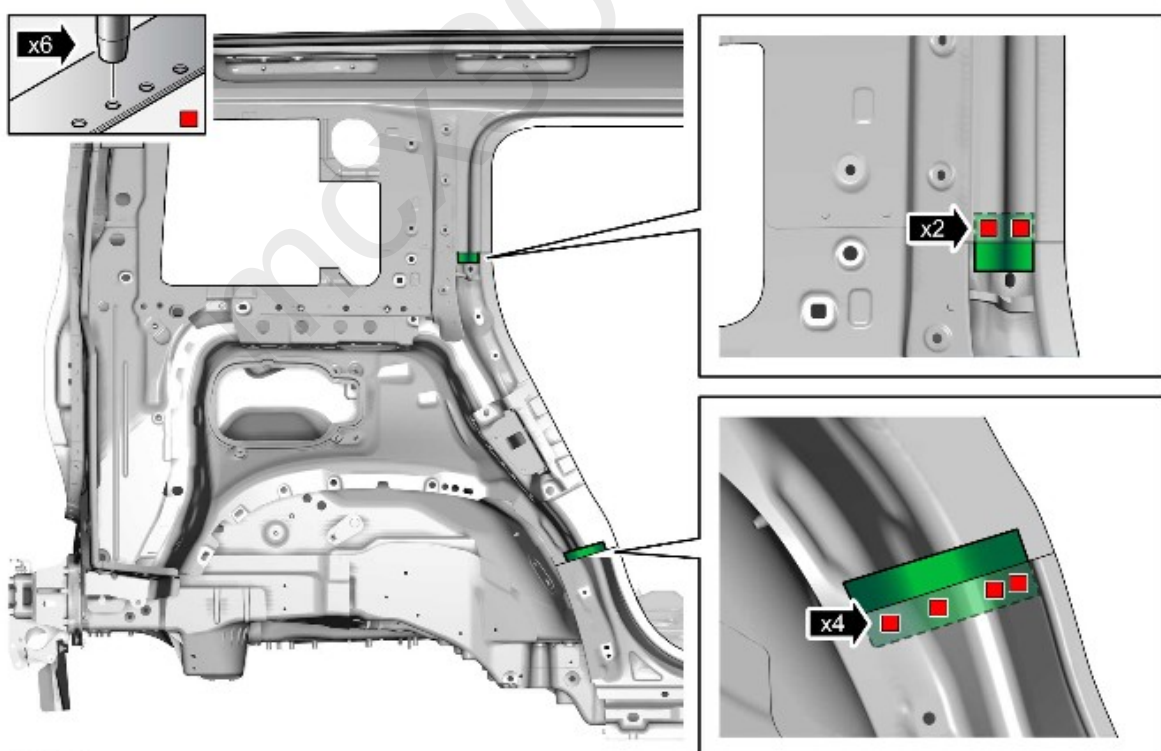


E250096

Install and MIG plug weld the backing plates as indicated.


 NOTES:

- Make sure a continuous bead of adhesive surrounds the fixing holes.
- A: Apply a 5 mm zig zag bead of JLR recommended bonding material as indicated.
- B: Apply a 5 mm zig zag bead of JLR recommended flexible sealant as indicated.

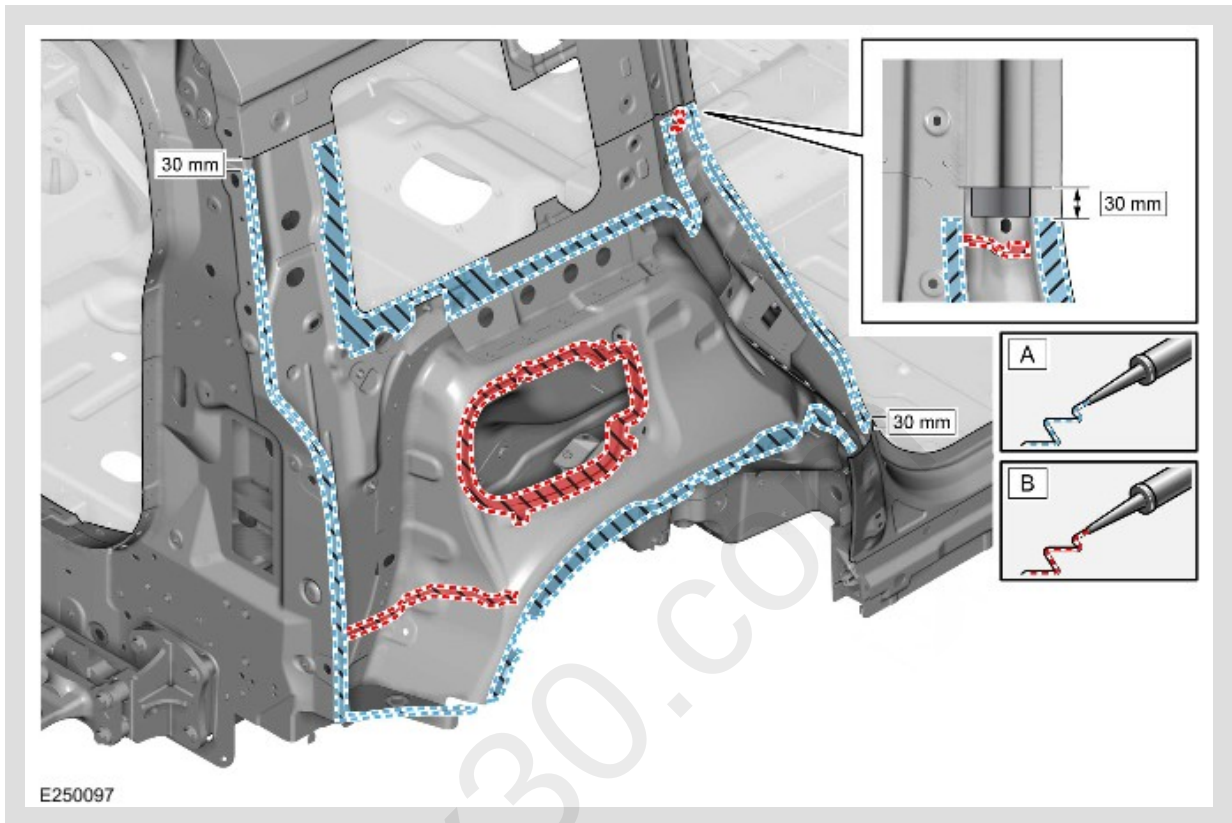


18. Offer up the new quarter panel and clamp into position. Check alignment, if correct proceed to next step, if not rectify and check the alignment again before proceeding.

19.

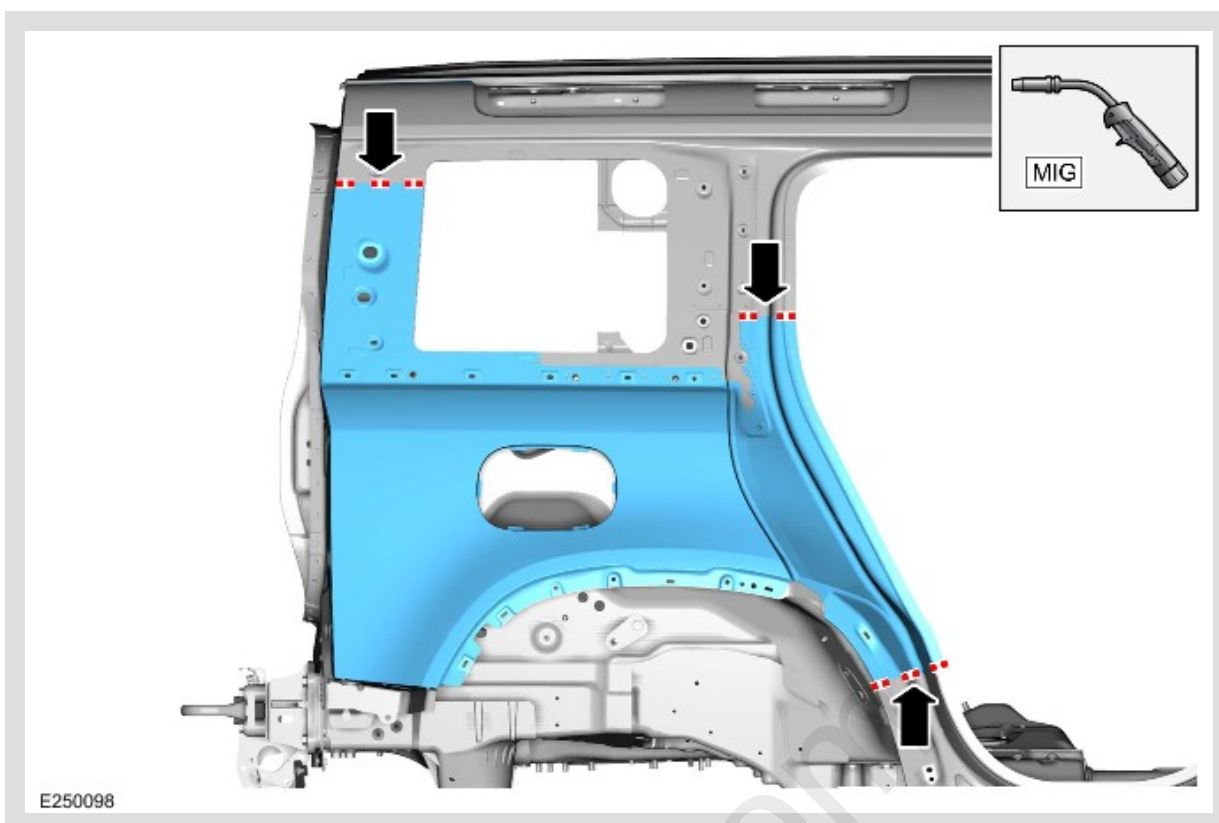


Tack MIG weld the butt joints as indicated.

20.

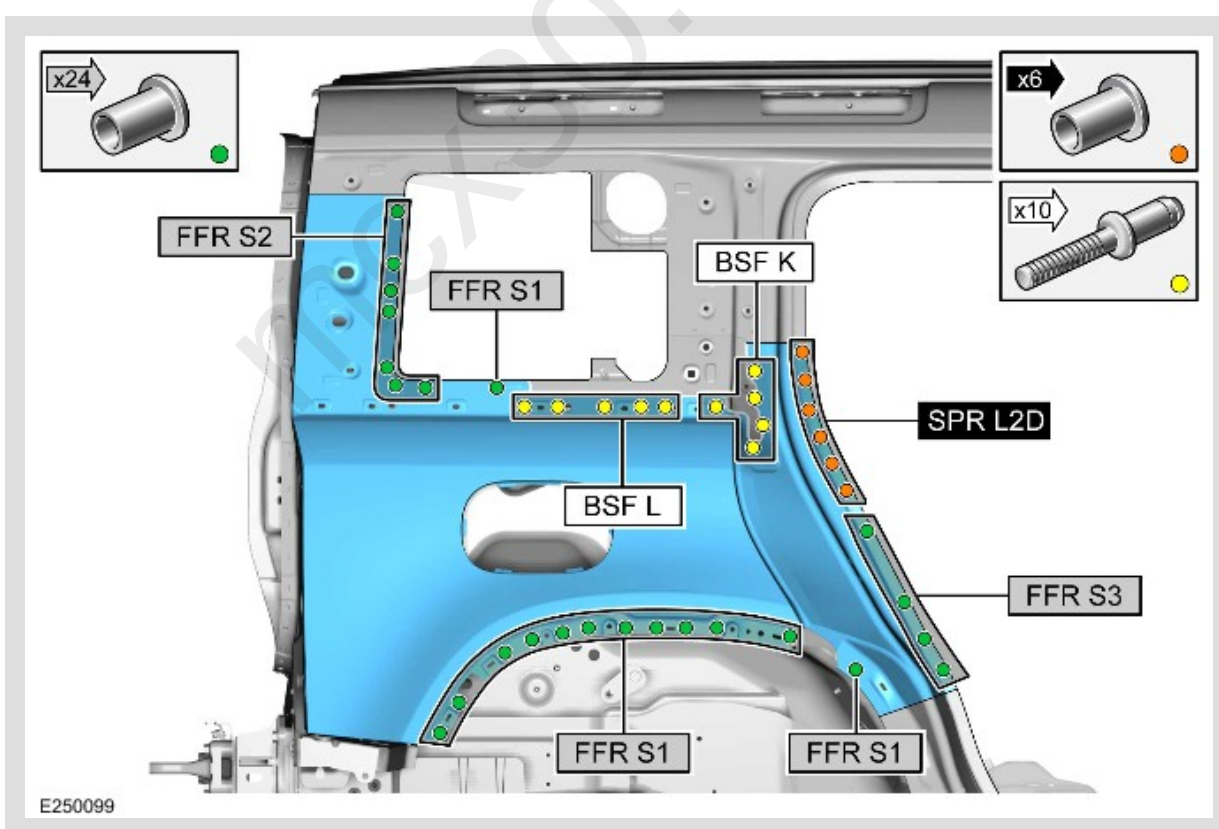


Install the BSFs, FFRs and Self Piercing Rivets (SPRs) as indicated.

21.

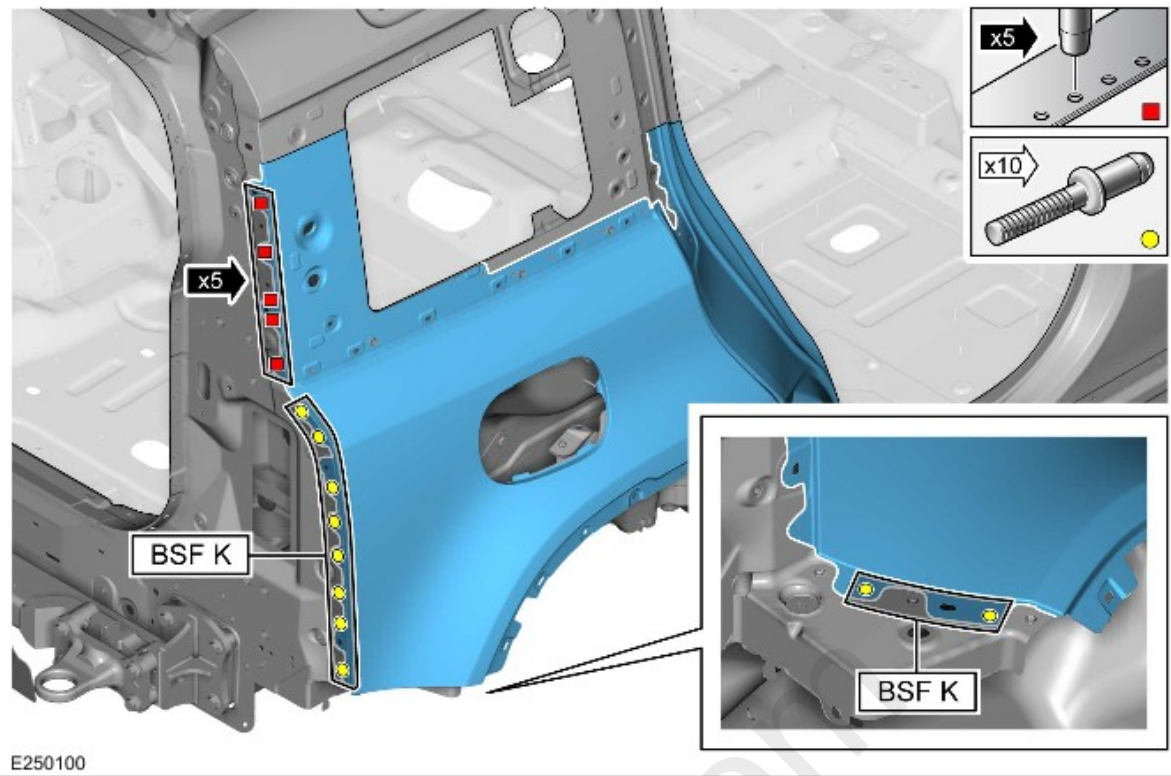


Install the BSFs and MIG plug welds as indicated.

22.

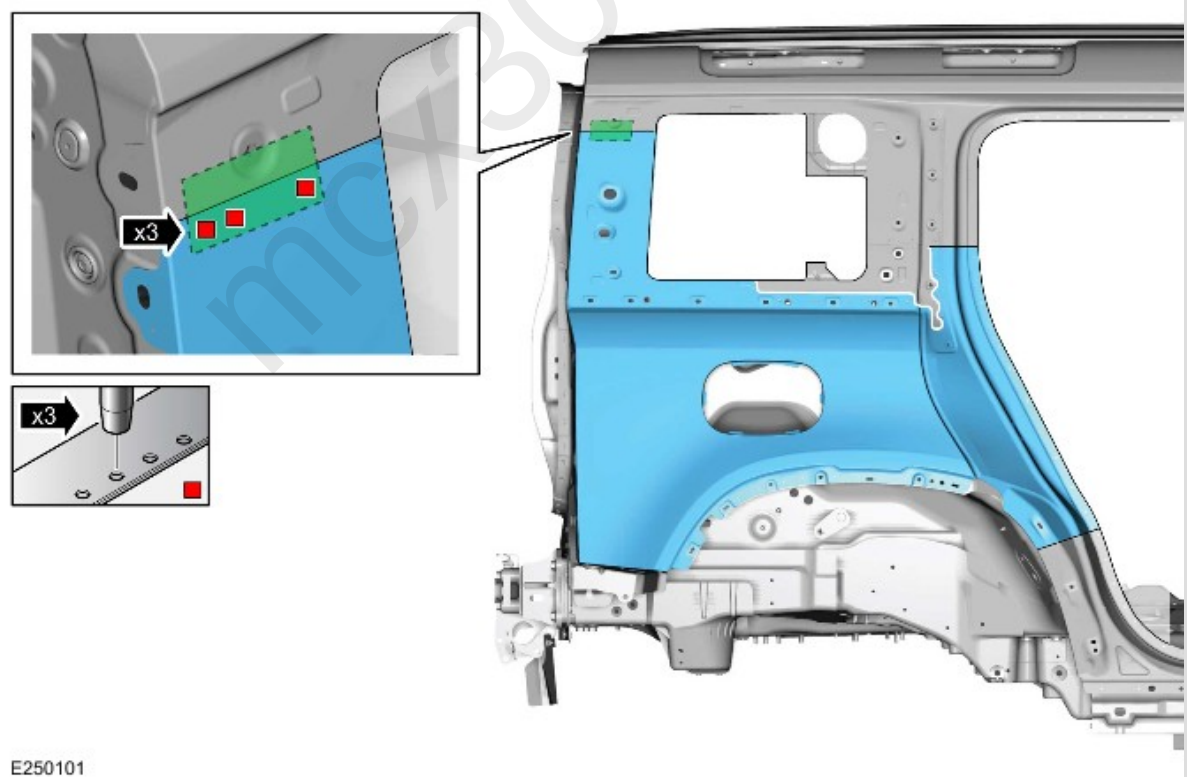


MIG plug weld the backing plate as indicated.

23.

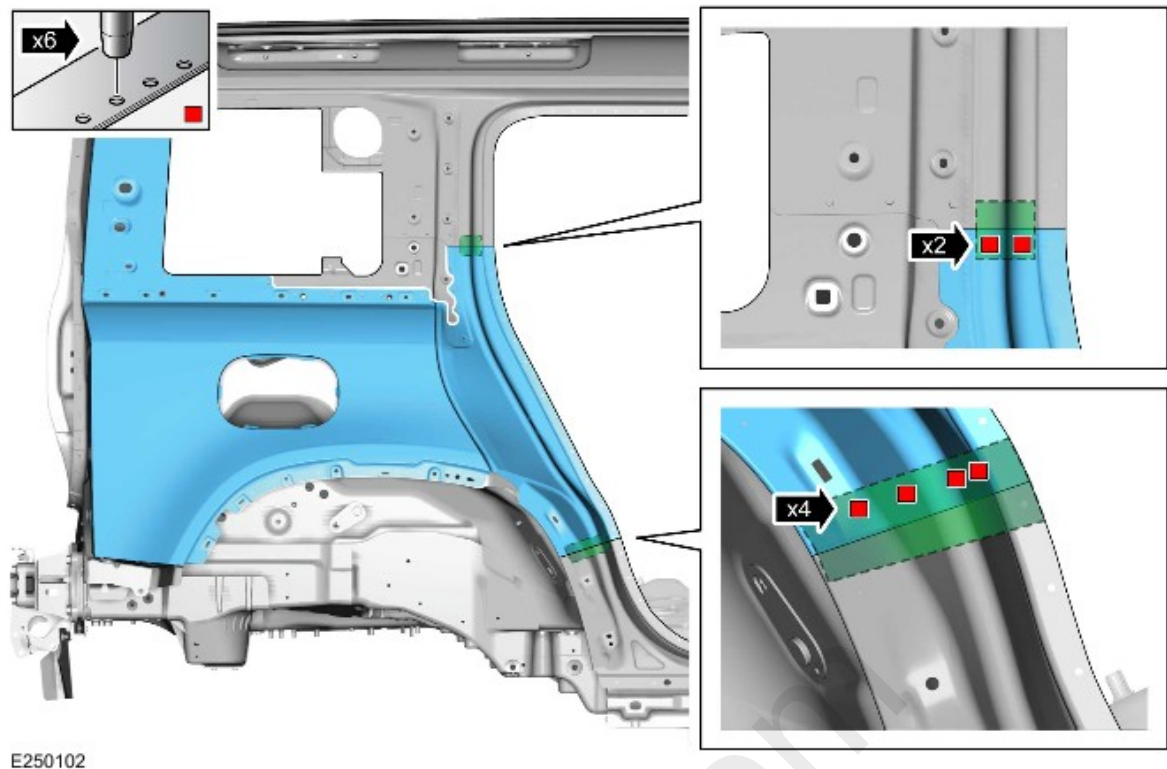

MIG plug weld the backing plates as indicated.

24.

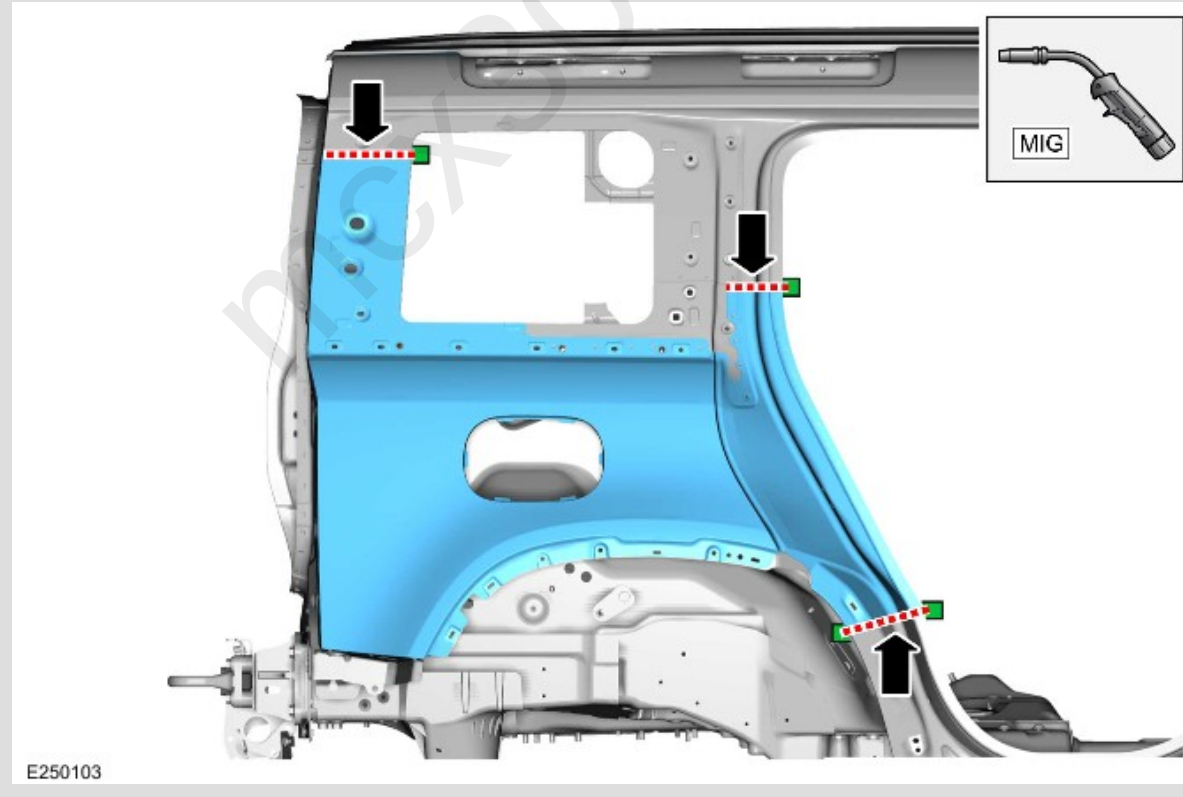

Install the run on/run off tabs and MIG weld the butt joints as indicated.

25. Dress all welds.

26. Remove the run on/run off tabs.

27. Complete a non-destructive crack inspection on the MIG butt joints. If correct proceed to next step, if not, rectify and check again before proceeding.

28. Remove any excess adhesive.

29. Install the rear door striker to the C-pillar and tighten.

Torque: 25Nm

30. Make sure that any open or exposed panel joints are correctly sealed.

31. Make sure corrosion protection is applied to all areas affected by the repair.

32. Make sure that all installed fixings are sealed using a JLR recommended sealer.



NOTE:

The installation of associated panels and components is the reversal of the removal procedure.

33. For additional installation information.

Refer to: [Fuel Filler Neck - INGENIUM I4 2.0L Petrol](#) (310-01A Fuel Tank and Lines - INGENIUM I4 2.0L Petrol/INGENIUM I4 2.0L Petrol - PHEV, Removal and Installation).

Refer to: [Fuel Filler Neck](#) (310-01C Fuel Tank and Lines - INGENIUM I4 2.0L Diesel, Removal and Installation).

34. For additional installation information.

Refer to: [Third Row Seatbelt Retractor](#) (501-20A Seatbelt System, Removal and Installation).

35. For additional installation information.

Refer to: [Second Row Seatbelt Retractor - 110](#) (501-20A Seatbelt System, Removal and Installation).

36. For additional installation information.

Refer to: [Third Row Seat](#) (501-10 Seating, Removal and Installation).

37. For additional installation information.

Refer to: [Second Row Left Seat - 110](#) (501-10 Seating, Removal and Installation).

Refer to: [Second Row Right Seat - 110](#) (501-10 Seating, Removal and Installation).

38. For additional installation information.

Refer to: [Rear Quarter Window](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).

39. For additional installation information.

Refer to: [Left Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Right Loadspace Trim Panel - \[+\] 7 Seat Configuration, 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Left Loadspace Trim Panel - 110, Vehicles With: 5 Seats](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [Right Loadspace Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

40. For additional installation information.

Refer to: [Headliner - 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

41. For additional installation information.

Refer to: [Rear Door](#) (501-03 Body Closures, Removal and Installation).

42. For additional installation information.

Refer to: [Tail Lamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).

43. For additional installation information.

Refer to: [Rear Armature](#) (501-19 Bumpers, Removal and Installation).

44. For additional installation information.

Refer to: [Tailgate](#) (501-03 Body Closures, Removal and Installation).
