

2018 TRANSMISSION

Automatic Transmission - 6T40 (MNH MNK) Or 6T45 (MHG) - Diagnostic Information And Procedures - Equinox & Terrain

DIAGNOSTIC INFORMATION AND PROCEDURES

DTC P0601, P0602, P0603, P0604 OR P062F: CONTROL MODULE MEMORY PERFORMANCE

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

DTC P0601

Control Module Read Only Memory Performance

DTC P0602

Control Module Not Programmed

DTC P0603

Control Module Long Term Memory Performance

DTC P0604

Control Module Random Access Memory Performance

DTC P062F

Control Module Long Term Memory Performance

Circuit/System Description

This diagnostic addresses malfunctions inside the control module.

Conditions for Running the DTC

P0601, P0604

Transmission Control Module = Wake-Up - Active

Frequency the DTC runs = Continuously - After the running conditions are met

P0602, P0603

Transmission Control Module = Powering Up

Frequency the DTC runs = Continuously - During control module power up

P062F

Transmission Control Module = Powering Down

Frequency the DTC runs = Continuously - During control module power down

Conditions for Setting the DTC

P0601

Control Module = ROM Malfunction - 5 times

P0602

Control Module = Not Programmed

P0603, P062F

Control Module = RAM Malfunction

P0604

Control Module = RAM Malfunction - 5 times

Actions Taken When the DTC Sets

DTCs listed in the DTC Descriptor Category = Type A DTC

- High Side Driver 1 = Disabled
- Line Pressure Command = Maximum
- Manual Shift Control = Disabled
- Neutral Idle Mode = Disabled
- Tap Up or Tap Down = Disabled
- TCC Control = Disabled
- Transmission Adaptive Pressure Control = Freeze current adapt values
- Transmission gear allowed = 4th Gear & Reverse Gear

Conditions for Clearing the DTC

DTCs listed in the DTC Descriptor Category = Type A DTC

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG)).

Connector End View Reference

- **COMPONENT CONNECTOR END VIEWS - INDEX**
- **INLINE HARNESS CONNECTOR END VIEWS - INDEX**

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References

Circuit/System Verification

1. Ignition - On / Vehicle - In Service Mode

2. Verify DTC P0602 is not set.

- **If the DTC is set**

Program the control module: K71 Transmission Control Module

- **Go to next step: If the DTC is not set**

3. Verify DTC P0601, P0603, P0604, P062F is not set.

- **If the DTC is set**

Replace the component: Q8 Control Solenoid Valve Assembly

- **Go to next step: If the DTC is not set**

4. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

- [Control Solenoid Valve and Transmission Control Module Assembly Replacement](#) - Q8 Control Solenoid Valve Assembly
- For the system learn/reset procedure refer to: [Transmission Adaptive Values Learn](#)
- For control module replacement, programming, and setup refer to: [Control Module References](#)

DTC P0634: CONTROL MODULE OVERTEMPERATURE

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

DTC P0634

Control Module Overtemperature

Circuit/System Description

For an overview of the component/system, refer to: [Electronic Component Description](#)

Component	Description
K71 Transmission Control Module	The control module receives information from a variety of sensors, switches and serial data information from other control modules. This information is used to control a combination of solenoid valves to obtain the correct line pressure, gear ratio and torque converter clutch operation. K71 is part of the component: Q8 Control Solenoid Valve Assembly
Control Module Temperature Sensor	The temperature sensor is a negative temperature coefficient thermistor, a resistor which changes based on temperature. The component is part of the control module.

No external circuit diagnosis is involved.

Conditions for Running the DTC

Condition 1

- Ignition Voltage = 9 to 18 V
- TCM Temperature = 0 to 240Â°C (32 to 464Â°F)

Frequency the DTC runs = Continuously - After the running conditions are met - For greater than 1 s

Condition 2

- Ignition Voltage = 18 to 32 V
- TCM Temperature = 0 to 240Â°C (32 to 464Â°F)

Frequency the DTC runs = Continuously - After the running conditions are met - For greater than 1 s

Conditions for Setting the DTC

Condition 1

TCM Temperature= Warmer than 144Â°C (291Â°F) - For greater than 5 s

Condition 2

TCM Temperature = Warmer than 144Â°C (291Â°F) - For greater than 1 s

Actions Taken When the DTC Sets

- DTCs listed in the DTC Descriptor Category = Type A DTC
- Grade braking = Disabled
- Manual Shift Control = Disabled
- Mode Switch Control = Disabled
- Neutral Idle Mode = Disabled
- Powertrain braking = Disabled
- Torque Management = Active
- Transmission gear allowed = Reverse Gear & 4th Gear

Conditions for Clearing the DTC

DTCs listed in the DTC Descriptor Category = Type A DTC

Reference Information

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

- **[COMPONENT CONNECTOR END VIEWS - INDEX](#)**
- **[INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)**

Electrical Information Reference

- **[Circuit Testing](#)**
- **[Connector Repairs](#)**
- **[Testing for Intermittent Conditions and Poor Connections](#)**
- **[Wiring Repairs](#)**

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Control Module References

Circuit/System Verification

WARNING: Refer to Parking Brake and Drive Wheels Warning .

1. Ignition - On / Vehicle - In Service Mode
2. Verify the scan tool Freeze Frame/Failure Records parameter: Engine Coolant Temperature = Colder than 125Â°C (257Â°F)

- **If 125Â°C (257Â°F) or warmer**

Refer to: Engine Overheating

- **Go to next step: If colder than 125Â°C (257Â°F)**

3. Verify the scan tool parameter: TCM Temperature = -39 to 139Â°C (-38 to 282Â°F)

- **If not between -39 and 139Â°C (-38 and 282Â°F)**

Replace the component: Q8 Control Solenoid Valve Assembly

- **Go to next step: If between -39 and 139Â°C (-38 and 282Â°F)**

4. Verify the following parameters are within 8Â°C (14Â°F) of each other:

- TCM Temperature
- TCM Power-Up Temperature
- **If not within 8Â°C (14Â°F) of each other**

Replace the component: Q8 Control Solenoid Valve Assembly

- **Go to next step: If within 8Â°C (14Â°F) of each other**

5. Engine - Idling

6. Transmission - Park

7. Test for 12.6 to 15 V between the test points: Battery Positive Post & Battery Negative Post

- **If not between 12.6 and 15 V**

Refer to: Charging System Test

- **Go to next step: If between 12.6 and 15 V**

8. Verify the condition does not exist: Incorrect fluid level or condition - Refer to: Transmission Fluid Level and Condition Check

- **If a condition exists**

Repair or replace as necessary.

- **Go to next step: If no condition exists**

9. Clear the DTCs.

10. Road test the vehicle. - Refer to: Road Test

Verify the scan tool parameter: Transmission Fluid Temperature = Colder than 140Â°C (284Â°F)

- **If 140Â°C (284Â°F) or warmer**

1. Ignition/Vehicle - Off

2. Verify the component location is free of debris, clutter or any obstruction that may reduce airflow which could cause an overheat condition: Radiator

- If a condition exists - Repair or replace as necessary
- If no condition exists

3. Verify the condition does not exist:

- Radiator - Visible Damage
- Transmission Fluid Cooler - Visible Damage
- Transmission Fluid Cooler Pipe - Kinked or Visible Damage
- If a condition exists - Repair or replace as necessary
- If no condition exists - Refer to: [Transmission Fluid Cooler Flow Test and Flushing](#)

- **Go to next step: If colder than 140°C (284°F)**

11. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.

Verify the DTC does not set.

- **If the DTC sets**

Replace the component: Q8 Control Solenoid Valve Assembly

- **Go to next step: If the DTC is not set**

12. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

- [Control Solenoid Valve and Transmission Control Module Assembly Replacement](#) - Q8 Control Solenoid Valve Assembly
- Perform the scan tool configuration/reset function: [Transmission Adaptive Values Learn](#)
- For control module replacement, programming, and setup refer to: [Control Module References](#)

DTC P0658 OR P0659: ACTUATOR HIGH CONTROL CIRCUIT GROUP 1 LOW VOLTAGE OR HIGH VOLTAGE

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

DTC P0658

Actuator High Control Circuit Group 1 Low Voltage

DTC P0659

Actuator High Control Circuit Group 1 High Voltage

Circuit/System Description

For an overview of the component/system, refer to: [Electronic Component Description](#)

Circuit	Description
Control	The output circuit is switched to 12 V to activate the component.

Component	Description

Component	Description
K71 Transmission Control Module	The control module receives information from a variety of sensors, switches and serial data information from other control modules. This information is used to control a combination of solenoid valves to obtain the correct line pressure, gear ratio and torque converter clutch operation. K71 is part of the component:Q8 Control Solenoid Valve Assembly
- Q27A Pressure Control Solenoid Valve 1 - Q27B Pressure Control Solenoid Valve 2 - Q27C Pressure Control Solenoid Valve 3 - Q27D Pressure Control Solenoid Valve 4 - Q27E Pressure Control Solenoid Valve 5 - Q32A Shift Solenoid Valve 1 - Q39A Torque Converter Clutch Pressure Control Solenoid Valve	A solenoid valve is an electro-mechanically operated valve. The valve is controlled by an electric current through the solenoid. Q27A, Q27B, Q27C, Q27D, Q227E, Q32A, Q39A is part of the component:Q8 Control Solenoid Valve Assembly

No external circuit diagnosis is involved.

Conditions for Running the DTC

P0658

- DTC P0658 = Not set
- High Side Driver 1=Enabled

Frequency the DTC runs=Continuously - After the running conditions are met

P0659

- DTC P0659 = Not set
- High Side Driver 1=Disabled

Frequency the DTC runs=Continuously - During control module power up

Conditions for Setting the DTC

P0658

Control Circuit=Open Circuit or Short to Ground - For greater than 1 s

P0659

Control Circuit=Short to Voltage - For greater than 1 s

Actions Taken When the DTC Sets

P0658

DTC P0658 =Type A DTC

- Grade braking=Disabled
- High Side Driver 1=Disabled

- Line Pressure Command=Maximum
- Manual Shift Control=Disabled
- Mode Switch=Disabled
- Neutral Idle Mode=Disabled
- Powertrain braking=Disabled
- TCC Control=Disabled
- Transmission Adaptive Pressure Control=Freeze current adapt values

P0659

DTC P0659 =Type B DTC

Conditions for Clearing the DTC

- DTC P0658 = Type A DTC
- DTC P0659 = Type B DTC

Reference Information*****

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\).](#)

Connector End View Reference

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#)

Special Tools

DT-48616-10 Adapter Harness

Equivalent regional tools:[Special Tools](#)

Circuit/System Verification

1. Ignition - On / Vehicle - In Service Mode
2. Perform the scan tool control function:High Side Driver 1 - On and Off

Verify the scan tool parameter:

- High Side Driver 1 Circuit Low Voltage Test Status=OK or Not Run
- High Side Driver 1 Circuit Open Test Status=OK or Not Run
- High Side Driver 1 Circuit High Voltage Test Status=OK or Not Run
- **If not the specified state**

Refer to:Component Testing

- **Go to next step: If the specified state**

3. Perform the scan tool control function:High Side Driver 1 - On and Off

Verify the scan tool parameter:High Side Driver 1=On and Off

- **If the parameter state does not change**

Refer to:Component Testing

- **Go to next step: If the parameter state changes**

4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.

Verify the DTC does not set.

- **If the DTC sets**

Refer to:Component Testing

- **Go to next step: If the DTC is not set**

5. All OK.

Component Testing

1. Ignition/Vehicle - Off

2. Remove the component:Q8 Control Solenoid Valve Assembly

3. Verify the condition does not exist:Contamination with metallic debris

- **If a condition exists**

Repair or replace as necessary.

- **Go to next step: If no condition exists**

4. Verify the resistance is within the specified range for each solenoid valve. - Refer to:[Control Solenoid Valve and Transmission Control Module Assembly Inspection](#)

- **If the resistance is not within range**

Replace the component:Q8 Control Solenoid Valve Assembly

- **Go to next step: If the resistance is within range**

5. Test for infinite resistance between the test points:Each terminal of the component - Solenoid Valve & The component's housing

- **If less than infinite resistance**

Replace the component:Q8 Control Solenoid Valve Assembly

- **Go to next step: If infinite resistance**

6. Install the special tool: DT-48616-10 Adapter Harness @Q8 Control Solenoid Valve Assembly & Vehicle wiring harness X1

7. Ignition - On / Vehicle - In Service Mode

8. Perform the scan tool control function:High Side Driver 1 - On and Off

Verify the scan tool parameter:

- High Side Driver 1 Circuit Low Voltage Test Status= OK or Not Run
- High Side Driver 1 Circuit Open Test Status= OK or Not Run
- High Side Driver 1 Circuit High Voltage Test Status= OK or Not Run
- **If not the specified state**

- **Go to next step: If the specified state**

9. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

- [Control Solenoid Valve and Transmission Control Module Assembly Replacement](#) - Q8 Control Solenoid Valve Assembly
- Perform the scan tool configuration/reset function: [Transmission Adaptive Values Learn](#)
- For control module replacement, programming, and setup refer to: [Control Module References](#)

DTC P0667, P0668, OR P0669: CONTROL MODULE TEMPERATURE SENSOR

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

DTC P0667

Control Module Temperature Sensor Performance

DTC P0668

Control Module Temperature Sensor Circuit Low Voltage

DTC P0669

Control Module Temperature Sensor Circuit High Voltage

Circuit/System Description

For an overview of the component/system, refer to: [Electronic Component Description](#)

Component	Description
K71 Transmission Control Module	The control module receives information from a variety of sensors, switches and serial data information from other control modules. This information is used to control a combination of solenoid valves to obtain the correct line pressure, gear ratio and torque converter clutch operation. K71 is part of the component: Q8 Control Solenoid Valve Assembly
Control Module Temperature Sensor	The temperature sensor is a negative temperature coefficient thermistor, a resistor which changes based on temperature. The component is part of the control module.

No external circuit diagnosis is involved.

Conditions for Running the DTC

P0667

- DTC P0101 - P0103, P0106 - P0108, P0171, P0172, P0174, P0175, P0201 - P0208, P0300 - P0308, P0401, P042E, P0658, P0668, P0669, P06AD, P06AE, P0712, P0713, P0716, P0717,

P0722, P0723, P0962, P0963, P0966, P0967, P0970, P0971, P215C, P2720, P2721, P2729, P2730
= Not set

- Accelerator pedal position signal = Valid
- Engine Torque Signal = Valid
- Engine Speed = 400 to 7, 500 RPM
- Ignition Voltage = 9 to 32 V

Frequency the DTC runs = Continuously - After the running conditions are met - For greater than 5 s

P0668, P0669

- { P0669 } DTC P0716, P0717, P0722, P0723 = Not set
- Engine Speed = 400 to 7, 500 RPM
- Ignition Voltage = 9 to 32 V

Frequency the DTC runs = Continuously - After the running conditions are met - For greater than 5 s

Conditions for Setting the DTC

P0667

The difference between the following parameters is greater than a predefined value:

- TCM Power-Up Temperature
- TCM Temperature
- Transmission Fluid Temperature

The above conditions have to be met continuously for 5 min within a 6 min period.

P0668

TCM Temperature = Warmer than 253Å°C (488Å°F) - For greater than 1 min

P0669

TCM Temperature = Colder than -253Å°C (-423Å°F) - For greater than 1 min

Actions Taken When the DTC Sets

DTCs listed in the DTC Descriptor Category = Type B DTC

TCM Temperature = Default - TCM Power-Up Temperature

Conditions for Clearing the DTC

DTCs listed in the DTC Descriptor Category = Type B DTC

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**

- [Wiring Repairs](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#)

[Circuit/System Verification](#)

1. Ignition - On / Vehicle - In Service Mode
2. Verify the scan tool parameter: TCM Temperature = -39 to 139Â°C (-38 to 282Â°F)
 - **If not between -39 to 139Â°C (-38 to 282Â°F))**

Replace the component: Q8 Control Solenoid Valve Assembly

- **Go to next step: If between -39 to 139Â°C (-38 to 282Â°F)**
3. Verify the following parameters are within 8Â°C (14Â°F) of each other:
 - TCM Power-Up Temperature
 - TCM Temperature
 - **If not within 8Â°C (14Â°F) of each other**

Replace the component: Q8 Control Solenoid Valve Assembly

- **Go to next step: If within 8Â°C (14Â°F) of each other**
4. Operate the cold vehicle above 55 km/h (35 MPH) for 10 min.

Verify the following parameters are within 25Â°C (45Â°F) of each other:

- TCM Temperature
- Transmission Fluid Temperature
- **If not within 25Â°C (45Â°F) of each other**

Replace the component: Q8 Control Solenoid Valve Assembly

- **Go to next step: If within 25Â°C (45Â°F) of each other**
5. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.

Verify the DTC does not set.

- **If the DTC sets**

Replace the component: Q8 Control Solenoid Valve Assembly

- **Go to next step: If the DTC is not set**
6. All OK.

[Repair Instructions](#)

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

- [Control Solenoid Valve and Transmission Control Module Assembly Replacement](#) - Q8 Control Solenoid Valve Assembly
- Perform the scan tool configuration/reset function: [Transmission Adaptive Values Learn](#)
- For control module replacement, programming, and setup refer to: [Control Module References](#)

DTC P06AC, P06AD, OR P06AE: CONTROL MODULE POWER UP TEMPERATURE SENSOR

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC P06AC

Control Module Power Up Temperature Sensor Performance

DTC P06AD

Control Module Power Up Temperature Sensor Circuit Low Voltage

DTC P06AE

Control Module Power Up Temperature Sensor Circuit High Voltage

Circuit/System Description

The transmission control module (TCM) power up temperature sensor is located inside of the Control Solenoid Valve Assembly which has no serviceable components. The TCM power up temperature sensor provides the temperature of the TCM when the TCM power is on. This temperature reading is used in various shifting and diagnostic routines in the TCM software. This fault is handled inside the TCM and no external circuits are involved.

Conditions for Running the DTC

P06AC

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0658, P0668, P0669, P06AC, P06AD, P06AE, P0712, P0713, P0716, P0717, P0722, P0723, P0962, P0963, P0966, P0967, P0970, P0971, P215C, P2720, P2721, P2729, or P2730 is not set.
- Throttle position signal is valid.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- Engine torque signal is valid.
- DTC runs continuously when the above conditions are met.

P06AD

- DTC P06AD, P0716, P0717, P0722, or P0723 is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- DTC runs continuously when the above conditions are met.

P06AE

- DTC P06AE is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- DTC runs continuously when the above conditions are met.

Conditions for Setting the DTC

P06AC

- TCM detects a 20 - 50Â°C (36 - 90Â°F), or greater difference between the transmission fluid temperature and TCM power up temperature, which depends on the average of transmission fluid temperature, TCM substrate temperature, and TCM power up temperature.
- TCM detects an 8 - 10Â°C (14 - 18Â°F), or greater difference between the TCM substrate temperature and TCM power up temperature, which depends on the average of the transmission fluid temperature, TCM substrate temperature, and TCM power up temperature.
- Above conditions have to be met for 5 min within a 6 min period.

P06AD

TCM power up temperature is -254Â°C (-425Â°F) or less for 1 min.

P06AE

TCM power up temperature is 254Â°C (489Â°F) or greater for 1 min.

Action Taken When the DTC Sets

- P06AC, P06AD, and P06AE are Type B DTCs.
- TCM defaults the TCM power up temperature to a calculated temperature based on the TCM substrate temperature.

Conditions for Clearing the DTC

P06AC, P06AD, and P06AE are Type B DTCs.

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

Connector End View Reference

- **COMPONENT CONNECTOR END VIEWS - INDEX**
- **INLINE HARNESS CONNECTOR END VIEWS - INDEX**

Description and Operation

- **Electronic Component Description**
- **Transmission Component and System Description (Gen 3)**
- **Transmission General Description (Gen 3)**

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition ON, clear the DTCs with a scan tool.
2. Operate the vehicle at 64 km/h (40 mph) for 10 min.

3. Verify DTC P06AC, P06AD, or P06AE is not set.

- **If any of the DTCs are set**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If none of the DTCs are set**

4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.

5. Verify the DTC does not set.

- **If the DTC sets**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If the DTC does not set**

6. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for Control Solenoid Valve Assembly replacement, programming and setup

DTC P0711, P0712, OR P0713: TRANSMISSION FLUID TEMPERATURE SENSOR

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC P0711

Transmission Fluid Temperature Sensor Performance

DTC P0712

Transmission Fluid Temperature Sensor Circuit Low Voltage

DTC P0713

Transmission Fluid Temperature Sensor Circuit High Voltage

Circuit/System Description

The transmission fluid temperature sensor is located inside of the transmission control solenoid valve assembly which has no serviceable components. The transmission fluid temperature sensor provides transmission fluid temperature to the transmission control module (TCM). This fault is handled inside the TCM and no external circuits are involved.

Conditions for Running the DTC

P0711

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0658, P0668, P0669, P06AD, P06AE, P0711, P0712, P0713, P0716, P0717, P0722, P0723, P0962, P0963, P0966, P0967, P0970, P0971, P215C, P2720, P2721, P2729, or P2730 is not set.

- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- Accelerator position signal is valid.
- Engine torque signal is valid.
- Brake torque is not active.
- DTC runs continuously when above conditions are met.

P0712

- DTC P0712, P0716, P0717, P0722, or P0723 is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- DTC runs continuously when above conditions are met.

P0713

- DTC P0713, P0716, P0717, P0722, or P0723 is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- DTC runs continuously when above conditions are met.

Conditions for Setting the DTC

P0711

- TCM detects a 20 - 50°C (36 - 90°F) or greater difference between the transmission fluid temperature and the TCM substrate temperature, which depends on the average of the transmission fluid temperature, TCM substrate temperature, and TCM power up temperature.
- TCM detects a 20 - 50°C (36 - 90°F) or greater difference between the transmission fluid temperature and the TCM power up temperature, which depends on the average of the transmission fluid temperature, TCM substrate temperature, and TCM power up temperature.
- Above conditions have to be met for 5 min within a 6 min period.

P0712

Transmission fluid temperature is 254°C (489°F) or greater for 1 min.

P0713

Transmission fluid temperature is -254°C (-425°F) or less for 1 min.

Action Taken When the DTC Sets

- P0711, P0712, and P0713 are Type B DTCs.
- TCM defaults to a calculated transmission fluid temperature based on the TCM temperature.

Conditions for Clearing the DTC

P0711, P0712, and P0713 are Type B DTCs.

Diagnostics Aids

The TCM temperature sensor is located inside of the control solenoid valve assembly and its output should resemble that of the transmission fluid temperature sensor's output. During a road test, the transmission fluid temperature should steadily increase to a normal operating temperature, and then stabilize.

Reference Information

Schematic Reference

Connector End View Reference

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Description and Operation

- [Electronic Component Description](#)
- [Transmission Component and System Description \(Gen 3\)](#)
- [Transmission General Description \(Gen 3\)](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

[Circuit/System Verification](#)

1. Engine idling at the normal operating temperature.
2. Verify the scan tool Transmission Fluid Temperature parameter increases greater than 2Â°C (3.6Â°F) after operating the vehicle at 64 km/h (40 mph) for 10 min.
 - **If the temperature does not increase greater than 2Â°C (3.6Â°F)**
Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If the temperature increases greater than 2Â°C (3.6Â°F)**
3. Verify the scan tool Transmission Fluid Temperature and the TCM Temperature parameters are within 20Â°C (36Â°F).
 - **If the temperatures are not within 20Â°C (36Â°F)**
Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If the temperatures are within 20Â°C (36Â°F)**
4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
5. Verify the DTC does not set.
 - **If the DTC sets**
Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If the DTC does not set**
6. All OK.

[Repair Instructions](#)

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs

- [Control Module References](#) for Control Solenoid Valve Assembly replacement, programming and setup

DTC P0716, P0717, P07BF, OR P07C0: INPUT SPEED SENSOR

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

DTC P0716

Input Speed Sensor Performance

DTC P0717

Input Speed Sensor Circuit No Signal

DTC P07BF

Input Speed Sensor Circuit Low Voltage

DTC P07C0

Input Speed Sensor Circuit High Voltage

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
12 V Reference	P0716, P0717, P077C, P07BF	P0716, P0717, P07BF	-	P0716, P0717
Signal	P07BF	P07BF	P07C0	P0716, P0717

Typical Scan Tool Data

ISS/OSS Supply Voltage

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Ignition = On Parameter Normal Range: OK			
12 V Reference	Out Of Range	OK	OK
Signal	OK	OK	OK

Transmission ISS

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Engine=Running Parameter Normal Range: 0 to 5000 RPM			
12 V Reference	0 RPM	0 RPM	-
Signal	0 RPM	0 RPM	0 RPM

Circuit/System Description

For an overview of the component/system, refer to: [Electronic Component Description](#)

Circuit	Description
12 V Reference	Regulated voltage supplied by the control module.

Circuit	Description
Signal	The control module input circuit has an internal resistance connected to ground.

Component	Description
B14C Transmission Input Shaft Speed Sensor	The sensor contains a hall-effect sensor and additional electronics that processes the signal. It detects the change of strength of the magnetic field caused by the reluctor ring. When the strength changes, the sensor changes the amount of current it consumes. This results in a square wave signal of the current, while the voltage stays constant. The control module detects the frequency in which the current changes, which is proportional to the rotational speed.
K71 Transmission Control Module	The control module receives information from a variety of sensors, switches and serial data information from other control modules. This information is used to control a combination of solenoid valves to obtain the correct line pressure, gear ratio and torque converter clutch operation. K71 is part of the component: Q8 Control Solenoid Valve Assembly
Automatic Transmission Input Shaft Speed Sensor Reluctor Wheel	- The reluctor ring has 36 teeth, magnetic segments, or indentations. - The reluctor ring is part of the component: 3-5-R & 4-5-6 Clutch Housing Assembly - The following components rotate together: 3-5-R & 4-5-6 Clutch Housing Assembly - Turbine Shaft

Conditions for Running the DTC

P0716

- DTC P0101-P0103, P0121-P0123, P0716, P0717, P0752, P0973, P0974 = Not set
- Accelerator Pedal Position Signal from Engine Control Module = Valid
- Engine Speed = 400 to 7, 500 RPM
- Engine Torque Signal = Valid
- Ignition Voltage = 9 to 32 V
- Vehicle Speed = Greater than 10 km/h (6 MPH)

Frequency the DTC runs=Continuously - After the running conditions are met - For greater than 5 s

P0717 Condition 1

- DTC P0101-P0103, P0717, P0722, P0723 = Not set
- Calculated Engine Torque=Greater than 50 Nm (37 lb ft)
- Engine Speed= 400 to 7, 500 RPM
- Ignition Voltage= 9 to 32 V
- Vehicle Speed=Greater than 16 km/h (10 MPH) MPH)

Frequency the DTC runs=Continuously - After the running conditions are met - For greater than 5 s

Condition 2

- DTC P0101-P0103, P0717, P0723 = Not set
- DTC P0722 = Test Failed

- Calculated Engine Torque = Greater than 50 Nm (37 lb ft)
- Engine Speed = 400 to 7, 500 RPM
- Ignition Voltage= 9 to 32 V
- Vehicle Speed = Greater than 16 km/h (10 MPH)

Frequency the DTC runs=Continuously - After the running conditions are met

P07BF, P07C0

- DTC P07BF, P07C0 = Not set
- Ignition Voltage= 9 to 32 V

Frequency the DTC runs=Continuously - After the running conditions are met

Conditions for Setting the DTC

P0716

Transmission Input Speed=Decreases greater than 1350 RPM - For greater than 1 s

P0717 Condition 1

Transmission Input Speed=Less than 33 RPM - For greater than 4.5 s

Condition 2

Transmission Input Speed = Less than 1, 000 RPM - For greater than 3 s

P07BF

Input Speed Sensor Circuit=Less than 0.25 V - For greater than 4 s

P07C0

Input Speed Sensor Circuit=Greater than 4.75 V - For greater than 4 s

Actions Taken When the DTC Sets

DTCs listed in the DTC Descriptor Category=Type A DTC

- Grade braking=Disabled
- Line Pressure Command=Maximum
- Manual Shift Control=Disabled
- Mode Switch=Disabled
- Neutral Idle Mode=Disabled
- Powertrain braking=Disabled
- Tap Up or Tap Down=Disabled
- { P0716 } TCC Control=Disabled
- { P0716, P0717 } Torque Management=Active
- Transmission Adaptive Pressure Control=Freeze current adapt values
- Transmission gear allowed=Reverse & 4th Gear

Conditions for Clearing the DTC

DTCs listed in the DTC Descriptor Category=Type A DTC

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#)

Special Tools

DT-48616-10 Adapter Harness

Equivalent regional tools: [Special Tools](#)

Circuit/System Verification

1. Ignition - On / Vehicle - In Service Mode
2. Verify the scan tool parameter:ISS/OSS Supply Voltage=OK
 - **If not the specified state**
Refer to: Circuit/System Testing
 - **Go to next step: If the specified state**
3. Transmission - Park
4. Engine - Idling
5. Increase the engine speed slowly to 3, 000 RPM and then back to idle.

Verify the scan tool parameter:Transmission ISS=The value should change smoothly and gradually as the engine speed is increased and decreased.

- **If the value does not change smoothly and gradually**

Refer to: Circuit/System Testing

- **Go to next step: If the value changes smoothly and gradually**

6. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.

Verify the DTC does not set.

- **If the DTC sets**

Refer to: Circuit/System Testing

- **Go to next step: If the DTC is not set**

7. All OK.

Circuit/System Testing

1. Ignition/Vehicle - Off

2. Remove the component:Control Valve Body Cover
3. Connect the electrical connector: X1 @Q8 Control Solenoid Valve Assembly
4. Disconnect the electrical connector:X3 @Q8 Control Solenoid Valve Assembly - B14C Transmission Input Shaft Speed Sensor
5. Ignition - On / Vehicle - In Service Mode
6. Verify the scan tool parameter:ISS/OSS Supply Voltage=OK
 - **If not the specified state**
 1. Ignition/Vehicle - Off
 2. Disconnect the electrical connector: X4 @Q8 Control Solenoid Valve Assembly - B14A Transmission Output Shaft Speed Sensor
 3. Verify the condition does not exist:Contamination with metallic debris@Electrical Connector - X3 & X4
 - If a condition exists - Repair or replace as necessary
 - If no condition exists
 4. Ignition - On / Vehicle - In Service Mode
 5. Verify the scan tool parameter:ISS/OSS Supply Voltage=OK
 - If not the specified state - Replace the component:Q8 Control Solenoid Valve Assembly
 - If the specified state - Replace the component:B14A Transmission Output Shaft Speed Sensor
 - **Go to next step: If the specified state**
7. Perform the following procedure/test:[Control Solenoid Valve and Transmission Control Module Assembly Input Shaft Speed/Output Shaft Speed Input Test](#)

Verify the procedure/test passes.

- **If the procedure/test does not pass**

Replace the component:Q8 Control Solenoid Valve Assembly
 - **Go to next step: If the procedure/test passes**
8. Verify the condition does not exist:Automatic Transmission Input Shaft Speed Sensor Reluctor Wheel - Damaged or misaligned reluctor ring.
 - **If a condition exists**

Repair or replace as necessary.
 - If no condition exists
 9. Test or replace the component:B14C Transmission Input Shaft Speed Sensor

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

- Reluctor Ring -[3-5-Reverse and 4-5-6 Clutch Housing Assemble](#)
- Reluctor Ring -[3-5-Reverse and 4-5-6 Clutch Housing Disassemble](#)
- Q8 Control Solenoid Valve Assembly - [Control Solenoid Valve and Transmission Control Module Assembly Replacement](#)
- Refer to [Control Valve Body Cover Replacement](#)
- B14C Transmission Input Shaft Speed Sensor - [Input Speed Sensor Replacement](#)
- B14A Transmission Output Shaft Speed Sensor - [Output Speed Sensor Replacement](#)
- Perform the scan tool configuration/reset function:[Transmission Adaptive Values Learn](#)
- For control module replacement, programming, and setup refer to: [Control Module References](#)

DTC P0722, P0723, P077C, OR P077D: OUTPUT SPEED SENSOR CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC P0722

Output Speed Sensor Circuit No Signal

DTC P0723

Output Speed Sensor Circuit Intermittent

DTC P077C

Output Speed Sensor Circuit Low Voltage

DTC P077D

Output Speed Sensor Circuit High Voltage

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Signal	P0722, P0723, P077C	P0722, P0723, P077C	P0722, P0723, P077D	P0723
12 V	P0722, P0723, P077C	P0722, P0723, P077C	-	P0723

Typical Scan Tool Data

Transmission OSS

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Drive vehicle, normal operating temperature Parameter Normal Range: 0 - 7, 000 RPM			
12 V	0 RPM	0 RPM	0 - 7000 RPM
Signal	0 RPM	0 RPM	0 RPM

ISS/OSS Supply Voltage

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Key ON, Engine OFF or Engine running, normal operating temperature Parameter Normal Range: OK			
Output Speed Sensor Signal	OK	OK	OK
Output Speed Sensor Supply Voltage	Out of Range	OK	Out of Range

Circuit/System Description

The output shaft speed (OSS) sensor is a hall-effect type sensor. The OSS sensor mounts to the automatic transmission case assembly and connects to the control solenoid valve assembly through a 2-wire harness and connector. The sensor faces the park gear teeth. The sensor receives battery voltage on the OSS sensor supply voltage circuit from the transmission control module (TCM). As the output shaft rotates, the sensor produces a signal frequency based on the park gear teeth. This signal is transmitted through the OSS sensor signal circuit to the TCM. The TCM uses the OSS sensor signal to calculate output shaft speed to determine commanded line pressure, transmission shift patterns, vehicle speed and gear ratio.

Conditions for Running the DTC

P0722

- DTC P0101, P0102, P0103, P0121, P0122, P0123, P0716, P0717, P0722, or P0723 is not set.
- Ignition voltage is 9 - 32 V.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Engine torque signal is valid.
- Throttle position signal is valid.
- Transmission input speed is between 1, 000 - 8, 191 RPM.
- Calculated throttle position is 8% or greater.
- Engine torque is 30 N.m (22 lb ft) or greater.
- Transmission fluid temperature is -40Â°C (-40Â°F) or greater.
- DTC runs continuously when the above conditions are met.

P0723

- DTC P0101, P0102, P0103, P0121, P0122, P0123, P0723, P0973, P0974, P0976, or P0977 is not set.
- Ignition voltage is 9 - 32 V.
- Greater than 5 s since last transmission upshift or downshift.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- DTC runs continuously when the above conditions are met.

P077C

- DTC P077D is not set.
- Ignition voltage is 9 - 32 V.
- DTC runs continuously when the above conditions are met.

P077D

- DTC P077C is not set.
- Ignition voltage is 9 - 32 V.
- DTC runs continuously when the above conditions are met.

Conditions for Setting the DTC

P0722

Transmission output speed is 35 RPM or less for 5 s.

P0723

- Transmission output speed is 105 RPM or greater.
- TCM detects the transmission output shaft speed dropped greater than 1, 000 RPM for 3 s.

P077C

Transmission OSS sensor analog signal voltage is 0.25 V or less for 4 s.

P077D

Transmission OSS sensor analog signal voltage is 4.75 V or greater for 4 s.

Action Taken When the DTC Sets

P0722

- P0722 is a Type A DTC.
- TCM freezes transmission adaptive functions.
- TCM commands maximum line pressure.
- TCM forces the torque converter clutch (TCC) OFF.
- TCM Enables torque management.
- TCM limits the transmission to reverse and 2nd gear.
- TCM inhibits neutral idle.
- TCM inhibits auto grade braking.
- TCM inhibits Tap-Up/Tap-Down functions.
- TCM inhibits manual up, manual down shifts with the shift selector.
- TCM commands 2nd gear when in a forward range and the output speed is less than 700 RPM, or neutral if the output speed is 700 RPM or greater.

P0723, P077C or P077D

- P0723, P077C, and P077D are Type A DTCs.
- TCM freezes transmission adaptive functions.
- TCM forces TCC OFF.
- TCM commands the high side driver OFF.
- TCM commands maximum line pressure.
- TCM enables torque management.
- TCM limits the transmission to reverse and 4th gear.
- TCM inhibits neutral idle.
- TCM inhibits Tap-Up/Tap-Down functions.
- TCM inhibits manual up, manual down shifts with the shift selector.
- TCM inhibits auto grade braking.

Conditions for Clearing the DIC/DTC

P0722, P0723, P077C, and P077D are Type A DTCs.

Diagnostic Aids

- Inspect the OSS sensor, harness, and connector for metallic debris.
- Proper torque of the OSS sensor mounting bolt is critical to proper OSS sensor operation.
- If the scan tool ISS/OSS Supply Voltage indicates out of range, the fault could also be caused by the transmission input shaft speed sensor.

Reference Information

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

- **[COMPONENT CONNECTOR END VIEWS - INDEX](#)**
- **[INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)**

Description and Operation

- **[Electronic Component Description](#)**
- **[Transmission Component and System Description \(Gen 3\)](#)**
- **[Transmission General Description \(Gen 3\)](#)**

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

DT-48616-10 Adapter Harness

For equivalent regional tools, refer to [Special Tools](#) .

[Circuit/System Verification](#)

1. Ignition ON.
2. Verify the scan tool ISS/OSS Supply Voltage parameter displays OK.
 - **If OK is not displayed**
Refer to Circuit/System Testing.
 - **Go to next step: If OK is displayed**
3. Verify the scan tool Transmission OSS parameter changes with vehicle speed or does not drop out, while operating the vehicle at 16 - 32 km/h (10 - 20 mph).
 - **If the Transmission OSS does not vary with vehicle speed or drops out**
Refer to Circuit/System Testing.
 - **Go to next step: If the Transmission OSS varies with vehicle speed and does not drop out**
4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
5. Verify the DTC does not set.
 - **If the DTC sets**
Refer to Circuit/System Testing.
 - **Go to next step: If the DTC does not set**
6. All OK.

[Circuit/System Testing](#)

NOTE: You must perform the Circuit/System Verification first.

1. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.
2. Connect the **DT-48616-10** adapter harness between the vehicle harness connector and the Q8 Control Solenoid Valve Assembly connector.
3. Ignition ON.
4. Test for 11 - 13 V between the OSS sensor voltage circuit terminal B at the Q8 Control Solenoid Valve Assembly X4 connector and ground.
 - **If not between 11 - 13 V**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If between 11 - 13 V**

5. Verify the scan tool Transmission OSS parameter is between 745 - 825 RPM when performing the output shaft speed test. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Input Shaft Speed/Output Shaft Speed Input Test](#).

- **If not between 745 - 825 RPM**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If between 745 - 825 RPM**

6. Verify there is no damage to the park gear, or misalignment between the B14A Transmission Output Shaft Speed Sensor and the park gear.

- **If the park gear is damaged or misaligned**

Repair or replace as necessary.

- **Go to next step: If the park gear is not damaged or misaligned**

7. Replace the B14A Transmission Output Shaft Speed Sensor.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Input and Output Speed Sensor Installation](#)
- [Input and Output Speed Sensor Removal](#)
- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for Control Solenoid Valve Assembly replacement, programming and setup

DTC P0741 OR P0742: TORQUE CONVERTER CLUTCH (TCC) SYSTEM STUCK OFF OR ON - TRANSMISSION HYDRAULIC/MECHANICAL PERFORMANCE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

NOTE: The DTCs listed below set due to a transmission hydraulic/mechanical condition. Perform the Circuit/System Verification and Circuit/System Testing to identify the cause.

DTC P0741

Torque Converter Clutch (TCC) System Stuck Off - Transmission Hydraulic/Mechanical Performance

DTC P0742

Torque Converter Clutch (TCC) System Stuck On - Transmission Hydraulic/Mechanical Performance

Circuit/System Description

The torque converter clutch (TCC) pressure control solenoid valve is part of the control solenoid valve assembly which has no serviceable components. The TCC pressure control solenoid valve is normally low and regulates transmission fluid pressure to the TCC regulator valve in the lower valve body and the TCC control valve in the fluid pump assembly. When vehicle operating conditions are appropriate to apply the torque converter clutch, the transmission control module (TCM) will increase TCC pressure control solenoid valve current flow, thereby increasing pressure to move the TCC control valve into the

apply position. When the TCC is fully applied, the engine is coupled directly to the transmission. TCC release is accomplished by the TCM decreasing current flow to the TCC pressure control solenoid valves, which decreases the apply pressure and allows the TCC control valve to move to the release position. The TCM calculates torque converter slip speed based on the speed signal from the input shaft speed sensor and engine RPM provided by the engine control module (ECM).

Conditions for Running the DTC

P0741

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0716, P0717, P0722, P0723, P0741, P0742, P2763, or P2764 is not set.
- Engine speed is 400 - 7, 500 RPM or greater for 5 s.
- Ignition voltage is 9 - 32 V.
- Transmission fluid temperature is between -6.7 to +130Â°C (+20 to +266Â°F).
- Throttle position is 8% or greater.
- Engine torque is 50 N.m (36 lb ft) or greater.
- Engine torque signal is valid.
- Throttle position signal is valid.
- TCM detects the transmission gear ratios listed below for the commanded gear when TCC is commanded ON:
 - 2nd gear ratio is between 2.75 - 3.17.
 - 3rd gear ratio is between 1.78 - 2.04.
 - 4th gear ratio is between 1.35 - 1.55.
 - 5th gear ratio is between 0.93 - 1.07.
 - 6th gear ratio is between 0.70 - 0.80.
- DTC runs continuously when the above conditions are met.

P0742

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0716, P0717, P0722, P0723, P0741, P0742, P2763, or P2764 is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- Transmission fluid temperature is between 15 - 130Â°C (59 - 266Â°F).
- Calculated throttle position was 10% or greater and has not dropped below 2%.
- Engine torque signal is valid.
- Throttle position signal is valid.
- Engine torque is 60 N.m (44 lb ft) or greater.
- Vehicle speed greater than 1 km/h (0.6 mph).
- TCC is commanded OFF.
- Engine torque signal is valid.
- Throttle position signal is valid.
- DTC runs continuously when the above conditions are met.

Conditions for Setting the DTC

P0741

- TCC pressure command is 500 kPa (73 PSI) or greater for 2 s.
- TCM detects TCC slip is 130 RPM or greater for 5 s.

- The above conditions must occur 2 times.

P0742

TCM detects the TCC slip is between -50 and +13 RPM for 1 s when TCC is commanded OFF. This condition must occur 8 times.

Action Taken When the DTC Sets

P0741

- P0741 is a Type B DTC.
- TCM inhibits 6th gear.
- TCM initiates Hot Mode shift pattern.
- TCM commands the TCC OFF.

P0742

- P0742 is a Type A DTC.
- TCM initiates Hot Mode shift pattern.
- TCM freezes transmission adaptive functions.
- TCM commands the TCC ON.
- TCM inhibits neutral idle.

Conditions for Clearing the DIC/DTC

- P0741 is a Type B DTC.
- P0742 is a Type A DTC.

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

Connector End View Reference

- **COMPONENT CONNECTOR END VIEWS - INDEX**
- **INLINE HARNESS CONNECTOR END VIEWS - INDEX**

Description and Operation

- **Electronic Component Description**
- **Transmission Component and System Description (Gen 3)**
- **Transmission General Description (Gen 3)**

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

DT-48616 Solenoid Assembly Test Kit & Adapter Harness

For equivalent regional tools, refer to [Special Tools](#).

Circuit/System Verification

1. Ignition ON, engine OFF.
2. Verify DTC P0716, P0717, P07BF, or P07C0 was not set by reviewing the scan tool TCM Failure Records.
 - **If any of the DTCs were set**

Refer to [DTC P0716, P0717, P07BF, or P07C0](#).
 - **Go to next step: If none of the DTCs were set**
3. Engine idling, transmission in Park, with parking brake applied and drive wheels chocked.
4. Verify the transmission fluid level and condition is correct. Refer to [Transmission Fluid Level and Condition Check](#).
 - **If the transmission fluid level and condition is not correct**

Repair as necessary.
 - **Go to next step: If the transmission fluid level and condition is correct**
5. Ignition ON, clear the TCM DTCs with a scan tool.
6. Verify DTC P0741 or P0742 does not set while performing a road test. Refer to [Road Test](#).
 - **If DTC P0741 or P0742 sets**

Refer to Circuit/System Testing.
 - **Go to next step: If DTC P0741 or P0742 does not set**
7. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
8. Verify the DTC does not set.
 - **If the DTC sets**

Refer to Circuit/System Testing.
 - **Go to next step: If the DTC does not set**
9. All OK.

Circuit/System Testing

1. Engine idling at the normal operating temperature.
2. Verify the transmission line pressures are within the specified range. Refer to [Line Pressure Check](#), and [Solenoid Valve Pressure \(Gen 3\)](#).
 - **If the pressures are not within range**

Refer to [Fluid Pressure High or Low](#).
 - **Go to next step: If the pressures are within range**
3. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.
4. Verify the pressure changes for all solenoids when performing the solenoid test. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Solenoid Performance Test](#).
 - **If the pressure does not change**

Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If the pressure changes**

5. Verify the mechanical conditions listed below do not exist. Repair or replace as necessary.

P0741 Upper Valve Body

Release exhaust port/orifice plugged or blocked.

P0741 or P0742 - Upper Valve Body

Torque converter clutch regulator valve stuck/sticking - debris, binding, damaged valve, or scored bore.

P0741 - Channel Plate and Spacer Plate

Oil channels or orifices blocked by debris.

P0741 or P0742 - Fluid Pump Assembly

Torque converter clutch control valve stuck/sticking - debris, binding, damaged valve, or scored bore.

P0741 - Torque Converter

- Torque converter clutch delamination or material worn off.
- Converter bolts too long damaging the clutch apply surface.
- Damaged seal.

P0741 - Support

Damaged seal.

P0741 or P0742 - A/Trans Case Cover (403)

- Pressure release blow-off not seating/sealing.
- Damaged spring.

P0741 - Turbine Shaft O-ring Seal

Cut or damaged.

P0741 or P0742 - Q8 Control Solenoid Valve Assembly

- Torque converter clutch pressure control solenoid stuck OFF or leaking.
- Torque converter clutch pressure control solenoid stuck ON.
- Control signal fluid supply leak due to valve body filter plate assembly cracked, or damaged gasket seal.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Control Valve Body Assembly Removal](#)
- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs.
- [Control Module References](#) for Control Solenoid Valve Assembly replacement, programming and setup.

DTC P0751 OR P0752: SHIFT SOLENOID VALVE 1 PERFORMANCE - STUCK OFF OR ON - TRANSMISSION HYDRAULIC/MECHANICAL PERFORMANCE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

NOTE: The DTCs listed below set due to a transmission hydraulic/mechanical condition. Perform the Circuit/System Verification and Circuit/System Testing to identify the cause.

DTC P0751

Shift Solenoid Valve 1 Performance - Stuck Off - Transmission Hydraulic/Mechanical Performance

DTC P0752

Shift Solenoid Valve 1 Performance - Stuck On - Transmission Hydraulic/Mechanical Performance

Circuit/System Description

Shift solenoid valve 1 is part of the control solenoid valve assembly, which has no serviceable components. The solenoid valve operates by the transmission control module (TCM) turning the low side driver ON or OFF. When the shift solenoid valve 1 is commanded OFF, the plunger forces the metering ball against the actuator feed limit seat, blocking the flow and any existing pressure is exhausted through the exhaust port. When the shift solenoid valve 1 is commanded ON, the internal plunger moves, allowing the metering valve to move away from the actuator feed limit seat and against the exhaust seat, creating signal fluid pressure. The signal fluid pressure acts against the clutch select valve 2 to overcome the valve spring force, moving the valve to the apply position. Fluid pressure from the R1/4-5-6 regulator valve flows through clutch select valve 2 and is directed to either the low and reverse clutch or the 4-5-6 clutch, depending on the position of clutch select valve 2.

Conditions for Running the DTC

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0716, P0717, P0722, P0723, or P182E is not set.
- Transmission fluid temperature is -6.6°C (20°F) or greater.
- Engine speed is between 400 - 7, 500 RPM for 5 s.
- Output shaft speed is 100 RPM or greater, or the throttle position is 0.5% or greater.
- Ignition voltage is 9 - 32 V.
- Shift is complete.
- Engine torque signal is valid.
- Throttle position signal is valid.
- High-Side driver is enabled.
- DTC runs continuously when above conditions are met.

Conditions for Setting the DTC

P0751

- Commanded gear is 1st.
- TCM detects gear ratio 1.37 - 1.52.
- Gearbox slip is 400 RPM or greater for 2 s.
- Conditions listed above have to occur 8 times.

P0752

- Commanded gear is 3rd.
- Transmission has achieved 1st or 2nd.
- Gear slip is 400 RPM or greater for 1.5 s.
- TCM commands 4th gear if above conditions exist and detects a gear ratio of 4.35 - 4.81 for 1.5 s.
- Conditions listed above have to occur 5 times.

P0751

- P0751 is a type B DTC.
- TCM inhibits 1st gear.
- TCM inhibits Neutral idle.

P0752

- P0752 is a type A DTC.
- TCM limits the transmission to 2nd range and reverse.
- TCM inhibits Tap Up/Down function.
- TCM inhibits manual shifting of forward gears.
- TCM inhibits auto grade braking.
- TCM disables neutral idle.
- TCM freezes adapts.
- TCM commands maximum line pressure.
- TCM commands 2nd gear if transmission is in a forward range and the output speed is less than 1350 RPM, or neutral if the output speed is 1350 RPM or greater.

Conditions for Clearing the DTC

- P0751 is a type B DTC.
- P0752 is a type A DTC.

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

Connector End View Reference

- **COMPONENT CONNECTOR END VIEWS - INDEX**
- **INLINE HARNESS CONNECTOR END VIEWS - INDEX**

Description and Operation

- **Drive Range, First Gear Engine Braking (Gen 3)**
- **Drive Range, Third Gear (Gen 3)**
- **Electronic Component Description**
- **Transmission Component and System Description (Gen 3)**
- **Transmission General Description (Gen 3)**

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Special Tools

DT-48616 Solenoid Assembly Test Kit & Adapter Harness

For equivalent regional tools, refer to **Special Tools** .

Circuit/System Verification

NOTE: If other DTCs are set, diagnose those DTCs first.

1. Ignition ON, engine OFF.
2. Verify no other TCM DTCs are set using a scan tool.

- **If another DTC is set**

Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .

- **Go to next step: If no other DTCs are set**

3. Engine idling at the normal operating temperature, transmission in Park, with parking brake applied and drive wheels chocked.
4. Verify the transmission fluid level and condition is correct. Refer to [Transmission Fluid Level and Condition Check](#).

- **If the transmission fluid level and condition is not correct**

Repair as necessary.

- **Go to next step: If the transmission fluid level and condition is correct**

5. Ignition ON, clear the TCM DTCs with a scan tool.
6. From a stop, accelerate to 72 km/h (45 mph) with the Calculated Throttle Position greater than 15%. Perform this test 8 times.
7. Verify DTC P0751 or P0752 did not set.

- **If DTC P0751 or P0752 sets**

Refer to Circuit/System Testing.

- **Go to next step: If DTC P0751 or P0752 does not set**

8. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
9. Verify the DTC does not set.

- **If the DTC sets**

Refer to Circuit/System Testing.

- **Go to next step: If the DTC does not set**

10. All OK.

Circuit/System Testing

WARNING: Refer to [Parking Brake and Drive Wheels Warning](#) .

NOTE: You must perform the Circuit/System Verification first.

1. Engine idling at the normal operating temperature.
2. Verify the transmission line pressures are within the specified range. Refer to [Line Pressure Check](#), and [Solenoid Valve Pressure \(Gen 3\)](#) .

- **If the pressures are not within range**

Refer to [Fluid Pressure High or Low](#).

- **Go to next step: If the pressures are within range**

3. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.
4. Verify the pressure changes for all solenoids when performing the solenoid test. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Solenoid Performance Test](#).

- **If the pressure does not change**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If the pressure changes**

5. Verify the mechanical conditions listed below do not exist. Repair or replace as necessary.

P0751 - Control Valve Body

- Clutch select valve bore plug undersized. Plug should be a valve fit in the bore.
- Check ball #1 missing, damaged/malformed.
- Seat for check ball #1 damaged or leaking.

P0751 or P0752 - Control Valve Body

- Clutch select valve stuck from debris, sediment, binding, or a scored bore.
- Low and reverse and 4-5-6 clutch regulator valve stuck or sticking from debris, sediment, binding, or a scored bore.

P0751 or P0752 - Channel Plate and Spacer Plate

Oil channels or orifices blocked by debris.

P0751 or P0752 - Q8 Control Solenoid Valve Assembly

- Not pressurizing due to shift solenoid valve 1 being stuck OFF or leaking.
- Pressure not exhausting due to shift solenoid valve 1 being stuck ON.
- Control signal fluid supply leak due to valve body filter plate assembly cracked, blocked, or damaged gasket seal.

P0752 Output Carrier Assembly

Output carrier pinion pins too high or too low.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for Control Solenoid Valve Assembly replacement, programming and setup

DTC P0776 OR P0777: PRESSURE CONTROL SOLENOID VALVE 2 STUCK OFF OR ON - TRANSMISSION HYDRAULIC/MECHANICAL PERFORMANCE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

NOTE: The DTCs listed below set due to a transmission hydraulic/mechanical condition. Perform the Circuit/System Verification and Circuit/System Testing to identify the cause.

DTC P0776

Pressure Control Solenoid Valve 2 Stuck Off - Transmission Hydraulic/Mechanical Performance

DTC P0777

Pressure Control Solenoid Valve 2 Stuck On - Transmission Hydraulic/Mechanical Performance

Circuit/System Description

Pressure control solenoid valve 2 is part of the control solenoid valve assembly, which has no serviceable components. Pressure control solenoid valve 2 regulates transmission fluid pressure to the 3-5-R regulator valve, which controls pressure to the 3-5-R clutch. The transmission control module (TCM) calculates gear ratio based on the speed signals from the input shaft speed sensor and the output shaft speed sensor. The TCM compares the expected transmission gear ratio to the calculated gear ratio for each commanded gear.

Conditions for Running the DTC

P0776

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0716, P0717, P0722, P0723, or P182E is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- Transmission fluid temperature is -6.7°C (20°F) or greater.
- Transmission output speed is 100 RPM or greater, or the throttle position is 0.5% or greater.
- Throttle position signal is valid.
- High side driver is enabled.
- Commanded range is reverse, 3rd gear or 5th gear.
- DTC runs continuously when the above conditions are met.

P0777

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0716, P0717, P0722, P0723, or P182E is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- Transmission fluid temperature is -6.7°C (20°F) or greater.
- Transmission output shaft speed is 100 RPM or greater, or the throttle position is 0.5% or greater.
- Throttle position signal is valid.
- High side driver is enabled.
- Throttle position is 10% or greater and the engine torque is 45 N.m (33 lb ft) or greater.
- DTC runs continuously during shift when the 3-5-R clutch is commanded OFF, until commanded range is attained.

Conditions for Setting the DTC

P0776 - Condition 1

- Commanded gear is 3rd.
- Gearbox slip of 400 RPM or greater is detected for 2.5 s.
- TCM commands 4th gear if the above conditions exist and detects a gear ratio of 1.37 - 1.52 for 3 s.
- Conditions listed above have to occur 2 times.

P0776 - Condition 2

- Commanded gear is 5th.
- Gearbox slip of 400 RPM or greater is detected for 3 s.
- TCM commands 6th gear if the above conditions exist and detects 6th gear ratio for 3.5 s.
- Conditions listed above have to occur 3 times.

P0777

- The TCM detects an incorrect off-going clutch gear ratio, or tie-up, when the 3-5-R clutch is commanded OFF for 1 s.
- The transmission input shaft speed is 400 RPM or less from the anticipated input shaft speed.
- The conditions listed above must occur 3 times.

Action Taken When the DTC Sets

P0776

- P0776 is a Type A DTC.
- TCM commands maximum line pressure.
- TCM freezes transmission adaptive functions.
- TCM inhibits TAP Up/TAP Down function.
- TCM inhibits manual shifting of forward gears.
- TCM inhibits powertrain braking.
- TCM inhibits auto grade braking.
- TCM inhibits neutral idle.
- TCM commands 2nd gear if the transmission is in a forward gear and the output speed is less than 700 RPM.
- TCM commands neutral if the output speed is 700 RPM or greater.

P0777

- P0777 is a Type A DTC.
- TCM commands maximum line pressure.
- TCM limits the transmission to reverse and 3rd gear.
- TCM freezes transmission adaptive functions.
- TCM inhibits TAP Up/TAP Down function.
- TCM inhibits manual shifting of forward gears.
- TCM inhibits neutral idle.
- TCM inhibits powertrain braking.
- TCM inhibits auto grade braking.

Conditions for Clearing the DTC

P0776 and P0777 are Type A DTCs.

Diagnostic Aids

Before performing a road test, configure and setup the scan tool for snapshot mode. This will allow you to display, monitor, and verify multiple transmission data parameters at one time, after the road test.

Reference Information

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

- **[COMPONENT CONNECTOR END VIEWS - INDEX](#)**
- **[INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)**

Description and Operation

- **[Drive Range, Third Gear \(Gen 3\)](#)**
- **[Drive Range, Fourth Gear \(Gen 3\)](#)**
- **[Drive Range, Fifth Gear \(Gen 3\)](#)**

- [Electronic Component Description](#)
- [Transmission Component and System Description \(Gen 3\)](#)
- [Transmission General Description \(Gen 3\)](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

WARNING: Refer to [Parking Brake and Drive Wheels Warning](#) .

NOTE: If other DTCs are set, diagnose those DTCs first.

1. Ignition ON.
2. Verify DTC P0716, P0717, P0722, P0723, P077C, P077D, P07BF, or P07C0 was not set by reviewing the scan tool Freeze Frame/Failure Records data.
 - If any of the DTCs were set
Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .
 - Go to next step: If none of the DTCs were set
3. Engine idling, transmission in Park, with parking brake applied and drive wheels chocked.
4. Verify the transmission fluid level and condition is correct. Refer to [Transmission Fluid Level and Condition Check](#).
 - If the transmission fluid level and condition is not correct
Repair as necessary.
 - Go to next step: If the transmission fluid level and condition is correct
5. Ignition ON, clear the TCM DTCs with a scan tool.
6. Verify DTC P0776 or P0777 does not set while performing a road test. Refer to [Road Test](#).
 - If DTC P0776 or P0777 sets
Refer to Circuit/System Testing.
 - Go to next step: If DTC P0776 or P0777 does not set
7. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
8. Verify the DTC does not set.
 - If the DTC sets
Refer to Circuit/System Testing.
 - Go to next step: If the DTC does not set
9. All OK.

Circuit/System Testing

NOTE: You must perform the Circuit/System Verification first.

1. Engine idling at the normal operating temperature.
2. Verify the transmission line pressures are within the specified range. Refer to [Line Pressure Check](#), and [Solenoid Valve Pressure \(Gen 3\)](#) .
 - If the pressures are not within range

Refer to [Fluid Pressure High or Low](#).

- **Go to next step: If the pressures are within range**

3. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.

4. Verify the pressure changes for all solenoids when performing the solenoid test. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Solenoid Performance Test](#).

- **If the pressure does not change**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If the pressure changes**

5. Verify the mechanical conditions listed below do not exist. Repair or replace as necessary.

DTC P0776 or P0777 - Control Valve Body Assembly

- Actuator feed limit circuit supply fluid to solenoids restricted or not available - debris or sediment blockage.
- 3-5-R Regulator Valve stuck/sticking - debris, binding, damaged valve, or scored bore.
- Control valve body ball check valve not seating correctly - debris.

DTC P0776 - 3-5-R and 4-5-6 Clutch Housing Assembly

3-5-R clutch backing plate retaining ring not seated, causing clutch pack over-travel.

DTC P0776 or P0777 - Torque Converter (w/Fluid Pump) Housing Assembly

Fluid pump housing/gear damaged/scored.

DTC P0776 - Channel Plate and Spacer Plate

Oil channels or orifices blocked by debris.

DTC P0776 or P0777 - Q8 Control Solenoid Valve Assembly

- Clutch Pressure Control Solenoid 2 stuck ON/OFF.
- O-ring seals leaking.
- Valve body filter plate assembly cracked, blocked, or damaged gasket seal.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for Control Solenoid Valve Assembly replacement, programming and setup

DTC P0796 OR P0797: PRESSURE CONTROL SOLENOID VALVE 3 STUCK OFF OR ON - TRANSMISSION HYDRAULIC/MECHANICAL PERFORMANCE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

NOTE: The DTCs listed below set due to a transmission hydraulic/mechanical condition. Perform the Circuit/System Verification and Circuit/System Testing to identify the cause.

DTC P0796

Pressure Control Solenoid Valve 3 Stuck Off - Transmission Hydraulic/Mechanical Performance

DTC P0797

Pressure Control Solenoid Valve 3 Stuck On - Transmission Hydraulic/Mechanical Performance

Circuit/System Description

Pressure control solenoid valve 3 is part of the control solenoid valve assembly, which has no serviceable components. Pressure control solenoid valve 3 regulates transmission fluid pressure to the R1/4-5-6 regulator valve which controls pressure to the reverse and low clutch and the 4-5-6 clutch. The transmission control module (TCM) calculates gear ratio based on the speed signals from the automatic transmission input shaft speed sensor and the output shaft speed sensor. The TCM compares the expected transmission gear ratio to the calculated gear ratio for each commanded gear.

Conditions for Running the DTC

P0796

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0716, P0717, P0722, P0723, or P182E is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Transmission output speed is 100 RPM or greater or the throttle position is 0.5% or greater.
- Ignition voltage is 9 - 32 V.
- Transmission fluid temperature is -6.7°C (20°F) or greater.
- High side driver is enabled.
- Throttle position signal is valid.

P0797

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0716, P0717, P0722, P0723, or P182E is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Transmission output speed is 100 RPM or greater or the throttle position is 0.5% or greater.
- Throttle position signal is valid.
- Ignition voltage is 9 - 32 V.
- Transmission fluid temperature is -6.7°C (20°F) or greater.
- High side driver is enabled.
- The throttle position is 10% or greater and the engine torque is 45 N.m (33 lb ft) or greater if attained gear is 1st free wheel.
- DTC runs continuously during shift when the 4-5-6 clutch is commanded OFF, until commanded range is attained.

Conditions for Setting the DTC

P0796

The TCM detects an incorrect gear ratio when the 4-5-6 clutch is commanded ON. This condition must occur 3 times.

P0797

The TCM detects an incorrect gear ratio change when the 4-5-6 clutch is commanded OFF during a shift. This must occur 3 times.

Action Taken When the DTC Sets

- P0796 and P0797 are Type A DTCs.
- TCM commands maximum line pressure.
- TCM freezes transmission adaptive functions.
- TCM inhibits TAP Up/TAP Down functions.
- TCM inhibits manual up, manual down shifts with the shift selector.
- TCM inhibits powertrain braking.
- TCM inhibits neutral idle.
- TCM inhibits auto grade braking.
- TCM limits the transmission to reverse and 3rd gear - DTC P0796 only.
- TCM limits the transmission to reverse and 4th gear - DTC P0797 only.

Conditions for Clearing the DIC/DTC

P0796 and P0797 are Type A DTCs.

Diagnostic Aids

Before performing a road test, configure and setup the scan tool for snapshot mode. This allows you to monitor, display, and verify multiple transmission data parameters at one time, after the road test.

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

Connector End View Reference

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Description and Operation

- [Drive Range, Fourth Gear \(Gen 3\)](#)
- [Drive Range, Fifth Gear \(Gen 3\)](#)
- [Drive Range, Sixth Gear \(Gen 3\)](#)
- [Electronic Component Description](#)
- [Transmission Component and System Description \(Gen 3\)](#)
- [Transmission General Description \(Gen 3\)](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

WARNING: Refer to [Parking Brake and Drive Wheels Warning](#) .

1. Ignition ON.
2. Verify DTC P0716, P0717, P0722, P0723, P077C, P077D, P07BF, or P07C0 was not set by reviewing the scan tool Freeze Frame/Failure Records data.

- **If any of the DTCs were set**

Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .

- **Go to next step: If none of the DTCs were set**

3. Engine idling, transmission in Park, with parking brake applied and drive wheels chocked.
4. Verify the transmission fluid level and condition is correct. Refer to [Transmission Fluid Level and Condition Check](#).

- **If the transmission fluid level and condition is not correct**

Repair as necessary.

- **Go to next step: If the transmission fluid level and condition is correct**

5. Ignition ON, clear the TCM DTCs with a scan tool.
6. Verify DTC P0796 or P0797 does not set while performing a road test. Refer to [Road Test](#).

- **If DTC P0796 or P0797 sets**

Refer to Circuit/System Testing.

- **Go to next step: If DTC P0796 or P0797 does not set**

7. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
8. Verify the DTC does not set.

- **If the DTC sets**

Refer to Circuit/System Testing.

- **Go to next step: If the DTC does not set**

9. All OK.

Circuit/System Testing

NOTE: You must perform the Circuit/System Verification first.

1. Engine idling at the normal operating temperature.
2. Verify the transmission line pressures are within the specified range. Refer to [Line Pressure Check](#), and [Solenoid Valve Pressure \(Gen 3\)](#) .

- **If the pressures are not within range**

Refer to [Fluid Pressure High or Low](#).

- **Go to next step: If the pressures are within range**

3. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.
4. Verify the pressure changes for all solenoids when performing the solenoid test. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Solenoid Performance Test](#).

- **If the pressure does not change**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If the pressure changes**

5. Verify the mechanical conditions listed below do not exist. Repair or replace as necessary.

P0796 or P0797 - Control Valve Body Assembly

4-5-6 Regulator Valve stuck/sticking - debris, binding, damaged valve, or scored bore.

P0796 - Transmission Cooling/Lubrication

- Restriction/leak in OAC, oil to air, cooler/radiator.
- Restricted/leaking/kinked/damaged transmission oil cooler lines.
- Restriction/leak in transmission fluid pump assembly.

P0796 - Automatic Transmission Fluid Filter Assembly

Oil filter or filter seal loose or damaged.

P0796 - Input Shaft Support

Input shaft tower seals damaged or leaking.

P0796 - 4-5-6 Clutch Housing Assembly

4-5-6 Clutch Piston Assembly damaged/leaking.

P0796 - Torque Converter (w/Fluid Pump) Housing Assembly

- Fluid pump housing vanes/rotor/slide damaged/scored.
- Fluid pump or torque converter overstressed due to high temperature.

P0796 - 4-5-6 Reaction Carrier Hub Assembly

4-5-6 Reaction Carrier Hub/Shaft - broken hub weld.

P0796 - 3-5-R and 4-5-6 Clutch Housing Assembly

4-5-6 Clutch Backing Plate Retaining Ring not seated/oriented, causing clutch pack/piston overtravel.

P0796 Output Carrier Assembly

Output carrier pinion pins too high or too low.

P0796 or P0797 - Q8 Control Solenoid Valve Assembly

- Clutch Pressure Control Solenoid 3 stuck ON/OFF.
- O-ring seals leaking.
- Valve body filter plate assembly cracked, blocked, or damaged gasket seal.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for Control Solenoid Valve Assembly replacement, programming and setup

DTC P0815, P0816, OR P0826: UP AND DOWN SHIFT SWITCH CIRCUIT

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

DTC P0815

Upshift Switch Circuit

DTC P0816

Downshift Switch Circuit

DTC P0826

Up and Down Shift Switch Circuit

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Signal	P0826	-	-	-
Low Reference	-	-	-	-

Mechanical Condition

Component	DTC	Condition
S2 Transmission Manual Shift Switch	P0815, P0816	Switch Stuck - Closed/On

Typical Scan Tool Data**Driver Shift Control Mode Switch@Body Control Module**

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Ignition=On Parameter Normal Range: - Down or Downshift - Off or On - Up or Upshift			
Signal	Error or Invalid	Off	Off
Low Reference	-	Off	-

Circuit/System Description

For an overview of the component/system, refer to: [Manual Mode Description and Operation \(Equinox\)](#), [Manual Mode Description and Operation \(Terrain\)](#).

Circuit	Description
Signal	The control module input circuit has an internal resistance connected to 12 V.
Ground	Chassis Ground

Component	Description
K9 Body Control Module	The control module contains a microprocessor used to process input data to control outputs.
K71 Transmission Control Module	The control module receives information from a variety of sensors, switches and serial data information from other control modules. This information is used to control a combination of solenoid valves to obtain the correct line pressure, gear ratio and torque converter clutch operation. K71 is part of the component: Q8 Control Solenoid Valve Assembly
S2 Transmission Manual Shift Switch	The switch S2 has an internal resistor ladder network. A specific resistance is generated dependent on the position of the switch. S2 is part of the component: Transmission Control Lever Knob

Conditions for Running the DTC

P0815, P0816 Condition 1

- DTC P0815, P0816, P0826, P1761, P182E, P1876, P1877, P1915 = Not set
- Engine Speed. = 400 to 7500 RPM
- Greater than 1 s since last transmission shift operation.
- Ignition Voltage = 9 to 32 V
- Transmission=Park/Neutral or Reverse

Frequency the DTC runs = Continuously - After the running conditions are met - For greater than 5 s

Condition 2

- DTC P0815, P0816, P0826, P1761, P182E, P1876, P1877, P1915 = Not set
- Engine Speed.= 400 to 7500 RPM
- Greater than 1 s since last transmission shift operation.
- Ignition Voltage= 9 to 32 V
- Transmission = Forward Gear

Frequency the DTC runs = Continuously - After the running conditions are met - For greater than 5 s

P0826

- DTC P1761 = Not set
- Engine Speed = 400 to 7500 RPM
- Ignition Voltage = 9 to 32 V

Frequency the DTC runs=Continuously - After the running conditions are met - For greater than 5 s

Conditions for Setting the DTC

P0815 Condition 1

Up and Down Shift Switch = Upshift - For greater than 1 s

Condition 2

Up and Down Shift Switch = Upshift - For greater than 10 min

P0816 Condition 1

Up and Down Shift Switch = Downshift - For greater than 1 s

Condition 2

Up and Down Shift Switch = Downshift - For greater than 10 min

P0826

Up and Down Shift Switch = Invalid - For greater than 1 min

Actions Taken When the DTC Sets

DTCs listed in the DTC Descriptor Category = Type C DTC

Manual Shift Control = Disabled

Conditions for Clearing the DTC

DTCs listed in the DTC Descriptor Category = Type C DTC

Diagnostic Aids

A high resistance or short to voltage in the signal circuit will not set a DTC. - The following symptoms may occur:

- S2 Transmission Manual Shift Switch = Inoperative
- Upshift - Pressed = Downshift

Reference Information

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

Control Module References

Circuit/System Verification

WARNING: Refer to [Parking Brake and Drive Wheels Warning](#) .

1. Ignition - On / Vehicle - In Service Mode
2. Operate the component: S3 Transmission Shift Lever - L

Verify the scan tool parameter: Driver Shift Control Mode Switch @ Body Control Module = Active or On

- **If not the specified state**

Refer to: Circuit/System Testing

- **Go to next step: If the specified state**

3. Press and hold the switch: S2 Transmission Manual Shift Switch - Upshift

Verify the scan tool parameter: Driver Shift Control Mode Switch = Up or Upshift

- **If not the specified state**

Refer to: Circuit/System Testing

- **Go to next step: If the specified state**

4. Press and hold the switch: S2 Transmission Manual Shift Switch - Downshift

Verify the scan tool parameter: Driver Shift Control Mode Switch = Down or Downshift

- **If not the specified state**

Refer to: Circuit/System Testing

- **Go to next step: If the specified state**
5. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.

Verify the DTC does not set.

- **If the DTC sets**

Refer to: Circuit/System Testing

- **Go to next step: If the DTC is not set**

6. All OK.

Circuit/System Testing

NOTE: Circuit/System Verification must be performed before proceeding with Circuit/System Testing.

NOTE: It may take up to 2 min for all vehicle systems to power down before an accurate ground or low reference circuit continuity test can be performed.

1. Ignition/Vehicle & All vehicle systems - Off
2. Remove the component: Transmission Control Lever Knob
3. Disconnect the electrical connector: S2 Transmission Manual Shift Switch
4. Test for less than 10 ohms between the test points: Low Reference circuit terminal B @ Component harness & Ground
 - **If 10 ohms or greater**
 1. Disconnect the appropriate ground connection:
 2. Test for less than 2 ohms between the test points: Low Reference circuit terminal B @ Component harness & The other end of the circuit
 - If 2 ohms or greater - Repair the open/high resistance in the circuit.
 - If less than 2 ohms - Repair the open/high resistance in the ground connection.
 - **Go to next step: If less than 10 ohms**
5. Ignition - On / Vehicle - In Service Mode
6. Verify the scan tool parameter: Driver Shift Control Mode Switch @ K9 Body Control Module = Inactive
or Off
 - **If not the specified state**
 1. Ignition/Vehicle - Off
 2. Disconnect the appropriate electrical connector: @ K9 Body Control Module
 3. Test for infinite resistance between the test points: Signal circuit terminal A @ Component harness & Ground
 - If less than infinite resistance - Repair the short to ground on the circuit.
 - If infinite resistance - Replace the component: K9 Body Control Module
 - **Go to next step: If the specified state**
7. Connect a 3 A fused jumper wire between the test points: Signal circuit terminal A @ Component harness & Ground circuit terminal B
8. Verify the scan tool parameter: Driver Shift Control Mode Switch = Error or Invalid
 - **If not the specified state**
 1. Ignition/Vehicle - Off & Remove - Jumper wire(s)
 2. Disconnect the appropriate electrical connector: K9 Body Control Module
 3. Ignition - On / Vehicle - In Service Mode

4. Test for less than 1 V between the test points: Signal circuit terminal A @ Component harness & Ground

- If 1 V or greater - Repair the short to voltage on the circuit.
- If less than 1 V

5. Ignition/Vehicle - Off

6. Test for less than 2 ohms between the test points: Signal circuit terminal A @ Component harness & The other end of the circuit

- If 2 ohms or greater - Repair the open/high resistance in the circuit.
- If less than 2 ohms - Replace the component: K9 Body Control Module

• **Go to next step: If the specified state**

9. Test or replace the component: Transmission Control Lever Knob

Component Testing

1. Ignition/Vehicle - Off

2. Remove the component: Transmission Control Lever Knob

3. Disconnect the electrical connector: S2 Transmission Manual Shift Switch

4. Test for 5, 900 to 6, 400 ohms between the test points: Signal terminal A & Ground circuit terminal B

- **If not between 5, 900 and 6, 400 ohms**

Replace the component: Transmission Control Lever Knob

- **Go to next step: If between 5, 900 and 6, 400 ohms**

5. Press and hold the switch: S2 Transmission Manual Shift Switch - Downshift

6. Test for 1, 900 to 2, 100 kohms between the test points: Signal terminal A & Ground circuit terminal B

- **If not between 1, 900 and 2, 100 ohms**

Replace the component: Transmission Control Lever Knob

- **Go to next step: If between 1, 900 and 2, 100 ohms**

7. Press and hold the switch: S2 Transmission Manual Shift Switch - Upshift

8. Test for 600 to 660 ohms between the test points: Signal terminal A & Ground circuit terminal B

- **If not between 600 and 660 ohms**

Replace the component: Transmission Control Lever Knob

- **Go to next step: If not between 600 and 660 ohms**

9. Test for infinite resistance between the test points: Each terminal of the component & The component's housing

- **If less than infinite resistance**

Replace the component: Transmission Control Lever Knob

- **Go to next step: If infinite resistance**

10. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

- [Transmission Control Lever Knob Replacement](#)
- Perform the scan tool configuration/reset function: [Transmission Adaptive Values Learn](#)
- For control module replacement, programming, and setup refer to: [Control Module References](#)

DTC P0850, P0851, OR P0852: PARK/NEUTRAL POSITION SWITCH CIRCUIT

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

DTC P0850

Park/Neutral Position Switch Circuit

DTC P0851

Park/Neutral Position Switch Circuit Low Voltage

DTC P0852

Park/Neutral Position Switch Circuit High Voltage

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Signal - Terminal A	P0850, P0851, P1915	P0850, P0852	P0850, P0852	-
Signal - Terminal B	P182E	P1915	P1915	P182E, P1915
Signal - Terminal C	P1915	P182E	P182E	P182E, P1915
Signal - Terminal D	P1915	P182E	P182E	P182E, P1915
Signal - Terminal E	P182E	P1915	P1915	P182E, P1915
Low Reference - Terminal F	-	P182E	P182E	P182E, P1915

Typical Scan Tool Data

Internal Mode Switch A/B/C/P@K71 Transmission Control Module

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Ignition - On / Vehicle - In Service Mode Parameter Normal Range: • High • Low			
Signal	Low	High	High
Low Reference	-	High	-

Park/Neutral Position Switch@K20 Engine Control Module

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Ignition - On / Vehicle - In Service Mode Parameter Normal Range: • In Gear • Park/Neutral			
Signal	Park/Neutral	In Gear	In Gear
Low Reference	-	In Gear	In Gear

Circuit/System Description

Circuit	Description

Circuit	Description
Signal	The control module input circuit has an internal resistance connected to 12 V.
Low Reference	Grounded through the control module.

Component	Description
B15 Transmission Internal Mode Switch	The assembly contains 5 individual switches. When the switch is closed it will pull the signal voltage low.
K20 Engine Control Module	The control module contains a microprocessor used to process input data to control outputs.
K71 Transmission Control Module	The control module contains a microprocessor used to process input data to control outputs.

The control module K71 uses 4 of the switches as inputs to determine the gear selector lever position. The control module K71 sends the gear selector lever position over serial data to the control module K20. The control module K20 uses 1 of the switches as an input to determine when the transmission is in park or neutral for engine starting.

Conditions for Running the DTC

- Ignition Voltage= 9 to 32 V
- Engine Speed=Greater than 1, 000 RPM

DTC runs continuously when the above conditions are met.

Conditions for Setting the DTC

P0850, P0851

- Engine Torque=Greater than 75 Nm (55 lb ft)
- Internal Mode Switch=Reverse Gear or Forward Gear
- Park/Neutral Position Switch=Park/Neutral
- Throttle Position=Greater than 10%
- Vehicle Speed=Greater than 10 km/h (6 MPH)

The above conditions must occur for greater than 1 s.

P0852

- Park/Neutral Position Switch=In Gear &
- Internal Mode Switch=Park or Neutral

The above conditions must occur for greater than 1 s.

Actions Taken When the DTC Sets

DTCs P0850, P0851, P0852 are Type C DTCs.

The control module K20 uses the gear selector lever position sent by the control module K70 over serial data to determine park/neutral for engine starting.

Conditions for Clearing the DTC

DTCs P0850, P0851, P0852 are Type C DTCs.

Reference Information

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Description and Operation

- [Electronic Component Description](#)
- [Transmission Component and System Description \(Gen 3\)](#)
- [Transmission General Description \(Gen 3\)](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#)

Special Tools

DT-48616-10 Adapter Harness

Equivalent regional tools: [Special Tools](#)

Circuit/System Verification

WARNING: Refer to [Parking Brake and Drive Wheels Warning](#) .

1. Ignition - On / Vehicle - In Service Mode
2. Verify there are no DTCs set related to the following system/component:K173 Transmission Range Control Module
 - **If a related DTC is set**

Refer to:[Diagnostic Trouble Code \(DTC\) List - Vehicle](#)

- **Go to next step: If a related DTC is not set**
3. Operate the component:S3 Transmission Shift Lever - Select each position

Verify the scan tool parameter:Internal Mode Switch A/B/C/P@K71 Transmission Control Module=The switch states match the values given in the table.Refer to: [Transmission Internal Mode Switch Logic](#)

- **If not the specified state**

Refer to: Circuit/System Testing

- **Go to next step: If the specified state**

4. Operate the component:S3 Transmission Shift Lever - P, N

Verify the scan tool parameter:Park/Neutral Position Switch@K20 Engine Control Module=Park/Neutral

- **If not the specified state**

Refer to: Circuit/System Testing

- **Go to next step: If the specified state**

5. Operate the component:S3 Transmission Shift Lever - R, D, L, M

Verify the scan tool parameter:Park/Neutral Position Switch=In Gear

- **If not the specified state**

Refer to: Circuit/System Testing

- **Go to next step: If the specified state**

6. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.

Verify the DTC does not set.

- **If the DTC sets**

Refer to: Circuit/System Testing

- **Go to next step: If the DTC is not set**

7. All OK.

Circuit/System Testing

NOTE: **Circuit/System Verification must be performed before proceeding with Circuit/System Testing.**

1. Ignition/Vehicle & All vehicle systems - Off
2. Remove the component:Control Valve Body Cover
3. Connect the electrical connector:Q8 Control Solenoid Valve Assembly
4. Disconnect the electrical connector:B15 Transmission Internal Mode Switch

NOTE: **It may take up to 2 min for all vehicle systems to power down before an accurate ground or low reference circuit continuity test can be performed.**

5. Test for less than 10 ohms between the test points:Low Reference circuit terminal F @Q8 Control Solenoid Valve Assembly & Ground

- **If 10 ohms or greater**

Replace the component:Q8 Control Solenoid Valve Assembly

- **Go to next step: If less than 10 ohms**

6. Verify the scan tool parameter:Internal Mode Switch A/B/C/P=High High High High

- **If not the specified state**

Replace the component:Q8 Control Solenoid Valve Assembly

- **Go to next step: If the specified state**

7. Connect a 3 A fused jumper wire between each of the following circuit pairs, one at a time:

- Signal circuit terminal B & Low Reference circuit terminal F @Q8 Control Solenoid Valve Assembly
- Signal circuit terminal C & Low Reference circuit terminal F @Q8 Control Solenoid Valve Assembly
- Signal circuit terminal D & Low Reference circuit terminal F @Q8 Control Solenoid Valve Assembly
- Signal circuit terminal E & Low Reference circuit terminal F @Q8 Control Solenoid Valve Assembly

Verify the scan tool parameter:Internal Mode Switch A/B/C/P=3 High and 1 Low

- **If not the specified state**

Replace the component:Q8 Control Solenoid Valve Assembly

- **Go to next step: If the specified state**

8. Verify the scan tool parameter:Park/Neutral Position Switch =In Gear

- **If not the specified state**

1. Ignition/Vehicle & All vehicle systems - Off

2. Disconnect the electrical connector: X1 @K20 Engine Control Module

3. Test for infinite resistance between the test points:Signal circuit terminal A @Q8 Control Solenoid Valve Assembly & Ground

- If less than infinite resistance - Repair the short to ground on the circuit.
- If infinite resistance - Replace the component:K20 Engine Control Module

- **Go to next step: If the specified state**

9. Connect a 3 A fused jumper wire between the test points:Signal circuit terminal A & Low Reference circuit terminal F @Q8 Control Solenoid Valve Assembly

10. Verify the scan tool parameter:Park/Neutral Position Switch=Park/Neutral

- **If not the specified state**

1. Ignition/Vehicle - Off & Remove - Jumper wire(s)

2. Disconnect the electrical connector: X1@K20 Engine Control Module

3. Ignition - On / Vehicle - In Service Mode

4. Test for less than 1 V between the test points:Signal circuit terminal A @Q8 Control Solenoid Valve Assembly & Ground

- If 1 V or greater - Repair the short to voltage on the circuit.
- If less than 1 V

5. Ignition/Vehicle - Off

6. Test for less than 2 ohms between the test points:Signal circuit terminal A @Q8 Control Solenoid Valve Assembly & The other end of the circuit @Control module harness

- If 2 ohms or greater - Repair the open/high resistance in the circuit.
- If less than 2 ohms - Replace the component:K20 Engine Control Module

- **Go to next step: If the specified state**

11. Test or replace the component:B15 Transmission Internal Mode Switch

Component Testing

NOTE: **Circuit/System Testing must be performed before proceeding with Component Testing.**

1. Ignition/Vehicle - Off

2. Connect all electrical connectors.

3. Ignition - On / Vehicle - In Service Mode

4. Operate the component:S3 Transmission Shift Lever - Select each position

Verify the scan tool parameter:Internal Mode Switch A/B/C/P=The switch states match the values given in the table.Refer to: [Transmission Internal Mode Switch Logic](#)

- **If not the specified state**

Replace the component:B15 Transmission Internal Mode Switch

- **Go to next step: If the specified state**

5. Operate the component:S3 Transmission Shift Lever - Select each position

Verify the scan tool parameter:

- Park/Neutral Position Switch@K20 Engine Control Module=Park/Neutral - S3 Transmission Shift Lever -P, N
- Park/Neutral Position Switch=In Gear - S3 Transmission Shift Lever - R, D, M
- **If not the specified state**

Replace the component:B15 Transmission Internal Mode Switch

- **Go to next step: If the specified state**

6. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

- [Control Valve Body Cover Replacement](#)
- B15 Transmission Internal Mode Switch -[Manual Shift Detent Lever with Shaft Position Switch Assembly Replacement](#)
- For control module replacement, programming, and setup refer to: [Control Module References](#)

DTC P0851: PARK/NEUTRAL POSITION SWITCH CIRCUIT LOW VOLTAGE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC P0851

Park/Neutral Position Switch Circuit Low Voltage

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Ground	-	-	-	-
Signal	P0851	-	-	-

Typical Scan Tool Data

Park/Neutral Position Switch

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Engine running, transmission in Park			
Parameter Normal Range: Park/Neutral			
Signal	Park/Neutral	In-Gear	In-Gear

Circuit/System Description

The transmission manual shift shaft switch assembly, also known as the transmission internal mode switch, is a sliding contact switch attached to the manual shift shaft inside the transmission case. The park/neutral position switch is integrated into the transmission internal mode switch and connects to the transmission control module (TCM) lead-frame through a short wire harness. The park/neutral signal circuit uses the TCM as a pass-through connector only. The TCM provides the low reference circuit to the park/neutral position switch.

The Park/Neutral Signal is sent from the park/neutral switch directly to the Engine Control Module (ECM) and is used for engine start enable.

Conditions for Running the DTC

- Ignition voltage is between 8 - 18 V.
- Engine speed is 1, 000 RPM or greater.
- DTC runs continuously when above conditions are met.

Conditions for Setting the DTC

- ECM detects the Park/Neutral switch signal equals 0 volts (Park/Neutral) when the IMS reports a Drive range.
- Throttle position is 10% or greater.
- Engine torque is 75 N.m (55 lb ft) or greater.
- Vehicle speed is 10 km/h (6 mph) or greater.
- Above conditions must be met for 0.2 s.

Action Taken When the DTC Sets

- P0851 is a Type C DTC.
- ECM uses the indicated range from the TCM for engine start-up. The TCM determines the selected range indicated by the transmission internal mode switch position and broadcasts the position over GMLAN. The engine will only crank when Neutral or Park is indicated.

Conditions for Clearing the DTC

P0851 is a Type C DTC.

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

Connector End View Reference

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Description and Operation

- [Electronic Component Description](#)
- [Transmission Component and System Description \(Gen 3\)](#)
- [Transmission General Description \(Gen 3\)](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

DT-48616-10 Adapter Harness

Circuit/System Verification

1. Ignition ON.
2. Verify that DTC P182E or P1915 was not set by reviewing the scan tool Freeze Frame/Failure Records.
 - **If DTC P182E or P1915 was set**

Refer to [DTC P182E or P1915](#).
 - **Go to next step: If DTC P182E or P1915 was not set**
3. Verify the gear shift lever position matches the scan tool TCM Internal Mode Switch parameter while slowly moving the gear shift lever from Park through all ranges.
 - **If the parameter is not correct for each lever position**

Refer to [Range Selector Lever Cable Adjustment](#).
 - **Go to next step: If the parameter is correct for each lever position**
4. Verify the scan tool engine control module Park/Neutral Position Switch parameter displays Park/Neutral when in Park or Neutral and In-Gear when in Reverse or Drive.
 - **If Park/Neutral or In Gear is not displayed**

Refer to Circuit/System Testing.
 - **Go to next step: If Park/Neutral and In Gear is displayed**
5. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
6. Verify the DTC does not set.
 - **If the DTC sets**

Refer to Circuit/System Testing.
 - **Go to next step: If the DTC does not set**
7. All OK.

Circuit/System Testing

NOTE: You must perform the Circuit/System Verification first.

1. Ignition OFF, disconnect the X1 Q8 Control Solenoid Valve Assembly harness connector at the automatic transmission.
2. Install the **DT-48616-10** adapter harness to the vehicle harness connector.

NOTE: Unless otherwise noted, testing in steps 3 through 9 will be performed at the DT-48616-10 adapter harness connector.

3. Test for less than 5 Ω between the ground circuit terminal 2 and ground.
 - **If 5 Ω or greater**
 1. Ignition OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **Go to next step: If less than 5 Ω**
4. Ignition ON.
5. Test for 11 - 13 V between signal circuit terminal 3 and ground.
 - **If not between 11 - 13 V**

1. Ignition OFF, remove the harness connector at the K20 Engine Control Module.
2. Test for infinite resistance between signal circuit terminal 3 and ground.
 - If less than infinite resistance, repair the short to ground in the circuit.
 - If infinite resistance.
3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K20 Engine Control Module.
- **Go to next step: If between 11 - 13 V**
6. Ignition OFF, transmission in Park, disconnect the **DT-48616-10** adapter harness from the vehicle wire harness.
7. Install the **DT-48616-10** adapter harness to the Q8 Control Solenoid Valve Assembly X1 connector.
8. Test for less than 10 Ω between the Park/Neutral signal circuit terminal 3 and ground circuit terminal 2 with the transmission in Park and Neutral.
 - **If 10 Ω or greater**
 1. Disconnect the **DT-48616-10** adapter harness and remove the transmission control valve body cover.
 2. Install the **DT-48616-10** adapter harness to the Q8 Control Solenoid Valve Assembly X1 connector.
 3. Disconnect the B15 Transmission Internal Mode Switch electrical connector from the Q8 Control Solenoid Valve Assembly.
 4. Test for less than 10 Ω between Park/Neutral signal circuit terminal 3 and terminal A at the Q8 Control Solenoid Valve Assembly X2 connector.
 - If 10 Ω or greater, replace the Q8 Control Solenoid Valve Assembly.
 - If less than 10 Ω .
 5. Replace the B15 Transmission Internal Mode Switch.
 - **Go to next step: If less than 10 Ω**
9. Test for infinite resistance between the Park/Neutral signal circuit terminal 3 and ground circuit terminal 2 with the transmission in Reverse and Drive.
 - **If less than infinite resistance**
 1. Disconnect the **DT-48616-10** adapter harness and remove the transmission control valve body cover.
 2. Install the **DT-48616-10** adapter harness to the Q8 Control Solenoid Valve Assembly X1 connector.
 3. Disconnect the B15 Transmission Internal Mode Switch electrical connector from the Q8 Control Solenoid Valve Assembly.
 4. Test for infinite resistance between the Park/Neutral signal circuit terminal 3 and ground circuit terminal 2.
 - If less than infinite resistance, replace the Q8 Control Solenoid Valve Assembly.
 - If infinite resistance
 5. Replace the B15 Transmission Internal Mode Switch.
 - **Go to next step: If infinite resistance**
10. Replace the K20 Engine Control Module.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs.
- [Control Valve Body Cover Replacement](#)
- [Manual Shift Detent Lever with Shaft Position Switch Assembly Replacement](#)
- [Range Selector Lever Cable Adjustment](#)

- [Control Module References](#) - for Engine Control Module or Control Solenoid Valve Assembly replacement, programming and setup

DTC P0961, P0962, OR P0963: LINE PRESSURE CONTROL SOLENOID VALVE

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

DTC P0961

Line Pressure Control Solenoid Valve Performance

DTC P0962

Line Pressure Control Solenoid Valve Control Circuit Low Voltage

DTC P0963

Line Pressure Control Solenoid Valve Control Circuit High Voltage

Circuit/System Description

For an overview of the component/system, refer to: [Electronic Component Description](#)

Circuit	Description
Control	The output circuit is switched to 12 V to activate the component.
Control	The output circuit is switched to ground to activate the component.

Component	Description
K71 Transmission Control Module	The control module receives information from a variety of sensors, switches and serial data information from other control modules. This information is used to control a combination of solenoid valves to obtain the correct line pressure, gear ratio and torque converter clutch operation. K71 is part of the component: Q8 Control Solenoid Valve Assembly
Q27A Pressure Control Solenoid Valve 1	A solenoid valve is an electro-mechanically operated valve. The valve is controlled by an electric current through the solenoid. The solenoid valve varies the control pressure depending on the current applied to the solenoid coil. • The solenoid valve control pressure decreases with increasing current. • The solenoid valve control pressure is high with minimum current. • Q27A is part of the component: Q8 Control Solenoid Valve Assembly

No external circuit diagnosis is involved.

Conditions for Running the DTC

- Engine Speed = 400 to 7, 500 RPM
- Ignition Voltage = 9 to 32 V

Frequency the DTC runs = Continuously - After the running conditions are met - For greater than 5 s

Conditions for Setting the DTC

P0961

Control circuit = Commanded state does not match the actual state - For greater than 4.4 s - Within 5 s

P0962

Control circuit = Short to Ground - For greater than 1.5 s - Within 1.8 s

P0963

Control circuit = Open Circuit or Short to Voltage - For greater than 4.4 s - Within 5 s

Actions Taken When the DTC Sets

DTCs listed in the DTC Descriptor Category = Type B DTC - Exceptions listed below

DTC P0962 = Type A DTC

P0961, P0963

- Line Pressure Command = Maximum
- Transmission Adaptive Pressure Control = Freeze current adapt values

P0962

- Grade braking = Disabled
- High Side Driver = Disabled
- Line Pressure Command = Maximum
- Manual Shift Control = Disabled
- Mode Switch = Disabled
- Neutral Idle Mode = Disabled
- Powertrain braking = Disabled
- TCC Control = Disabled
- Transmission Adaptive Pressure Control = Freeze current adapt values
- Transmission gear allowed = Reverse & 4th Gear

Conditions for Clearing the DTC

P0961, P0963

DTC P0961, P0963 = Type B DTC

P0962

DTC P0962 = Type A DTC

Reference Information

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#)

Special Tools

DT-48616-10 Adapter Harness

Equivalent regional tools: [Special Tools](#)

[Circuit/System Verification](#)

1. Transmission in Park
2. Engine idling.
3. Perform the scan tool control function: Line Pressure Control Solenoid Valve - From lowest value to maximum value

Verify the scan tool parameter:

- Line Pressure Control Solenoid Valve Control Circuit High Voltage Test Status = OK or Not Run
- Line Pressure Control Solenoid Valve Control Circuit Low Voltage Test Status = OK or Not Run
- Line Pressure Control Solenoid Valve Performance Test Status = OK Not Run
- **If not the specified state**

Refer to: Component Testing

- **Go to next step: If the specified state**

4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.

Verify the DTC does not set.

- **If the DTC sets**

Refer to: Component Testing

- **Go to next step: If the DTC is not set**

5. All OK.

[Component Testing](#)

1. Ignition/Vehicle - Off
2. Remove the component: Q8 Control Solenoid Valve Assembly
3. Verify a condition does not exist with the component: Contamination with metallic debris
 - **If a condition exists**

Repair or replace as necessary.

- **Go to next step: If no condition exists**

4. Verify the resistance is within the specified range for each solenoid valve. - Refer to: [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#)

- **If the resistance is not within range**

Replace the component: Q8 Control Solenoid Valve Assembly

- **Go to next step: If the resistance is within range**

5. Install the DT-48616-10 Adapter Harness @ Q8 Control Solenoid Valve Assembly & Vehicle wiring harness X1

6. Ignition - On / Vehicle - In Service Mode

7. Perform the scan tool control function: Line Pressure Control Solenoid Valve - Increase - From lowest value to maximum value

Verify the scan tool parameter:

- Line Pressure Control Solenoid Valve Control Circuit High Voltage Test Status = OK or Not Run
- Line Pressure Control Solenoid Valve Control Circuit Low Voltage Test Status = OK or Not Run
- Line Pressure Control Solenoid Valve Performance Test Status = OK or Not Run
- **If not the specified state**

Replace the component: Q8 Control Solenoid Valve Assembly

- **Go to next step: If the specified state**

8. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

- [Control Solenoid Valve and Transmission Control Module Assembly Replacement](#) - Q8 Control Solenoid Valve Assembly
- Perform the scan tool configuration/reset function: [Transmission Adaptive Values Learn](#)
- For control module replacement, programming, and setup refer to: [Control Module References](#)

DTC P0965, P0966, OR P0967: PRESSURE CONTROL SOLENOID VALVE 2

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC P0965

Pressure Control Solenoid Valve 2 Performance

DTC P0966

Pressure Control Solenoid Valve 2 Control Circuit Low Voltage

DTC P0967

Pressure Control Solenoid Valve 2 Control Circuit High Voltage

Circuit/System Description

Pressure control solenoid valve 2 is part of the control solenoid valve assembly which has no serviceable components. The normally low pressure control solenoid valve 2 regulates and directs fluid pressure to the 3 - 5 reverse clutch regulator valve. Increasing pressure control solenoid valve 2 pressure increases pressure to the 3 - 5 reverse clutch. The transmission control module (TCM) varies the current to the pressure control solenoid valve 2 by controlling the amount of time the low side driver is ON and OFF. Increasing the current to the pressure control solenoid valve 2 increases pressure control solenoid valve 2 fluid pressure by closing OFF the solenoid valve exhaust port. Decreasing the current to the pressure control solenoid valve 2 decreases clutch pressure control solenoid valve 2 fluid pressure by opening the solenoid valve exhaust port. Power to pressure control solenoid valve 2 is supplied by the TCM through a high side driver. The high side driver protects the circuit and components from excessive current flow. If excessive current flow is detected, the high side driver will turn OFF. When the fault is corrected, the high side driver will reset.

Conditions for Running the DTC

- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- Runs continuously when above conditions are met.

Conditions for Setting the DTC

P0965

TCM detects an internal electrical performance malfunction of the pressure control solenoid valve 2 control circuit where the measured pressure control solenoid valve 2 current does not equal the commanded pressure control solenoid valve 2 current for 5 s.

P0966

TCM detects a short to ground on the pressure control solenoid valve 2 control circuit for 1 s.

P0967

TCM detects an open or short to voltage on the pressure control solenoid valve 2 control circuit for 1 s.

Action Taken When the DTC Sets

P0965

- P0965 is a Type C DTC.
- TCM freezes transmission adaptive functions on the 3-5 Reverse clutch.

P0966 or P0967

- P0966 and P0967 are Type A DTCs.
- TCM limits the transmission to 4th gear and reverse.
- TCM commands maximum line pressure.
- TCM freezes transmission adaptive functions.
- TCM forces the torque converter clutch (TCC) OFF.
- TCM forces the high side driver OFF.
- TCM inhibits Tap Up/Down function.
- TCM inhibits manual shifting of forward gears.
- TCM enables torque management.

Conditions for Clearing the DTC

- P0965 is a Type C DTC.
- P0966 and P0967 are Type A DTCs.

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

Connector End View Reference

- **COMPONENT CONNECTOR END VIEWS - INDEX**
- **INLINE HARNESS CONNECTOR END VIEWS - INDEX**

Description and Operation

- **Electronic Component Description**
- **Transmission Component and System Description (Gen 3)**
- **Transmission General Description (Gen 3)**

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Special Tools

DT-48616-10 Adapter Harness

For equivalent regional tools, refer to **Special Tools** .

Circuit/System Verification

1. Operate the vehicle in second gear long enough to ensure at least a 3Â°C (5Â°F) rise in TCM temperature, then operate the vehicle with the transmission in Park for 5 s.
2. Operate the vehicle in drive range. Allow the transmission to shift through all forward gear ranges.
3. Verify the scan tool parameters listed below do not display Malfunction:
 - Pressure Control Solenoid Valve 2 Performance Test Status
 - Pressure Control Solenoid Valve 2 Control Circuit Low Voltage Test Status
 - Pressure Control Solenoid Valve 2 Control Circuit High Voltage Test Status
 - **If Malfunction is displayed**

Refer to Circuit/System Testing.

- **Go to next step: If Malfunction is not displayed**

4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
5. Verify the DTC does not set.
 - **If the DTC sets**

Refer to Circuit/System Testing.

- Go to next step: If the DTC does not set

6. All OK.

Circuit/System Testing

NOTE: You must perform the Circuit/System Verification first.

1. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.
2. Verify the Q8 Control Solenoid Valve Assembly is not contaminated with any debris and clean as necessary. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).
 - **If contaminated**
Repair as necessary.
 - **Go to next step: If not contaminated**
3. Verify the resistance is within the specified range for each solenoid valve listed in the [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).
 - **If the resistance is not within range**
Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If the resistance is within range**
4. Place the Q8 Control Solenoid Valve Assembly on a clean work surface near the transmission assembly.
5. Connect the **DT-48616-10** adapter harness between the vehicle harness connector and the Q8 Control Solenoid Valve Assembly connector. Ignition ON.

NOTE: If the Pressure Control Solenoid Valve 2 is not commanded from the Transmission Solenoid Performance Test, High Side Driver 1 will not be commanded On and the circuit test status will not run.

6. Verify the scan tool parameters listed below do not display Malfunction when commanding the Pressure Control Solenoid Valve 2 On and Off:
 - Pressure Control Solenoid Valve 2 Performance Test Status
 - Pressure Control Solenoid Valve 2 Control Circuit Low Voltage Test Status
 - Pressure Control Solenoid Valve 2 Control Circuit High Voltage Test Status
 - **If Malfunction is displayed**
Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If Malfunction is not displayed**
7. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) for Control Solenoid Valve Assembly replacement, programming and setup

DTC P0969, P0970, OR P0971: PRESSURE CONTROL SOLENOID VALVE 3

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC P0969

Pressure Control Solenoid Valve 3 Performance

DTC P0970

Pressure Control Solenoid Valve 3 Control Circuit Low Voltage

DTC P0971

Pressure Control Solenoid Valve 3 Control Circuit High Voltage

Circuit/System Description

Pressure control solenoid valve 3 is part of the control solenoid valve assembly which has no serviceable components. The normally high pressure control solenoid valve 3 regulates and directs fluid pressure to the R1/4-5-6 regulator valve. Increasing pressure control solenoid valve 3 pressure increases pressure to the low and reverse clutch or 4-5-6 clutch, depending on the position of the clutch select valve. The transmission control module (TCM) varies current to pressure control Solenoid valve 3 by controlling the time the low side driver is ON and OFF. Decreasing the current to pressure control solenoid valve 3 increases fluid pressure by closing off the solenoid valve exhaust port. Increasing the current to the pressure control solenoid valve 3 decreases fluid pressure by opening the exhaust port. Power is supplied to the pressure control solenoid valve 3 by the TCM through a high side driver. The high side driver protects the circuit and components from excessive current flow. If excessive current flow is detected, the high side driver will turn OFF. When the fault is corrected, the high side driver will reset.

Conditions for Running the DTC

- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- Runs continuously when above conditions are met.

Conditions for Setting the DTC**P0969**

TCM detects an internal electrical performance malfunction of the pressure control solenoid valve 3 control circuit where the measured pressure control solenoid valve 3 currents does not equal the commanded clutch pressure control solenoid valve 3 current for 5 s.

P0970

TCM detects a short to ground on the pressure control solenoid valve 3 control circuit for 1 s.

P0971

TCM detects an open or short to voltage on the pressure control solenoid valve 3 control circuit for 1 s.

Action Taken When the DTC Sets**P0969**

- P0969 is a Type C DTC.
- TCM freezes transmission adaptive functions on the low and reverse clutch and the 4-5-6 clutch.

P0970 or P0971

- P0970 and P0971 are Type A DTCs.
- TCM limits the transmission to 4th gear and reverse.
- TCM commands maximum line pressure.
- TCM freezes transmission adaptive functions.

- TCM enables torque management.
- TCM inhibits Tap Up/Down function.
- TCM inhibits manual shifting of forward gears.
- TCM inhibits auto grade braking.
- TCM forces the high side driver OFF - P0970 only.
- TCM forces the torque converter clutch (TCC) OFF - P0970 only.

Conditions for Clearing the DTC

- P0969 is a Type C DTC.
- P0970 and P0971 are Type A DTCs.

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

Connector End View Reference

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Description and Operation

- [Electronic Component Description](#)
- [Transmission Component and System Description \(Gen 3\)](#)
- [Transmission General Description \(Gen 3\)](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

DT-48616-10 Adapter Harness

For equivalent regional tools, refer to [Special Tools](#) .

Circuit/System Verification

1. Operate the vehicle in second gear long enough to ensure at least a 3Â°C (5Â°F) rise in TCM temperature, then operate the vehicle with the transmission in Park for 5 s.
2. Operate the vehicle in drive range. Allow the transmission to shift through all forward gear ranges.
3. Verify the scan tool parameters listed below do not display Malfunction:
 - Pressure Control Solenoid Valve 3 Performance Test Status
 - Pressure Control Solenoid Valve 3 Control Circuit Low Voltage Test Status
 - Pressure Control Solenoid Valve 3 Control Circuit High Voltage Test Status

- **If Malfunction is displayed**

Refer to Circuit/System Testing.

- **Go to next step: If Malfunction is not displayed**

4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.

5. Verify the DTC does not set.

- **If the DTC sets**

Refer to Circuit/System Testing.

- **Go to next step: If the DTC does not set**

6. All OK.

Circuit/System Testing

NOTE: You must perform the Circuit/System Verification first.

1. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.

2. Verify the Q8 Control Solenoid Valve Assembly is not contaminated with any debris and clean as necessary. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).

- **If contaminated**

Repair as necessary.

- **Go to next step: If not contaminated**

3. Verify the resistance is within the specified range for each solenoid valve listed in the [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).

- **If the resistance is not within range**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If the resistance is within range**

4. Place the Q8 Control Solenoid Valve Assembly on a clean work surface near the transmission assembly.

5. Connect the **DT-48616-10** adapter harness between the vehicle harness connector and the Q8 Control Solenoid Valve Assembly connector. Ignition ON.

NOTE: If the Pressure Control Solenoid Valve 3 is not commanded from the Transmission Solenoid Performance Test, High Side Driver 1 will not be commanded On and the circuit test status will not run.

6. Verify the scan tool parameters listed below do not display Malfunction when commanding the Pressure Control Solenoid Valve 3 On and Off:

- Pressure Control Solenoid Valve 3 Performance Test Status
- Pressure Control Solenoid Valve 3 Control Circuit Low Voltage Test Status
- Pressure Control Solenoid Valve 3 Control Circuit High Voltage Test Status
- **If Malfunction is displayed**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If Malfunction is not displayed**

7. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for control module replacement, programming and setup

DTC P0973 OR P0974: SHIFT SOLENOID VALVE 1 CONTROL CIRCUIT LOW VOLTAGE OR HIGH VOLTAGE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC P0973

Shift Solenoid Valve 1 Control Circuit Low Voltage

DTC P0974

Shift Solenoid Valve 1 Control Circuit High Voltage

Circuit/System Description

The shift solenoid valve 1 is part of the control solenoid valve assembly which has no serviceable components. Shift solenoid valve 1 is a normally closed ON/OFF solenoid and is controlled by the transmission control module (TCM) through a low side driver. When the shift solenoid valve 1 is energized (ON), fluid pressure is directed to the clutch select valve. Power to shift solenoid valve 1 is supplied by the TCM through a high side driver. The high side driver protects the circuit and components from excessive current flow. If excessive current flow is detected, the high side driver will turn OFF. When the fault is corrected, the high side driver will reset.

Conditions for Running the DTC

- Engine speed is 400 - 7500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.

Conditions for Setting the DTC

P0973

TCM detects a short to ground on the shift solenoid valve 1 control circuit for 2 s.

P0974

TCM detects an open or short to voltage on the shift solenoid valve 1 control circuit for 2 s.

Action Taken When the DTC Sets

P0973

- DTC P0973 is a Type A DTC.
- TCM freezes transmission adaptive functions.
- TCM commands maximum line pressure.
- TCM limits the transmission to neutral or 2nd gear and reverse.
- TCM inhibits neutral idle.
- TCM inhibits auto grade braking.
- TCM inhibits the Tap Up/Tap Down function.
- TCM inhibits manual shifting of forward gears.

P0974

- DTC P0974 is a Type B DTC.
- TCM inhibits 1st gear.
- TCM inhibits neutral idle.

Conditions for Clearing the DIC/DTC

- DTC P0973 is a Type A DTC.
- DTC P0974 is a Type B DTC.

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

Connector End View Reference

- **COMPONENT CONNECTOR END VIEWS - INDEX**
- **INLINE HARNESS CONNECTOR END VIEWS - INDEX**

Description and Operation

- **Electronic Component Description**
- **Transmission Component and System Description (Gen 3)**
- **Transmission General Description (Gen 3)**

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Special Tools

DT-48616-10 Adapter Harness

For equivalent regional tools, refer to **Special Tools** .

Circuit/System Verification

1. Operate the vehicle in 2nd gear long enough to ensure at least a 3Â°C (5Â°F) rise in TCM temperature.
2. Place the gear selector in Reverse for 5 s and then idle vehicle for 5 s.
3. Verify the scan tool parameters listed below do not display Malfunction:
 - Shift Solenoid Valve 1 Control Circuit Low Voltage Test Status
 - Shift Solenoid Valve 1 Control Circuit Open Test Status
 - Shift Solenoid Valve 1 Control Circuit High Voltage Test Status
 - **If Malfunction is displayed**

Refer to Circuit/System Testing.

- **Go to next step: If Malfunction is not displayed**
- 4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
- 5. Verify the DTC does not set.
 - **If the DTC sets**

Refer to Circuit/System Testing.
 - **Go to next step: If the DTC does not set**
- 6. All OK.

Circuit/System Testing

NOTE: You must perform the Circuit/System Verification first.

1. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.
2. Verify the Q8 Control Solenoid Valve Assembly is not contaminated with any debris and clean as necessary. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).
 - **If contaminated**

Repair as necessary.
 - **Go to next step: If not contaminated**
3. Verify the resistance is within the specified range for each solenoid valve listed in the [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).
 - **If the resistance is not within range**

Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If the resistance is within range**
4. Place the Q8 Control Solenoid Valve Assembly on a clean work surface near the transmission assembly.
5. Connect the **DT-48616-10** adapter harness between the vehicle harness connector and the Q8 Control Solenoid Valve Assembly connector. Ignition ON.

NOTE: If Shift Solenoid Valve 1 is not commanded from the Transmission Solenoid Performance Test, High Side Driver 1 will not be commanded On and the circuit test status will not run.

6. Verify the scan tool parameters listed below do not display Malfunction when commanding Shift Solenoid Valve 1 On and Off:
 - Shift Solenoid Valve 1 Control Circuit Low Voltage Test
 - Shift Solenoid Valve 1 Control Circuit Open Test
 - Shift Solenoid Valve 1 Control Circuit High Voltage Test
 - **If Malfunction is displayed**

Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If Malfunction is not displayed**
7. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for control module replacement, programming and setup

DTC P171A, P171B, OR P171C: TRANSMISSION FLUID PRESSURE ACCUMULATOR SOLENOID VALVE CONTROL CIRCUIT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC P171A

Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit

DTC P171B

Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit Low Voltage

DTC P171C

Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit High Voltage

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage
Ignition	P0030, P0036, P0132, P0134, P0135, P0138, P0140, P0141, P171B *	P0030, P0036, P0132, P0134, P0135, P0138, P0140, P0141, P171A	-
Control	P171B	P171A	P171C
*Will open the fuse			

Typical Scan Tool Data

Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit Low Voltage Test Status

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Ignition ON Parameter Normal Range: OK or Not Run			
Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit Low Voltage Test Status	Malfunction	OK/Not Run	OK/Not Run

Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit High Voltage Test Status

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Ignition ON Parameter Normal Range: OK or Not Run			
Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit High Voltage Test Status	OK/Not Run	OK/Not Run	Malfunction

Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit Open Voltage Test Status

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Ignition ON Parameter Normal Range: OK or Not Run			

Circuit	Short to Ground	Open	Short to Voltage
Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit Open Test Status	Malfunction	OK/Not Run	OK/Not Run

Circuit/System Description

The automatic transmission auxiliary fluid accumulator is used to supply transmission fluid line pressure following an Autostop event. The accumulator is externally mounted to the transmission case assembly. The accumulator has a solenoid valve which controls the charging and discharge of the accumulator pressure. Power to the solenoid is provided from an ignition circuit. The engine control module (ECM) controls the accumulator solenoid by providing the ground path to the control circuit.

Conditions for Running the DTC

- Ignition voltage is 6.41 V or greater.
- Runs continuously when above condition is met.

Conditions for Setting the DTC

P171A

The ECM detects an open circuit on the transmission surge solenoid circuit for 1 s.

P171B

The ECM detects a short to ground on the transmission surge solenoid circuit for 1 s.

P171C

The ECM detects a short to power on the transmission surge solenoid circuit for 1 s.

Action Taken When the DTC Sets

- P171A, P171B, and P171C are type B DTCs.
- Autostop is disabled.

Conditions for Clearing the DTC

P171A, P171B, and P171C are type B DTCs.

Diagnostic Aids

- The Autostart/Autostop command is located in the scan tool ECM control functions menu.
- The hood must be closed when commanding Autostart/Autostop, or an error message will be displayed on the scan tool.
- The automatic transmission accumulator solenoid valve is part of the auxiliary fluid accumulator and is serviced as an assembly.

Reference Information

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

- **[COMPONENT CONNECTOR END VIEWS - INDEX](#)**
- **[INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)**

Description and Operation

- [Electronic Component Description](#)
- [Transmission Component and System Description \(Gen 3\)](#)
- [Transmission General Description \(Gen 3\)](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

WARNING: Refer to [Parking Brake and Drive Wheels Warning](#) .

1. Ignition ON.
2. Verify the scan tool parameters listed below do not display Malfunction when commanding the Transmission Fluid Pressure Accumulator Solenoid Valve On and Off with a scan tool.
 - Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit High Voltage Test Status
 - Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit Low Voltage Test Status
 - Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit Open Test Status
 - **If Malfunction is displayed**
Refer to Circuit/System Testing.
 - **Go to next step: If Malfunction is not displayed**
3. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
4. Verify the DTC does not set.
 - **If the DTC sets**
Refer to Circuit/System Testing.
 - **Go to next step: If the DTC does not set**
5. All OK.

Circuit/System Testing

NOTE: You must perform the Circuit/System Verification before proceeding with Circuit/System Testing.

1. Ignition ON.
2. Verify a test lamp illuminates on both test points of the ignition circuit fuse that provides power to the B280 Automatic Transmission Accumulator Solenoid Valve.
 - **If the test lamp does not illuminate on either test point of the fuse**
Refer to [DTC P0685-P0687, P0689, P0690, or P1682](#) .
 - **If the test lamp illuminates on 1 test point and the fuse is open**
1. Ignition OFF.

NOTE: There are multiple ignition circuits protected by this fuse.

2. Disconnect all components protected by this fuse.
3. Test for infinite resistance between the ignition circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.

- If infinite resistance, determine which component on the ignition circuit is causing the fuse to open, and replace the component.
 - **Go to next step: If the test lamp illuminates on both test points**
3. Ignition OFF, disconnect the harness connector at the B280 Automatic Transmission Accumulator Solenoid Valve. Ignition ON.
 4. Verify a test lamp illuminates between the ignition circuit terminal 1 and ground.
 - **If the test lamp does not illuminate and the circuit fuse is good**
 1. Ignition OFF, remove the test lamp.
 2. Test for less than 2 Ω in the ignition circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the X50A Fuse Block - Underhood.
 - **Go to next step: If the test lamp illuminates**
 5. Connect a test lamp between the ignition circuit terminal 1 and the control circuit terminal 2.
 6. Verify the test lamp turns ON and OFF when commanding the Transmission Fluid Pressure Accumulator Solenoid Valve On and Off with a scan tool.
 - **If the test lamp is always OFF**
 1. Ignition OFF, disconnect the X3 harness connector at the K20 Engine Control Module, Ignition ON.
 2. Test for less than 1 V between the control circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V.
 3. Ignition OFF.
 4. Test for less than 2 Ω in the control circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K20 Engine Control Module.
 - **If the test lamp is always ON**
 1. Ignition OFF, disconnect the X3 harness connector at the K20 Engine Control Module.
 2. Test for infinite resistance between the control circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance, replace the K20 Engine Control Module.
 - **Go to next step: If the test lamp turns ON and OFF**
 7. Test or replace the B280 Automatic Transmission Accumulator Solenoid Valve. Refer to Component Testing.

Component Testing

1. Perform the Circuit/System Verification and Circuit/System Testing first.
2. Ignition OFF, disconnect the harness connector at the B280 Automatic Transmission Accumulator Solenoid Valve.
3. Test for 16 - 20 Ω between ignition circuit terminal 1 and control circuit 2.
 - **If not between 16 - 20 Ω**

Replace the B280 Automatic Transmission Accumulator Solenoid Valve.
 - **Go to next step: If between 16 - 20 Ω**
4. Test for infinite resistance between each terminal and the B280 Automatic Transmission Accumulator Solenoid Valve case.
 - **If less than infinite resistance**

Replace the B280 Automatic Transmission Accumulator Solenoid Valve.
 - **Go to next step: If infinite resistance**
5. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Auxiliary Fluid Accumulator Installation](#) - for B280 Automatic Transmission Accumulator Solenoid Valve installation
- [Auxiliary Fluid Accumulator Removal](#) - for B280 Automatic Transmission Accumulator Solenoid Valve removal
- [Control Module References](#) - for control module replacement, programming and setup

DTC P171D: TRANSMISSION FLUID PRESSURE ACCUMULATOR SYSTEM PERFORMANCE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC P171D

Transmission Fluid Pressure Accumulator System Performance

Diagnostic Fault Information

NOTE: The components are listed from the least to the most intrusive to service.

Component	DTC	Condition
Automatic Transmission Auxiliary Fluid Accumulator	P171D	Damaged component: • Transmission Accumulator Solenoid Valve - Stuck • Seal Ring - Worn The Automatic Transmission Auxiliary Fluid Accumulator is only serviced as an assembly
1234 Clutch Assembly	P171D, P2714	Damaged component: • Seal Ring - Worn • Clutch Plates - Worn
Check Valve	P171D	Stuck or Leaking
Automatic Transmission Case	P171D, P2714	Damaged component: Worn or broken - 1234 Clutch Retainer Spring retaining tabs

Circuit/System Description

The automatic transmission auxiliary fluid accumulator is used to provide transmission fluid line pressure to the transmission during an autostart event. The accumulator is externally mounted to the transmission case assembly. The engine control module (ECM) controls the automatic transmission auxiliary fluid accumulator solenoid valve by providing a ground path to the solenoid valve control circuit.

When the engine is shut off during an autostop event, there is no transmission line pressure. During an autostart event, the ECM commands the automatic transmission auxiliary fluid accumulator solenoid valve on, allowing transmission fluid to discharge from the accumulator, supplying line pressure to the transmission. The accumulator will start to recharge when the transmission fluid pump increases line

pressure higher than accumulator pressure. Transmission fluid will flow through the solenoid valve until the ECM turns the solenoid off and also flow through a check valve.

The TCM monitors clutch slip during an autostart event. The DTC will set if the TCM detects that the accumulator system is not capable of supplying adequate pressure during autostart.

Conditions for Running the DTC

- DTCs P171A, P171B, P171C, P182E, P1915 or U0101 is not set.
- Transmission shift lever is in a forward range.
- Ignition voltage is 9 - 32 V.
- Transmission fluid temp is 0 - 110°C (32 - 230°F).
- Engine is OFF for 1.2 s or greater.
- During auto stop, engine speed was 5 RPM or less.
- Runs during auto start event.

Conditions for Setting the DTC

TCM detects excessive transmission slip during an autostart. This must occur 7 times on separate autostart events.

Action Taken When the DTC Sets

- P171D is a type B DTC.
- Autostop is disabled.

Conditions for Clearing the DTC

P171D is a type B DTC.

Diagnostic Aids

- The Autostart/Autostop command is located in the scan tool ECM control functions menu.
- The hood must be closed when commanding Autostart/Autostop, or an error message will be displayed on the scan tool.

Reference Information

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Description and Operation

- [Electronic Component Description](#)
- [Transmission Component and System Description \(Gen 3\)](#)
- [Transmission General Description \(Gen 3\)](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

NOTE: If other DTCs are set, diagnose those DTCs first.

1. Engine idling, transmission in Park, with parking brake applied and drive wheels chocked.
2. Verify the transmission fluid level and condition is correct. Refer to [Transmission Fluid Level and Condition Check](#).
 - **If the transmission fluid level and condition is not correct**
Repair as necessary.
 - **Go to next step: If the transmission fluid level and condition is correct**
3. Clear the ECM and TCM DTCs with a scan tool.
4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
5. Verify DTC P171D is not set.
 - **If DTC P171D sets**
 1. Replace the Transmission Fluid Pressure Accumulator.
 2. Verify DTC P171D does not set while performing a road test. Refer to: [Road Test](#)
 - If the DTC sets - Inspect the transmission for mechanical conditions listed in Diagnostic Fault Information.
 - If the DTC does not set
 3. All OK.
 - **Go to next step: If DTC P171D does not set**
6. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Auxiliary Fluid Accumulator Installation](#)
- [Auxiliary Fluid Accumulator Removal](#)
- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for Engine Control Module replacement, programming and setup

DTC P1761: UP AND DOWN SHIFT SWITCH SIGNAL MESSAGE COUNTER INCORRECT

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

DTC P1761

Up and Down Shift Switch Signal Message Counter Incorrect

Circuit/System Description

For an overview of the component/system, refer to: [Manual Mode Description and Operation \(Equinox\)](#) [Manual Mode Description and Operation \(Terrain\)](#).

Control modules connected to the serial data circuits monitor the communication during normal vehicle operation. Operating information and commands are exchanged among the control modules. Each module on the serial data circuit maintains a transmit error counter and a receive error counter. The counter values increase with detected errors and decrease with error-free messages.

Conditions for Running the DTC

Engine Speed = 400 to 7, 500 RPM

Frequency the DTC runs = Continuously - After the running conditions are met - For greater than 5 s

Conditions for Setting the DTC

Serial Data = Message Counter Incorrect - Between the following control modules:

- K9 Body Control Module
- K71 Transmission Control Module

Actions Taken When the DTC Sets

DTCs listed in the DTC Descriptor Category = Type C DTC

- Manual Shift Control = Disabled
- Tap Up or Tap Down = Disabled

Conditions for Clearing the DTC

DTCs listed in the DTC Descriptor Category = Type C DTC

Reference Information

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References

Circuit/System Verification

1. Ignition - On / Vehicle - In Service Mode
2. Verify there are no DTCs set related to the following system/component: Serial Data

- **If a related DTC is set**

Refer to: [Diagnostic Trouble Code \(DTC\) List - Vehicle](#)

- **If a related DTC is not set**

1. Ignition/Vehicle - Off
2. Replace the component: Q8 Control Solenoid Valve Assembly
3. Operate the vehicle within the Conditions for Running the DTC.
4. Verify the DTC does not set.
 - If the DTC sets - Replace the component: K9 Body Control Module
 - If the DTC is not set

5. All OK.

- **Go to next step: If no DTC is set**

3. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

For control module replacement, programming, and setup refer to: [Control Module References](#)

**DTC P1775: TRANSMISSION RANGE REQUEST SIGNAL MESSAGE COUNTER
INCORRECT**

Diagnostic Instructions

- Perform the Diagnostic System Check prior to using this diagnostic procedure: [Diagnostic System Check - Vehicle](#)
- Review the description of Strategy Based Diagnosis: [Strategy Based Diagnosis](#)
- An overview of each diagnostic category can be found here: [Diagnostic Procedure Instructions](#)

DTC Descriptor

DTC P1775

Transmission Range Request Signal Message Counter Incorrect

Circuit/System Description

For an overview of the component/system, refer to: [Electronic Component Description](#)

Control modules connected to the serial data circuits monitor the communication during normal vehicle operation. Operating information and commands are exchanged among the control modules. Each module on the serial data circuit maintains a transmit error counter and a receive error counter. The counter values increase with detected errors and decrease with error-free messages.

Conditions for Running the DTC

Ignition Voltage = 9 to 32 V

Frequency the DTC runs = Continuously - After the running conditions are met - For greater than 3 s

Conditions for Setting the DTC

Serial Data = Message Counter Incorrect - Between the following control modules:

- K38 Chassis Control Module
- K71 Transmission Control Module

Actions Taken When the DTC Sets

DTCs listed in the DTC Descriptor Category = Type C DTC

Electronic Transmission Range Select Actual Range = Undefined

Conditions for Clearing the DTC

DTCs listed in the DTC Descriptor Category = Type C DTC

Reference Information

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References

Circuit/System Verification

1. Ignition - On / Vehicle - In Service Mode
2. Verify there are no DTCs set related to the following system/component: Serial Data
 - **If a related DTC is set**

Refer to: [Diagnostic Trouble Code \(DTC\) List - Vehicle](#)
 - **Go to next step: If a related DTC is not set**

3. Clear the DTCs.
4. Operate the vehicle within the Conditions for Running the DTC.

Verify the DTC does not set.

- **If the DTC sets**

1. Ignition/Vehicle - Off
2. Replace the component:K38 Chassis Control Module
3. Operate the vehicle within the Conditions for Running the DTC.
4. Verify the DTC does not set.

- If the DTC sets - Replace the component:K71 Transmission Control Module
- If the DTC is not set

5. All OK.

- **Go to next step: If the DTC is not set**

5. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair: [Diagnostic Repair Verification](#)

For control module replacement, programming, and setup refer to: [Control Module References](#)

DTC P182E OR P1915: INTERNAL MODE SWITCH

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC P182E

Internal Mode Switch Indicates Invalid Range

DTC P1915

Internal Mode Switch Does Not Indicate Park/Neutral During Start

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Signal A	P182E	P1915	P1915	P182E, P1915
Signal B	P1915	P182E	P182E	P182E, P1915
Signal C	P1915	P182E	P182E	P182E, P1915
Signal P	P182E	P1915	P1915	P182E, P1915
Low Reference	-	P182E	P182E	P182E, P1915

Typical Scan Tool Data

Internal Mode Switch A/B/C/P

Circuit	Short to Ground	Open	Short to Voltage
Operating Conditions: Ignition ON, range selector in Park			
Parameter Normal Range Low High High Low			
Signal A	Low	High	High
Signal B	Low	High	High
Signal C	Low	High	High

Circuit	Short to Ground	Open	Short to Voltage
Signal P	Low	High	High
High = 12 volts Low = 0 volts			

Circuit/System Description

The manual shift detent lever with shaft position switch assembly, also known as the transmission internal mode switch assembly, is a sliding contact switch attached to the manual shift detent lever shaft inside the transmission. The 4 inputs to the transmission control module (TCM) from the switch indicate the position selected by the transmission manual shaft. The input voltage at the TCM is high when the switch is open and low when the switch is closed to ground. The state of each input is displayed on the scan tool TCM Internal Mode Switch A/B/C/P parameter. The Internal Mode Switch A/B/C/P parameter represents transmission range Signal A, Signal B, Signal C, and Signal P.

The park/neutral position switch is integrated into the transmission internal mode switch. The circuit uses the TCM as a pass-through connector only.

The park/neutral signal is sent from the park/neutral switch directly to the engine control module (ECM) and is used for engine start enable.

Conditions for Running the DTC

P182E

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0722, or P0723 is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- Engine torque signal is valid.
- DTC runs continuously when the above conditions are met.

P1915

- DTC P0722, P0723, or P1915 is not set.
- Transmission output shaft speed is 90 RPM or less.
- Ignition voltage is 6 - 32 V.
- DTC runs when conditions above are met during engine start sequence.

Conditions for Setting the DTC

P182E

Internal mode switch does not indicate a valid Park, Reverse, Neutral, or Drive Range position for 7 s.

P1915

Internal mode switch does not indicate Park or Neutral during the following sequence:

- Engine speed is less than 50 RPM for greater than 0.10 s.
- Engine speed is 50 - 480 RPM for greater than 0.07 s.
- Engine speed is greater than 500 RPM and the transmission input speed is greater than 100 RPM for greater than 1.25 s.

Action Taken When the DTC Sets

- P182E and P1915 are Type A DTCs.
- TCM commands maximum line pressure.
- TCM turns OFF all solenoids.

- TCM freezes transmission adaptive functions.
- TCM limits the transmission to reverse and 4th gear.
- TCM forces the torque converter clutch (TCC) OFF.
- TCM inhibits the Tap Up/Tap Down function.
- TCM inhibits neutral idle.
- TCM inhibits auto grade braking.
- TCM inhibits manual shifting of forward gears.
- TCM turns the high side driver OFF.
- TCM enables torque management.

Conditions for Clearing the DTC

P182E and P1915 are Type A DTCs.

Reference Information

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Description and Operation

- [Electronic Component Description](#)
- [Transmission Component and System Description \(Gen 3\)](#)
- [Transmission General Description \(Gen 3\)](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

DT-48616-10 Adapter Harness

For equivalent regional tools, refer to [Special Tools](#) .

Circuit/System Verification

1. Verify the range selector lever cable is adjusted properly. Refer to [Range Selector Lever Cable Adjustment](#) .

- **If cable adjustment is not OK**

Repair as necessary.

- **Go to next step: If cable adjustment is OK**
- 2. Ignition ON.
- 3. Verify the scan tool TCM Internal Mode Switch A/B/C/P parameter matches the **Transmission Internal Mode Switch Logic** table for each transmission shift lever position.
 - **If the parameter does not match**
Refer to Circuit/System Testing.
 - **Go to next step: If the parameter matches**
- 4. Verify the scan tool engine control module Park/Neutral Position Switch parameter displays Park/Neutral with the gear shift lever in Park or Neutral and In Gear in Reverse or Drive.
 - **If Park/Neutral or In Gear is not displayed**
Refer to Circuit/System Testing.
 - **Go to next step: If Park/Neutral and In Gear is displayed**
- 5. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
- 6. Verify the DTC does not set.
 - **If the DTC sets**
Refer to Circuit/System Testing.
 - **Go to next step: If the DTC does not set**
- 7. All OK.

Circuit/System Testing

NOTE: You must perform Circuit/System Verification first.

1. Ignition OFF, remove the control valve body cover.
2. Connect the vehicle harness connector to the Q8 Control Solenoid Valve Assembly.
3. Disconnect the B15 Transmission Internal Mode Switch connector at the Q8 Control Solenoid Valve Assembly.
4. Ignition ON.
5. Verify the scan tool engine control module Park/Neutral Position Switch parameter displays In Gear.
 - **If In Gear is not displayed**
 1. Ignition OFF, disconnect the vehicle harness X1 connector at the Q8 Control Solenoid Valve Assembly.
 2. Install the **DT-48616-10** adapter harness to the X1 connector at the Q8 Control Solenoid Valve Assembly.
 3. Test for infinite resistance between the **DT-48616-10** adapter harness connector terminals 2 and 3.
 - If less than infinite resistance, replace the Q8 Control Solenoid Valve Assembly.
 - If infinite resistance.
 4. Disconnect the harness connector at the K20 Engine Control Module.
 5. Test for infinite resistance between the signal circuit and ground at the vehicle harness K20 Engine Control Module connector.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance, replace the K20 Engine Control Module.
 - **Go to next step: If In Gear is displayed**
6. Verify the scan tool transmission control module Internal Mode Switch A/B/C/P parameter displays High High High High.
 - **If High High High High is not displayed**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If High High High High is displayed**

7. Install a 3 A fused jumper wire between the low reference circuit terminal F and each signal circuit listed below one at a time at the Q8 Control Solenoid Valve Assembly.

- Signal A - terminal B
- Signal B - terminal C
- Signal C - terminal D
- Signal P - terminal E

8. Verify the scan tool transmission control module A/B/C/P parameter displays 1 Low and 3 High when a signal circuit is grounded.

- **If 1 Low and 3 High is not displayed**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If 1 Low and 3 High is displayed**

9. Connect a 3-amp fused jumper wire between terminal A and terminal F.

10. Verify the ECM Park/Neutral Position Switch parameter displays Park/Neutral.

- **If Park/Neutral is not displayed**

1. Ignition OFF, remove the jumper wire and disconnect the X1 connector at the Q8 Control Solenoid Valve Assembly.

2. Install the **DT-48616-10** adapter harness to the X1 connector at the Q8 Control Solenoid Valve Assembly.

3. Test for less than 2 Ω between the adapter harness terminal 2 and the X2 connector terminal F at the Q8 Control Solenoid Valve Assembly.

- If greater than 2 Ω , replace the Q8 Control Solenoid Valve Assembly.
- If less than 2 Ω .

4. Disconnect the connector at the K20 Engine Control Module.

5. Test for less than 2 Ω in the vehicle harness park/neutral signal circuit, end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the K20 Engine Control Module.

- **Go to next step: If Park/Neutral is displayed**

11. Replace the B15 Transmission Internal Mode Switch.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs.
- [Control Valve Body Cover Replacement](#)
- [Manual Shift Detent Lever with Shaft Position Switch Assembly Replacement](#)
- [Range Selector Lever Cable Adjustment](#)
- [Control Module References](#) - for control module replacement, programming and setup

DTC P2714 OR P2715: PRESSURE CONTROL SOLENOID VALVE 4 STUCK OFF OR ON

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

NOTE: The DTCs listed below set due to a transmission hydraulic/mechanical condition. Perform the Circuit/System Verification and Circuit/System

DTC P2714

Pressure Control Solenoid Valve 4 Stuck Off - Transmission Hydraulic/Mechanical Performance

DTC P2715

Pressure Control Solenoid Valve 4 Stuck On - Transmission Hydraulic/Mechanical Performance

Circuit/System Description

Pressure control solenoid valve 4 is part of the control solenoid valve assembly which has no serviceable components. Pressure control solenoid valve 4 regulates transmission fluid pressure to the 2-6 regulator valve which controls pressure to the 2-6 clutch. The transmission control module (TCM) calculates gear ratio based on the speed signals from the input shaft speed sensor and the output shaft speed sensor. The TCM compares the expected transmission gear ratio to the calculated gear ratio for each commanded gear.

Conditions for Running the DTC

P2714

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0716, P0717, P0722, P0723, or P182E is not set.
- High side driver is enabled.
- Throttle position signal is valid.
- Ignition voltage is 9 - 32 V.
- Transmission fluid temperature is -6.6°C (20°F) or greater.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Pressure control solenoid 4 is commanded ON, applying the 2-6 clutch.
- Output speed is 100 RPM or greater, or the throttle position is greater than 0.5%.
- Runs continuously when above conditions are met.

P2715

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0716, P0717, P0722, P0723, or P182E is not set.
- Ignition voltage is 9 - 32 V.
- Transmission output shaft speed is 100 RPM or greater, or throttle position is 0.5% or greater.
- Pressure control solenoid 4 is commanded OFF, releasing the 2 - 6 clutch.
- Transmission fluid temperature is -6.6°C (20°F) or greater.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Engine torque is 45 N.m (33 lb ft) or greater.
- The attained range is not 1st gear.
- High side driver is enabled.
- Runs continuously when above conditions are met.

Conditions for Setting the DTC

P2714

TCM detects an incorrect on-coming clutch gear ratio, or shift flare. This condition must occur 3 times.

P2715

TCM detects an incorrect off-going clutch gear ratio, or shift tie-up. This condition must occur 3 times.

P2714

- P2714 is a Type A DTC.
- TCM commands maximum line pressure.
- TCM freezes transmission adaptive functions.
- TCM inhibits the Tap Up/Tap Down function.
- TCM inhibits manual shifting of forward gears.
- TCM limits the transmission to reverse and 3rd gear.
- TCM inhibits powertrain braking.
- TCM inhibits neutral idle.
- TCM inhibits auto grade braking.

P2715

- P2715 is a Type A DTC.
- TCM commands maximum line pressure.
- TCM freezes transmission adaptive functions.
- TCM inhibits the Tap Up/Tap Down function.
- TCM inhibits manual shifting of forward gears.
- TCM inhibits powertrain braking.
- TCM inhibits auto grade braking.
- TCM inhibits neutral idle.
- TCM commands 2nd gear if the output speed is less than 700 RPM.
- TCM commands neutral if the output speed is 700 RPM or greater.

Conditions for Clearing the DTC

P2714 and P2715 are Type A DTCs.

Reference Information

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Description and Operation

- [Drive Range, Second Gear \(Gen 3\)](#)
- [Drive Range, Sixth Gear \(Gen 3\)](#)
- [Electronic Component Description](#)
- [Transmission Component and System Description \(Gen 3\)](#)
- [Transmission General Description \(Gen 3\)](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

WARNING: Refer to Parking Brake and Drive Wheels Warning .

NOTE: If other DTCs are set, diagnose those DTCs first.

1. Ignition ON.
2. Verify DTC P0716, P0717, P0722, P0723, P077C, P077D, P07BF, or P07C0 was not set by reviewing the scan tool Freeze Frame/Failure Records data.
 - **If any of the DTCs were set**

Refer to Diagnostic Trouble Code (DTC) List - Vehicle .
 - **Go to next step: If none of the DTCs were set**
3. Engine idling, transmission in Park, with parking brake applied and drive wheels chocked.
4. Verify the transmission fluid level and condition is correct. Refer to Transmission Fluid Level and Condition Check.
 - **If the transmission fluid level and condition is not correct**

Repair as necessary.
 - **Go to next step: If the transmission fluid level and condition is correct**
5. Ignition ON, clear the TCM DTCs with a scan tool.
6. Verify DTC P2714 or P2715 does not set while performing a road test. Refer to Road Test.
 - **If DTC P2714 or P2715 sets**

Refer to Circuit/System Testing.
 - **Go to next step: If DTC P2714 or P2715 does not set**
7. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
8. Verify the DTC does not set.
 - **If the DTC sets**

Refer to Circuit/System Testing.
 - **Go to next step: If the DTC does not set**
9. All OK.

Circuit/System Testing

NOTE: You must perform the Circuit/System Verification first.

1. Engine idling at the normal operating temperature.
2. Verify the transmission line pressures are within the specified range. Refer to Line Pressure Check, and Solenoid Valve Pressure (Gen 3) .
 - **If the pressures are not within range**

Refer to Fluid Pressure High or Low.
 - **Go to next step: If the pressures are within range**

3. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.
4. Verify the pressure changes for all solenoid valves when performing the solenoid valve test. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Solenoid Performance Test](#).
 - **If the pressure does not change**
Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If the pressure changes**
5. Verify the conditions listed below do not exist. Repair or replace as necessary.

P2714 Channel Plate and Spacer Plate

Oil channels or orifices blocked by debris.

P2714 or P2715 Control Valve Body Assembly

2-6 clutch regulator valve stuck/sticking, debris, binding, damaged valve, or scored bore.

P2714 Automatic Transmission Fluid Filter Assembly

Oil filter or filter seal loose or damaged.

P2714 Torque Converter (w/fluid pump) Housing Assembly

Fluid pump housing/gear damaged/scored.

P2714 Trans case and 1-2-3-4 clutch backing plate retainer ring

1-2-3-4 clutch backing plate retaining ring not seated/oriented correctly at trans case groove.

P2714 or P2715 Transmission case, 2-6 clutch piston, spring retaining ring, reaction sun gear

- 2-6 clutch return spring retaining ring not seated in groove
- 2-6 clutch piston assembly - seal damaged or leaking
- 2-6 clutch plates worn or damaged
- 2-6 clutch plates will not slide over the reaction sun gear shell freely

P2714 or P2715 Q8 Control Solenoid Valve Assembly

- Pressure Control Solenoid Valve 4 Stuck ON/OFF.
- Control signal fluid supply leak - valve body filter plate assembly cracked or damaged gasket seal.
- O-ring seals leaking.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for Control Solenoid Valve Assembly replacement, programming and setup

DTC P2719, P2720, OR P2721: PRESSURE CONTROL SOLENOID VALVE 4 PERFORMANCE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC P2719

Pressure Control Solenoid Valve 4 Performance

DTC P2720

Pressure Control Solenoid Valve 4 Control Circuit Low Voltage

DTC P2721

Pressure Control Solenoid Valve 4 Control Circuit High Voltage

Circuit/System Description

Pressure control solenoid valve 4 is part of the control solenoid valve assembly which has no serviceable components. The normally low pressure control solenoid valve 4 regulates and directs oil pressure to the 2-6 clutch regulator valve. Increasing pressure control solenoid valve 4 pressure increases pressure to the 2-6 clutch. The transmission control module (TCM) varies current to the pressure control solenoid valve 4 by controlling the amount of time the low side driver is ON and OFF. Increasing the ON time increases current to the pressure control solenoid valve 4. Increasing current to pressure control solenoid valve 4 increases oil pressure by closing off the solenoid valve exhaust port. Decreasing the current to the pressure control solenoid valve 4 decreases oil pressure by opening the exhaust port. Pressure control solenoid valve 4 power is supplied by the TCM through a high side driver. The high side driver protects the circuit and components from excessive current flow. If excessive current flow is detected, the high side driver will turn OFF. When the fault is corrected, the high side driver will reset.

Conditions for Running the DTC

- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- DTC runs continuously when above conditions are met.

Conditions for Setting the DTC

P2719

TCM detects an internal electrical performance malfunction on the clutch pressure solenoid valve 4 control circuit where the measured clutch pressure control solenoid valve 4 current does not equal the commanded clutch pressure control solenoid valve 4 current for 5 s.

P2720

TCM detects a short to ground on the clutch pressure control solenoid valve 4 control circuit for 1 s.

P2721

TCM detects an open or short to voltage on the clutch pressure control solenoid valve 4 control circuit for 1 s.

Action Taken When the DTC Sets

P2719

- P2719 is a Type C DTC.
- TCM freezes transmission adaptive functions on the 2-6 clutch.

P2720

- P2720 is a Type A DTC.
- TCM limits the transmission to 2nd gear and reverse.
- TCM commands maximum line pressure.
- TCM freezes transmission adaptive functions.
- TCM inhibits neutral idle.

- TCM inhibits auto grade braking.
- TCM inhibits Tap Up/Tap Down function.
- TCM inhibits manual up, manual down shifts with the shift selector.
- TCM commands 2nd gear if the transmission is in a forward gear and the output speed is less than 700 RPM, or neutral if the output speed is 700 RPM or greater.

P2721

- P2721 is a Type A DTC.
- TCM limits the transmission to 3rd gear and reverse.
- TCM commands maximum line pressure.
- TCM freezes transmission adaptive functions.
- TCM inhibits neutral idle.
- TCM inhibits Tap Up/Tap Down function.
- TCM inhibits manual shifting of forward gears.

Conditions for Clearing the DTC

- P2719 is a Type C DTC.
- P2720 and P2721 are Type A DTCs.

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

Connector End View Reference

- **COMPONENT CONNECTOR END VIEWS - INDEX**
- **INLINE HARNESS CONNECTOR END VIEWS - INDEX**

Description and Operation

- **Electronic Component Description**
- **Transmission Component and System Description (Gen 3)**
- **Transmission General Description (Gen 3)**

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Special Tools

DT-48616-10 Adapter Harness

For equivalent regional tools, refer to **Special Tools** .

Circuit/System Verification

1. Operate the vehicle in second gear long enough to ensure at least a 3Â°C (5Â°F) rise in TCM temperature.
2. Operate the vehicle in drive range. Allow the transmission to shift through all forward gear ranges.
3. Ignition ON.
4. Verify the scan tool parameters listed below do not display Malfunction:
 - Pressure Control Solenoid Valve 4 Performance Test Status
 - Pressure Control Solenoid Valve 4 Control Circuit Low Voltage Test Status
 - Pressure Control Solenoid Valve 4 Control Circuit High Voltage Test Status
 - **If Malfunction is displayed**

Refer to Circuit/System Testing.
 - **Go to next step: If Malfunction is not displayed**
5. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
6. Verify the DTC does not set.
 - **If the DTC sets**

Refer to Circuit/System Testing.
 - **Go to next step: If the DTC does not set**
7. All OK.

Circuit/System Testing

NOTE: You must perform the Circuit/System Verification first.

1. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.
2. Verify the Q8 Control Solenoid Valve Assembly is not contaminated with any debris and clean as necessary. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).
 - **If contaminated**

Repair as necessary.
 - **Go to next step: If not contaminated**
3. Verify the resistance is within the specified range for each solenoid valve listed in the [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).
 - **If the resistance is not within range**

Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If the resistance is within range**
4. Place the Q8 Control Solenoid Valve Assembly on a clean work surface near the transmission assembly.
5. Connect the **DT-48616-10** adapter harness between the vehicle harness connector and the Q8 Control Solenoid Valve Assembly connector. Ignition ON.

NOTE: If the Pressure Control Solenoid Valve 4 is not commanded from the Transmission Solenoid Performance Test, High Side Driver 1 will not be commanded On and the circuit test status will not run.

6. Verify the scan tool parameters listed below do not display Malfunction when commanding the Pressure Control Solenoid Valve 4 On and Off:
 - Pressure Control Solenoid Valve 4 Performance Test Status
 - Pressure Control Solenoid Valve 4 Control Circuit Low Voltage Test Status

- Pressure Control Solenoid Valve 4 Control Circuit High Voltage Test Status
- **If Malfunction is displayed**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If Malfunction is not displayed**

7. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for control module replacement, programming and setup

DTC P2723 OR P2724: PRESSURE CONTROL SOLENOID VALVE 5 STUCK OFF OR ON - TRANSMISSION HYDRAULIC/MECHANICAL PERFORMANCE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

NOTE: The DTCs listed below set due to a transmission hydraulic/mechanical condition. Perform the Circuit/System Verification and Circuit/System Testing to identify the cause.

DTC P2723

Pressure Control Solenoid Valve 5 Stuck Off - Transmission Hydraulic/Mechanical Performance

DTC P2724

Pressure Control Solenoid Valve 5 Stuck On - Transmission Hydraulic/Mechanical Performance

Circuit/System Description

Pressure control solenoid valve 5 is part of the control solenoid valve assembly, which has no serviceable components. The pressure control solenoid valve 5 regulates transmission fluid pressure to the 1-2-3-4 regulator valve which controls pressure to the 1-2-3-4 clutch. The transmission control module (TCM) calculates gear ratio based on the speed signals from the input shaft speed sensor and the output shaft speed sensor. The TCM compares the expected transmission gear ratio to the calculated gear ratio for each commanded gear.

Conditions for Running the DTC

- DTC P0101, P0102, P0103, P0106, P0107, P0108, P0171, P0172, P0174, P0175, P0201, P0202, P0203, P0204, P0205, P0206, P0207, P0208, P0300, P0301, P0302, P0303, P0304, P0305, P0306, P0307, P0308, P0401, P042E, P0716, P0717, P0722, P0723, or P182E is not set.
- Ignition voltage is 9 - 32 V.
- Throttle position signal is valid.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- High side driver is enabled.
- Transmission fluid temperature is -6.6Â°C (20Â°F) or greater.
- Transmission output speed is 100 RPM or greater or the throttle position is 0.5% or greater.
- DTC runs continuously when above conditions are met.

Conditions for Setting the DTC

P2723

TCM detects an incorrect on-coming clutch gear ratio, or shift flare when the 1-2-3-4 clutch is commanded ON. This condition must occur 3 times.

P2724

TCM detects an incorrect off-going clutch gear ratio, or shift tie-up when the 1-2-3-4 clutch is commanded OFF. This condition must occur 3 times.

Action Taken When the DTC Sets

- P2723 and P2724 are Type A DTCs.
- TCM freezes transmission adaptive functions.
- TCM commands maximum line pressure.
- TCM inhibits Tap Up/Tap Down.
- TCM inhibits Manual Up/Manual Down with the gear selector.
- Torque management is enabled.
- TCM inhibits powertrain braking.
- TCM inhibits neutral idle.
- TCM inhibits auto grade braking.
- TCM limits the transmission to reverse and 5th range - P2723 only.
- TCM limits the transmission to reverse and 3rd range - P2724 only.

Conditions for Clearing the DIC/DTC

P2723 and P2724 are Type A DTCs.

Diagnostic Aids

Before performing a road test, configure and setup the scan tool for snapshot mode. This will allow you to display, monitor, and verify multiple transmission data parameters at one time, after the road test.

Reference Information

Schematic Reference

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

- **[COMPONENT CONNECTOR END VIEWS - INDEX](#)**
- **[INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)**

Description and Operation

- **[Drive Range, First Gear \(Gen 3\)](#)**
- **[Drive Range, Second Gear \(Gen 3\)](#)**
- **[Drive Range, Third Gear \(Gen 3\)](#)**
- **[Drive Range, Fourth Gear \(Gen 3\)](#)**
- **[Electronic Component Description](#)**
- **[Transmission Component and System Description \(Gen 3\)](#)**
- **[Transmission General Description \(Gen 3\)](#)**

Electrical Information Reference

- **[Circuit Testing](#)**
- **[Connector Repairs](#)**
- **[Testing for Intermittent Conditions and Poor Connections](#)**

- [Wiring Repairs](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

[Circuit/System Verification](#)

WARNING: Refer to [Parking Brake and Drive Wheels Warning](#) .

NOTE: If other DTCs are set, diagnose those DTCs first.

1. Engine idling, transmission in Park, with parking brake applied and drive wheels chocked.
2. Verify the transmission fluid level and condition is correct. Refer to [Transmission Fluid Level and Condition Check](#).
 - If the transmission fluid level and condition is not correct
Repair as necessary.
 - Go to next step: If the transmission fluid level and condition is correct
3. Ignition ON, clear the TCM DTCs with a scan tool.
4. Verify DTC P2723 or P2724 does not set while performing a road test. Refer to [Road Test](#).
 - If DTC P2723 or P2724 sets
Refer to Circuit/System Testing.
 - Go to next step: If DTC P2723 or P2724 does not set
5. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
6. Verify the DTC does not set.
 - If the DTC sets
Refer to Circuit/System Testing.
 - Go to next step: If the DTC does not set
7. All OK.

[Circuit/System Testing](#)

NOTE: You must perform the Circuit/System Verification first.

1. Engine idling at the normal operating temperature.
2. Verify the transmission line pressures are within the specified range. Refer to [Line Pressure Check](#), and [Solenoid Valve Pressure \(Gen 3\)](#) .
 - If the pressures are not within range
Refer to [Fluid Pressure High or Low](#).
 - Go to next step: If the pressures are within range
3. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.
4. Verify the pressure changes for all solenoid valves when performing the solenoid valve test. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Solenoid Performance Test](#).
 - If the pressure does not change

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If the pressure changes**

5. Verify the mechanical conditions listed below do not exist. Repair or replace as necessary.

P2723 or P2724 - Control Valve Body Assembly

1-2-3-4 clutch regulator valve stuck/sticking - debris, binding, damaged valve, or scored bore.

P2723 - Automatic Transmission Fluid Filter Assembly

Oil filter or filter seal loose or damaged.

P2723 - Torque Converter (w/Fluid Pump) Housing Assembly

- Fluid pump housing/gear damaged/scored.
- Fluid pump or torque converter overstressed due to high temperatures.

P2723 - Trans Case and 1-2-3-4 Clutch Backing Plate Retaining Ring

1-2-3-4 clutch backing plate retaining ring not seated/oriented, causing clutch pack/piston over travel.

P2723 - Output Sun Gear Assembly

Housing/hub weld cracked/leaking.

P2723 - Lo and Reverse and 1-2-3-4 Clutch Housing Assembly

1-2-3-4 clutch piston cracked/damaged/leaking.

P2723 - Channel Plate and Spacer Plate

Oil channels or orifices blocked by debris.

P2723 or P2724 - Q8 Control Solenoid Valve Assembly

- Q27E Pressure Control Solenoid Valve 5 Stuck ON/OFF.
- O-ring seals leaking.
- Valve body filter plate assembly cracked, blocked, or damage gasket seal.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for Control Solenoid Valve Assembly replacement, programming and setup

DTC P2728, P2729, OR P2730: PRESSURE CONTROL SOLENOID VALVE 5

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC P2728

Pressure Control Solenoid Valve 5 Performance

DTC P2729

DTC P2730**Pressure Control Solenoid Valve 5 Control Circuit High Voltage****Circuit/System Description**

Pressure control solenoid valve 5 is part of the control solenoid valve assembly which has no serviceable components. The normally high pressure control solenoid valve 5 regulates and directs oil pressure to the 1-2-3-4 clutch regulator valve. Increasing pressure control solenoid valve 5 pressure increases pressure to the 1-2-3-4 clutch. The transmission control module (TCM) varies the current to the pressure control solenoid valve 5 by controlling the amount of time the low side driver is ON and OFF. Increasing the current to pressure control solenoid valve 5 decreases pressure control solenoid valve 5 oil pressure by opening the solenoid valve exhaust port. Decreasing the current to pressure control solenoid valve 5 increases pressure control solenoid valve 5 oil pressure by closing OFF the solenoid valve exhaust port. Pressure control solenoid valve 5 power is supplied by the TCM through a high side driver. The high side driver protects the circuit and components from excessive current flow. If excessive current flow is detected, the high side driver will turn OFF. When the fault is corrected, the high side driver will reset.

Conditions for Running the DTC

- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- DTC runs continuously when above conditions are met.

Conditions for Setting the DTC**P2728**

TCM detects an internal electrical performance malfunction of the pressure control solenoid valve 5 control circuit where the measured clutch pressure control solenoid valve 5 current does not equal the commanded clutch pressure control solenoid valve 5 current for 5 s.

P2729

TCM detects a short to ground on the clutch pressure control solenoid valve 5 control circuit for 1 s.

P2730

TCM detects an open or short to voltage on the clutch pressure control solenoid valve 5 control circuit for 1 s.

Action Taken When the DTC Sets**P2728**

- P2728 is a Type C DTC.
- TCM freezes transmission adaptive functions on the 1-2-3-4 clutch.

P2729

- P2729 is a Type A DTC.
- TCM commands the high side driver OFF.
- TCM forces the torque converter clutch OFF.
- TCM limits the transmission to 4th gear and reverse.
- TCM commands maximum line pressure.
- TCM freezes transmission adaptive functions.
- TCM inhibits Tap Up/Tap Down.
- TCM inhibits manual up, manual down with the shift selector.

- TCM inhibits neutral idle.
- TCM inhibits powertrain braking.

P2730

- P2730 is a Type A DTC.
- TCM limits the transmission to reverse and 4th gear.
- TCM inhibits powertrain braking.
- TCM inhibits neutral idle.
- TCM inhibits Tap Up/Tap Down function.
- TCM inhibits manual shifting of forward gears.
- TCM commands maximum line pressure.
- TCM freezes transmission adaptive functions.

Conditions for Clearing the DTC

- P2728 is a Type C DTC.
- P2729 and P2730 are Type A DTCs.

Reference Information

Schematic Reference

Automatic Transmission Controls Wiring Schematics (6T40 (MNH MNK) or 6T45 (MHG))

Connector End View Reference

- **COMPONENT CONNECTOR END VIEWS - INDEX**
- **INLINE HARNESS CONNECTOR END VIEWS - INDEX**

Description and Operation

- **Electronic Component Description**
- **Transmission Component and System Description (Gen 3)**
- **Transmission General Description (Gen 3)**

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

DTC Type Reference

Powertrain Diagnostic Trouble Code (DTC) Type Definitions

Scan Tool Reference

Control Module References for scan tool information

Special Tools

DT-48616-10 Adapter Harness

For equivalent regional tools, refer to **Special Tools** .

Circuit/System Verification

1. Operate the vehicle in second gear long enough to ensure at least a 3Â°C (5Â°F) rise in TCM temperature.
2. Operate the vehicle in drive range. Allow the transmission to shift through all forward gear ranges.
3. Verify the scan tool parameters listed below do not display Malfunction:
 - Pressure Control Solenoid Valve 5 Performance Test Status
 - Pressure Control Solenoid Valve 5 Control Circuit Low Voltage Test Status
 - Pressure Control Solenoid Valve 5 Control Circuit High Voltage Test Status
 - **If Malfunction is displayed**

Refer to Circuit/System Testing.
 - **Go to next step: If Malfunction is not displayed**
4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
5. Verify the DTC does not set.
 - **If the DTC sets**

Refer to Circuit/System Testing.
 - **Go to next step: If the DTC does not set**
6. All OK.

Circuit/System Testing

NOTE: You must perform the Circuit/System Verification first.

1. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.
2. Verify the Q8 Control Solenoid Valve Assembly is not contaminated with any debris and clean as necessary. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).
 - **If contaminated**

Repair as necessary.
 - **Go to next step: If not contaminated**
3. Verify the resistance is within the specified range for each solenoid valve listed in the [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).
 - **If the resistance is not within range**

Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If the resistance is within range**
4. Place the Q8 Control Solenoid Valve Assembly on a clean work surface near the transmission assembly.
5. Connect the **DT-48616-10** adapter harness between the vehicle harness connector and the Q8 Control Solenoid Valve Assembly connector. Ignition ON.

NOTE: If the Pressure Control Solenoid Valve 5 is not commanded from the Transmission Solenoid Performance Test, High Side Driver 1 will not be commanded On and the circuit test status will not run.

6. Verify the scan tool parameters listed below do not display Malfunction when commanding the Pressure Control Solenoid Valve 5 On and Off:
 - Pressure Control Solenoid Valve 5 Performance Test Status
 - Pressure Control Solenoid Valve 5 Control Circuit Low Voltage Test Status
 - Pressure Control Solenoid Valve 5 Control Circuit High Voltage Test Status

- **If Malfunction is displayed**

Replace the Q8 Control Solenoid Valve Assembly.

- **Go to next step: If Malfunction is not displayed**

7. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) for control module replacement, programming and setup

DTC P2762, P2763, OR P2764: TORQUE CONVERTER CLUTCH (TCC) PRESSURE CONTROL SOLENOID VALVE

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC P2762

Torque Converter Clutch (TCC) Pressure Control Solenoid Valve Performance

DTC P2763

Torque Converter Clutch (TCC) Pressure Control Solenoid Valve Control Circuit High Voltage

DTC P2764

Torque Converter Clutch (TCC) Pressure Control Solenoid Valve Control Circuit Low Voltage

Circuit/System Description

The torque converter clutch (TCC) pressure control solenoid valve is part of the control solenoid valve assembly which has no serviceable components. The normally low TCC pressure control solenoid valve regulates oil pressure to the TCC regulator valve and TCC control valve. Increasing TCC pressure control solenoid valve oil pressure increases oil pressure to the torque converter to apply the clutch. The transmission control module (TCM) varies the current to the TCC pressure control solenoid valve by controlling the amount of time the low side driver is ON and OFF. Increasing current to the TCC pressure control solenoid valve increases oil pressure by closing OFF the solenoid valve exhaust port. Decreasing current to the TCC pressure control solenoid valve decreases oil pressure by opening up the solenoid valve exhaust port. TCC pressure control solenoid valve power is supplied by the TCM through a high side driver. The high side driver protects the circuit and components from excessive current flow. If excessive current flow is detected, the high side driver will turn OFF. When the fault is corrected, the high side driver will reset.

Conditions for Running the DTC

P2762

- P2762 is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- DTC runs continuously when above conditions are met.

P2763 or P2764

- P0658 or P0659 is not set.
- Engine speed is 400 - 7, 500 RPM for 5 s.
- Ignition voltage is 9 - 32 V.
- High side driver is enabled.
- DTC runs continuously when above conditions are met.

Conditions for Setting the DTC

P2762

TCM detects an internal electrical performance malfunction on the TCC pressure control solenoid valve control circuit where the measured TCC pressure control solenoid valve current does not equal the commanded TCC pressure control solenoid valve current for 5 s.

P2763

TCM detects an open/high resistance or short to voltage on the TCC pressure control solenoid valve control circuit for 5 s.

P2764

TCM detects a short to ground on the TCC pressure control solenoid valve control circuit for 5 s.

Action Taken When the DTC Sets

P2762

P2762 is a Type C DTC.

P2763

- P2763 is a Type B DTC.
- TCM inhibits 6th gear.
- TCM forces TCC OFF.
- TCM changes to a Hot Mode shift pattern.

P2764

- P2764 is a Type A DTC.
- TCM inhibits TCC.
- TCM commands maximum line pressure.
- TCM freezes transmission adaptive functions.
- TCM defaults the transmission to 4th gear and reverse.
- TCM inhibits neutral idle.
- TCM inhibits Tap Up/Down function.
- TCM inhibits manual shifting of forward gears.
- TCM forces the high side driver OFF.
- TCM enables torque management.
- TCM inhibits auto grade braking.
- TCM inhibits powertrain braking.

Conditions for Clearing the DIC/DTC

- P2762 is a Type C DTC.
- P2763 is a Type B DTC.
- P2764 is a Type A DTC.

Reference Information

[Automatic Transmission Controls Wiring Schematics \(6T40 \(MNH MNK\) or 6T45 \(MHG\)\)](#)

Connector End View Reference

- [COMPONENT CONNECTOR END VIEWS - INDEX](#)
- [INLINE HARNESS CONNECTOR END VIEWS - INDEX](#)

Description and Operation

- [Electronic Component Description](#)
- [Transmission Component and System Description \(Gen 3\)](#)
- [Transmission General Description \(Gen 3\)](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

DTC Type Reference

[Powertrain Diagnostic Trouble Code \(DTC\) Type Definitions](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Special Tools

DT-48616-10 Adapter Harness

For equivalent regional tools, refer to [Special Tools](#) .

Circuit/System Verification

1. Operate the vehicle in 2nd gear long enough to ensure at least a 3Â°C (5Â°F) rise in TCM temperature.
2. Operate the vehicle in drive range and ensure TCC is commanded ON for 1 min.
3. Verify the scan tool parameters listed below do not display Malfunction:
 - TCC Pressure Control Solenoid Valve Performance Test Status
 - TCC Pressure Control Solenoid Valve Control Circuit Low Voltage Test Status
 - TCC Pressure Control Solenoid Valve Control Circuit High Voltage Test Status
 - **If Malfunction is displayed**

Refer to Circuit/System Testing.

- **Go to next step: If Malfunction is not displayed**

4. Operate the vehicle within the Conditions for Running the DTC. You may also operate the vehicle within the conditions that you observed from the Freeze Frame/Failure Records data.
5. Verify the DTC does not set.
 - **If the DTC sets**

Refer to Circuit/System Testing.

- **Go to next step: If the DTC does not set**

6. All OK.

NOTE: You must perform the Circuit/System Verification first.

1. Ignition OFF, remove the Q8 Control Solenoid Valve Assembly.
2. Verify the Q8 Control Solenoid Valve Assembly is not contaminated with any debris and clean as necessary. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).
 - **If contaminated**

Repair as necessary.
 - **Go to next step: If not contaminated**
3. Verify the resistance is within the specified range for each solenoid valve listed in the [Control Solenoid Valve and Transmission Control Module Assembly Inspection](#).
 - **If the resistance is not within range**

Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If the resistance is within range**
4. Place the Q8 Control Solenoid Valve Assembly on a clean work surface near the transmission assembly.
5. Connect the **DT-48616-10** adapter harness between the vehicle harness connector and the Q8 Control Solenoid Valve Assembly connector. Ignition ON.

NOTE: If the TCC Pressure Control Solenoid Valve is not commanded from the Transmission Solenoid Performance Test, High Side Driver 1 will not be commanded On and the circuit test status will not run.

6. Verify the scan tool parameters listed below do not display Malfunction when commanding the TCC Pressure Control Solenoid Valve On and Off:
 - TCC Pressure Control Solenoid Valve Performance Test Status
 - TCC Pressure Control Solenoid Valve Control Circuit Low Voltage Test Status
 - TCC Pressure Control Solenoid Valve Control Circuit High Voltage Test Status
 - **If Malfunction is displayed**

Replace the Q8 Control Solenoid Valve Assembly.
 - **Go to next step: If Malfunction is not displayed**
7. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- Perform the [Transmission Adaptive Values Learn](#) following all transmission repairs
- [Control Module References](#) - for control module replacement, programming and setup

SYMPTOMS - AUTOMATIC TRANSMISSION

NOTE: Use the symptom tables only if the following conditions are met:

- Refer to [Diagnostic Starting Point - Vehicle](#) .
- There are no DTCs set.
- The control modules can communicate via the serial data link.
- Review the system operation in order to familiarize yourself with the system functions. Refer to [Transmission General Description \(Gen 3\)](#) , and [Transmission Component and System Description \(Gen 3\)](#) .

Visual/Physical Inspection

Inspect the easily accessible or visible system components for obvious damage or conditions which could cause the symptom.

Intermittent

Faulty electrical connections or wiring may be the cause of intermittent conditions. Refer to [Testing for Intermittent Conditions and Poor Connections](#) .

Symptom List

Refer to a symptom diagnostic procedure from the following list in order to diagnose the symptom:

- Fluid Diagnosis
 - [Transmission Fluid Level and Condition Check](#)
 - [Fluid Pressure High or Low](#)
 - [Automatic Transmission Fluid Leaks](#)
 - [Fluid Leak Diagnosis](#)
- Noise and Vibration Diagnosis
 - [Whine/Growl Noise](#)
 - [Noise and Vibration Analysis](#)
 - [Torque Converter Diagnosis](#)
 - [Non-Shifting Clutch Function Verification Description](#) for bump
- Range Performance Diagnosis
 - [No Park](#)
 - [No Drive in All Ranges](#)
 - [No Reverse Gear](#)
- Shift Quality Feel Diagnosis
 - [Harsh Garage Shift](#)
 - [Harsh or Late First, Second, Third, and Fourth Shift](#)
 - [Harsh First and Reverse Shift](#)
 - [Harsh or Late Second and Sixth Shift](#)
 - [Harsh or Late Third, Fifth, and Reverse Shift](#)
 - [Harsh Fourth, Fifth, and Sixth Shift](#)
 - [Harsh Downshift](#)
 - [Non-Shifting Clutch Function Verification Description](#) for bump
- Shift Pattern
 - [No First and Reverse Gears](#)
 - [No First, Second, Third, and Fourth Gear](#)
 - [No Second and Sixth Gear](#)
 - [No Fourth, Fifth, and Sixth Gear](#)
 - [No Third, Fifth, and Reverse Gear](#)
- Torque Converter Diagnosis
 - [Torque Converter Diagnosis](#)
 - [No Torque Converter Clutch Apply](#)
 - [No Torque Converter Clutch Release](#)
- Symptom Not Found or No Symptom Detected
 - [Transmission Fluid Level and Condition Check](#)
 - [Road Test](#)
 - [Line Pressure Check](#)
 - [Non-Shifting Clutch Function Verification Description](#) for bump

CONTROL SOLENOID VALVE AND TRANSMISSION CONTROL MODULE ASSEMBLY INSPECTION

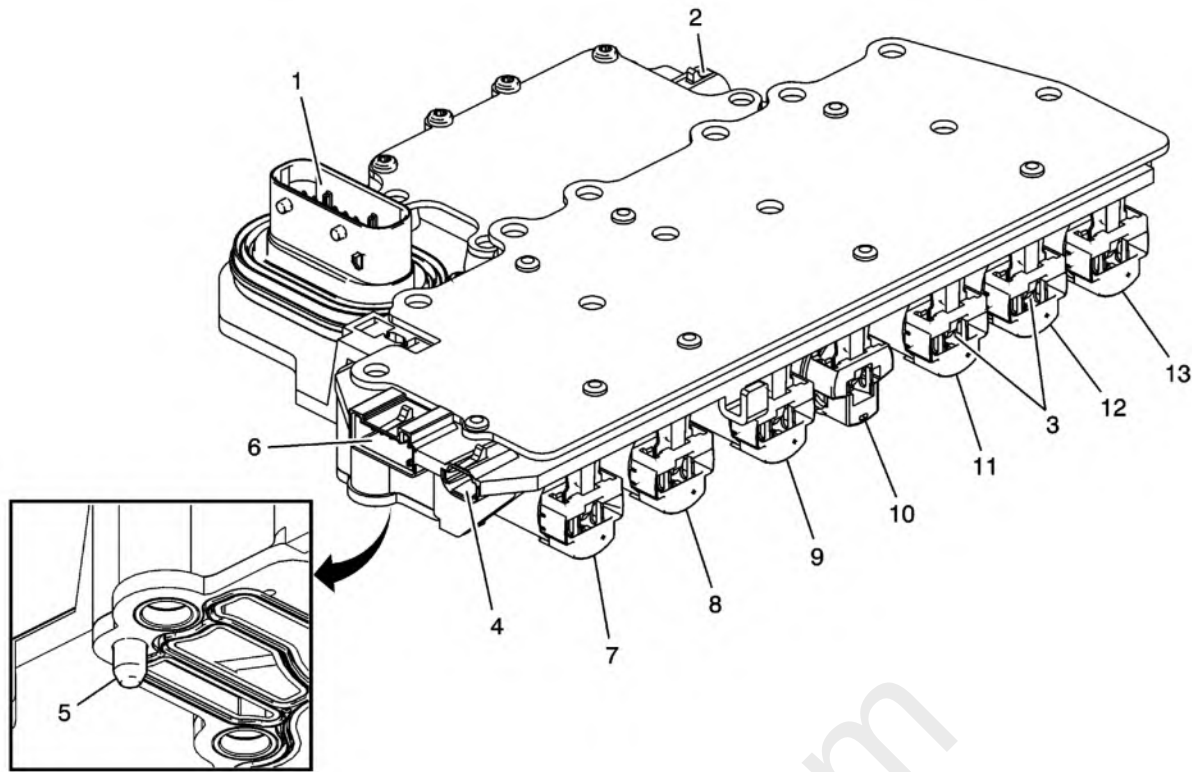


Fig. 1: View Of Control Solenoid Valve & Transmission Control Module Assembly.
Courtesy of GENERAL MOTORS COMPANY

1. Verify the conditions listed below do not exist. Carefully inspect the control solenoid valve assembly connectors and pins (1, 2, 4, 6) for the condition. Repair or replace as necessary.
 - Damage
 - Bent pins
 - Debris
 - Broken retaining tab
 - Contamination
2. Verify there is no metallic debris inside the connectors near the terminal pins. Clean as necessary.
3. Verify the control solenoid valve assembly solenoid leads (3) do not have contamination or metallic debris. Clean as necessary.
4. Verify the resistance between the leads of each solenoid valve is within the range in the table below, with the solenoid valves at room temperature. If the resistance of any solenoid valve is not within range, replace the Control Valve Body Assembly.
5. Inspect the 2 control solenoid valve assembly filter plate retaining tabs (5) for cracks and ensure proper tension when filter plate is attached.

NOTE: The connector on the TCC pressure control solenoid valve (8) will be either clear/transparent or yellow. The clear/transparent connector will have a color contrast when compared to the connectors on pressure control solenoid valve 2 (11) and pressure control solenoid valve 4 (12).

Solenoid Resistance

Solenoid Name	Illustration Number	Expected Resistance Ω
Pressure Control Solenoid Valve 3	7	4.55 - 5.75
Pressure Control Solenoid Valve 5	8	4.55 - 5.75
TCC Pressure Control Solenoid Valve	9	3.42 - 4.18 Clear/transparent Connector 4.55 - 5.75 Yellow Connector

Solenoid Name	Illustration Number	Expected Resistance Ω
Shift Solenoid Valve 1	10	16.2 - 19.8
Pressure Control Solenoid Valve 2	11	4.55 - 5.75
Pressure Control Solenoid Valve 4	12	4.55 - 5.75
Line Pressure Control Solenoid Valve	13	4.55 - 5.75

CONTROL SOLENOID VALVE AND TRANSMISSION CONTROL MODULE ASSEMBLY INPUT SHAFT SPEED/OUTPUT SHAFT SPEED INPUT TEST

Special Tools

- **EL 35616** GM-Approved Terminal Test Kit
- **EL 38522** Variable Signal Generator

For equivalent regional tools, refer to [Special Tools](#) .

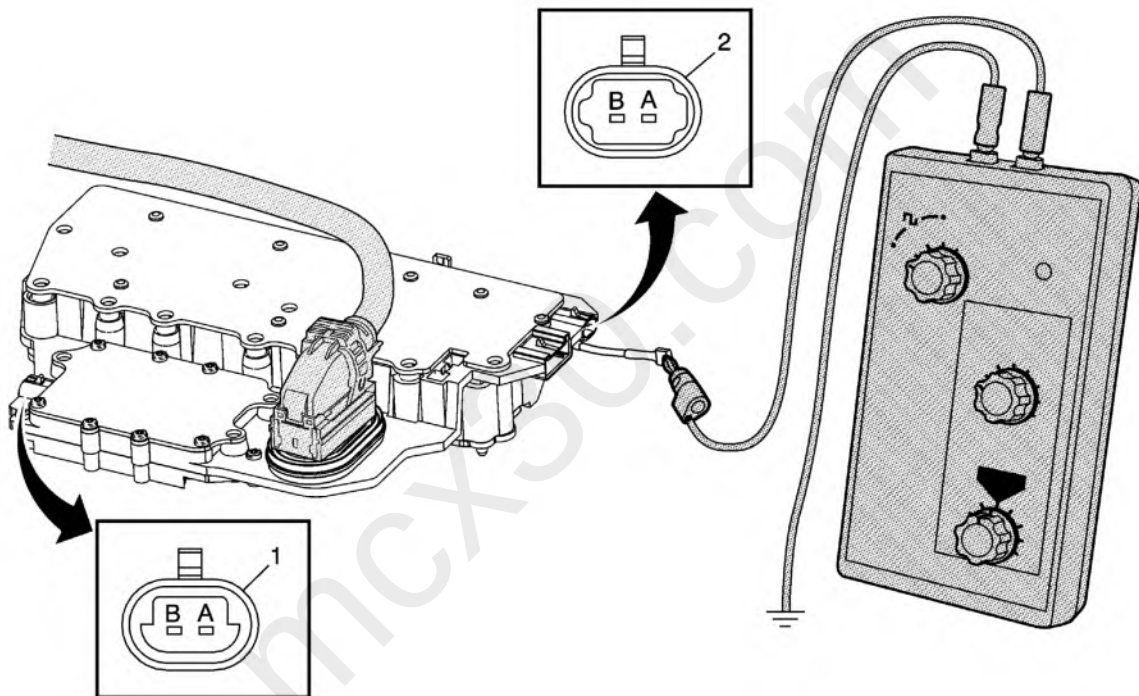


Fig. 2: View Of Special Tool & Control Solenoid Valve and Transmission Control Module Assembly

Courtesy of GENERAL MOTORS COMPANY

The purpose of this test is to provide a simulated input/output speed sensor (ISS/OSS) signal to the control solenoid valve assembly ISS/OSS input circuits.

Transmission Input Speed Sensor

1. Ignition OFF, disconnect the ISS wiring harness connector X3 (1) from the control solenoid valve assembly.
2. Ignition ON, test for 11 - 14 volts at terminal B.
 - If not within the specified range, replace the control solenoid valve assembly. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Replacement](#) .
3. Ignition OFF, using the **EL 35616** terminal test kit, connect the **EL 38522** variable signal generator red lead to the ISS signal circuit terminal A on the TCM.
4. Connect the black lead from the **EL 38522** variable signal generator to ground.

5. Set the **EL 38522** variable signal generator to 5 volts, the frequency to 300 Hz, and the percent duty cycle to 50 or the normal position.
6. Ignition ON, verify with a scan tool the Transmission ISS parameter is between 495 - 505 RPM.
 - If not within the specified range, replace the control solenoid valve assembly. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Replacement](#) .

Transmission Output Speed Sensor

1. Ignition OFF, disconnect the OSS wiring harness connector X4 (2) from the control solenoid valve assembly.
2. Ignition ON, test for 11 - 14 volts at terminal B.
 - If not within the specified range, replace the control solenoid valve assembly. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Replacement](#) .
3. Ignition OFF, using the **EL 35616** terminal test kit, connect the **EL 38522** variable signal generator red lead to the OSS signal circuit terminal A on the TCM.
4. Connect the black lead from the **EL 38522** variable signal generator to ground.
5. Set the **EL 38522** variable signal generator to 5 volts, the frequency to 300 Hz, and the percent duty cycle to 50 or the normal position.
6. Ignition ON, verify with a scan tool the Transmission OSS parameter is between 745 - 825 RPM.
 - If not within the specified range, replace the control solenoid valve assembly. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Replacement](#) .

CONTROL SOLENOID VALVE AND TRANSMISSION CONTROL MODULE ASSEMBLY SOLENOID PERFORMANCE TEST

Special Tools

DT-48616 Solenoid Assembly Test Kit & Adapter Harness

For equivalent regional tools, refer to [Special Tools](#) .

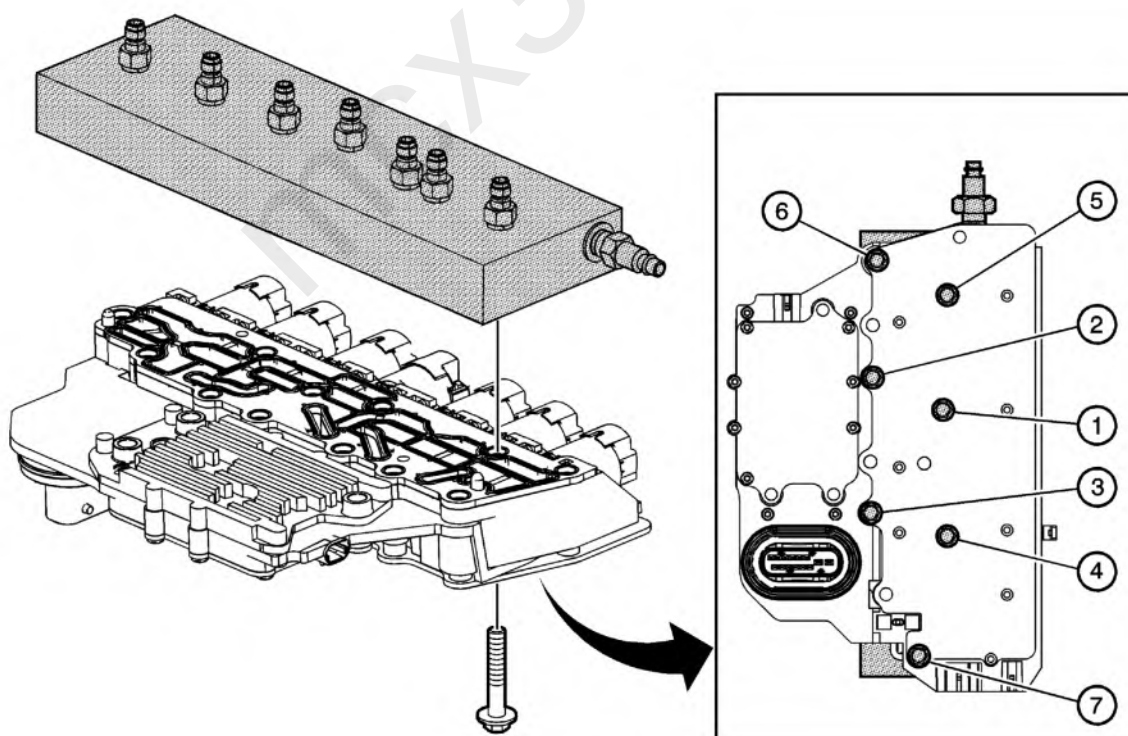


Fig. 3: Identifying Control Solenoid (W/Body & TCM) Valve Assembly Test Points
Courtesy of GENERAL MOTORS COMPANY

NOTE: Air inlet may be installed at either end of the DT-48616-1 test plate.

The purpose of this procedure is to test the functionality of the control solenoid valve assembly solenoids for a gross stuck open or stuck closed condition. The **DT-48616-1** test plate is bolted to the control solenoid valve assembly on the valve body mounting surface. Pressurized air is passed into the aluminum test block, through the control solenoid valve assembly solenoid passage and back to a pressure gauge on the test block. The pressure gauge indicates open if air pressure is passed through the solenoid, or closed if the solenoid is unable to pass air through. A scan tool is used to command the solenoids ON and OFF. While watching the pressure gauge, one can determine the valve functionality.

1. Ignition Off
2. Remove the Q8 Control Solenoid Valve Assembly and filter plate from the transmission. Refer to [Control Solenoid Valve and Transmission Control Module Assembly Replacement](#) .

CAUTION: Refer to [Fastener Caution](#) .

NOTE: Drain the Q8 Control Solenoid Valve Assembly of excess transmission fluid before attaching to test block and use caution when attaching air to test block air inlet.

3. Bolt the **DT-48616-1** test plate to the filter plate, and Q8 Control Solenoid Valve Assembly. Use the bolts and washers supplied with the tool to attach the test block. Tighten the bolts to 5 N.m (44 lb in) using a center out alternating torque sequence.
4. Install the pressure gauge to the affected solenoid air port. Reference the Control Solenoid Valve Assembly Solenoid Performance Test Plate to Component Identification for test plate port identification.

NOTE: If air pressure greater than 345 kpa (50 psi) is applied, an accurate test of the shift solenoid cannot be performed.

5. Regulate the shop air pressure to 310 - 345 kpa (45 - 50 psi) and connect the line to the **DT-48616-1** test plate air inlet port.

NOTE: MY 2017 and later software will not allow the transmission control module to control the pressure control solenoid valves without a valid park or neutral signal indicated by the signal circuits for the B15 Internal Mode Switch.

6. Connect a 3 A fused jumper from signal circuit terminal B X2 to low reference terminal F X2 or chassis ground and another 3 A fused jumper from signal circuit terminal E X2 to low reference terminal F X2 or chassis ground.
7. Connect the **DT-48616-10** harness to the vehicle harness and the Q8 Control Solenoid Valve Assembly.

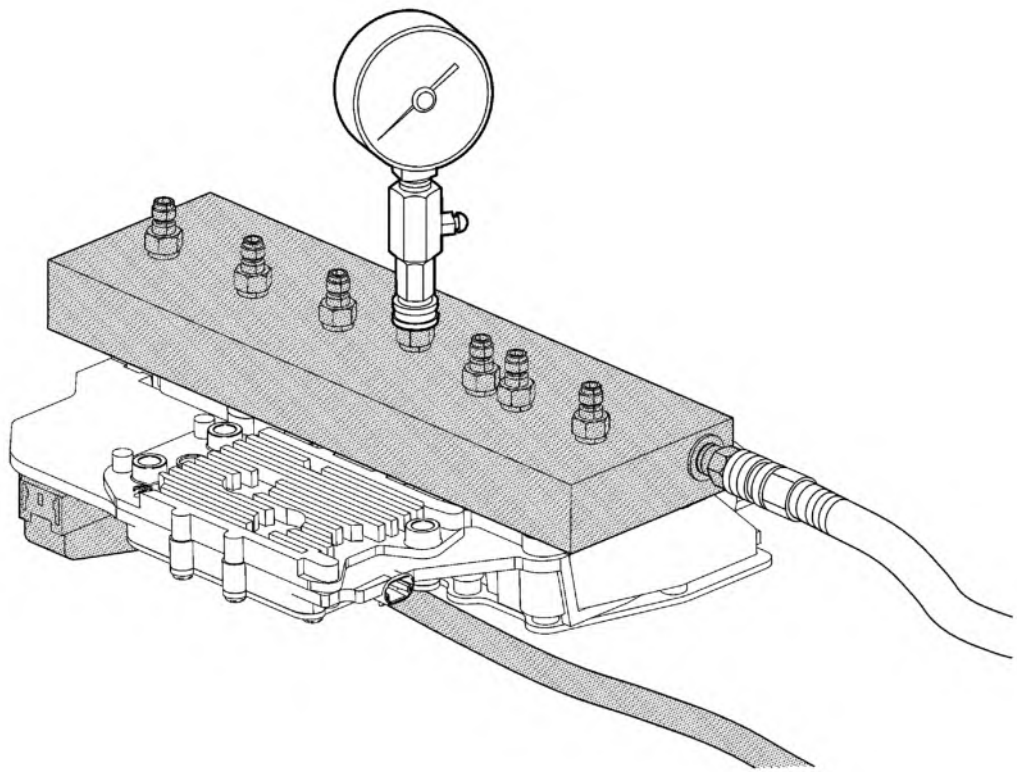


Fig. 4: Control Solenoid Valve Test Plate
 Courtesy of GENERAL MOTORS COMPANY

NOTE: The TCM limits the time the solenoids are commanded on to prevent overheating of the solenoids. Once the time limit is reached, the TCM prevents the test from being continued for 5 min. The ignition must remain ON during the 5 min countdown period.

8. Ignition - On / Vehicle - In Service Mode
9. Verify the scan tool parameter: Internal Mode Switch A/B/C/P=Low High High Low
 - **If not the specified state**

Verify the connection of the jumper wires

- **Go to next step: If the specified state**

10. Verify DTC P182E is not set.

- **If DTC P182E is set**

1. Clear the DTCs
2. Ignition Off
3. Wait for transmission control module to power down.
4. Ignition - On / Vehicle - In Service Mode
5. Verify DTC P182E is not set.

- **Go to next step: If DTC P182E is not set**

NOTE:

- **If the solenoid valve is stuck, no pressure change will occur.**
- **Release the air pressure in the gauge between pressurization tests.**
- **Some solenoids will leak air during the test. Only pay attention to the pressure gauge change during the test.**

11. Verify the pressure gauge changes when commanding the appropriate solenoid On and Of with a scan tool. Repeat test as necessary.

- **If the pressure gauge does not change**

Replace the Q8 Control Solenoid Valve Assembly.

- Go to next step: If the pressure gauge changes

12. Solenoids are not grossly stuck.

Control Solenoid Valve Assembly Solenoid Performance Test Plate to Component Identification

Component	Port On Test Plate	Commanded State	
		ON	OFF
Pressure Control Solenoid Valve 2, 35R	GEN 2 - C	Full pressure to gauge	No pressure to gauge
Pressure Control Solenoid Valve 3, R1/456	G	Full pressure to gauge	No pressure to gauge
Pressure Control Solenoid Valve 4, 2-6	B	Full pressure to gauge	No pressure to gauge
Pressure Control Solenoid Valve 5, 1234	GEN 2 - F	Full pressure to gauge	No pressure to gauge
Shift Solenoid Valve	D	Full pressure to gauge	Below full pressure to gauge
Line Pressure Control Solenoid Valve	A	Command to highest setting, full pressure to gauge	Command to lowest setting, below full pressure to gauge
TCC Pressure Control Solenoid Valve	E	Full pressure to gauge	No pressure to gauge

NOTE:

With the key on engine off, the TCM will normally cycle some of the transmission solenoids On and Off to facilitate keeping the ports and solenoids clean and free of debris. This dither function is a normal activity and will cause the valves to cycle open and closed quickly when the TCM is powered up. This can cause the psi gauge to flicker high and low as the valves open and close. This may cause some air to exit the ports where the psi gauge is not connected as those solenoids cycle on and off.

MANUAL MODE OR TAP UP/DOWN DIAGNOSIS

1. If any DTCs are set, diagnose those DTCs first. Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#).
2. If the Manual Mode or Tap Up/Down does not function, refer to the Circuit/System Verification for [DTC P0815, P0816, or P0826](#).

TRANSMISSION FLUID LEVEL AND CONDITION CHECK

This procedure checks both the transmission fluid level, as well as the condition of the fluid itself.

CAUTION: Use Dexron® VI transmission fluid only. Failure to use the proper fluid may result in transmission internal damage.

NOTE: Ensure the transmission has enough fluid in it to safely start the vehicle without damaging the transmission. With the vehicle off and the transmission fluid temperature at approximately 20 - 25°C (68 - 77°F) there must be at least enough fluid to drain out of the fluid level hole. This will ensure that there is enough fluid in the sump to fill the components once the vehicle is started.

Non Dipstick Level Checking Procedure

1. Start the engine.
2. Depress the brake pedal and move the shift lever through each gear range, pausing for about 3 seconds in each range. Then move the shift lever back to PARK (P).
3. Allow the engine to idle 500 - 800 rpm for at least 3 minutes to allow any fluid foaming to dissipate and the fluid level to stabilize. Release the brake pedal.

NOTE:

If the TFT reading is not at the required temperature, allow the vehicle to cool, or operate the vehicle until the appropriate TFT is reached. If the fluid temperature is below the specified range, perform the following procedure to raise the fluid temperature to the specification.

Drive the vehicle in second gear until the fluid temperature is at the specified temperature.

4. Keep the engine running and observe the transmission fluid temperature (TFT) using the Driver Information Center or a scan tool.

CAUTION:

The transmission fluid level must be checked when the transmission fluid temperature (TFT) is at 85 - 95°C (185 - 203°F). If the TFT is not at this temperature, operate the vehicle or allow the fluid to cool as required. Setting the fluid level with a TFT outside this temperature will result in either an under or over-filled transmission. TFT 95°C under-filled, TFT 85°C over-filled. An under-filled transmission will cause premature component wear or damage. An over-filled transmission will cause fluid to discharge out the vent tube, fluid foaming, or pump cavitation.

5. Raise the vehicle on a hoist. The vehicle must be level, with the engine running and the shift lever in the PARK range.

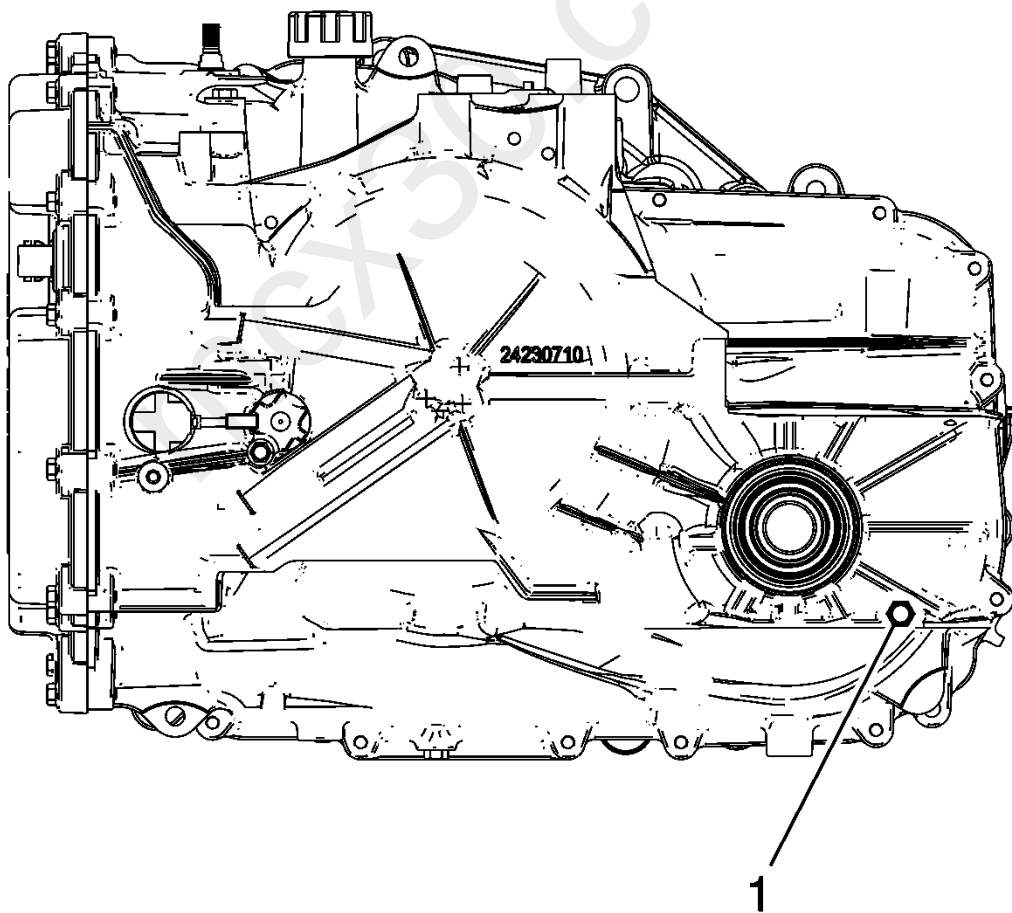


Fig. 5: View of Oil Level Plug

Courtesy of GENERAL MOTORS COMPANY

6. While the vehicle is idling, remove the oil level set plug. Allow any fluid to drain.

Oil Level Plug (1)

- If the fluid is flowing as a steady stream, wait until the fluid begins to drip.
 - If no fluid comes out, add fluid until fluid drips out.
7. Inspect the fluid color. The fluid should be red or dark brown.
 - If the fluid color is very dark or black and has a burnt odor, inspect the fluid for excessive metal particles or other debris. A small amount of "friction" material is a "normal" condition. If large pieces and/or metal particles are noted in the fluid, flush the oil cooler and cooler lines and overhaul the transmission. If there are no signs of transmission internal damage noted, replace the fluid, repair the oil cooler, and flush the cooler lines.
 - Fluid that is cloudy or milky or appears to be contaminated with water indicates engine coolant or water contamination. Refer to [Engine Coolant/Water in Transmission](#).
 8. Inspect for external leaks. Refer to [Fluid Leak Diagnosis](#).
 9. If the fluid was changed, reset the transmission oil life monitor if applicable.

Dipstick Level Checking Procedure (If equipped)

1. Park the vehicle on a level surface, apply the parking brake and place the shift lever in PARK (P). Start the engine.
2. Depress the brake pedal and move the shift lever through each gear range, pausing for about 3 seconds in each range. Then move the shift lever back to PARK (P).
3. Allow the engine to idle 500 - 800 rpm for at least 3 minutes to allow any fluid foaming to dissipate and the fluid level to stabilize. Release the brake pedal.
4. Keep the engine running and observe the transmission fluid temperature (TFT) using the Driver Information Center or a scan tool.

CAUTION: The transmission fluid level must be checked when the transmission fluid temperature (TFT) is at 85 - 95°C (185 - 203°F). If the TFT is not at this temperature, operate the vehicle or allow the fluid to cool as required. Setting the fluid level with a TFT outside this temperature will result in either an under or over-filled transmission. TFT 95°C under-filled, TFT 85°C over-filled. An under-filled transmission will cause premature component wear or damage. An over-filled transmission will cause fluid to discharge out the vent tube, fluid foaming, or pump cavitation.

NOTE:

- If the TFT reading is not at the required temperature, allow the vehicle to cool, or operate the vehicle until the appropriate TFT is reached. If the fluid temperature is below the specified range, perform the following procedure to raise the fluid temperature to the specification.
- Check the transmission fluid level when the TFT is at between 85 - 95°C (185 - 203°F). The fluid level rises as fluid temperature increases, so it is important to ensure the transmission fluid temperature is at the specified temperature.

Drive the vehicle in second gear until the fluid temperature is at the specified temperature.

5. The vehicle must be level, with the engine running and the shift lever in the PARK range.
6. Remove the dipstick and wipe it with a clean rag or paper towel.
7. Inspect the fluid color. The fluid should be red or dark brown.
 - If the fluid color is very dark or black and has a burnt odor, inspect the fluid for excessive metal particles or other debris. A small amount of "friction" material is a "normal" condition. If large pieces and/or metal particles are noted in the fluid, flush the oil cooler and cooler lines and overhaul the transmission. If there are no signs of transmission internal damage noted, replace the fluid, repair the oil cooler, and flush the cooler lines.
 - Fluid that is cloudy or milky or appears to be contaminated with water indicates engine coolant or water contamination. Refer to [Engine Coolant/Water in Transmission](#).

8. Install the dipstick. Wait three seconds and then remove it again.

NOTE: Always check the fluid level at least twice. Consistent readings are important to maintaining proper fluid level. If inconsistent readings are noted, inspect the transmission vent cap to ensure it is clean and unclogged.

NOTE: It is not necessary to get the fluid level all the way up to the MAX mark. Anywhere within the crosshatch band is acceptable.

9. Check both sides of the dipstick and read the lower level.

10. Install and remove the dipstick again to verify the reading.

NOTE: Do not add more than one half pint (0.25L) at a time without rechecking the level. Once the oil is on the dipstick bullet, it will not take much more fluid to raise the fluid level into the crosshatch band. Do not overfill. Also, if the fluid level is low, inspect the transmission for leaks. Refer to [Fluid Leak Diagnosis](#).

11. If the fluid level is not within the crosshatch band, and the transmission temperature is at 90°C (194°F), add or drain fluid as necessary to bring the level into the crosshatch band. If the fluid level is low, add only enough fluid to bring the level into the crosshatch band.

12. If the fluid level is in the acceptable range, install the dipstick.

13. If the fluid was changed, reset the transmission oil life monitor if applicable.

Fluid Condition Inspection

- Inspect the fluid color. The fluid should be red in color. The fluid may also turn brown from normal use, and does not always indicate contamination.

NOTE: Fluid that is very dark or black and has a burnt odor usually indicates contamination or overheating.

- If the fluid color is very dark or black and has a burnt odor, inspect the fluid for excessive metal particles or other debris which may indicate transmission damage. Refer to [Road Test](#) to verify transmission operation. Change the transmission fluid if no other conditions are found.
- Fluid that is cloudy or milky or appears to be contaminated with water indicates engine coolant or water contamination. Refer to [Engine Coolant/Water in Transmission](#).

LINE PRESSURE CHECK

Special Tools

GE-21867-A Oil Pressure Gauge Kit

For equivalent regional tools, refer to [Special Tools](#).

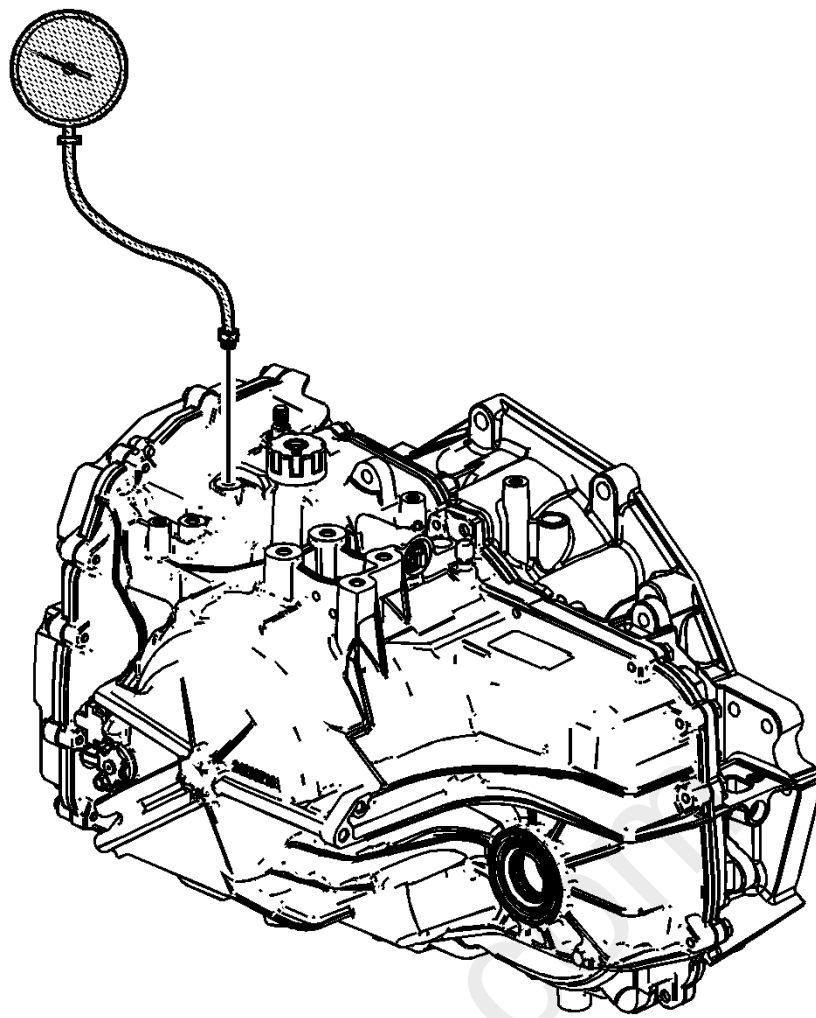


Fig. 6: Checking Line Pressure

Courtesy of GENERAL MOTORS COMPANY

WARNING: Keep the brakes applied at all times in order to prevent unexpected vehicle motion. Personal injury may result if the vehicle moves unexpectedly.

1. Install a scan tool.
2. Start the engine.
3. Inspect the transmission for the proper fluid level. Refer to [Transmission Fluid Level and Condition Check](#).
4. Use the scan tool to inspect for any active or stored diagnostic trouble codes.
5. Inspect the manual linkage at the transmission for proper function.
6. Turn the engine OFF.
7. Remove the line pressure test hole plug.
8. Install the **GE-21867-A** pressure gauge.
9. Access the Scan Tool Transmission Output Controls for the Line PC Solenoid.
10. Start the engine.

NOTE:

- In order to achieve accurate line pressure readings, the following procedure must be performed at least 3 times in order to gather uniform pressure readings.
- The scan tool is only able to control the line PC solenoid in **PARK** and **NEUTRAL** with engine speeds below 1500 RPM. This protects the clutches from extreme high or low line pressures.

11. Use the scan tool to increase and decrease the Line PC Solenoid in increments of approximately 100 KPa (15 psi). The scan tool commands the increment values automatically.
12. Allow the pressure to stabilize between increments.
13. Compare the pressure readings on the scan tool to those indicated on the **GE-21867-A** pressure gauge. Refer to [Solenoid Valve Pressure \(Gen 3\)](#).
14. If the pressure readings vary greatly, refer to [Fluid Pressure High or Low](#).
15. Turn the engine OFF.
16. Remove the **GE-21867-A** pressure gauge.

CAUTION: Refer to [Fastener Caution](#).

17. Install the line pressure test hole plug. Tighten the pressure test hole plug to 12 N.m (106 lb in).

ROAD TEST

NOTE: The Road Test Procedure should be performed only as part of the Symptom Diagnosis.

Perform the road test in conjunction with the symptom diagnosis. Refer to [Symptoms - Automatic Transmission](#).

The following test provides a method of evaluating the condition of the automatic transmission. The test is structured so that most driving conditions would be achieved. The test is divided into the following parts:

- Electrical Function Check
- Upshift Control and Torque Converter Clutch (TCC) Apply
- Part Throttle Step-In Downshifts
- Manual Downshifts
- Coasting Downshifts
- Manual Gear Range Selection
 - REVERSE
 - Driver Shift Control

NOTE: Complete the test in the sequence given. Incomplete testing cannot guarantee an accurate evaluation.

Before the road test, ensure the following:

- The engine is performing properly.
- Transmission fluid level is correct. Refer to [Transmission Fluid Level and Condition Check](#).
- Tire pressure is correct.

During the road test:

- Perform the test only when traffic conditions permit.
- Operate the vehicle in a controlled, safe manner.
- Observe all traffic regulations.
- View the scan tool data while conducting this test.

Take along qualified help in order to operate the vehicle safely.

- Observe any unusual sounds or smells.
- Ensure the transmission fluid temperature is at least 90°C (194°F).

After the road test, check the following:

- Inspect for proper transmission fluid level. Refer to [Transmission Fluid Level and Condition Check](#).
- Inspect for any diagnostic trouble codes (DTCs) that may have set during the testing. Refer to the applicable DTC.
- Monitor the scan tool data for any abnormal readings or data.
- Inspect for fluid leaks. Refer to [Fluid Leak Diagnosis](#).

Electrical Function Check

Perform this procedure first in order to ensure the electronic transmission components are functioning properly. If these components are not checked, a simple electrical condition could be misdiagnosed.

1. Connect the scan tool.
2. Ensure the gear selector is in PARK and set the parking brake.
3. Start the engine.
4. Verify that the following scan tool data can be obtained and is functioning properly.

Refer to [Control Module References](#) for typical data values. Data that is questionable may indicate a concern.

- Engine Speed
- Transmission ISS
- Transmission OSS
- Vehicle Speed
- IMS
- Commanded Gear
- Gear Ratio
- Line PC Sol. Pressure Cmd.
- Brake Switch
- ECT, Engine Data List
- Trans. Fluid Temp.
- TCM Temperature
- Calc. Throttle Position
- Ignition Voltage
- TFP Switch 1
- TFP Switch 3
- TFP Switch 4
- TFP Switch 5
- PC Sol. 2 Pressure Cmd.
- PC Sol. 3 Pressure Cmd.
- PC Sol. 4 Pressure Cmd.
- PC Sol. 5 Pressure Cmd.
- Shift Solenoid 1
- Shift Solenoid 2
- TCC PC Sol. Duty Cycle
- TCC Slip Speed

5. Check the garage shifts.
 1. Apply the brake pedal and ensure the parking brake is set.
 2. Move the gear selector through the following ranges:
 1. PARK to REVERSE
 2. REVERSE to NEUTRAL
 3. NEUTRAL to DRIVE

4. DRIVE to REVERSE

5. REVERSE to DRIVE

3. Pause 2 to 3 seconds in each gear position.
4. Verify the gear engagements are immediate (less than 2 seconds to complete if transmission fluid temperature is above 20°C (68°F) and not harsh. Note that these shifts may be almost imperceptible in some applications. Using the scan tool to monitor Transmission ISS achieving 0 rpm can be used to check delay in these cases.

NOTE: Harsh engagement may be caused by any of the following conditions:

- High engine idle speed - Compare engine idle speed to desired idle speed.
- Incorrect line pressure - Investigate Line PC Sol. Pressure Cmd. kPa (psi), also perform [Line Pressure Check](#).
- A default condition caused by certain DTCs that result in maximum line pressure to prevent clutch slippage.
- Incomplete adapting or incorrect adapting - Repeat maneuver multiple times to see if shift quality improves. If it does not, refer to the service procedures for [Harsh Garage Shift](#).

NOTE: Delayed engagement may be caused by any of the following conditions:

- Low idle speed - Compare engine idle speed to desired idle speed.
- Low fluid level
- Incorrect line pressure - Investigate Line PC Sol. Pressure Cmd. kPa (psi), also perform [Line Pressure Check](#).
- Cold transmission fluid temperature (TFT) - Use the scan tool to determine TFT.
- Selector linkage - Inspect and adjust as necessary.
- Incomplete adapting or incorrect adapting - Repeat maneuver multiple times to see if delay improves. If it does not, refer to the service procedures for [Harsh First and Reverse Shift](#).

6. Monitor transmission range on the scan tool, transmission data list.

1. Apply the brake pedal and ensure the parking brake is set.
2. Move the gear selector through all ranges.
3. Pause 2 to 3 seconds in each range.
4. Return gear selector to PARK.
5. Verify that all selector positions match the scan tool display.

7. Check throttle position input.

1. Apply the brake pedal and ensure the parking brake is set.
2. Ensure the gear selector is in PARK.
3. Monitor the scan tool Calc. Throttle Position while increasing and decreasing engine speed with the throttle pedal. The scan tool Calc. Throttle Position percentage should increase and decrease with engine speed.

If any of the above checks do not perform properly, record the result for reference after completion of the road test.

Upshift Control and Torque Converter Clutch (TCC) Apply

The TCM calculates the upshift points based primarily on 2 inputs: throttle position and vehicle speed. When the TCM determines that conditions are met for a shift to occur, the TCM commands the shift by

varying current to the appropriate PC solenoids to control oncoming and offgoing clutch pressures.

Perform the following steps:

1. Monitor the following scan tool parameters:

- Calc. Throttle Position
- Vehicle Speed
- Engine Speed
- Transmission ISS
- Transmission OSS
- Commanded Gear
- TCC PC Sol. Pressure Cmd.
- TCC Slip Speed
- TFP Switch 1
- TFP Switch 3
- TFP Switch 4
- TFP Switch 5
- PC Sol. 2 Pressure Cmd.
- PC Sol. 3 Pressure Cmd.
- PC Sol. 4 Pressure Cmd.
- PC Sol. 5 Pressure Cmd.
- Shift Solenoid 1 and 2

2. Place the gear selector in the DRIVE position.

3. Accelerate the vehicle using a steady throttle position between 15 and 20 percent. Hold the throttle steady.

4. As the transmission upshifts, there should be a noticeable shift feel or engine speed change within 1 to 2 seconds of the commanded gear change. The PC solenoid pressure command should change to "YES" for the oncoming clutch and the PC solenoid pressure command should change to "NO" for the offgoing clutch.

5. Note any harsh, soft or delayed shifts or slipping. Note any noise or vibration.

6. The TCC feel may not be noticeable. In many applications the TCC will apply after the 1-2 shift and TCC events will not be easily detected using engine speed.

NOTE: This transmission is equipped with an electronically controlled capacity clutch (ECCC), which allows operation of the clutch without fully locking to the torque converter cover. The clutch maintains a small amount of slippage, approximately 20 RPM, in 2nd, 3rd, 4th, 5th, and 6th gears, depending on the vehicle application. ECCC was developed to reduce the possibility of noise, vibration or chuggle caused by TCC apply. Full lockup is available at highway speeds on some applications.

7. Monitor TCC PC solenoid pressure command while driving and check TCC slip speed when the pressure command indicates that the TCC is commanded to apply:

When the TCC applies, slip speed should be controlled to below 100 RPM when the transmission is not shifting and the throttle is held steady. If the TCC slip exceeds this value for more than 6 seconds after the TCC PC Sol. Pressure Command indicates that the TCC is commanded on:

- Check for DTCs.
- Refer to [Torque Converter Diagnosis](#).

Part Throttle Step-In Downshifts

1. Place the gear selector in the DRIVE position.

2. Accelerate the vehicle at light throttle (5 - 15 percent) until 3rd gear is just achieved.

3. Quickly increase throttle angle until commanded gear indicates that a downshift to 2nd gear is commanded.
4. Verify that the transmission downshifts within 2 seconds of the throttle movement.
5. Repeat steps 2 to 4 at higher speed to achieve 4th gear and then step in to command a 4th gear to 3rd gear downshift.
6. Repeat steps 2 to 4 at higher speed to achieve 5th gear and then step in to command a 5th to 4th gear downshift.
7. Repeat steps 2 to 4 at higher speed to achieve 6th gear and then step in to command a 6th gear to 5th gear downshift.
8. Note any harsh, soft or delayed shifts or slipping. Note any noise or vibration.

Manual Downshifts

Manual downshift testing is not required since all vehicles equipped are also equipped with some form of Driver Shift Control(DSC). The TCM will automatically override DSC downshifts to protect the transmission from damage.

Coasting Downshifts

1. Place the gear selector in the DRIVE position.
2. Accelerate the vehicle to 6th gear with the TCC applied.
3. Release the throttle and apply the brakes
4. Verify that the downshifts occur as commanded by monitoring gear ratio, which should change after commanded gear changes.

Manual Gear Range Selection

This application does not utilize manual forward gear ranges.

Reverse

Perform the following test using a 10 - 15 percent throttle position.

1. With the vehicle stopped, move the gear selector to REVERSE.
2. Slowly accelerate the vehicle.
3. Verify that there is no noticeable slip, noise or vibration.

Driver Shift Control (DSC)

Refer to the owner's manual for specific instructions on the type of DSC available in this application. Utilize the DSC to ensure that the transmission responds appropriately to driver's commands. The TCM will upshift automatically when maximum engine speed is achieved and will protect from any downshift which may cause excessive engine RPMs.

TORQUE CONVERTER DIAGNOSIS

Torque Converter Stator

The torque converter stator roller clutch can have 2 different malfunctions.

- The stator assembly freewheels in both directions.
- The stator assembly remains locked up in both directions.

Poor Acceleration at Low Speed - Stator Roller Clutch Freewheels at All Times

If the stator is freewheeling at all times, the vehicle tends to have poor acceleration from a standstill and at speeds below 48 - 55 km/h (30 - 34 mph). At speeds above 48 - 55 km/h (30 - 34 mph), the vehicle may act normally.

For poor acceleration at low speeds, you should first determine that the exhaust system is not blocked, and the transmission is in First gear when starting out. If the engine freely accelerates to high RPM in

NEUTRAL, you can assume that the engine and the exhaust system are normal. Check for poor performance in DRIVE and REVERSE to help determine if the stator is freewheeling at all times.

Poor Acceleration at High Speed - Stator Roller Clutch is Locked Up at All Times

If the stator is locked up at all times, performance is normal when accelerating from a standstill. Engine RPM and vehicle speed are limited or restricted at speeds above 48 - 55 km/h (30 - 34 mph). Visual examination of the converter may reveal a blue color from overheating.

Torque Converter Bearing Noise

NOTE: Do not confuse this noise with pump whine noise, which is usually noticeable in all gear ranges. Pump whine will vary with line pressure.

Torque converter whine is noticed when the vehicle is stopped and the transmission is in DRIVE or REVERSE. This noise will increase as you increase the engine RPM. The noise will stop when the vehicle is moving or when you apply the torque converter clutch, because there is no slip speed across the bearings.

Perform a stall test to verify that the noise is actually coming from the torque converter:

1. Place your foot on the brake.
2. Put the gear selector in DRIVE.

CAUTION: You may damage the transmission if you depress the accelerator for more than 6 seconds.

3. Depress the accelerator to approximately 1, 200 RPM for no more than six seconds.

A torque converter noise will increase under this load.

Torque Converter Clutch

The torque converter clutch (TCC) is applied by fluid pressure, which is controlled by a TCC pressure control (PC) solenoid. This solenoid is part of the control solenoid valve assembly, which is located inside the automatic transmission assembly. The solenoid is controlled through a combination of computer controlled switches and sensors. Electronically controlled capacity clutch (ECCC) is controlled slip across the TCC.

Torque Converter Clutch Shudder

The key to diagnosing torque converter clutch (TCC) shudder is to note when it happens and under what conditions. TCC shudder should only occur during the apply, release, or ECCC conditions of the converter clutch. Shudder should never occur after the TCC is fully locked (approximately 0 RPM slip).

If Shudder Occurs During TCC Apply, Release, and ECCC

If the shudder occurs while the TCC is applying, the problem can be within the transmission or the torque converter. Something is causing one of the following conditions to occur:

- The clutch is not engaging completely.
- The clutch is not releasing completely.
- The clutch is releasing and applying rapidly and continuously.

One of the following conditions may be causing the TCC Shudder to occur:

- Leaking turbine shaft/TCC seals
- A restricted release orifice
- A distorted clutch or converter cover due to long flexplate to converter bolts
- Defective friction material on the TCC plate

If Shudder Occurs After TCC has Locked

Engine problems may go unnoticed under light throttle and load, but they become noticeable after the TCC has locked when going up a hill or accelerating.

Refer to [Symptoms - Engine Controls](#) , 1.5L (LYX) or [Symptoms - Engine Controls](#) 1.6L (LH7) in order to avoid misdiagnosis of TCC shudder and the unnecessary disassembly of a transmission or the unnecessary replacement of a torque converter.

Torque Converter Vibration Test

The [Noise and Vibration Analysis](#) procedure should be performed prior to performing this test.

Indexing Torque Converter

To determine and correct a torque converter vibration, the following procedure may have to be performed several times to achieve the best possible torque converter to flexplate balance.

1. Remove the torque converter bolts.
2. Rotate the torque converter one bolt position from the original marked position.

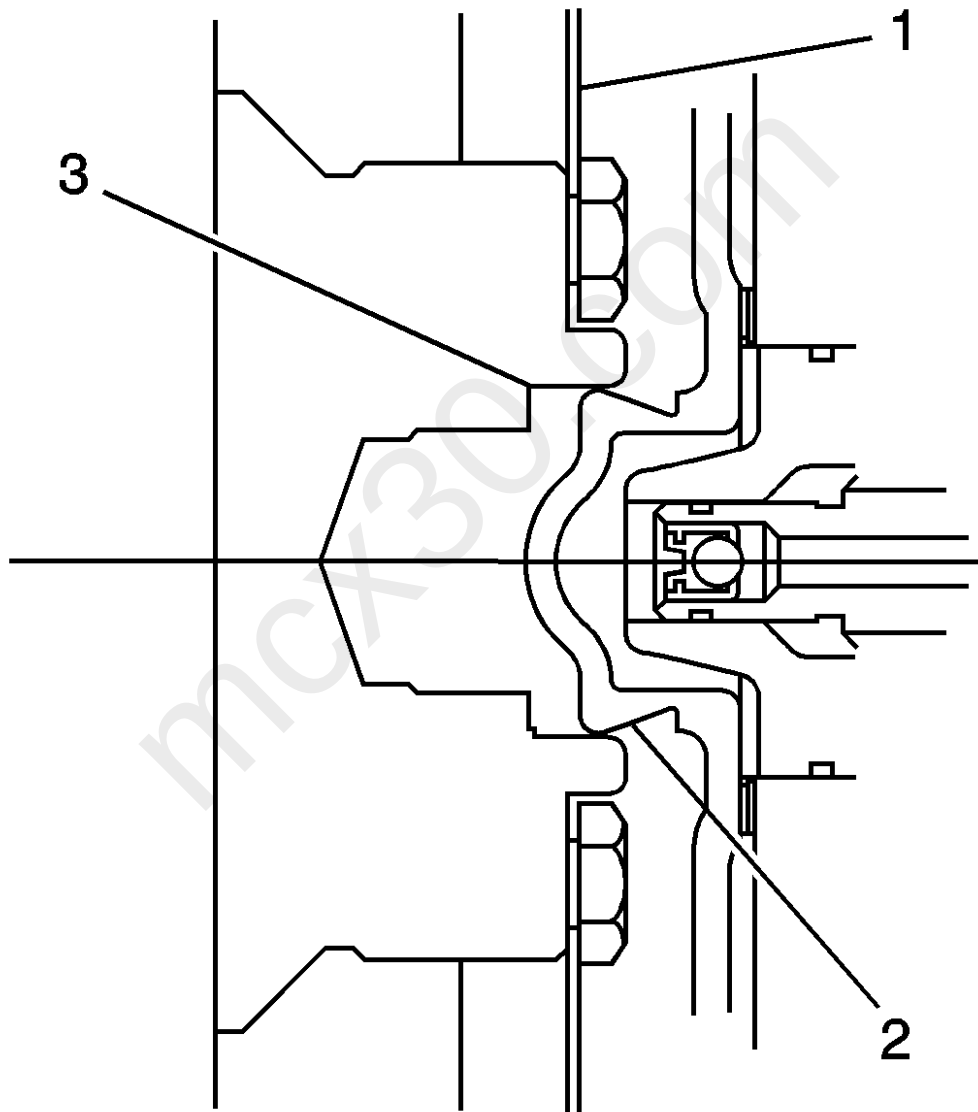


Fig. 7: View Of Torque Converter Hub In Engine Crankshaft

Courtesy of GENERAL MOTORS COMPANY

CAUTION: When installing the torque converter to the flexplate, make sure to use specified bolts. DO NOT use longer bolts. Using longer bolts will result in deformation of the torque converter cover and cause internal damage.

CAUTION: Refer to [Fastener Caution](#) .

3. Align the torque converter pilot (2) in the engine crankshaft (3). Install the torque converter to flexplate bolts, and tighten according to [Fastener Specifications \(Off Vehicle\)](#) [Fastener Specifications \(On Vehicle\)](#) .
4. Lower the vehicle.
5. With the engine at idle speed and the transmission in PARK or NEUTRAL, observe the vibration.

Repeat this procedure until the best possible balance is obtained.

6. Install the torque converter access cover and bolts (if equipped) and tighten according to [Fastener Specifications \(Off Vehicle\)](#) [Fastener Specifications \(On Vehicle\)](#) .

Torque Converter Replacement Guide

Condition	Action
- Transmission Fluid Oxidized/Discolored - Clutch Fiber Material	Do not replace the torque converter. Refer to Transmission Fluid Level and Condition Check .
Transmission Fluid Contaminated with Metal Particles	Do not replace the torque converter for clutch system or gearset component damage. Fine metallic debris or clutch plate material that is suspended in the fluid will not cause damage to the internal torque converter components nor any internal transmission components.
Harsh Gear Shifts	Do not replace the torque converter. Refer to Symptoms - Automatic Transmission .
Noise - Whine	- Refer to Symptoms - Automatic Transmission. - Do not replace the torque converter if noise is present in Neutral/Park. Refer to Symptoms - Engine Mechanical , 1.5 (LYX) or Symptoms - Engine Mechanical 1.6L (LH7).
Vibration - Out of Balance	Refer to Torque Converter Vibration Test in this procedure.
No Drive/Slips in Drive	Do not replace the torque converter until completing all engine and transmission diagnostics.
Idle Surge/Rough Idle	Do not replace the torque converter. Refer to Symptoms - Engine Controls , 1.5L (LYX) or Symptoms - Engine Controls 1.6L (LH7).
TCC Apply/Release Shudder	Do not replace the torque converter. Refer to Torque Converter Clutch Shudder in this procedure.
TCC Chuggle	Do not replace the torque converter. Refer to Symptoms - Engine Controls , 1.5L (LYX) or Symptoms - Engine Controls 1.6L (LH7).
DTC P0741 - TCC Stuck OFF/High Slip - Intermittent Only	Do not replace the torque converter. Refer to DTC P0741 or P0742 diagnostic table.
DTC P0741 - TCC Stuck OFF/High Slip	Do not replace the torque converter. Refer to DTC P0741 or P0742 diagnostic table.

Condition	Action
DTC P0742 - TCC Stuck ON	Do not replace the torque converter. Refer to DTC P0741 or P0742 diagnostic table.
Transmission Fluid Contaminated with Sludge/Metal Particles as a result of: • Engine Coolant/Oil • Pump damage • Drive sprocket support damage • Turbine/stator shaft damage • Internal converter damage with no damage found in the transmission	Replace the torque converter.
Poor Acceleration above 48 km/h (30 mph) - Good Launch	Do not replace the torque converter until completing all engine and transmission diagnostics. • Refer to Torque Converter Stator in this procedure. • Refer to Symptoms - Engine Controls , 1.5L (LYX) or Symptoms - Engine Controls 1.6L (LH7).
Poor Launch - Good Acceleration above 48 km/h (30 mph)	Do not replace the torque converter until completing all engine and transmission diagnostics. • Refer to Torque Converter Stator in this procedure. • Refer to Symptoms - Engine Controls , 1.5L (LYX) or Symptoms - Engine Controls 1.6L (LH7).
Stripped Converter Bolt Holes	• Replace the torque converter. • Inspect flexplate and refer to Lower Engine Noise, Regardless of Engine Speed .
Torque Converter Pilot Damaged	Replace the torque converter.
Torque Converter Hub surface is damaged - scored, raised/transferred metal.	Replace the torque converter.
External Leaks in the weld areas - hub, lug or closure weld.	Replace the torque converter.
Broken/Cracked Flexplate	Replace the torque converter.
Torque Converter Discolored/Overheated	Replace the torque converter.

CLUTCH PLATE DIAGNOSIS

Composition Plates

Dry the plates and inspect the plates for the following conditions:

- Pitting
- Flaking
- Delamination - splitting or separation of bonded clutch material
- Wear

- Glazing
- Cracking
- Charring
- Chips or metal particles embedded in the lining

Replace a composition plate which shows any of these conditions.

Steel Plates

Wipe the plates dry and check the plates for heat discoloration. If the surfaces are smooth, even if color smear is indicated, you can reuse the plate. If the plate is discolored with heat spots or if the surface is scuffed, replace the plate.

Causes of Burned Clutch Plates

The following conditions can result in a burned clutch plate:

- Incorrect usage of clutch or apply plates
- Engine coolant or water in the transmission fluid
- A cracked clutch piston
- Damaged or missing seals
- Low line pressure
- Valve body conditions
 - The valve body face is not flat.
 - Porosity in between channels.
 - The valve train retainers are improperly installed.
 - The checkballs are misplaced.
 - Malfunctioning valves.
- The Teflon® seal rings are worn or damaged.

ENGINE COOLANT/WATER IN TRANSMISSION

CAUTION: The antifreeze or water will deteriorate the seals, gaskets and the glue that bonds the clutch material to the pressure plate. Both conditions may cause damage to the transmission.

If antifreeze or water has entered the transmission, perform the following:

1. Disassemble the transmission.
2. Replace all of the rubber type seals. The coolant will attack the seal material which will cause leakage.
3. Replace the composition-faced clutch plate assemblies. The facing material may separate from the steel center portion.
4. Replace all of the nylon parts - washers.
5. Replace the torque converter.
6. Thoroughly clean and rebuild the transmission, using new gaskets and oil filter.
7. Flush the cooler lines after the transmission cooler has been properly repaired or replaced.
8. Inspect the rubber hose portion of the oil cooler lines for damage, if applicable. Refer to [Transmission Fluid Cooler Flow Test and Flushing](#).

FLUID LEAK DIAGNOSIS

General Method

1. Verify that the leak is transmission fluid.

CAUTION: Do not clean using brake cleaner or other reactive solvents as these solvents can damage rubber gaskets, seals and bushings.

2. Thoroughly clean the suspected leak area using a rag.

NOTE: Do not idle vehicle, this will not actuate transmission systems, and do not drive the vehicle on the freeway as this will splatter oil inhibiting leak diagnosis.

3. Operate the vehicle for 15 - 20 minutes under city driving conditions until normal operating temperatures are reached.
4. Park the vehicle over clean paper or cardboard.
5. Shut OFF the engine.
6. Look for fluid spots on the paper.
7. Make the necessary repairs.

Powder Method

CAUTION: Do not clean using brake cleaner or other reactive solvents as these solvents can damage rubber gaskets, seals and bushings.

1. Thoroughly clean the suspected leak area using a rag.
2. Apply an aerosol type leak tracing powder to the suspected leak area.

NOTE: Do not idle vehicle, this will not actuate transmission systems, and do not drive the vehicle on the freeway as this will splatter oil inhibiting leak diagnosis.

3. Operate the vehicle for 15 - 20 minutes under city driving conditions until normal operating temperatures are reached.
4. Shut OFF the engine.
5. Inspect the suspected leak area.
6. Trace the leak path through the powder in order to find the source of the leak.
7. Make the necessary repairs.

Dye and Black Light Method

A fluid dye and black light kit is available from various tool manufacturers.

1. Follow the manufacturer's instructions in order to determine the amount of dye to use.
2. Operate the vehicle for 24 km (15 mi) or until normal operating temperatures are reached.
3. Detect the leak with the black light.
4. Make the necessary repairs.

Find the Cause of the Leak

Pinpoint the leak and trace the leak back to the source. You must determine the cause of the leak in order to repair the leak properly. For example, if you replace a gasket, but the sealing flange is bent, the new gasket will not repair the leak. You must also repair the bent flange. Before you attempt to repair a leak, check for the following conditions, and make repairs as necessary:

Gaskets

- Fluid level/pressure is too high
- Plugged vent or drain-back holes
- Improperly tightened fasteners
- Dirty or damaged threads
- Warped flanges or sealing surface
- Scratches, burrs, or other damage to the sealing surface
- Damaged or worn gasket

- Cracking or porosity of the component
- Improper sealant used, where applicable
- Incorrect gasket

Seals

- Fluid level/pressure is too high
- Plugged vent or drain-back holes
- Damaged seal bore
- Damaged or worn seal
- Improper installation
- Cracks in component
- Manual shaft or output shaft surface is scratched, nicked, or damaged
- Loose or worn bearing causing excess seal wear

Possible Points of Fluid Leaks

Transmission Valve Body Cover

- Incorrectly tightened bolts
- Improperly installed or damaged gasket/seal
- Damaged mounting face
- Incorrect gasket seal

Case Leak

- Damaged input speed sensor seal
- Damaged manual shaft seal
- Loose or damaged oil cooler lines/seals
- Worn or damaged axle shaft oil seal
- Loose line pressure pipe plug or fluid level pipe plug
- Porous casting
- Warped torque converter housing
- Damaged converter housing to case seal

Leak at the Torque Converter End

- Converter leak in the weld area
- Converter seal lip cut. Check the converter hub for damage
- Converter seal bushing moved forward and damaged
- Converter seal garter spring missing from the seal
- Porous casting of the torque converter housing

Leak at the Vent

- Overfilled system
- Water or coolant in the fluid; The fluid will appear milky
- Transmission case porous
- Incorrect fluid level indicator causing an overfilled system
- Plugged vent

Leak Inspection Points - Hybrid

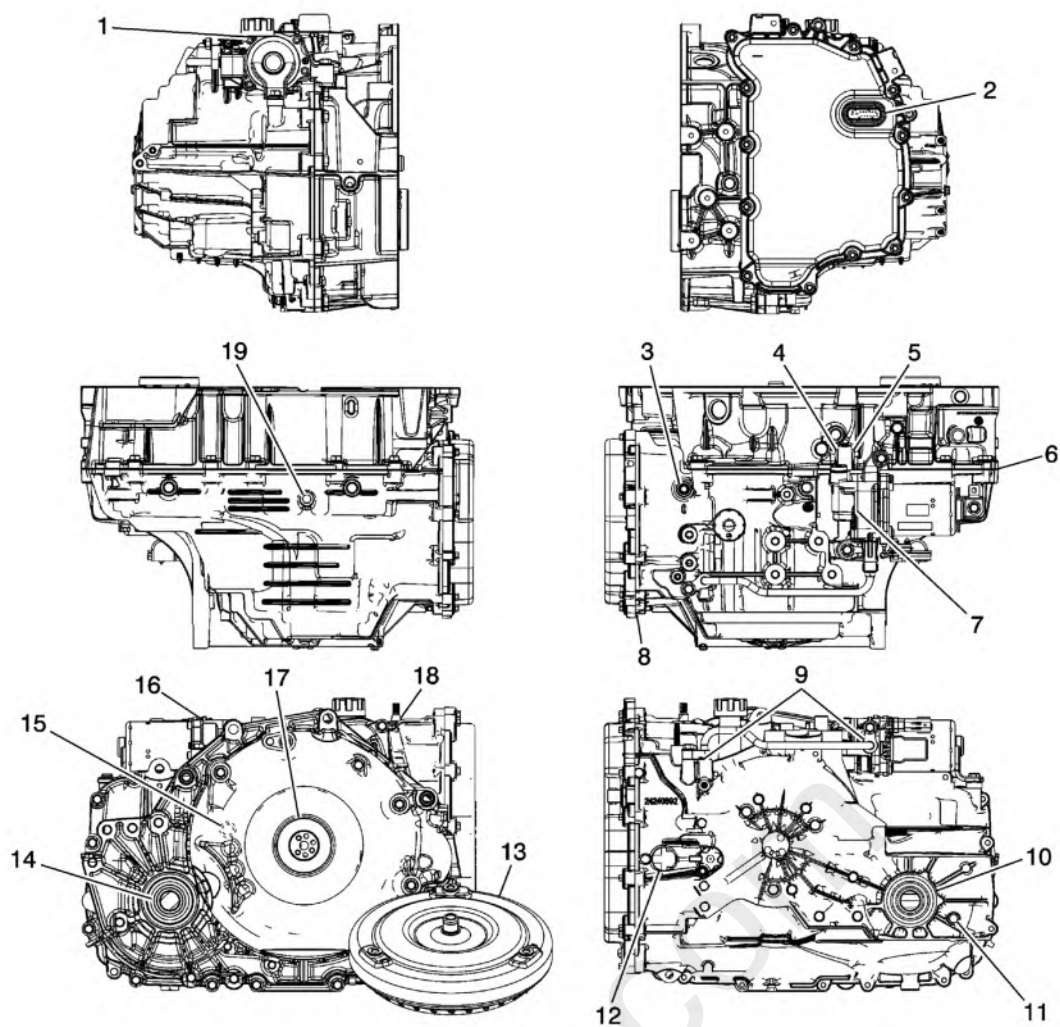


Fig. 8: Leak Inspection Points - Hybrid
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Fill Cap Seal
2	Control Valve Body Cover Hole Seal
3	Line Pressure Tap Plug
4	A/Trans Auxiliary Fluid Pump Gasket
5	A/Trans Auxiliary Fluid Pump Seal
6	Converter Housing to Case Joint
7	A/Trans Auxiliary Fluid Pump Cover Seal
8	Control Valve Body Cover Gasket
9	A/Trans Auxiliary Fluid Pump Outlet Pipe Seal Assembly
10	Drive Shaft Oil Seal Assembly
11	Oil Level Plug
12	A/Trans Input Speed Sensor Assembly O-Ring Seal
13	Torque Converter Assembly
14	Front Wheel Drive Shaft Oil Seal Assembly
15	A/Trans Auxiliary Fluid Inlet Pump Seal
16	A/Trans Auxiliary Fluid Pump Motor Cover Seal - O-Ring
17	Torque Converter Fluid Seal Assembly
18	Manual Shift Shaft Seal
19	Drain Plug

CASE POROSITY REPAIR

Some external leaks are caused by case porosity in non-pressurized areas.

1. Thoroughly clean the area to be repaired with a cleaning solvent. Air dry the area.

WARNING: Epoxy adhesive may cause skin irritations and eye damage. Read and follow all information on the container label as provided by the manufacturer.

2. Using instructions from the manufacturer, mix a sufficient amount of an epoxy to make the repair.
3. Apply the epoxy. A clean, dry soldering acid brush can be used to clean the area and also to apply the epoxy cement. Make certain that the area to be repaired is fully covered.
4. Allow the epoxy cement to cure for three hours before assembling the components.
5. Repeat the fluid leak diagnosis procedures.

BUSHING AND MATING SHAFT INSPECTION

NOTE: Proper bushing and corresponding mating shaft inspection should be performed before replacing the bushing, shaft, and in some cases, the component which houses the bushing. Thoroughly clean and dry the bushing and shaft surfaces before inspecting for damage.

Any of the following bushing conditions require replacement of the bushing and/or housing:

- Discoloration due to heat distress
- Misalignment or displacement of bushing as a result of spinning in housing
- Medium to heavy scoring that can be easily detected with fingernail. Light scoring is a normal condition.
- Debris embedded into the bushing lining material
- Obvious damage, including excessive and uneven wear
- Excessive polishing. Minor polishing of the bushing is an indication of normal wear and does not require replacement.

Any of the following conditions require replacement of the bushing's mating shaft:

- Discoloration due to heat distress
- Rough surface finish that can be easily detected with finger
- Obvious shaft abnormalities, including warping or uneven surfaces
- Obvious damage or cracking

NOISE AND VIBRATION ANALYSIS

A noise or vibration that is noticeable when the vehicle is in motion MAY NOT be the result of the transmission.

If noise or vibration is noticeable in PARK and NEUTRAL with the engine at idle, but is less noticeable as RPM increases, the vibration may be a result of poor engine performance.

- Vibration may also be caused by a small amount of water inside the converter.
- Inspect the engine and transmission mounts for damage and loose bolts.
- Inspect the transmission case mounting holes for the following conditions:
 - Missing bolts, nuts, and studs
 - Stripped threads
 - Cracks
- Inspect the flywheel for the following conditions:
 - Missing or loose bolts
 - Cracks
 - Imbalance
- Inspect the torque converter for the following conditions:

- Missing or loose bolts or lugs
- Missing or loose balance weights
- Imbalance caused by heat distortion or fluid contamination
- If the noise or vibration is noticeable in PARK and NEUTRAL with the engine at idle, but is more noticeable as RPM increases, the vibration may be an engine imbalance or a transmission imbalance. Refer to [Torque Converter Diagnosis](#).

WHINE/GROWL NOISE

Checks	Causes
Differential Assembly (232)	• Inspect for worn wheel bearings or axles. • Inspect for worn or damaged Side Gear Thrust Washer) or Pinion Gear Thrust Washer • Inspect for loose or worn Side Gear Axle Splines • Inspect for damaged or worn Side Gear • Inspect for worn or damaged Final Drive Inner and Outer Washers (584) • Inspect for loose, damaged or worn Front Differential Carrier Thrust Bearings, (228, 231, 233) • Inspect for broken, worn or disengaged Final Drive Pinion Pin Retainer (581) • Inspect for damaged or worn Pinion Gears
Drive Link Assembly (225)	• Inspect for worn, loose or damaged links • Inspect for broken, worn or loose Drive Link Lube Scoop (60)
Drive Sprocket Assembly (224)	• Inspect for improper Drive Sprocket (224) tooth surface finish • Inspect for broken or damaged Drive Sprocket (224) teeth • Inspect for worn or damaged Drive Sprocket Thrust Bearings (223, 556) • Inspect for worn or damaged Output Carrier Transfer Drive Gear Hub Assembly splines (222) • Inspect for loose, worn or damaged Output Carrier Transfer Drive Gear Hub Assembly bushing
Driven Sprocket Assembly (229)	• Inspect for worn, binding or damaged Driven Sprocket Bearing Assembly (228) • Inspect for worn or damaged Driven Sprocket Ball Bearing Assembly • Inspect for improper Driven Sprocket (229) tooth surface finish • Inspect for broken or damaged Driven Sprocket (229) teeth

Checks	Causes
Input Carrier Assembly (570)	• Inspect for pitted/spalled Pinion Gear teeth • Inspect for worn or damaged Pinion Gear Thrust Washers and Bushings • Inspect for worn or damaged Pinion Gears, Pins or Needle Bearings • Inspect for loose or broken Hub and Ring Gear • Inspect for loose or broken Output Internal Gear Retainer • Inspect for loose or worn Sun Gear Thrust Bearings (569, 572)
Output Carrier Assembly (574)	• Inspect for worn or damaged Pinion Gear Thrust Washers and Bushings • Inspect for worn or damaged Pinion Gears, Pins or Needle Bearings • Inspect for loose Hub and Ring Gear
Output Sun Gear Assembly (555)	• Inspect for worn or damaged Output Sun Gear Thrust Bearing (556) • Inspect for loose, worn or damaged Output Sun Gear bushing • Inspect for worn or damaged Output Sun Gear teeth
Reaction Carrier Assembly (567)	• Inspect for worn or damaged Pinion Gear Thrust Washers and Bushings • Inspect for worn or damaged Pinion Gears, Pins or Needle Bearings • Inspect for loose hub and Ring Gear • Inspect for worn or damaged Reaction Carrier Thrust Bearings (565)
Reaction Sun Gear Assembly (566)	Inspect for loose, worn or damaged Reaction Sun Gear Assembly bushing
Fluid Pump Assembly (201)	1. Inspect for proper fluid level 2. Inspect for leaking Pump Fluid Outlet Seal Assembly (24) or Filter Seal
3 - 5 - Reverse Clutch Assembly	• Inspect for inadequate Clutch Plate Clearance • Inspect for stripped or sheared Clutch Plate Splines (508 - 510) • Inspect for loose or worn Backing Plate Retainer (511) • Inspect for loose Speed Sensor Reluctor Wheel (501) or Retainer (500)

Checks	Causes
4 - 5 - 6 Clutch Assembly	• Inspect for inadequate Clutch Plate Clearance • Inspect for stripped or sheared Clutch Plate Splines (425 - 428) • Inspect for loose or worn Clutch Dam Retainer (524) • Inspect for loose or worn 3 - 5 - Reverse/4 - 5 - 6 Clutch Housing Bushing
1 - 2 - 3 - 4 Clutch Assembly	• Inspect for inadequate Clutch Plate Clearance • Inspect for stripped or sheared Clutch Plate Splines (557 - 559) • Inspect for loose or worn Clutch Spring Retainer (561)
Low and Reverse Clutch Assembly (OWC) (543)	• Inspect for stripped or sheared Low and Reverse Clutch Assembly (543) splines • Inspect for non-rotating Low and Reverse Clutch Assembly (543)
Low and Reverse Clutch	• Inspect for inadequate Clutch Plate Clearance • Inspect for stripped or sheared Clutch Plate Splines (545 - 547) • Inspect for loose or worn Clutch Spring Retainer (548)
2 - 6 Clutch Assembly	• Inspect for inadequate Clutch Plate Clearance • Inspect for stripped or sheared Clutch Plate Splines (540 - 542) • Inspect for loose or worn Clutch Spring Retainer (537)
Case Assembly (50)	• Inspect for loose or broken Transmission Mount Bolts • Inspect for loose Torque Converter and Differential Housing Bolts (26) • Inspect for loose, worn or damaged differential bushing • Inspect for loose or broken Input Shaft Support Bolts (57) • Inspect for loose or broken Front Differential Carrier Baffle Bolts (61) • Inspect for stripped or sheared splines • Inspect for loose, worn or damaged bushing

Checks	Causes
Torque Converter Housing Assembly (208)	• Inspect for loose or broken Front Differential Ring Gear Retainer (206) • Inspect for loose, worn or damaged differential bushing • Inspect for loose or broken Pinion Gear Shaft Retainer Pin • Inspect for loose or broken Front Differential Carrier Baffle Bolts (204) • Inspect for loose or broken Fluid Pump Bolts (200) • Inspect for loose Torque Converter and Differential Housing Bolts (26) • Inspect for loose, worn or damaged bushing
Control Valve Body Cover Assembly (2)	Inspect for loose, missing or broken Valve Body Cover Bolts (1)
Torque Converter (28)	• Inspect for improper alignment of Torque Converter to the Crankshaft • Inspect for ballooning of the Torque Converter
Differential Carrier Assembly (232)	• Inspect for worn or damaged Differential Carrier (582) • Inspect for worn or damaged Pinion Pins (583) • Inspect for broken, worn or damaged Differential Sun Gear Bearing (231) or Driven Sprocket Bearing (228) • Inspect for worn or damaged Differential Side Gear teeth, Final Drive Pinion Gear (586) teeth or Final Drive Sun Gear (230) teeth • Inspect for worn or damaged Differential Side Gear Thrust Washers or Final Drive Inner and Outer Washers (584) • Inspect for worn or damaged Final Drive Rollers (585) • Inspect for broken or damaged Differential Pinion Gear Shaft Retainer

AUTOMATIC TRANSMISSION FLUID LEAKS

Checks	Causes
Torque Converter (28)	Inspect for damage

Checks	Causes
Case Assembly (50)	- Inspect for cracked or broken Case (50) - Inspect for porosity or damage on the sealing surfaces - Inspect for loose Oil Cooler Line Bolts or damaged Oil Cooler Line Seals - Inspect for damaged Manual Shift Shaft Seal (604) - Inspect for damaged or worn Axle Seal (65) or Axle Seal Slinger on the axle shafts - Inspect for plugged Vent Cap (52) - Inspect for loose Pressure Test Plug (51), Drain Plug (64) and Fluid Level Plug (63) - Inspect for damaged Park Pawl Actuator Guide Seal (605) - Inspect for damaged or worn Input Speed Sensor Seals (19)
Torque Converter Housing Assembly (208)	- Inspect for damaged Torque Converter Housing Assembly (208) - Inspect for porosity or damage on the sealing surfaces - Inspect for damaged Torque Converter Housing Seal (23) - Inspect for damaged or worn Torque Converter Fluid Seal (301) - Inspect for loose Torque Converter and Differential Housing Bolts (26) - Inspect for damaged or worn Axle Seal (209) or Axle Seal Slings on the axle shafts - Inspect for loose, missing or damaged Fluid Fill Tube Plug Assembly (27) - Inspect for damaged Torque Converter and Differential Housing Seal (202)
Valve Body Cover Assembly (2)	- Inspect for damaged or warped Valve Body Cover Assembly (2) - Inspect for damaged or improperly installed Valve Body Cover Gasket (3) - Inspect for loose Valve Body Cover Bolts (1) - Inspect for damaged or improperly installed Wire Connector Hole Seal (5)

SHIFT INDICATOR INDICATES WRONG GEAR SELECTION

Checks	Causes

Checks	Causes
Shift Cable	• Inspect for damage. • Verify proper attachment to shifter. • Verify cable is locked into shifter bracket. • Verify cable is properly attached to the transmission. • Verify that the cable is locked into the transmission bracket. • Verify proper cable adjustment. Refer to Range Selector Lever Cable Adjustment .
Manual Shaft	• Verify shift lever is properly attached to the manual shaft. • Verify manual shaft is not twisted or damaged.
Manual Shift Detent Lever with Shaft Position Switch Assembly, IMS	Verify proper operation. Refer to Transmission Internal Mode Switch Logic .

NO PARK

Checks	Causes
Differential Carrier Assembly (232)	• Inspect for damaged or broken Front Differential Assembly (232). • Inspect for damaged or broken Front Differential Side Gear or Pinion Gear. • Inspect for damaged or broken Front Differential Pinion Gear Shaft. • Inspect for damaged or broken Front Differential Pinion Gear Shaft Pin. • Inspect for worn, stripped or sheared Front Differential Side Gear splines. • Inspect for damaged or broken Final Drive Sun, Pinion or Ring Gear. • Inspect for worn, stripped or sheared Final Drive Sun Gear splines.
Output Carrier Transfer Drive Gear Hub Assembly (222)	• Inspect for broken Drive Gear Hub (222). • Inspect for worn, stripped or sheared Drive Gear hub (222) splines. • Inspect for disengaged or broken Park Gear Retainer Ring (220). • Inspect for damaged or broken park Gear (221). • Inspect for disengaged or broken Drive Sprocket Retainer Ring (227).

Checks	Causes
Drive Link Assembly (225)	• Inspect for broken, worn or damaged Drive Link Assembly (225). • Inspect for broken, worn or damaged Drive Sprocket (224). • Inspect for broken, worn or damaged Driven Sprocket Assembly (229). • Inspect for worn, stripped or sheared Driven Sprocket splines. • Inspect for broken Drive Gear Hub (222).
Case Assembly (50)	• Inspect for broken or damaged Case. • Inspect for broken or bent Park Pawl Shaft (600). • Inspect for broken or missing Park Pawl Actuator Guide Pin (603) or Manual Shaft Pin (611). • Inspect for broken or missing Manual Shaft Detent Lever Pin (610). • Inspect for broken or missing Manual Shift Shaft Pin (611). • Inspect for damaged or broken Manual Shift Detent Lever Shaft (608). • Inspect for loose, damaged or broken Detent Lever Spring Assembly (17). • Inspect for broken, loose or misaligned Park Pawl Actuator Guide (606). • Inspect for binding, bent or broken Park Pawl (602) or Actuator Assembly (607).

HARSH GARAGE SHIFT

Checks	Causes
Input Carrier Assembly (570)	Inspect for worn or stripped Output Internal Gear Splines.
Low-Reverse and 1 - 2 - 3 - 4 Clutch Housing (551)	• Inspect for damaged or fatigued 1 - 2 - 3 - 4 Clutch Wave Plate (557) and Low and Reverse Clutch Wave Plate (547). Refer to Clutch Plate Diagnosis. • Inspect for stripped or sheared splines on 1 - 2 - 3 - 4 Clutch Plate (546). Refer to Clutch Plate Diagnosis. • Inspect for improperly positioned or plugged Low Reverse Piston (550) air bleed. • Inspect for correct fluid level.
Low and Reverse Clutch Assembly (OWC) (543)	Inspect for stripped or sheared internal and external splines on Low and Reverse Clutch Assembly (543).

NO DRIVE IN ALL RANGES

Checks	Causes

Checks	Causes
Case Assembly (50)	• Inspect for cracked or broken Case (50). • Inspect for stripped or sheared splines. • Inspect for binding Manual Shift Detent Lever Assembly (609). • Inspect for missing Manual Shift Shaft Pin (611). • Inspect for missing Manual Shaft Lever Pin (610). • Inspect for interference or binding Park Pawl Actuator Assembly (607). • Inspect for broken or disengaged 1 - 2 - 3 - 4 Clutch Backing Plate Retainer Ring (561). • Inspect for loose or damaged case bushing. • Inspect A/Trans Fluid Pump Seal Assembly (25) for damage.
Torque Converter (28)	• Inspect for stripped or sheared splines on Turbine Shaft. • Inspect for missing Torque Converter to Flywheel bolts. • Inspect for damaged or disengaged Torque Converter Hub to Oil Pump Drive Gear.
Torque Converter Housing (208)	• Inspect for stripped or sheared Differential Ring Gear splines. • Inspect for broken or disengaged Differential Ring Gear Retainer (206). • Inspect for loose, missing or broken Torque Converter and Differential Housing bolts (26). • Inspect for loose, missing or broken Fluid Pump bolts (200).
35R/456 Housing Assembly (516)	• Inspect for damaged or broken Input Shaft Thrust Bearing Assembly (538). • Inspect for stripped or sheared splines on the Input Shaft to the 3 - 5 Reverse/4 - 5 - 6 Clutch Housing (516).
Oil Pump Assembly (201)	• Inspect for fluid leaks / improper fluid level. • Inspect for leaking Fluid Outlet Seal Assembly (24). • Inspect for loose or missing Oil Pump Bolts (200). • Inspect for damaged, restricted or improperly installed Oil Filter Assembly (203). • Inspect for damaged or leaking Oil Filter Neck Seal. • Inspect for broken or seized Fluid Pump Drive Gear (315) and Fluid Pump Driven Gear (316).
Low & Reverse Clutch Assembly (543)	Inspect for stripped or sheared splines to the Reaction Carrier (567).

Checks	Causes
Input Carrier Assembly (570)	• Inspect for stripped or sheared castle splines to ring gear. • Inspect for improperly installed carrier pinion gear pins. • Inspect for damaged or broken Pinion Gears. • Inspect for stripped or sheared splines on the Input Sun Gear (571). • Inspect for damaged or broken Output Internal Gear. • Inspect for broken or disengaged Output Internal Gear Retainer Ring. • Inspect for damaged or broken Input Carrier Thrust Bearing Assembly (568) and Output Carrier Thrust Bearing Assembly (573). • Inspect for damaged or broken Input Carrier Thrust Bearings (569, 572).
Reaction Carrier Assembly (567)	• Inspect for stripped or sheared Reaction Carrier Assembly (567) splines. • Inspect for damaged or broken Input Carrier Thrust Bearings (568). • Inspect for damaged or broken Pinion Gear teeth. • Inspect for damaged or broken Reaction Internal Gear teeth. • Inspect for disengaged or broken Reaction Internal Gear retainer ring.
Reaction Sun Gear Assembly (566)	• Inspect for damaged or broken weld at Sun Gear. • Inspect for loose or worn Reaction Sun Gear Assembly bushing.
Output Carrier Assembly (574)	• Inspect for stripped or sheared splines to reaction internal ring gear. • Inspect for damaged or broken Input Sun Gear Thrust Bearings (572). • Inspect for damaged or broken Pinion Gear teeth. • Inspect for damaged or broken Input Carrier Thrust Bearings (573). • Inspect for broken or damaged Output Internal Gear.
Output Sun Gear Assembly (555)	• Inspect for stripped or sheared Output Sun Gear Assembly (555) splines. • Inspect for broken Output Sun Gear Assembly (555) hub or weld.
Low-Reverse and 1 - 2 - 3 - 4 Clutch Housing (551)	Inspect for disengaged or broken 1 - 2 - 3 - 4 Clutch Piston Spring Retainer (554).

Checks	Causes
Drive Link Assembly (225)	- Inspect for broken, worn or damaged Drive Link Assembly (225). - Inspect for broken, worn or damaged Drive Sprocket (224). - Inspect for broken, worn or damaged Driven Sprocket Assembly (229). - Inspect for broken Drive Gear Hub (222).
Differential Carrier Assembly (232)	- Inspect for stripped or sheared splines on Differential Side Gear. - Inspect for stripped or sheared splines Final Drive Sun Gear (230). - Inspect for stripped or sheared splines Differential Carrier to PTU (AWD only). - Inspect for stripped broken or disengaged Final Drive Retainer (581). - Inspect for damaged or broken Pinion Gear teeth. - Inspect for damaged or broken Final Drive Rollers (585). - Inspect for broken, worn or damaged Final Drive Inner and Outer Thrust Washers (584).
Control Solenoid (w/Body and TCM) Valve Assembly	- Check that the Manual Valve (432) is engaged with Manual Shift Detent Lever Assembly (609). - Inspect the Control Solenoid (w/Body and TCM) Valve Assembly (7) and verify that it is functioning properly.

NO FIRST AND REVERSE GEARS

Checks	Causes
Low and Reverse Clutch Assembly (543)	- Inspect for stripped or sheared internal or external splines on Low and Reverse Clutch Assembly (543) - Inspect for broken or disengaged retainer ring
Low and Reverse Clutch	- Inspect for stripped or sheared splines on Low and Reverse Clutch Plates (545 - 547) - Inspect for damaged, deformed or improper surface finish on the Low and Reverse Clutch Plates (545 - 547) - Inspect for stripped or sheared splines on Low and Reverse Clutch Backing Plate (544) - Inspect for worn, damaged or debonding Low and Reverse Clutch Piston Seals (550) - Inspect for broken or fatigued Low and Reverse Clutch Piston Return Spring (549)

Checks	Causes
Low-Reverse and 1 - 2 - 3 - 4 Clutch Housing (551)	- Inspect for disengaged or broken Low and Reverse Clutch Piston Spring Retainer (548) - Inspect for broken or deformed Low and Reverse Clutch Piston (550) - Inspect for damaged or improper surface finish in the piston bore

NO FIRST, SECOND, THIRD, AND FOURTH GEAR

Checks	Causes
Control Solenoid (w/Body and TCM) Valve Assembly	Check 1234 PC Solenoid 5 for proper operation. Refer to <u>Control Solenoid Valve and Transmission Control Module Assembly Solenoid Performance Test</u> .
Control Valve Body Assembly	Inspect 1-2-3-4 Clutch Regulator Valve (417) and 1-2-3-4 Clutch Boost Valve (414) for debris and stickyness.
1-2-3-4 Clutch Assembly	- Inspect for damaged, stripped or sheared splines on 1-2-3-4 Clutch Plates (557 - 559), Backing Plate (560). - Inspect for damaged or broken 1-2-3-4 Clutch Piston (552) and Piston Seals damaged, worn or delaminating. - Inspect for broken or fatigued 1-2-3-4 Clutch Piston Return Spring (553). - Inspect for broken or disengaged 1-2-3-4 Clutch Piston Return Spring Retainer (554). - Inspect for broken or fatigued 1-2-3-4 Clutch Waved Plate (557). - Inspect for disengaged or broken 1-2-3-4 Clutch Backing Plate Retainer (561). - Inspect for broken, porous or improper surface finish or plugged oil passages of the Low-Reverse/1-2-3-4 Clutch Housing (551). - Inspect for worn or damaged Low-Reverse/ 1-2-3-4 Clutch Housing (551) splines.
Output Sun Gear Assembly (555)	Inspect for stripped or sheared splines on the Output Sun Gear shell.
Reaction Carrier Assembly (567)	- Inspect for stripped or sheared splines on the Input Ring Gear - Inspect for disengaged or broken Input Ring Gear Retainer.
Output Carrier Assembly (574)	- Low/Reverse Clutch Assembly (OWC) (543) splines stripped or sheared. - Inspect for disengaged or broken Reaction Ring Gear Retainer.
Case Assembly (50)	- Inspect for leaking or damaged 1-2-3-4 and Low-Reverse Clutch Fluid Passage Seals (67). - Inspect for worn or damaged case splines or retainer ring grooves.
Input Sun Gear (571)	Inspect for damaged gear teeth and damaged splines.

Checks	Causes
Turbine Shaft (517)	Inspect for damaged splines to the Input Shaft Sun Gear.

NO SECOND AND SIXTH GEAR

Checks	Causes
2 - 6 Clutch Assembly	- Inspect for damaged or worn 2 - 6 Clutch Plates (540 - 542). - Inspect for damaged, worn, broken, improper surface finish or sheared splines on the Low-Reverse Clutch Assembly (543). - Inspect for damaged or broken 2 - 6 Clutch Piston (535) and piston seals damaged, worn or delaminating. - Inspect for broken or binding 2 - 6 clutch Piston Return Spring (536).
Reaction Carrier Assembly (567)	- Inspect for stripped or sheared splines on the Input Ring Gear. - Inspect for disengaged or broken Input Ring Gear Retainer.
Reaction Sun Gear Assembly (566)	- Inspect for damaged or broken Reaction Sun Gear Assembly hub. - Inspect for damaged or broken sun gear weld. - Inspect for loose or worn Reaction Sun Gear Assembly bushing.
Case Assembly (50)	- Inspect for stripped or sheared splines. - Inspect for broken or disengaged 2 - 6 Clutch Piston Return Spring Retainer (537). - Inspect for damaged, worn, or improper surface finish in the piston bore.
Output Carrier Assembly (574)	Inspect for reaction ring gear damage or missing ring gear snap ring.
Control Valve Body Assembly	Inspect 2-6 Clutch Regulator Valve (419) for debris and stickyness.
Control Solenoid (w/Body and TCM) Valve Assembly	Check 2-6 PC Solenoid 4 for proper operation. Refer to Control Solenoid Valve and Transmission Control Module Assembly Solenoid Performance Test.

HARSH OR LATE FIRST, SECOND, THIRD, AND FOURTH SHIFT

Checks	Causes

Checks	Causes
Low-Reverse and 1 - 2 - 3 - 4 Clutch Housing (551)	- Inspect for damaged or broken 1 - 2 - 3 - 4 Clutch Piston (552) and piston seals damaged, worn or leaking. - Inspect for fatigued or binding 1 - 2 - 3 - 4 Clutch Piston Return Spring (553). - Inspect for improper surface finish on 1 - 2 - 3 - 4 Clutch Plates (557 - 559). Refer to Clutch Plate Diagnosis. - Inspect for broken or fatigued 1 - 2 - 3 - 4 Clutch Waved Plate (557). - Inspect for plugged or restricted Low-Reverse and 1 - 2 - 3 - 4 Clutch Piston Housing (551) air bleed.
Case Assembly (50)	- Inspect for leaking or loose fitting Fluid Check Valve (55). - Inspect for leaking or damaged 1 - 2 - 3 - 4 and Low-Reverse Clutch Fluid Passage Seals (67).

HARSH FIRST AND REVERSE SHIFT

Checks	Causes
Low-Reverse and 1 - 2 - 3 - 4 Clutch Housing (551)	Inspect for plugged or restricted Low-Reverse/1 - 2 - 3 - 4 Clutch Piston Housing (551) air bleed
Low and Reverse Clutch	- Inspect for improper surface finish on Low and Reverse Clutch Plates (545 - 547) - Inspect for broken or fatigued Low and Reverse Clutch Apply Plate (547) - Inspect for damaged or broken Low and Reverse Clutch Piston (550) and piston seals damaged, worn or leaking - Inspect for fatigued or binding Low and Reverse Clutch Piston Return Spring (549)

NO THIRD, FIFTH, AND REVERSE GEAR

Checks	Causes

Checks	Causes
3 - 5 Reverse Clutch Assembly	- Inspect for damaged, stripped or sheared splines on 3 - 5 Reverse Clutch Plates (507 - 509), Backing Plate (510) - Inspect for sheared or stripped splines on 3 - 5 Rev/4 - 5 - 6 Housing (516) to Turbine Shaft (517) - Inspect for damage, improper surface finish, porosity, deformed or unbalanced 3 - 5 Rev/4 - 5 - 6 Housing (516) - Inspect for damaged, worn, loose or seized hub bushing in the 3 - 5 Rev/4 - 5 - 6 Housing - Inspect for broken, porous or improper surface finish or plugged oil passages of the 3 - 5 Rev/4 - 5 - 6 Housing (516) - Inspect for failure of the Input Shaft Thrust Bearing (538) - Inspect for disengaged or broken 3 - 5 Reverse Clutch Backing Plate (511) - Inspect for damaged, worn or leaking 3 - 5 Reverse Clutch Piston Seals (504 - 506) - Inspect for damaged or broken 3 - 5 Rev/4 - 5 - 6 Clutch Housing (516) - Inspect for warped, damaged, improper surface finish or debonding 3 - 5 Reverse Clutch Piston (502) - Inspect for broken or fatigued 3 - 5 Reverse Clutch Spring (503) - Inspect for disengaged or broken Speed Sensor Reluctor Retainer (500) - Inspect for worn, broken or damaged Speed Sensor Reluctor Wheel (501)
Reaction Sun Gear Assembly (566)	Inspect for stripped or sheared splines
Reaction Carrier (567)	- Inspect for broken or disengaged Input Internal Gear Retainer - Inspect for stripped or sheared splines on the Input Internal Gear
Output Carrier (574)	Inspect for stripped or sheared splines for the Reaction Internal Ring Gear
4 - 5 - 6 Clutch Assembly	- Inspect for plugged or missing 4 - 5 - 6 Piston Dam Oil Feed hole - Inspect for leaking 4 - 5 - 6 Piston Dam

HARSH OR LATE SECOND AND SIXTH SHIFT

Checks	Causes
2 - 6 Clutch Assembly	- Inspect for worn or improper surface finish on the 2 - 6 Clutch Plates (540 - 542) - Inspect for fatigued 2 - 6 Clutch Piston Apply Plate (540) - Inspect for plugged, restricted or incorrect orientation of the 2 - 6 Clutch Piston (535) air bleed

Checks	Causes
Case Assembly (50)	- Inspect for damaged or broken 2 - 6 Clutch Piston (535) and piston seals damaged, worn or delaminating - Inspect for fatigued 2 - 6 Clutch Piston Return Spring (536)

NO FOURTH, FIFTH, AND SIXTH GEAR

Checks	Causes
4 - 5 - 6 Clutch Assembly	- Inspect for damaged, stripped or sheared splines on 4 - 5 - 6 Clutch Plates (526 - 528), Backing Plate (529) - Inspect for broken or fatigued 4 - 5 - 6 Clutch Waved Plate (525) - Inspect for damaged or broken 4 - 5 - 6 Clutch Piston (520) and Piston Seals (518, 519, 521) - Inspect for broken or fatigued 4 - 5 - 6 Piston Return Spring (522) - Inspect for broken or disengaged 4 - 5 - 6 Backing Plate Retainer (532) - Inspect for damaged or broken 4 - 5 - 6 Clutch Dam Piston (523) and piston seals damaged, worn or delaminating - Inspect for broken or disengaged 4 - 5 - 6 Clutch Dam Retainer (524) - Inspect for stripped or sheared splines on the Reaction Carrier Hub (531) - Inspect for stripped or sheared splines on 3 - 5 Rev/4 - 5 - 6 Housing to Turbine Shaft (516) - Inspect for loose, worn or damaged 3 - 5 Rev/4 - 5 - 6 Housing Bushing - Inspect for broken, porous or improper surface finish or plugged oil passages of the 3 - 5 Rev/4 - 5 - 6 Housing (516)
Transmission Case Assembly	Inspect the input shaft support (56) for missing or damaged fluid ring seals (58).
Control Valve Body Assembly	Inspect the reverse and 4-5-6 regulator valve (411) and ball check valve (404) for debris and stickiness.
Control Solenoid (w/Body and TCM) Valve Assembly	Check the pressure control solenoid 3 (R1/456) for proper operation. Refer to Control Solenoid Valve and Transmission Control Module Assembly Solenoid Performance Test .

HARSH OR LATE THIRD, FIFTH, AND REVERSE SHIFT

Checks	Causes

Checks	Causes
3 - 5 Reverse Clutch Assembly	• Inspect for damaged splines or improper surface finish on 3 - 5 Reverse Clutch Plates (507 - 509), Backing Plate (510) • Inspect for damaged, worn or leaking 3 - 5 Reverse Clutch Piston Seals (504 - 506) • Inspect for warped 3 - 5 Rev/4 - 5 - 6 Clutch Housing (516) • Inspect for broken or fatigued 3 - 5 Reverse Clutch Waved Plate (507)

HARSH FOURTH, FIFTH, AND SIXTH SHIFT

Checks	Causes
4 - 5 - 6 Clutch Assembly	• Inspect for leaking or damaged 4 - 5 - 6 Clutch Piston (520) and Piston Seals (518, 519, 521) • Inspect for plugged or restricted 4 - 5 - 6 Piston Dam air bleed • Inspect for leaking or damaged 4 - 5 - 6 Clutch Dam (523) • Inspect for plugged or restricted Dam oil feed hole in the 4 - 5 - 6 Piston (520) • Inspect for fatigued 4 - 5 - 6 Clutch Piston Spring (522) • Inspect for leaking 4 - 5 - 6 Clutch Dam Seals (523) • Inspect for improper surface finish on 4 - 5 - 6 Clutch Plates (525 - 528) • Inspect for fatigued 4 - 5 - 6 Clutch Waved Plate (525) • Inspect for porous, improper surface finish, seal groove damage or plugged or restricted oil passages of the 3 - 5 Rev/4 - 5 - 6 Housing (516)

HARSH DOWNSHIFT

Checks	Causes

Checks	Causes
Control Valve Body Assembly	• Check the engine for diagnostic codes. If the engine controller signals the transmission that engine torque is inaccurate, the transmission will command high time pressure. • Inspect for worn, sticking or damaged pressure regulator valve (309) or pressure regulator valve spring (308) Gen 1 / Gen 2 or pressure regulator valve (310) or spring (309) Gen 3. • Inspect for stuck actuator feed limit valve (430) or spring (431). • Inspect for stuck clutch select valve (428) or spring (427). • Inspect for stuck 1-2-3-4 clutch regulator valve (417) or spring (416). • Inspect for stuck 1-2-3-4 clutch boost valve (414) or spring (415). • Inspect for stuck 2-6 clutch regulator valve (419) or spring (418). • Inspect for stuck 3-5 reverse clutch regulator valve (421) or spring (420). • Inspect for stuck low reverse and 4-5-6 clutch regulator valve (411) or spring (410). • Inspect for stuck low reverse and 4-5-6 clutch boost valve (436) and spring (437) Gen 2 / Gen 3 only.

NO TORQUE CONVERTER CLUTCH APPLY

Checks	Causes
Torque Converter Assembly (28)	• Inspect for damaged Torque Converter Clutch Seal (inside converter assembly). • Diagnose Torque Converter Assembly for possible internal damage. Refer to Torque Converter Diagnosis.
Valve Body Assembly (433)	Inspect for worn, damaged or sticking TCC Regulator Apply (425) and TCC Regulator Apply Shuttle (426) Valves. Refer to Control Solenoid Valve and Transmission Control Module Assembly Inspection .
Oil Pump Assembly (201)	Inspect for worn or damaged Torque Converter Fluid Seal Assembly (301).
Torque Converter Housing Assembly (29)	Inspect for leaking or damaged Torque Converter Fluid Seal Assembly (301), Torque Converter Fluid Seal Assembly (319) and A/Trans Fluid Pump Assembly (201).

NO TORQUE CONVERTER CLUTCH RELEASE

Checks	Causes
Torque Converter Assembly (28)	Diagnose Torque Converter Assembly for possible internal damage. Refer to Torque Converter Diagnosis .
Valve Body Assembly (433)	Inspect for worn, damaged or sticking TCC Regulator Apply (425) and TCC Regulator Apply Shuttle (426) Valves.

NO REVERSE GEAR

Checks	Causes
--------	--------

Checks	Causes
Control Solenoid (w/Body and TCM) Valve Assembly	Check the 35R PC Solenoid 2 for proper operation. Refer to <u>Control Solenoid Valve and Transmission Control Module Assembly Solenoid Performance Test</u> .
Control Valve Body Assembly	- Inspect the 3-5-Reverse Clutch Regulator Valve (421) and Control Valve Body Ball Check Valve (404) for debris and stickyness. - Inspect the Clutch Select Valve (428) and the Actuator Feed Limit Valve (430) for debris and stickyness.
Low and Reverse Clutch	- Inspect for stripped or sheared splines on Low and Reverse Clutch Plates (545 - 547) - Inspect for damaged, deformed or improper surface finish on the Low and Reverse Clutch Plates (545 - 547) - Inspect for stripped or sheared splines on Low and Reverse Clutch Backing Plate (544) - Inspect for worn, damaged or debonding Low and Reverse Clutch Piston Seals (550) - Inspect for broken or fatigued Low and Reverse Clutch Piston Return Spring (549)
Transmission Case Assembly	Inspect the Input Shaft Support (56) for missing or damaged Fluid Seal Rings (58).
3-5 Reverse Clutch Assembly	- Inspect for damaged, stripped or sheared splines on 3-5 Reverse Clutch Plates (507 - 509), Backing Plate (510). - Inspect for stripped or sheared splines on 3-5 Rev/4-5-6 Housing to Turbine Shaft (516). - Inspect for damage, improper surface finish, porosity, deformed or unbalanced 3-5 Rev/4-5-6 Housing (516). - Inspect for damaged, worn, loose or seized hub bushing in the 3-5 Rev/4-5-6 Housing. - Inspect for broken, porous or improper surface finish or plugged oil passages of the 3-5 Rev/4-5-6 Housing (516). - Inspect for failure of the Input Shaft Thrust Bearing (538). - Inspect for disengaged or broken 3-5 Reverse Clutch Backing Plate Retainer (511). - Inspect for damaged, worn or leaking 3-5 Reverse Clutch Piston Seals (504 - 506). - Inspect for damaged or broken 3-5 Rev/4-5-6 Clutch Housing (516). - Inspect for warped, damaged, improper surface finish or debonding 3-5 Reverse Clutch Piston (502). - Inspect for broken or fatigued 3-5 Reverse Clutch Spring (503). - Inspect for disengaged or broken Speed Sensor Reluctor Retainer (500). - Inspect for broken Speed Sensor Reluctor Wheel (501).

FLUID PRESSURE HIGH OR LOW

Checks	Causes
--------	--------

Checks	Causes
Fluid Pump Assembly (201)	• Inspect for loose fluid pump bolts (204). • Inspect for leaking or damaged fluid pump outlet seals (24) and oil filter seal. • Inspect for improperly installed, restricted or damaged oil filter (203). • Inspect for sticking line pressure blow off valve (304). • Inspect for worn, sticking or damaged pressure regulator valve (309) or pressure regulator valve spring (308). • Inspect for damaged or restricted oil ports in the oil pump body (303). • Inspect for missing, leaking, or damaged auxiliary fluid inlet pump seal (371) - Hybrid Models.
Torque Converter Housing (208)	• Inspect for missing or restricted differential lube oil circuit orifice. • Inspect for missing front differential carrier baffle (205).
Control Solenoid Valve Assembly (w/Body and TCM) (7)	• Inspect for leaking or damaged filter plate assembly seals (8). • Verify VBS operation is not stuck high or low.
Case Assembly (50)	• Inspect for proper fluid level. • Inspect for missing lube oil circuit orifice or front differential carrier baffle (62). • Inspect for leaking or damaged valve body spacer plate assembly (12). • Inspect for damaged or leaking fluid check valve (55). • Inspect for leaking, damaged or broken fluid level control valve (13).
Torque Converter Assembly (28)	• Inspect for damaged torque converter clutch seal (inside converter assembly). • Inspect for damaged or disengaged torque converter hub to oil pump drive gear.