


Remove the bolt and disconnect the brake hose. Discard the washers.

Torque

: 26 lb.ft (35 Nm)

2.

Remove the parking brake actuator motor.

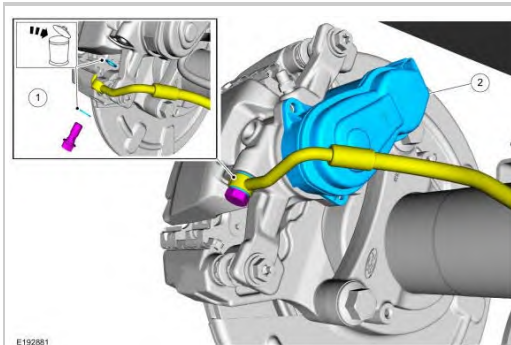


RH or LH parking brake actuator motor

6.

 *NOTE: RH side shown, LH similar.*

Remove and discard the O-ring.

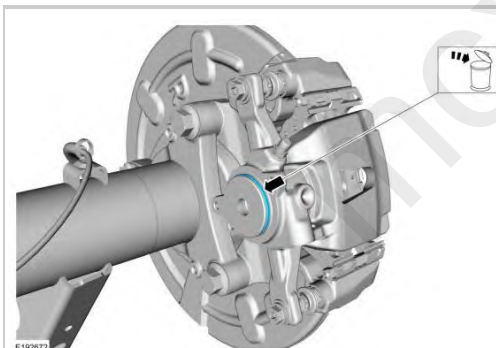

REMOVAL AND INSTALLATION > PARKING BRAKE ACTUATOR MOTOR > INSTALLATION

1.

To install, reverse the removal procedure.

2.