

Drive Pinion Seal

Base Part Number: Base Part Number: 3N134

Special Tool(s) / General Equipment


	205-208 (T83T-4676-A) Installer, Drive Pinion Oil Seal TKIT-1983-F TKIT-1983-FLM TKIT-1983-FX
Flat-Bladed Screwdriver	

Materials

Name	Specification
Motorcraft® Premium Long-Life Grease XG-1-E1	ESA-M1C75-B

Removal


1. Remove the drive pinion flange.
Refer to: [Drive Pinion Flange](#) (205-02B Rear Drive Axle/Differential - Vehicles With: Ford 9.75 Inch Ring Gear, Removal and Installation).
2. Using a flat blade screwdriver, remove and discard the drive pinion seal.
Use the General Equipment: Flat-Bladed Screwdriver

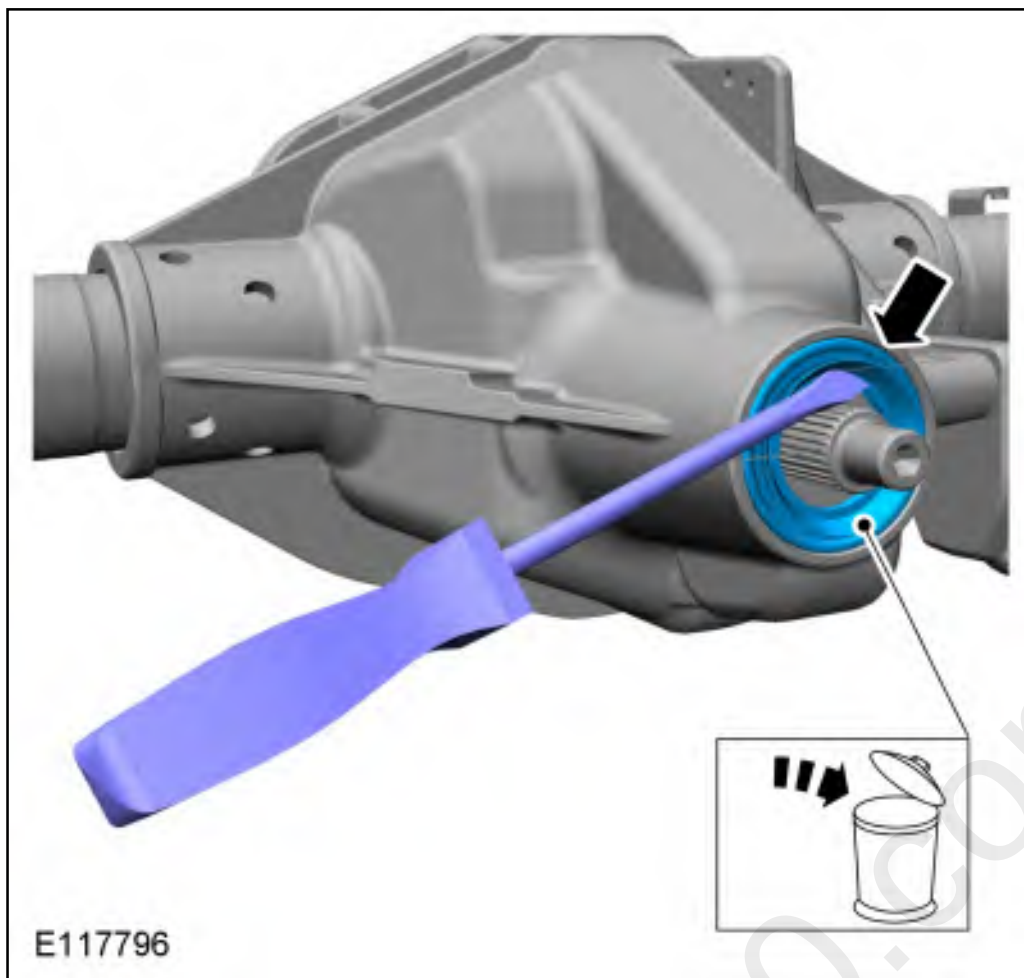


Installation

1. Lubricate the new drive pinion seal lip with grease.

Material: Motorcraft® Premium Long-Life Grease / XG-1-E1 (ESA-M1C75-B)

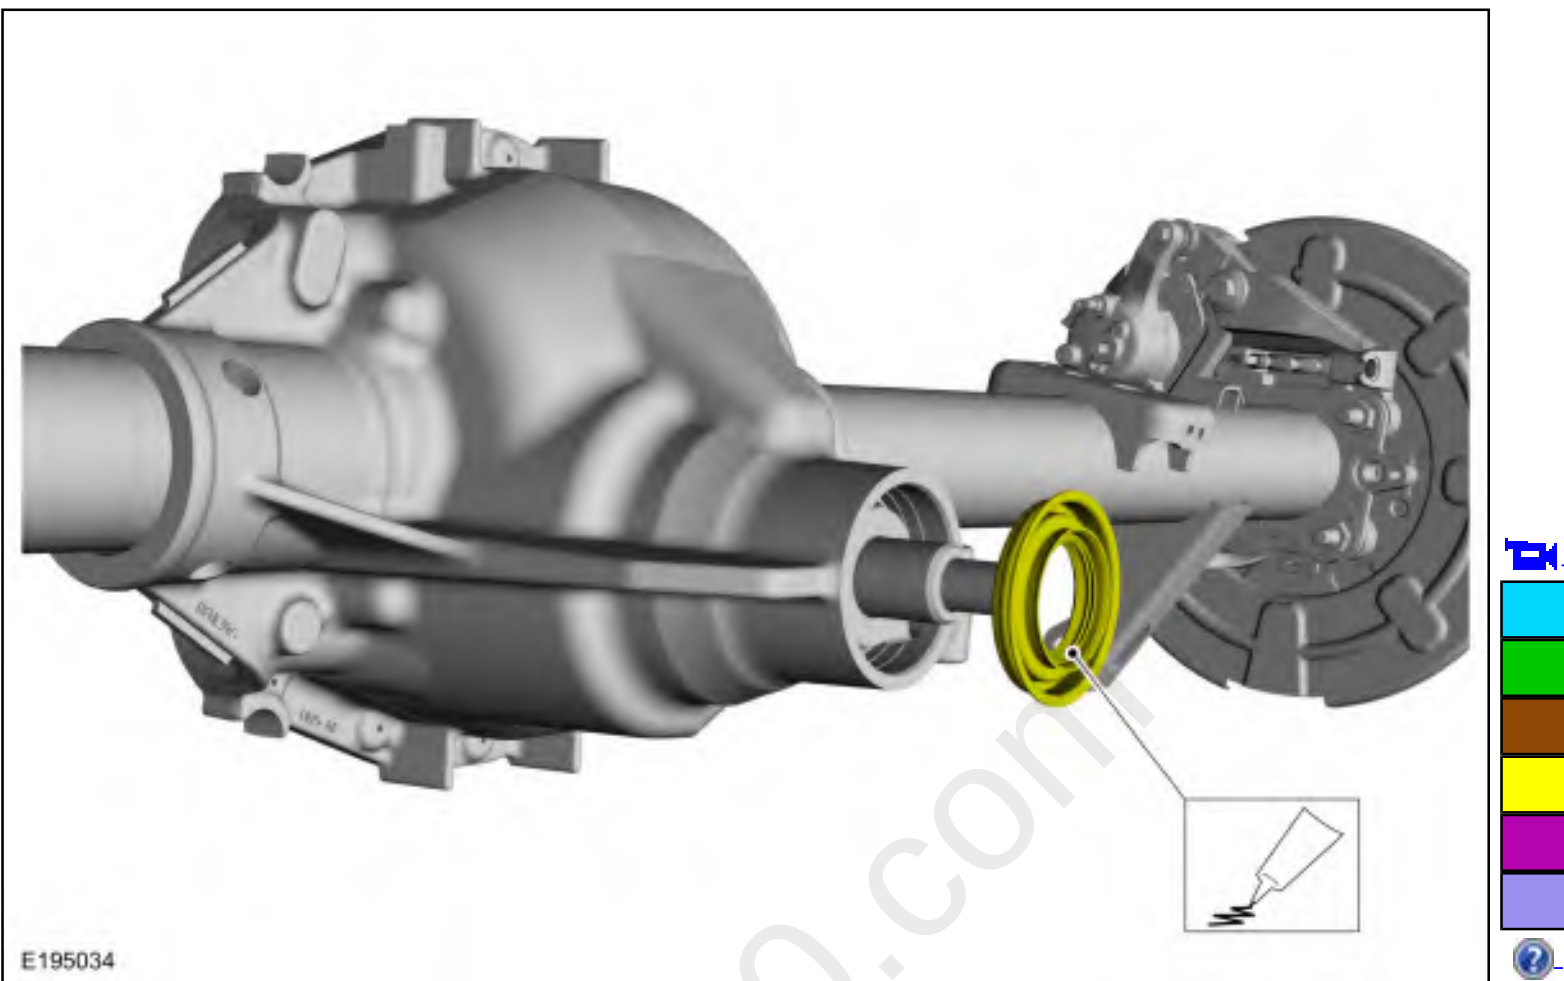

2. Using the special tool, install the drive pinion seal.
Use Special Service Tool: 205-208 (T83T-4676-A) Installer, Drive Pinion Oil Seal.

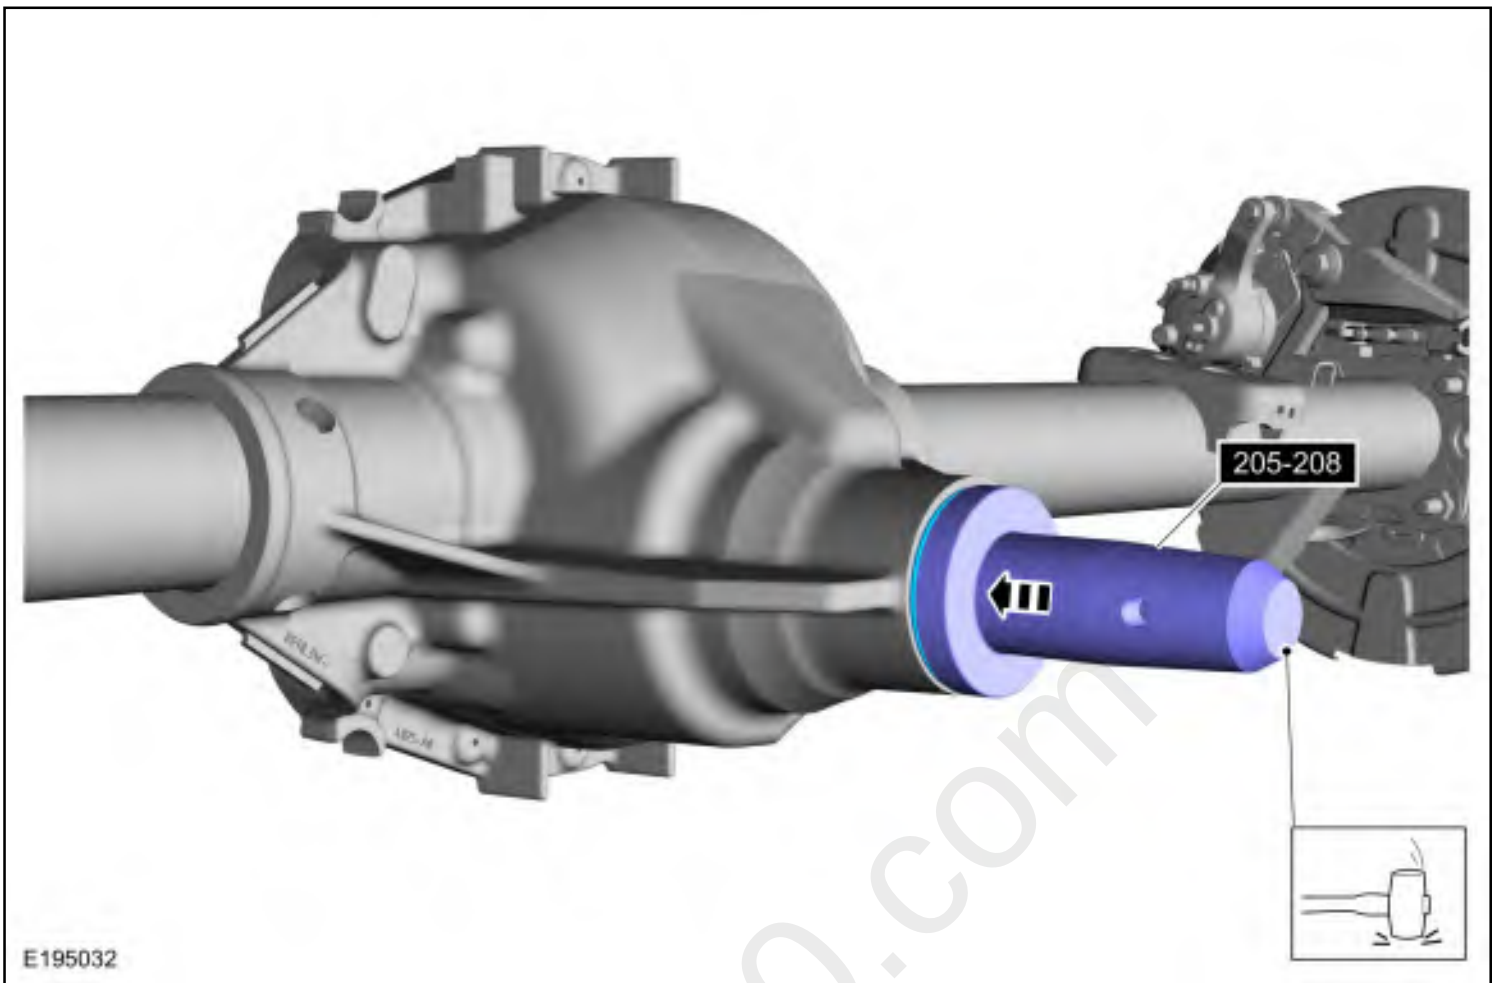

3. Install the drive pinion flange.

Refer to: [Drive Pinion Flange](#) (205-02B Rear Drive Axle/Differential - Vehicles With: Ford 9.75 Inch Ring Gear, Removal and Installation).