


Fuel Rail Pressure (FRP) Sensor

Base Part Number: Base Part Number: 9F972

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the intake manifold.
Refer to: [Intake Manifold](#) (303-01D Engine - 5.0L 32V Ti-VCT, Removal and Installation).
2. Disconnect the FRP temperature sensor.

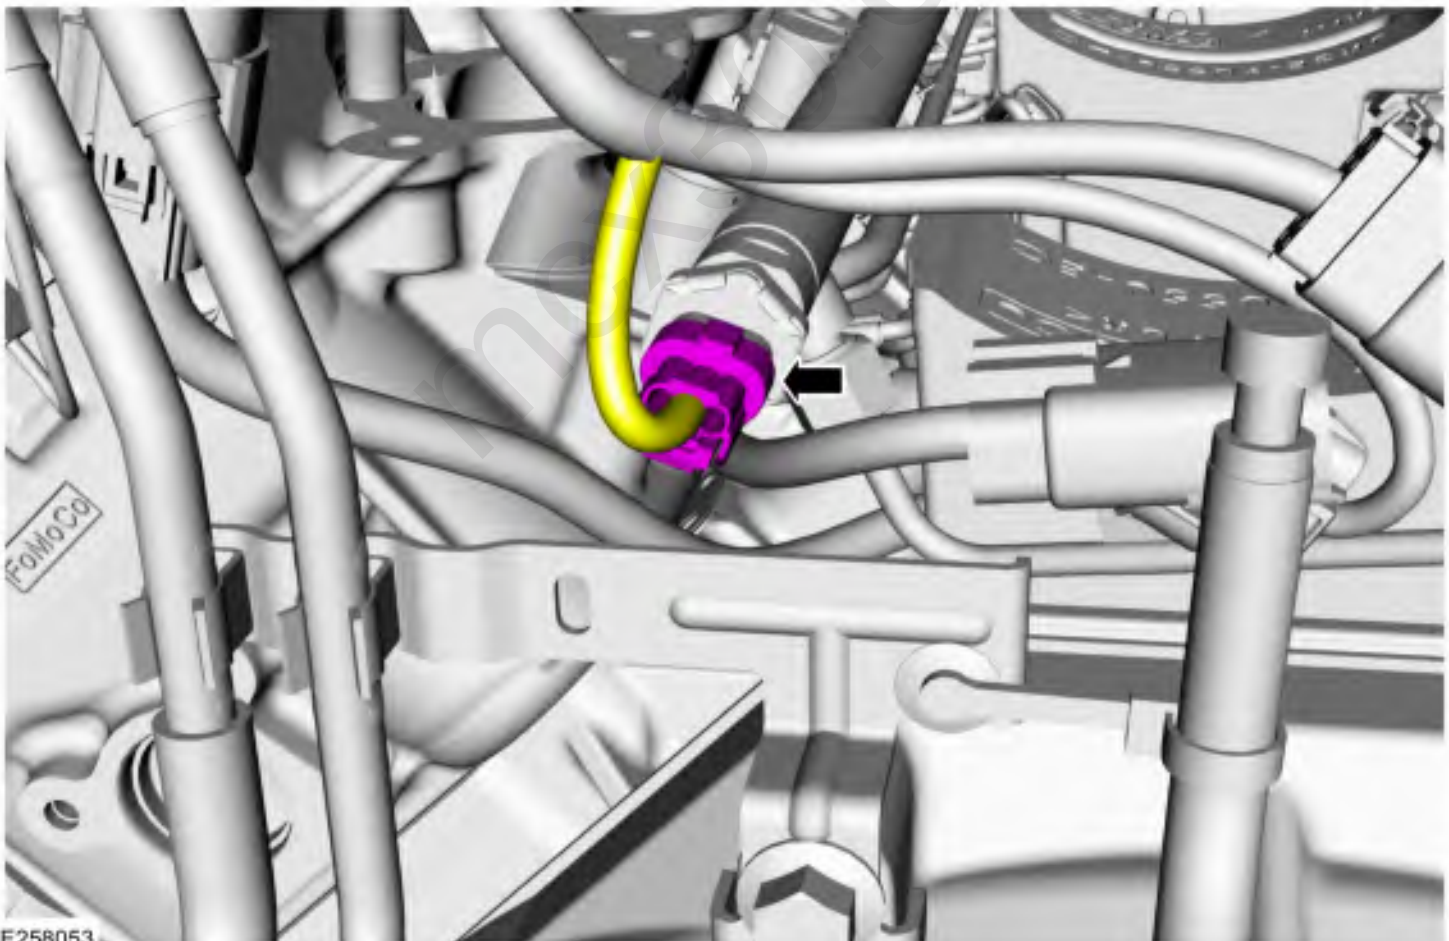

3. **NOTE:** Torque cannot exceed 40 Nm or there is a potential to damage the FRP sensor.

Remove the FRP temperature sensor.


Torque:

Stage 1: 44 lb.in (5 Nm)

Stage 2: Loosen: 1 turn(s)

Stage 3: 44 lb.in (5 Nm)

Stage 4: 19°

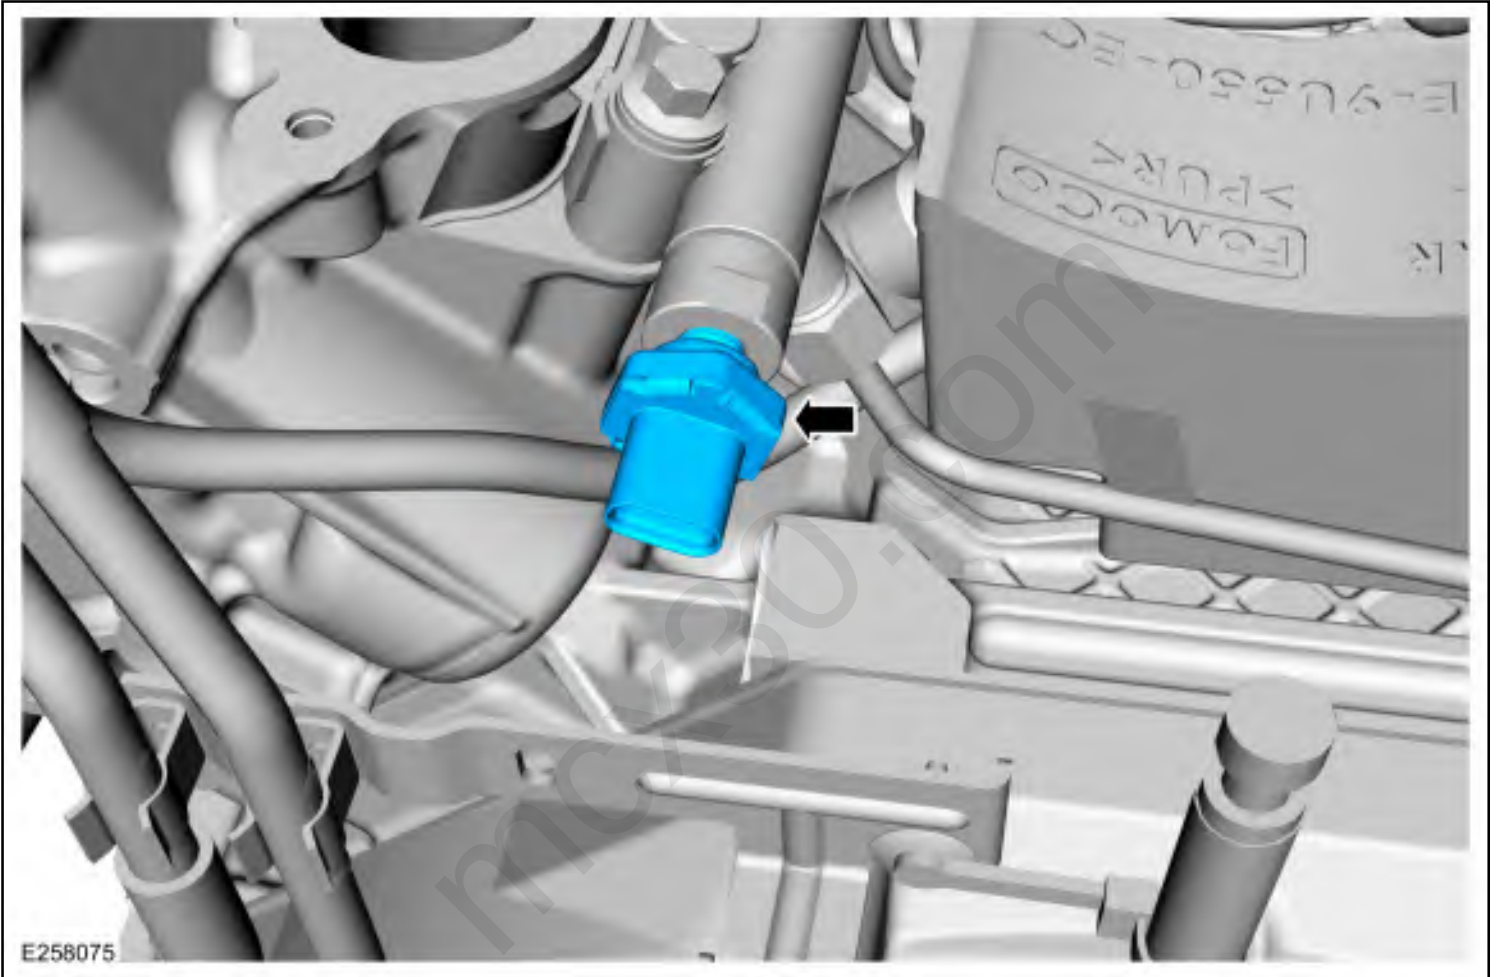

Installation

NOTE: Lubricate the threaded area of the new FRP temperature sensor with clean engine oil prior to installation.

1. To install, reverse the removal procedure.