


Fuel Rail Pressure and Temperature Sensor


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Release the fuel system pressure.
Refer to: [Fuel System Pressure Release](#) (310-00D Fuel System - General Information - 5.0L 32V Ti-VCT, General Procedures).
2. Remove the fuel rail insulator.

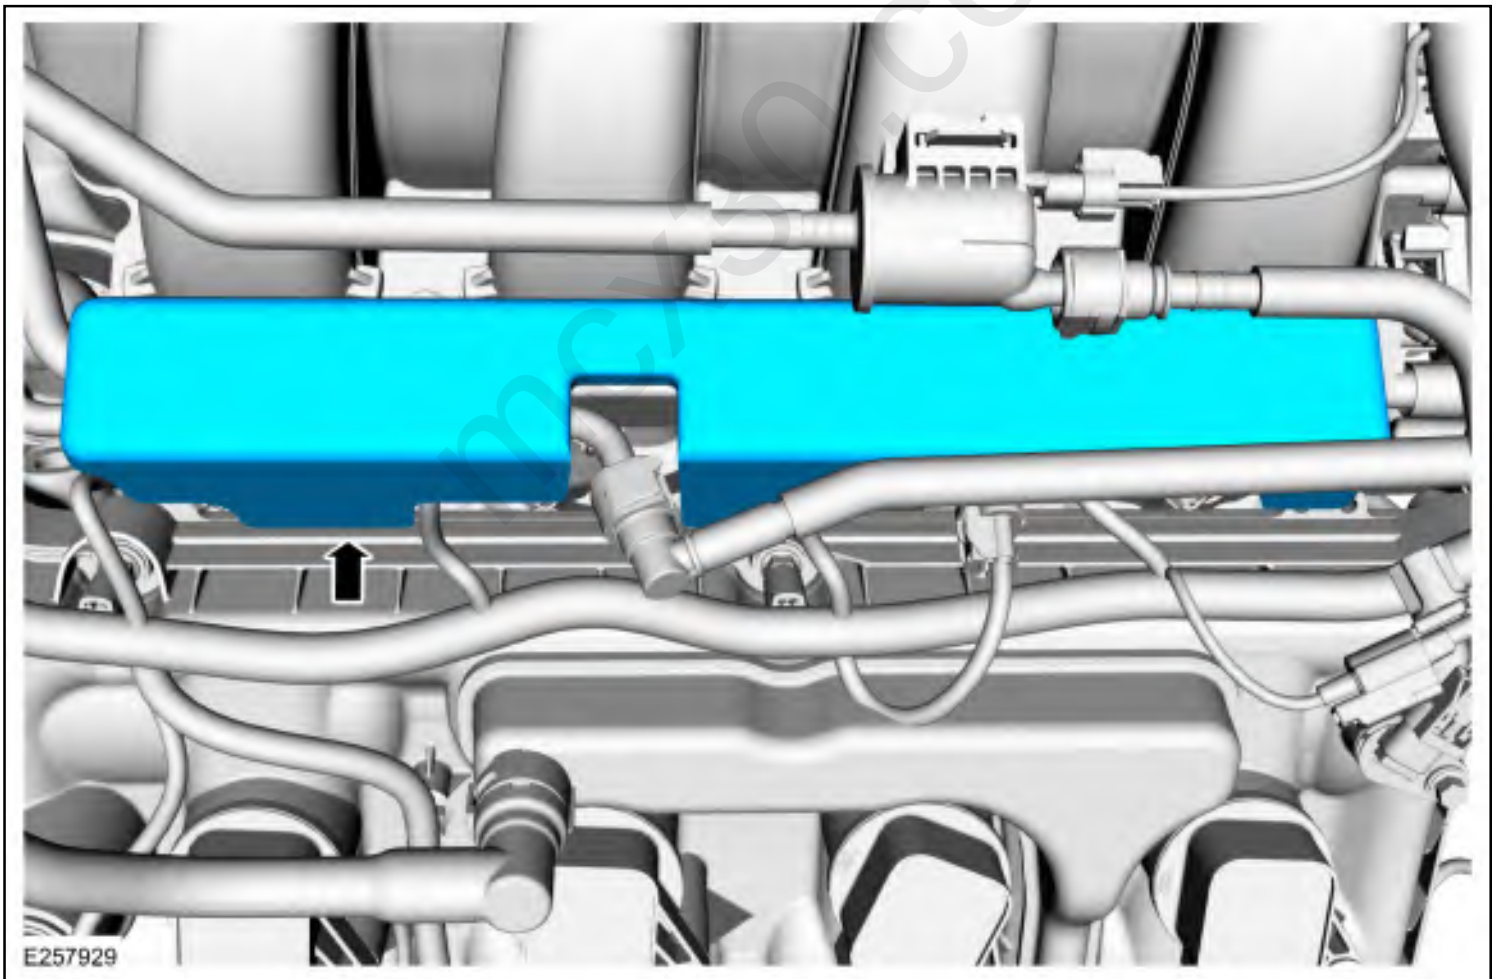

3. Disconnect the FRP sensor electrical connector.

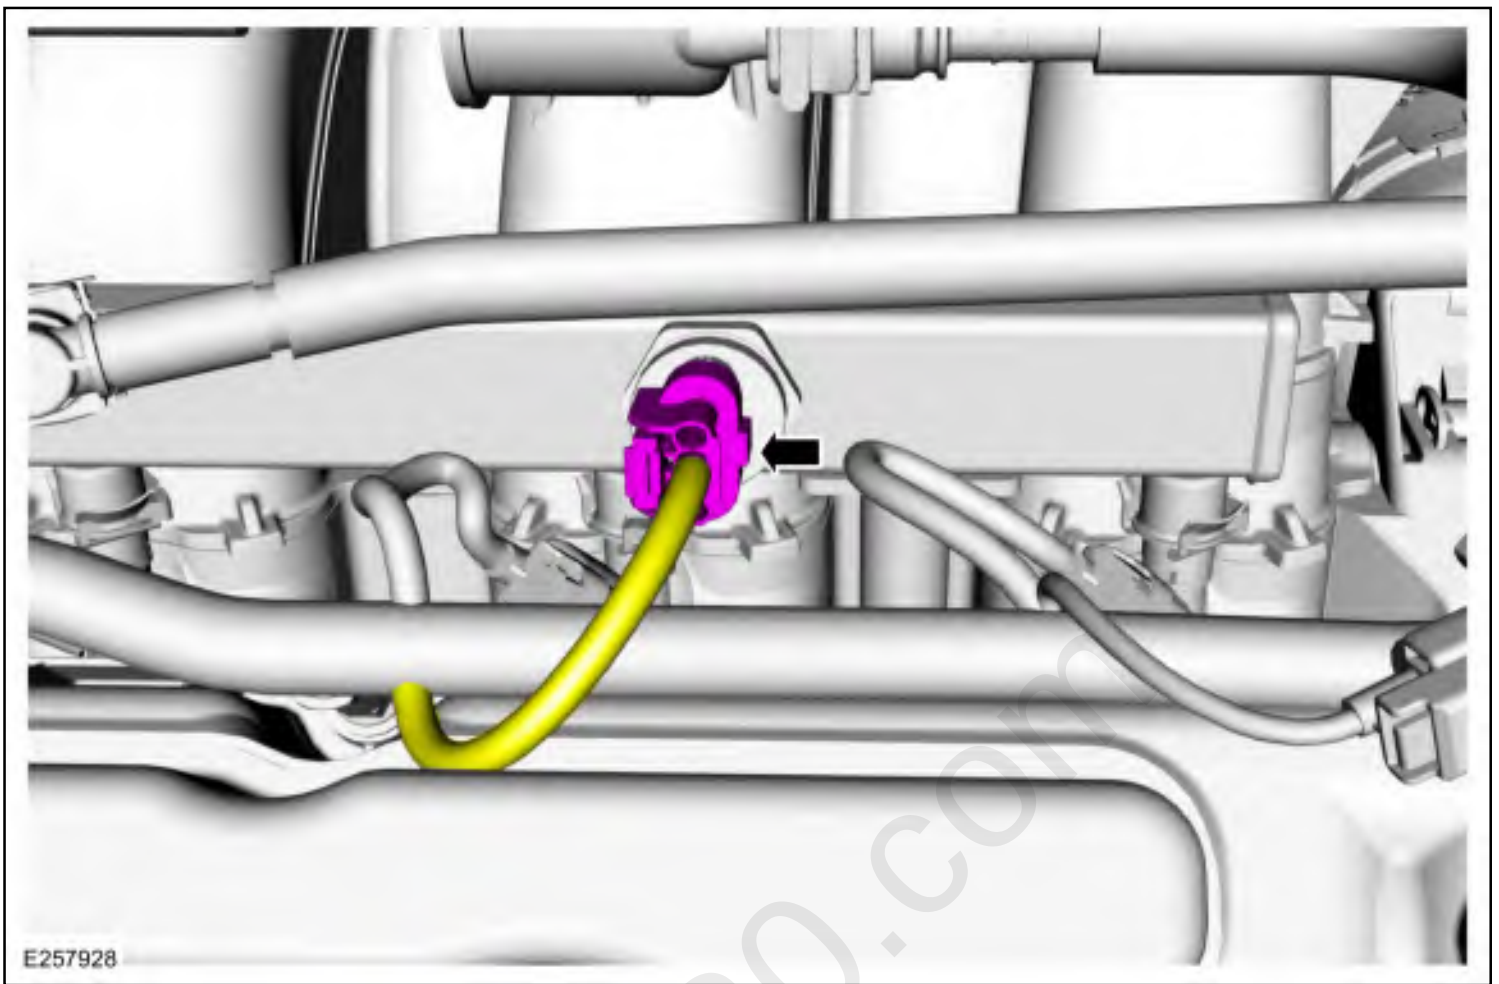


4. Remove the FRP sensor.

Torque:

Stage 1: 53 lb.in (6 Nm)

Stage 2: 25°

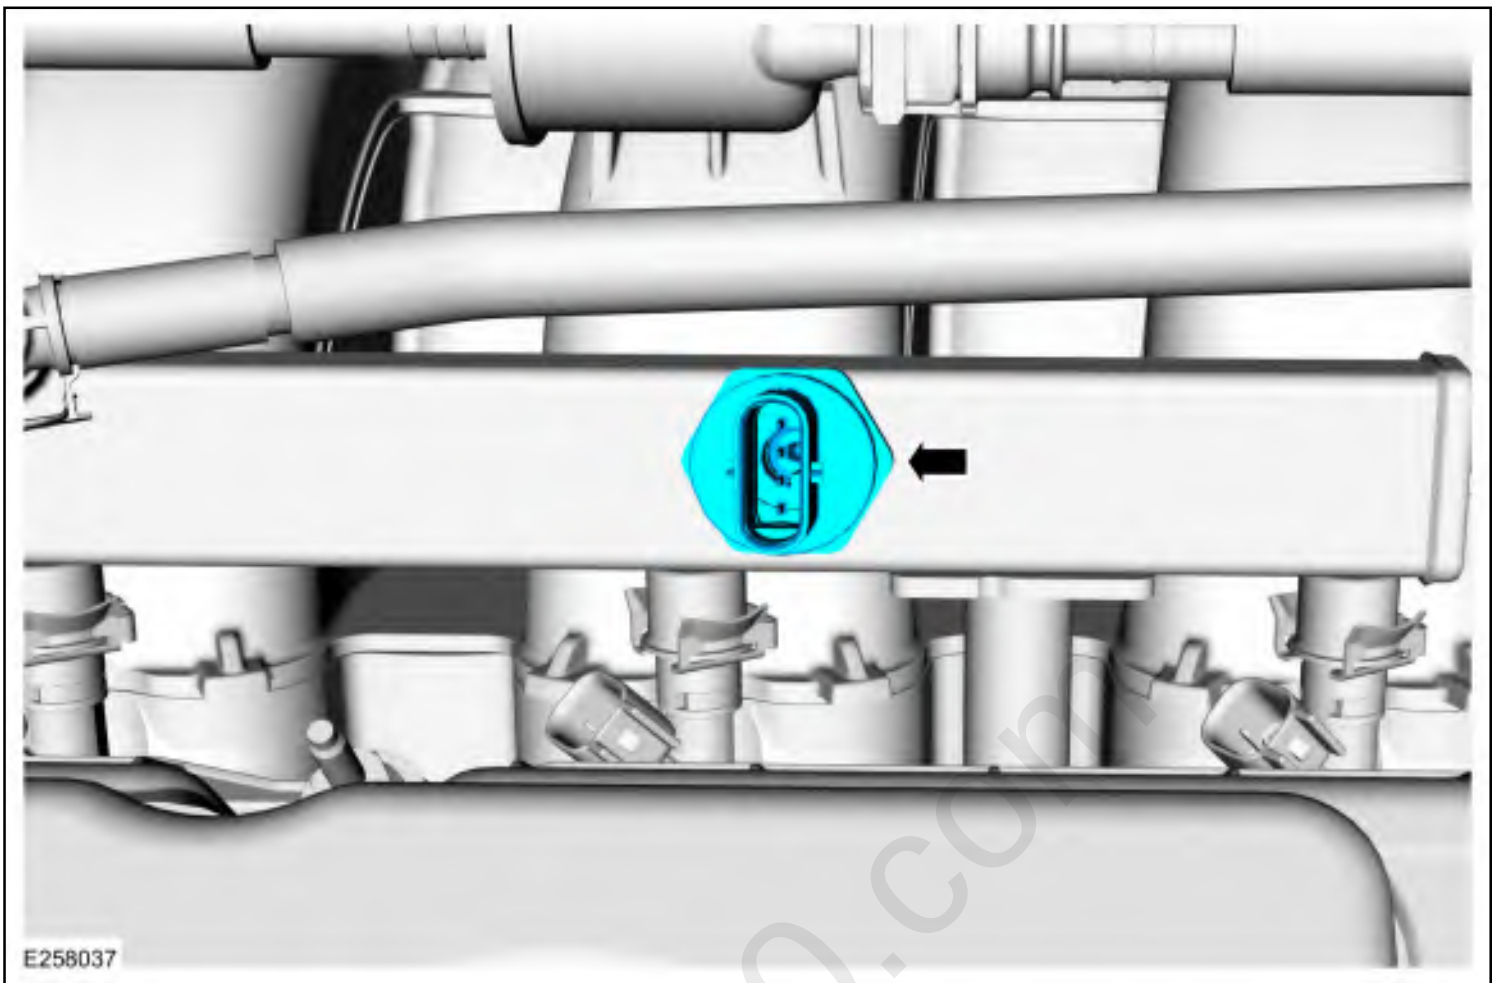

Installation

NOTE: Lubricate the threaded area of the new FRP temperature sensor with clean engine oil prior to installation.

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company