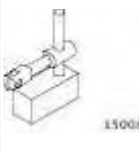



General Procedures

Special Tool(s) / General Equipment

	Holding Fixture, Dial Indicator Gauge 205-044 (15-008)
Dial indicator gauge	


Check

1. **NOTE:** Do not to confuse lower arm ball joint looseness with bearing looseness.
Raise and support the front of the vehicle. For additional information, refer to:
(100-02 Jacking and Lifting)
[Jacking and Lifting](#) (Description and Operation),
[Jacking and Lifting](#) (Description and Operation).
2. Check for loose front wheel bearings by rocking the wheels at the top and bottom.

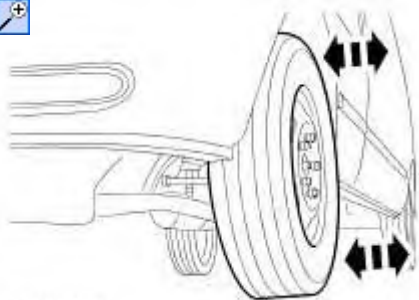

TIE0014196

3. Spin the wheel quickly by hand and make sure the wheel turns smoothly without noise from the wheel bearings.
4.
Remove the front brake caliper anchor plate.
For additional information, refer to: [Brake Caliper](#) (206-03 Front Disc Brake, Removal and Installation).
5. Position a suitable [Dial indicator gauge](#) fixture or equivalent, against the wheel hub, then push and pull the wheel hub. Measure the end play of the wheel hub and front wheel bearing assembly. There should be no end play. If end play exists, install new wheel bearings.

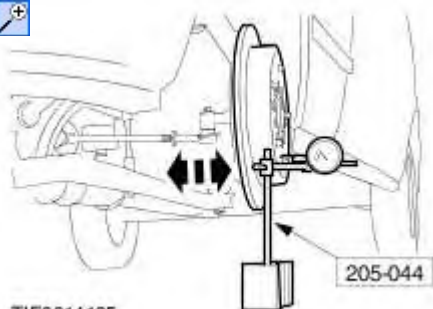

TIE0014195

- 6.

Install the front brake caliper anchor plate.

For additional information, refer to: [Brake Caliper](#) (206-03 Front Disc Brake, Removal and Installation).

mcx30.com