


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Diesel Fuel System Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Refer to: [Air Cleaner](#) (303-12A Intake Air Distribution and Filtering, Removal and Installation).
- 3.

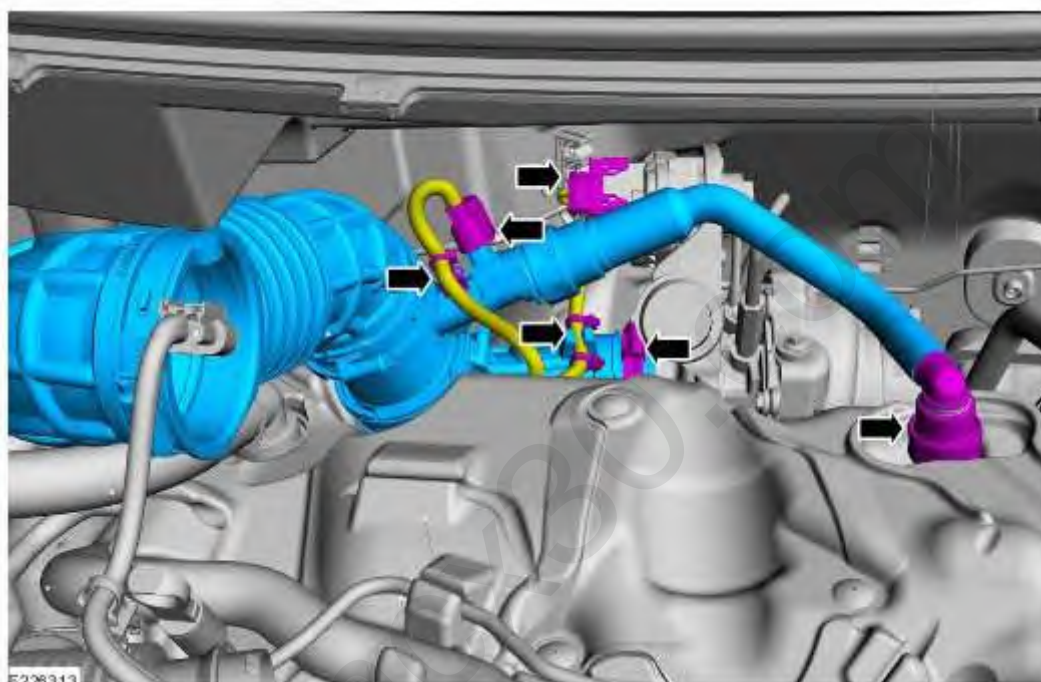


4. Torque: 10 Nm

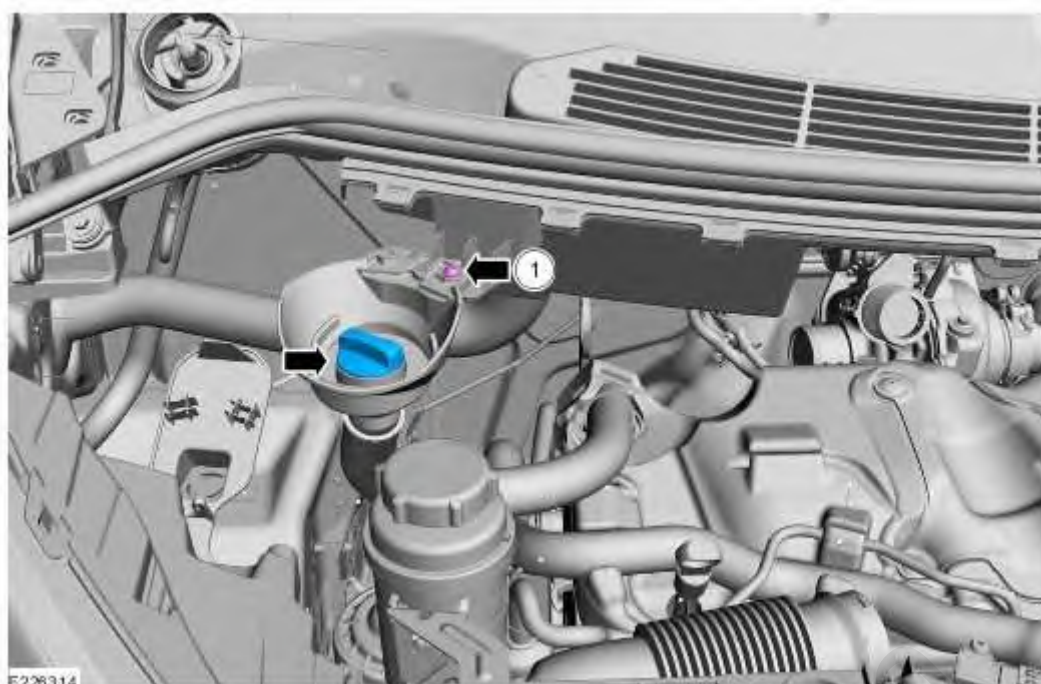


5.



6.

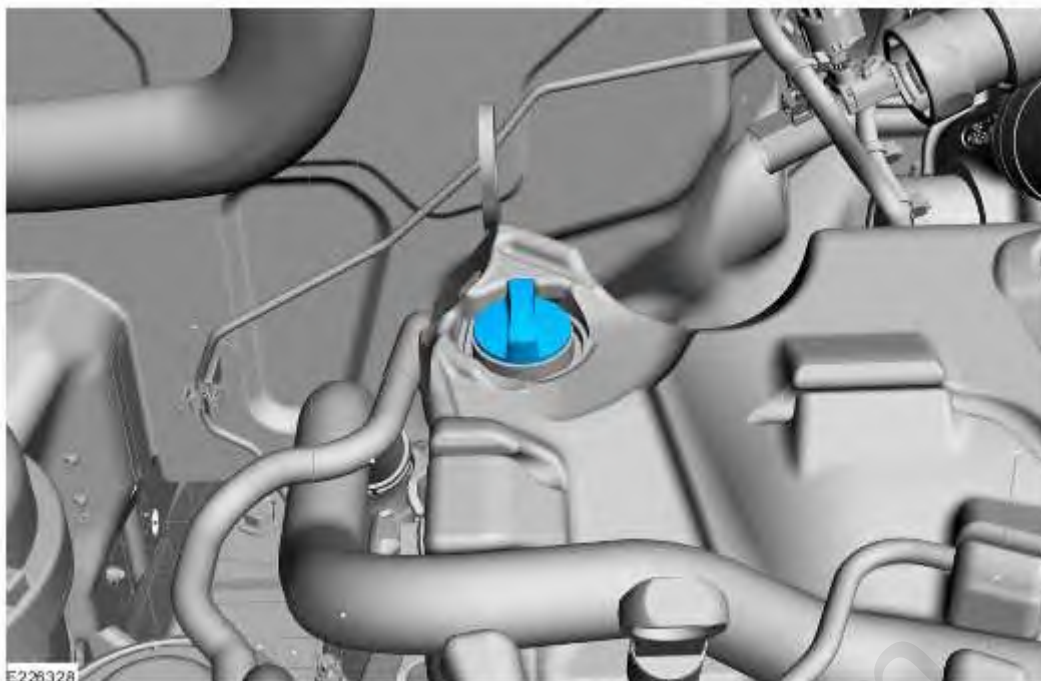


7. Torque: 10 Nm

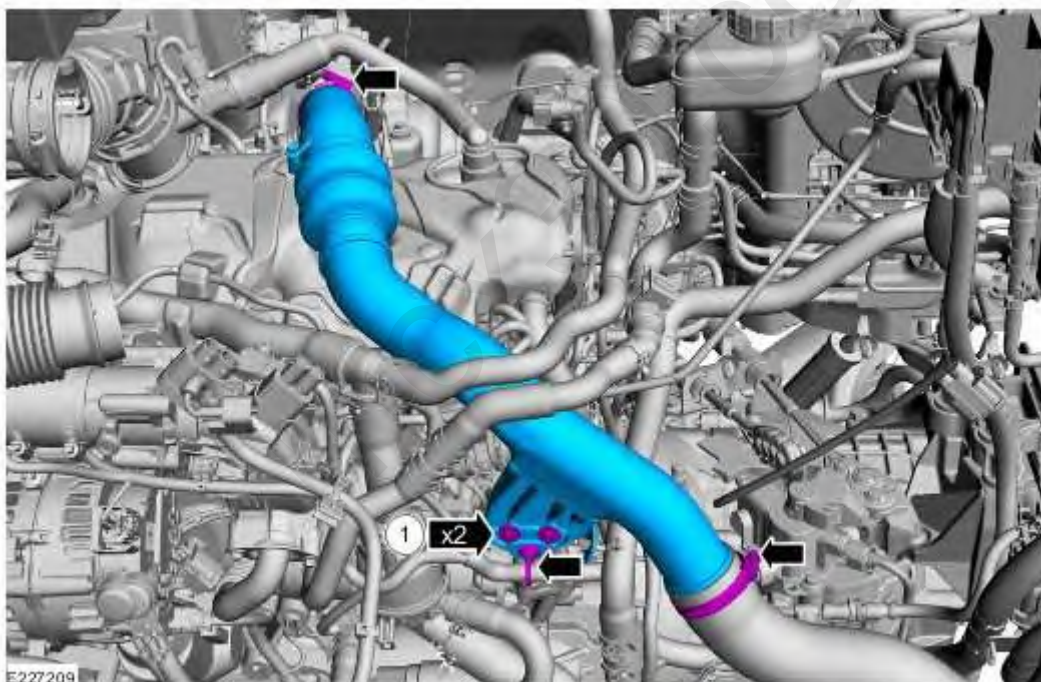


RHD FWD

8.

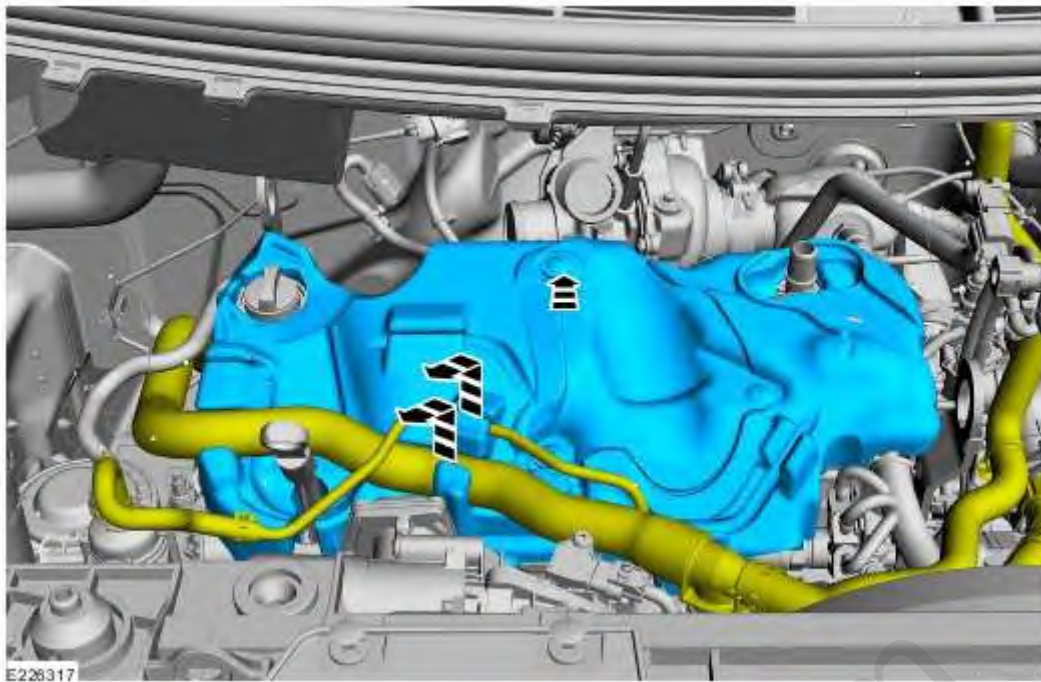


All vehicles

9.

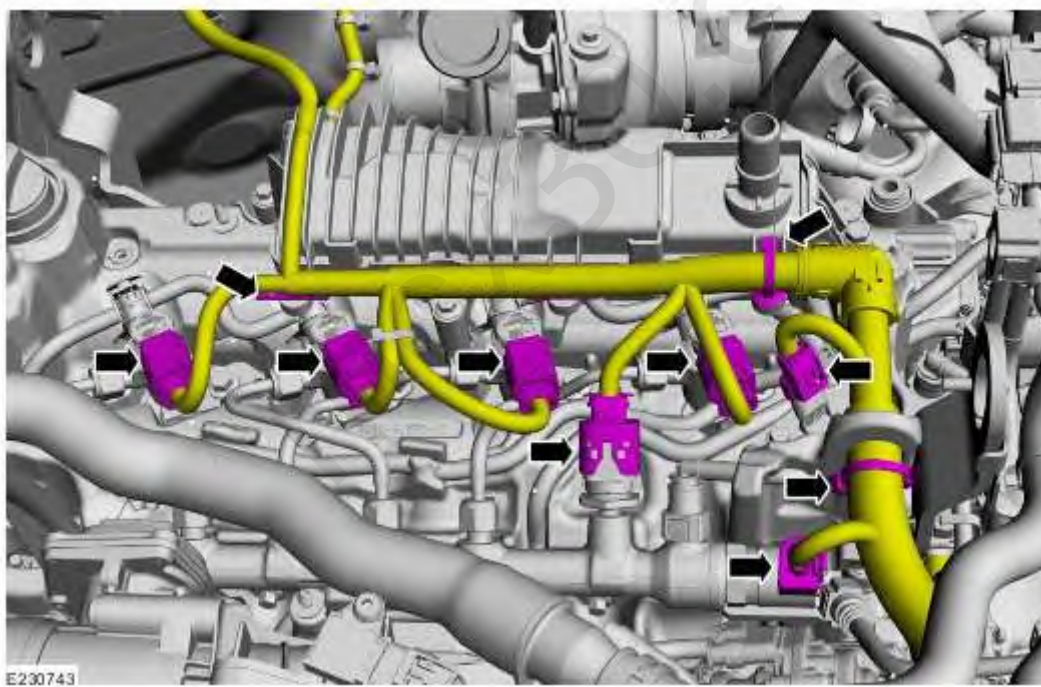


10. Refer to: [Generator - 2.0L EcoBlue \(77kW/105PS\) \(YL\)/2.0L EcoBlue \(96kW/130PS\) \(YM\)/2.0L EcoBlue \(125kW/170PS\) \(YN\)](#) (414-02 Generator and Regulator, Removal and Installation).


11.

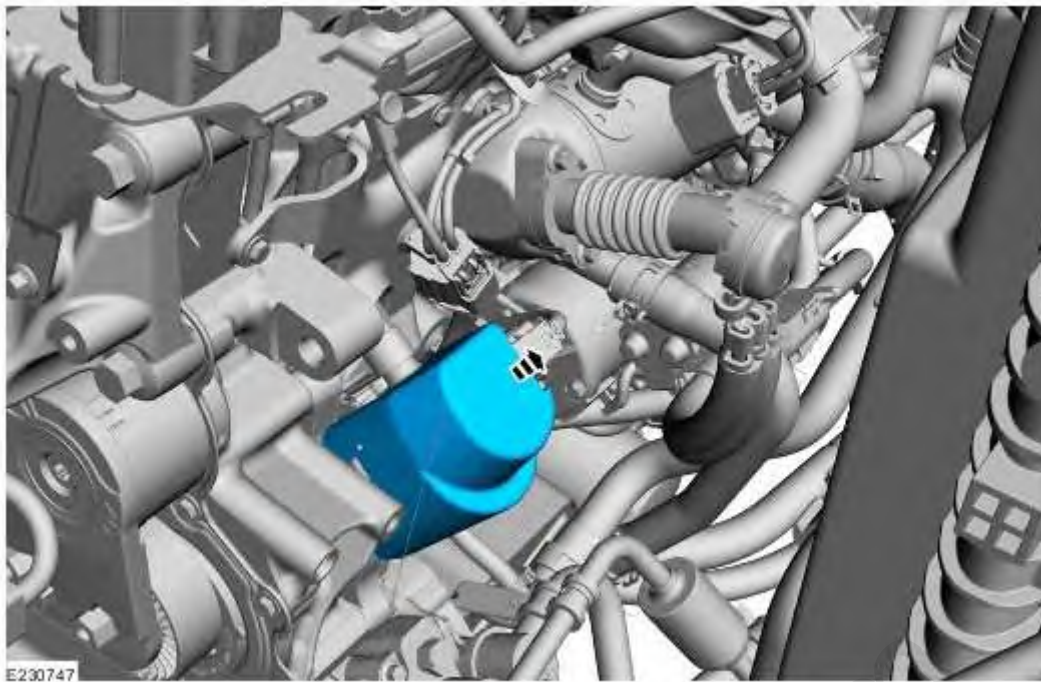


12.

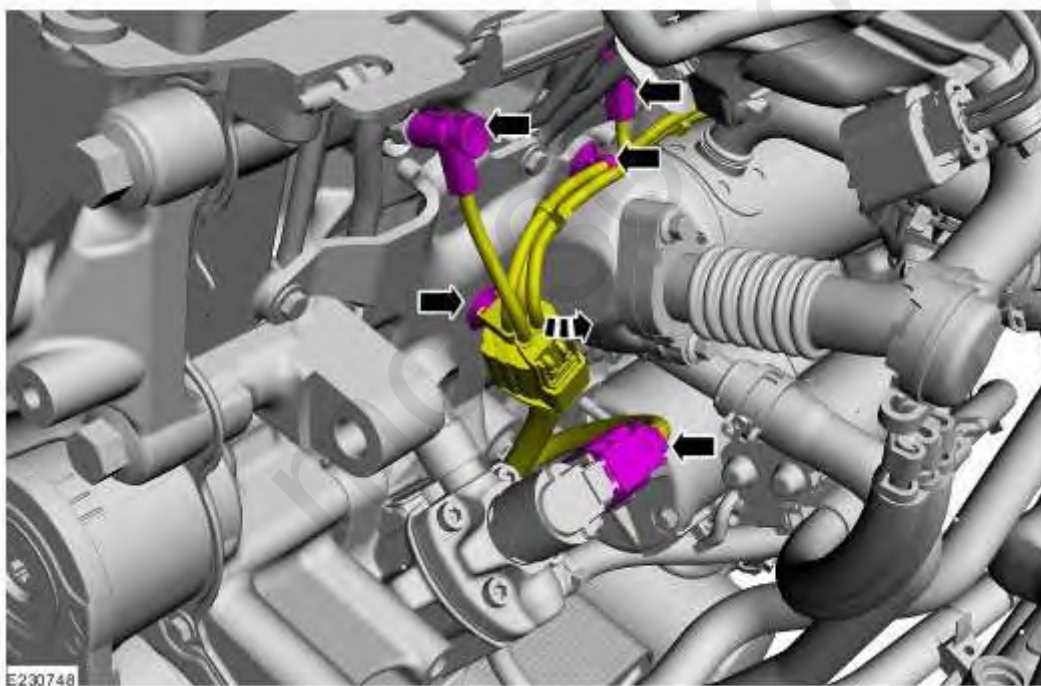

13. Torque: 10 Nm

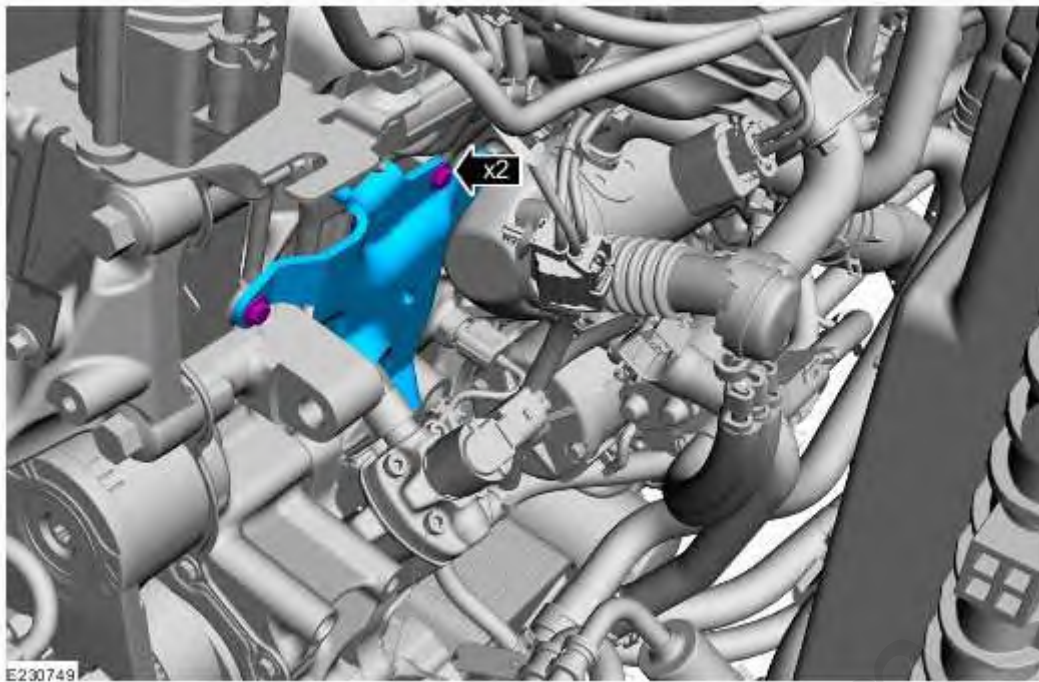


14.  **NOTICE:** Make sure that all openings are sealed with new blanking caps.
NOTE: Be prepared to collect escaping fluid.
NOTE: Use suitable paper to absorb any escaping fluid.

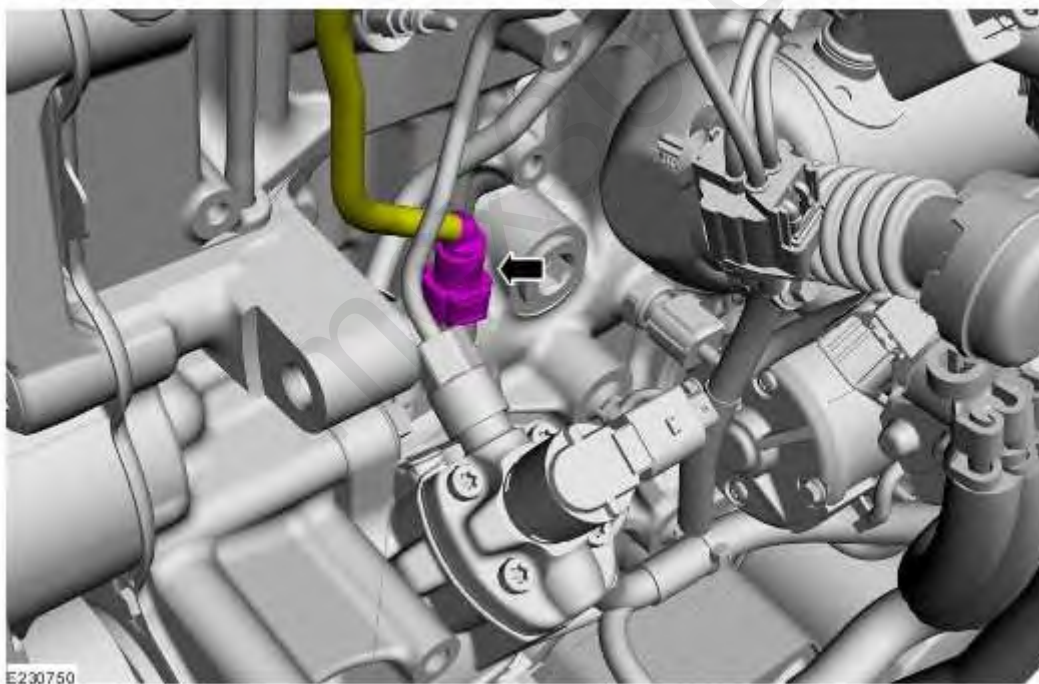


15.  **NOTICE:** Make sure that all openings are sealed with new blanking caps.
NOTE: Make sure that new components are installed.

Torque:


- 1: 12 Nm
- 2: 12 Nm
- 1: 16 Nm
- 2: 16 Nm
- 1: 55°
- 2: 55°

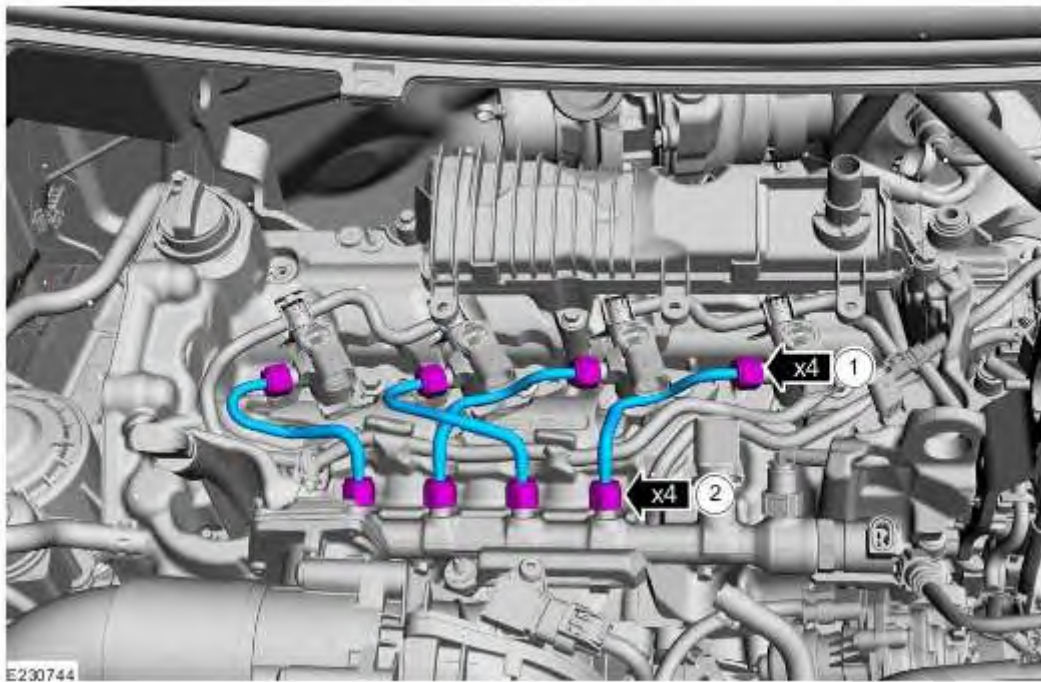

16. Torque: 10 Nm

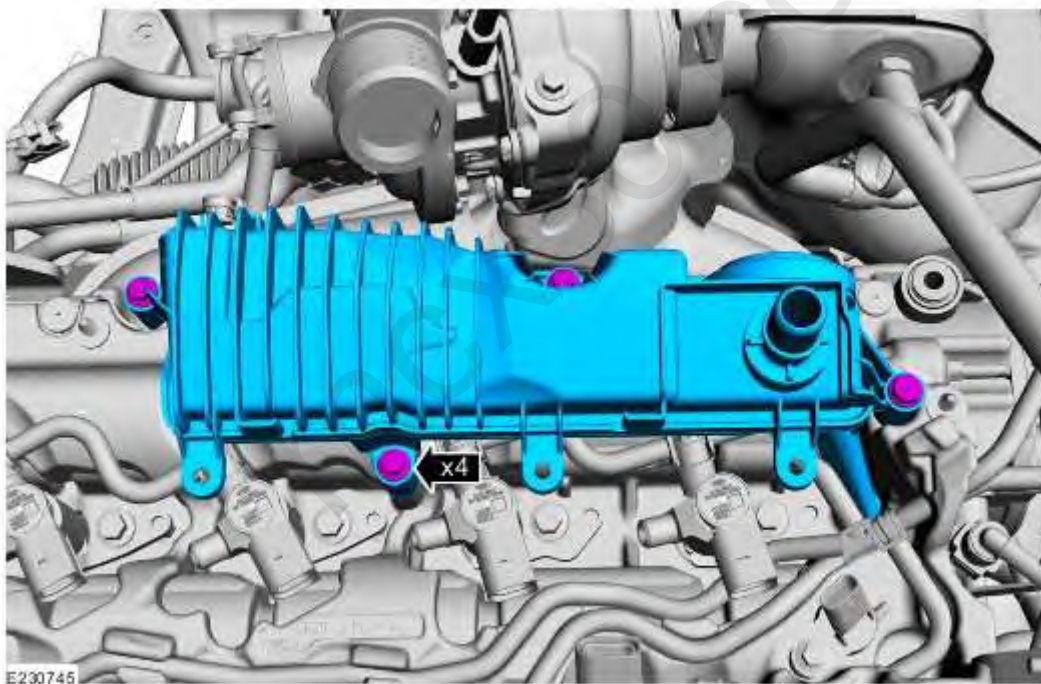

17.  **NOTICE:** Make sure that all openings are sealed with new blanking caps.
NOTE: Be prepared to collect escaping fluid.
NOTE: Use suitable paper to absorb any escaping fluid.

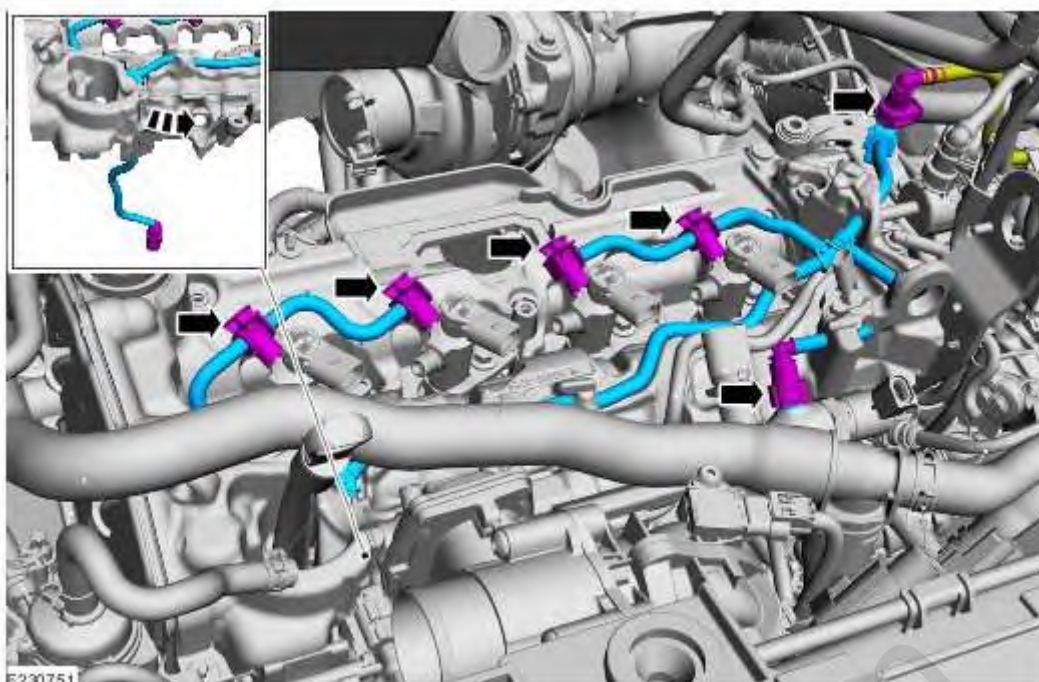

Installation

1. To install, reverse the removal procedure.