

the ignition coil,

the ignition coil bolts.

Torque tighten the ignition coil bolts [Cylinder head assembly: Exploded view](#) .

Proceed in the reverse order to removal.



Repair-32x03x01x07-01x37-1-62-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

COILS: REMOVAL - REFITTING

Locations and specifications (tightening torques, parts always to be replaced, etc.) [\(see 11A, Top and front of engine, Cylinder head assembly: Exploded view\)](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

■ Move aside the intercooler air inlet pipe [\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) .

■ Disconnect the petrol vapour rebreathing pipe from:

- the rocker cover,
- the turbo-manifold air inlet pipe.




Move the petrol vapour rebreathing pipe aside.



Remove [\(see 11A, Top and front of engine, Cylinder head assembly: Exploded view\)](#) :

-
- the design cover bolts,
-
- the design cover.

2. REMOVAL OPERATION

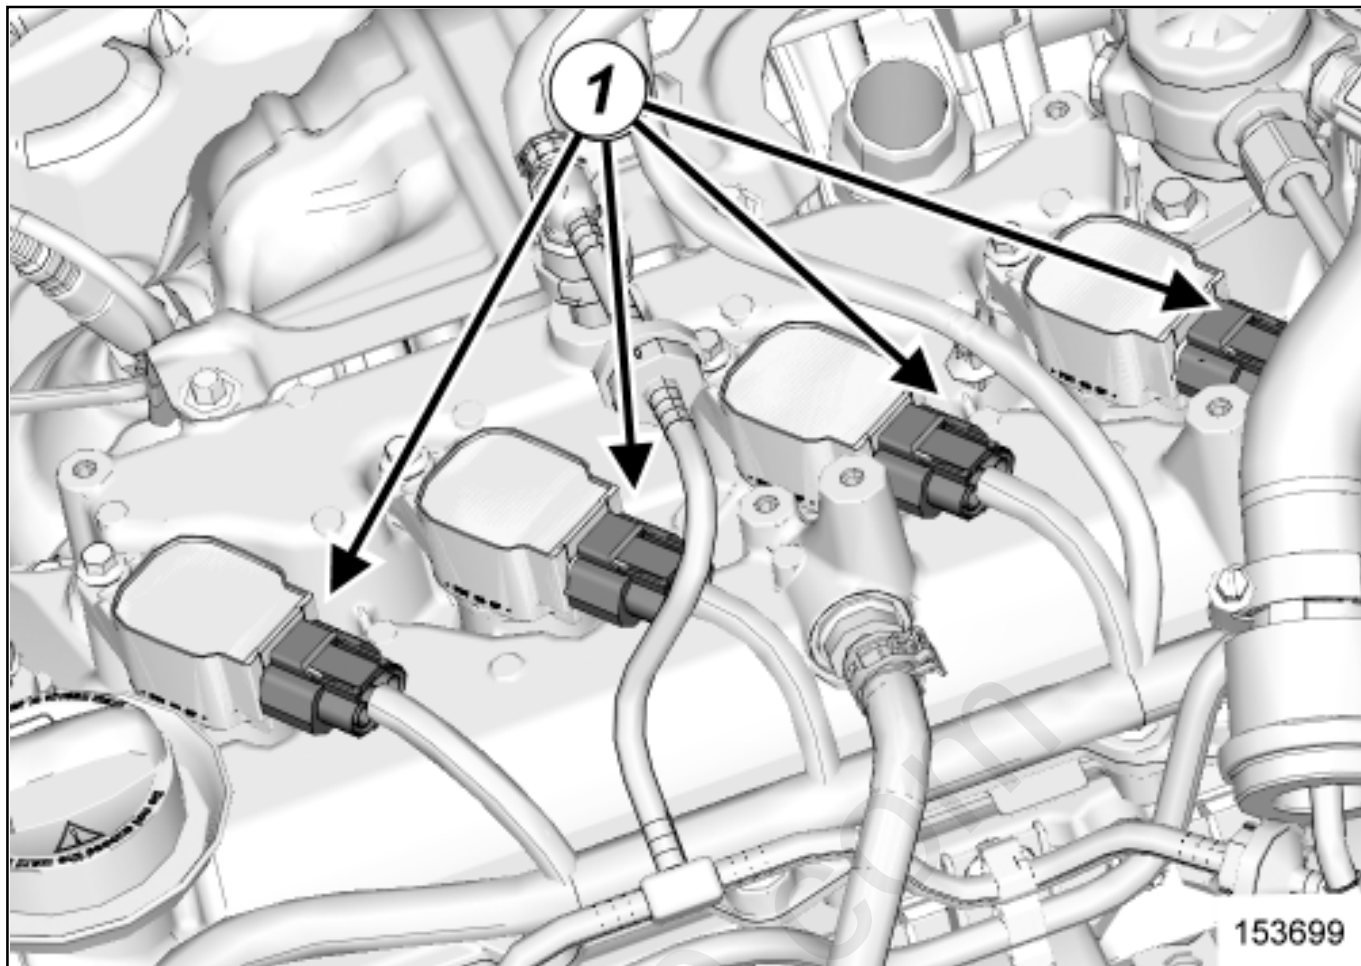


Disconnect the ignition coil connector(1) .

Remove [\(see 11A, Top and front of engine, Cylinder head assembly: Exploded view\)](#) :

-
- the ignition coil bolts,
- the ignition coil.

REFITTING

1. REFFITTING PREPARATION OPERATION

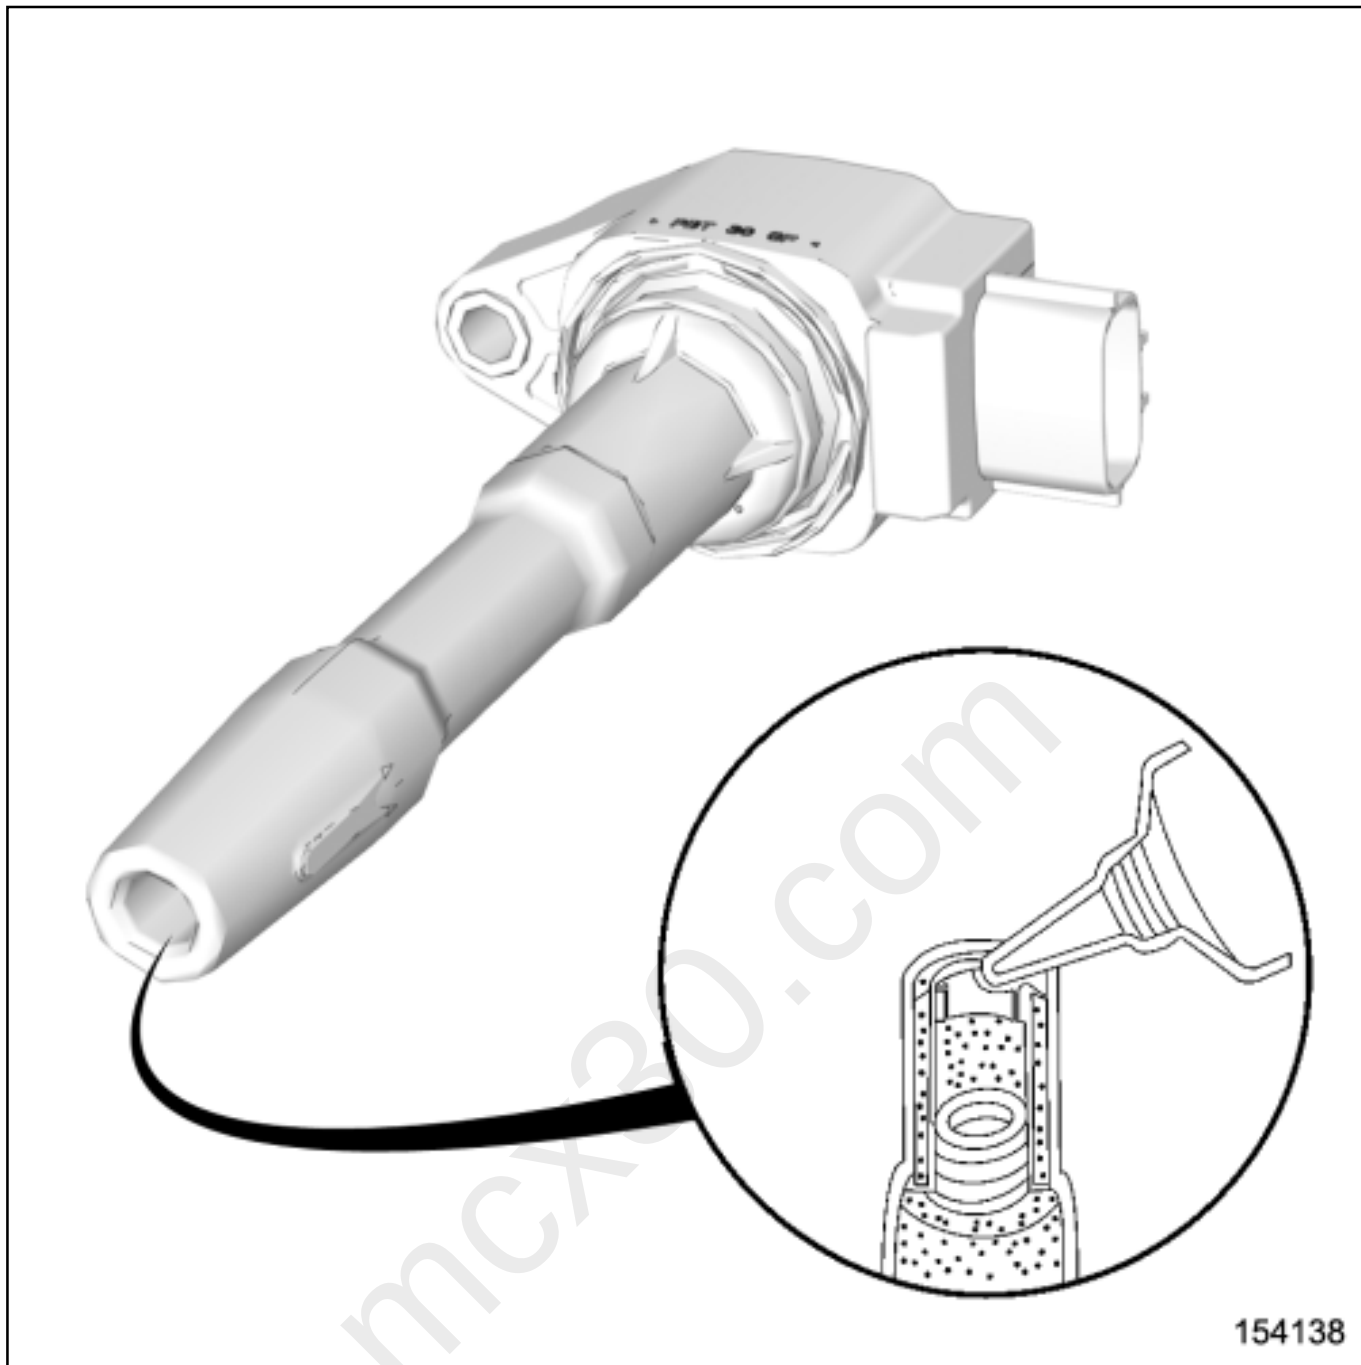

Apply a bead of fluostar 2lgrease [Vehicle: Parts and consumables for the repair](#) 2 mmin diameter on the internal perimeter of the high tension cap on the four coils.

2. REFITTING OPERATION



Refit [\(see 11A, Top and front of engine, Cylinder head assembly: Exploded view\)](#) :

