

Locate the earths located near to the weld area [Earths on body: List and location of components](#) .

3)SPECIAL NOTES ON MATING



CAUTION

If the mating faces of the parts to be welded are not accessible, use a GMAW plug weld in place of the original electrical resistance weld [Connections by arc welding under shielding gas: Description](#) (MR 400, 40C, Gas metal arc welded connections (GMAW)).



Repair-40x06x02x03-02x49-1-1-1.xml



XSL version : 3.02 du 22/07/11


FUEL FILLER FLAP LOCKING MOTOR: REMOVAL - REFITTING

REMOVAL

1. REMOVAL PREPARATION OPERATION



Remove the rear quarter panel trim [Interior body side trim assembly: Exploded view](#) .

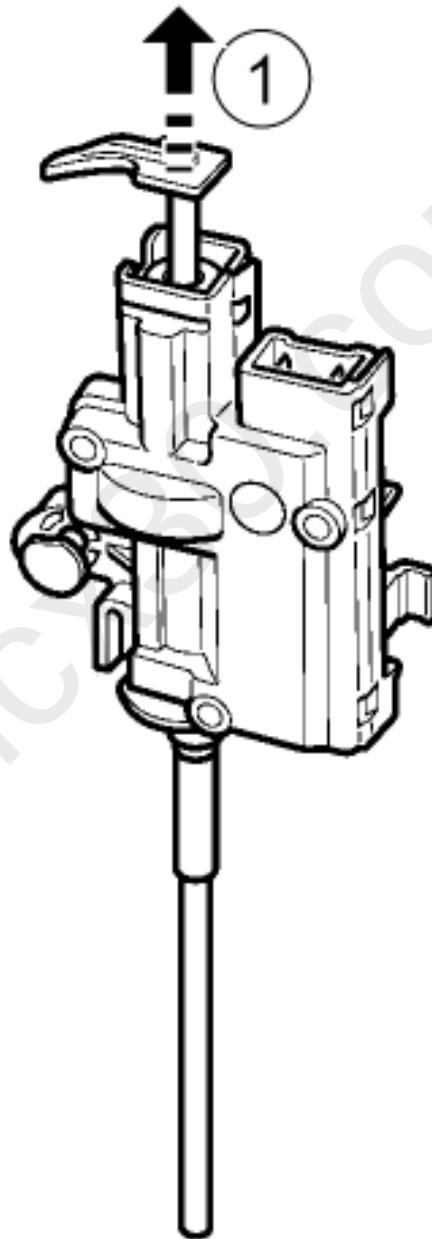

108364



Note:

During an electrical fault, activate the motor manually by raising the catch(1) .

Check that the motor is in the correct position (fuel filler flap unlocked).

2. REMOVAL OPERATION

