

TOXICITY SENSOR: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



WARNING



■ To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:

- [Air conditioning: Precautions for the repair](#) ,
- [Vehicle: Precautions for the repair](#) .

Locations and specifications (tightening torques, parts to always be replaced, etc.)([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#)) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

WARNING



DANGER: Risk of serious injury due to short-circuiting or untimely triggering of an electrical system (pyrotechnic components, windscreen wiper motor, fan assembly etc.) following possible re-supply of the 12-volt supply circuit by the voltage converter.

Please follow the instructions regarding lockout of the 12 V supply circuit.

If the procedure fails, do not continue with your task and ask an employee who is qualified and authorised to work on a high-voltage onboard network to perform fault finding [Vehicle: Precautions for the repair](#) .


■ Disconnect the 12V supply circuit [12 V supply circuit : Lockout - Removal of lockout](#) .

■ Remove:

- the front left-hand lower pillar trim [Interior body side trim assembly: Exploded view](#) ,
- the dashboard lower trim [Dashboard assembly: Exploded view](#) ,
- the centre console (see **Centre console: Removal - Refitting**) ,
- the left-hand lower bolt of the dashboard [Dashboard assembly: Exploded view](#) ,

- the front footwell air distribution duct([see 61A, Heating, Air distribution circuit assembly: Exploded view](#)) ,
- the brake pedal([Pedal assembly: Exploded view](#)) .

2. REMOVAL OPERATION

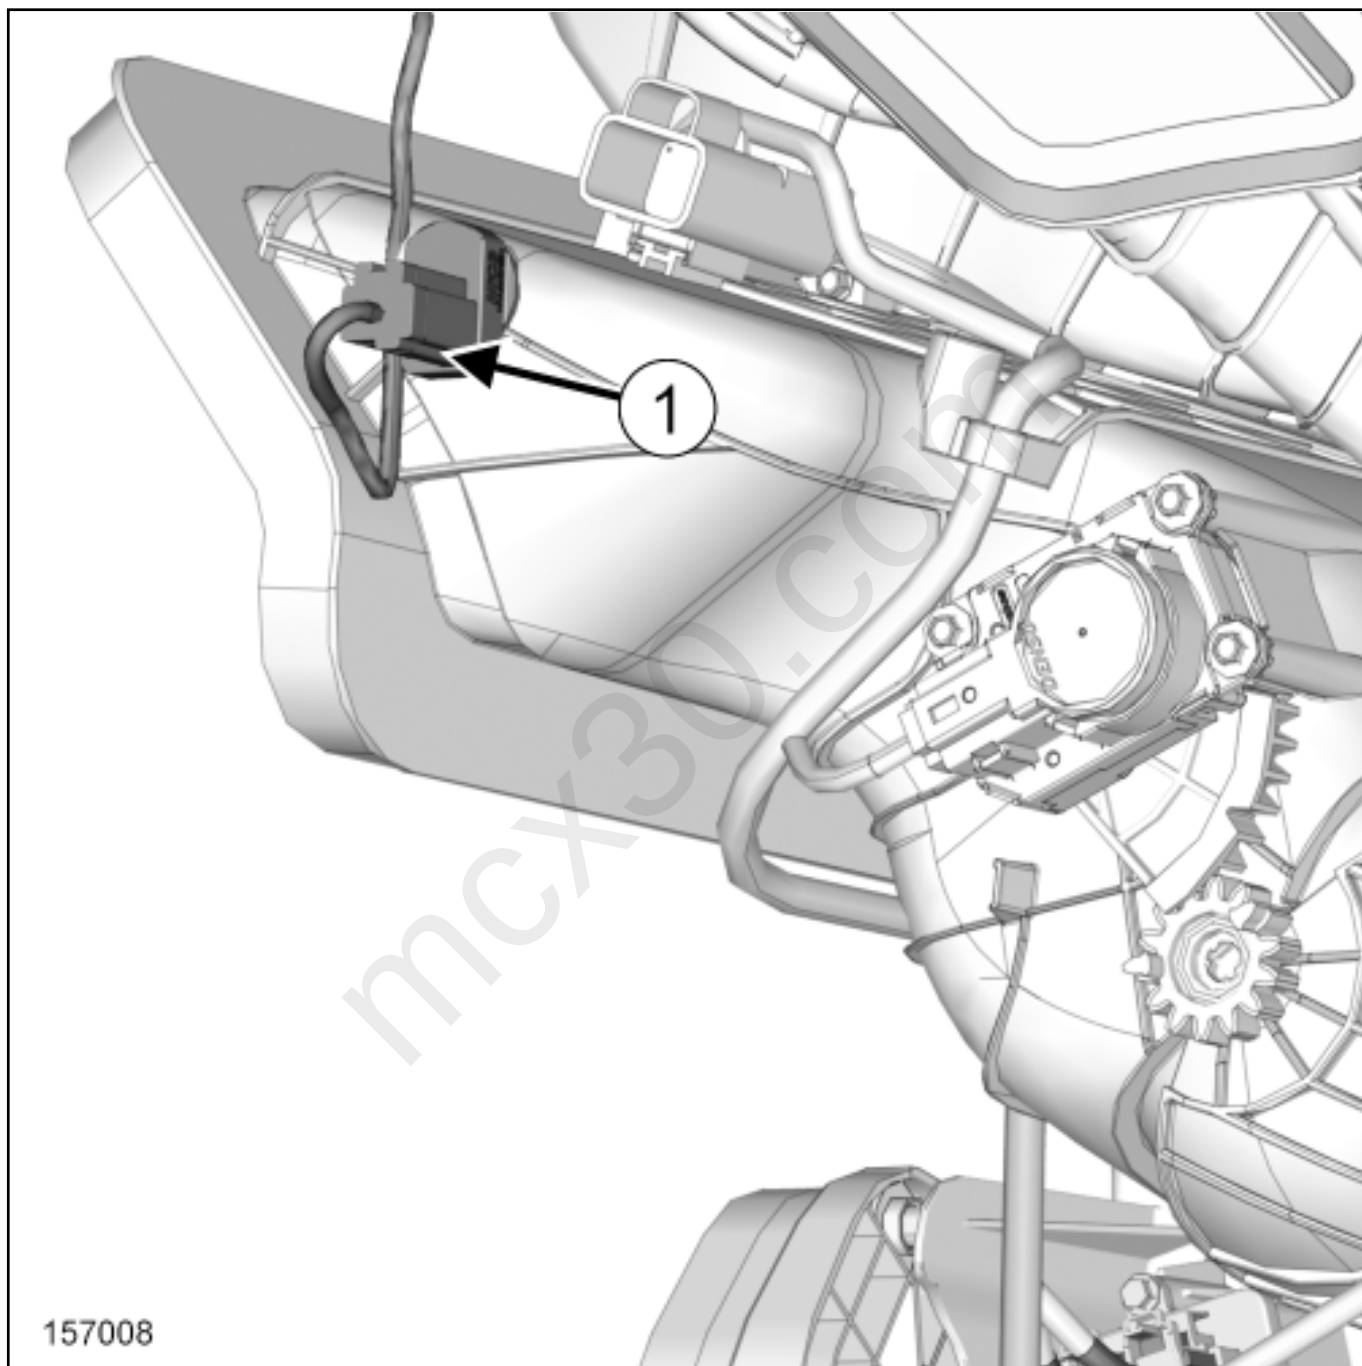

- Disconnect the toxicity sensor connector(1) .
- Remove the toxicity sensor([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#)) .

REFITTING

- Proceed in the reverse order to removal.
- Connect the 12V supply circuit [12 V supply circuit : Lockout - Removal of lockout](#) .



Repair-30x02x04x18-01x37-1-13-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com