


Removal

10.25" Cluster + 10.25" Monitor


NOTICE

- ⌘ Take care not to scratch the crash pad and related parts.
- ⌘ When removing with the screwdriver or remover, wrap the protective tape on the tools.
- ⌘ Be careful to store and handle the crash pad when removing/installing because lubricant and oil can leave a stain on the trim.


1. Disconnect the negative (-) battery terminal.
2. Using a flat-tip screwdriver or remover, remove the photo sensor cover (A).

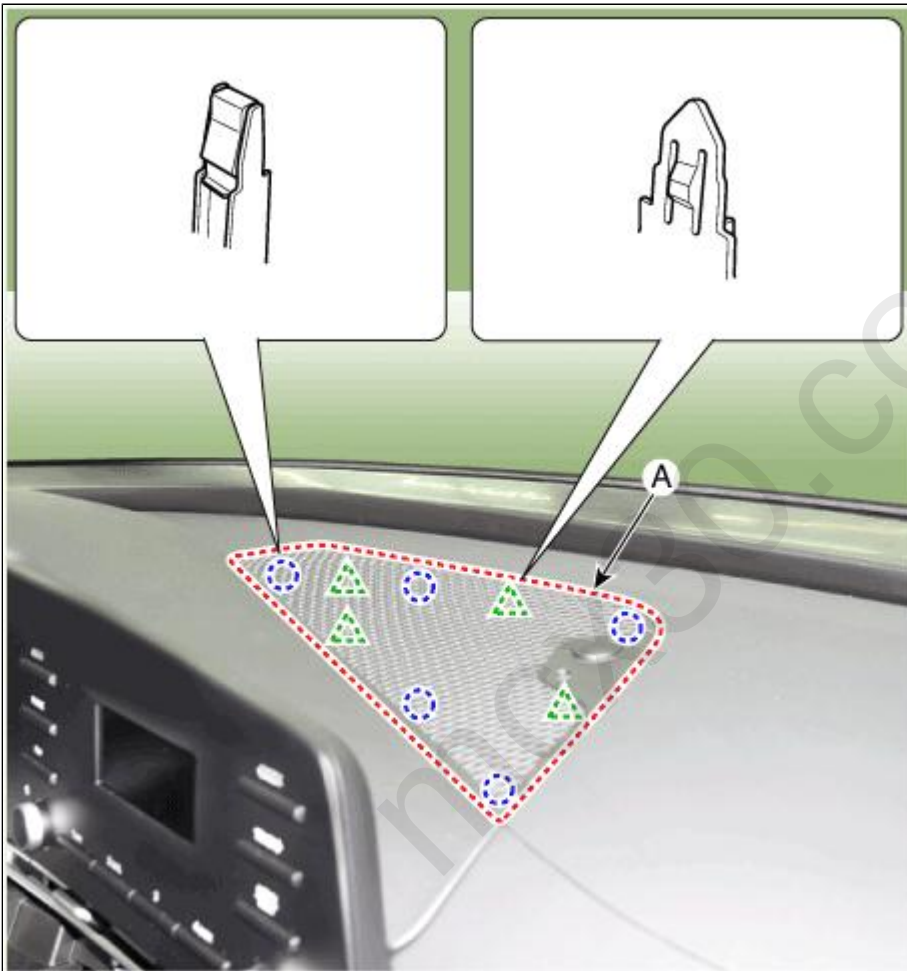




3. Disconnect photo sensor connector and security sensor connector (A).

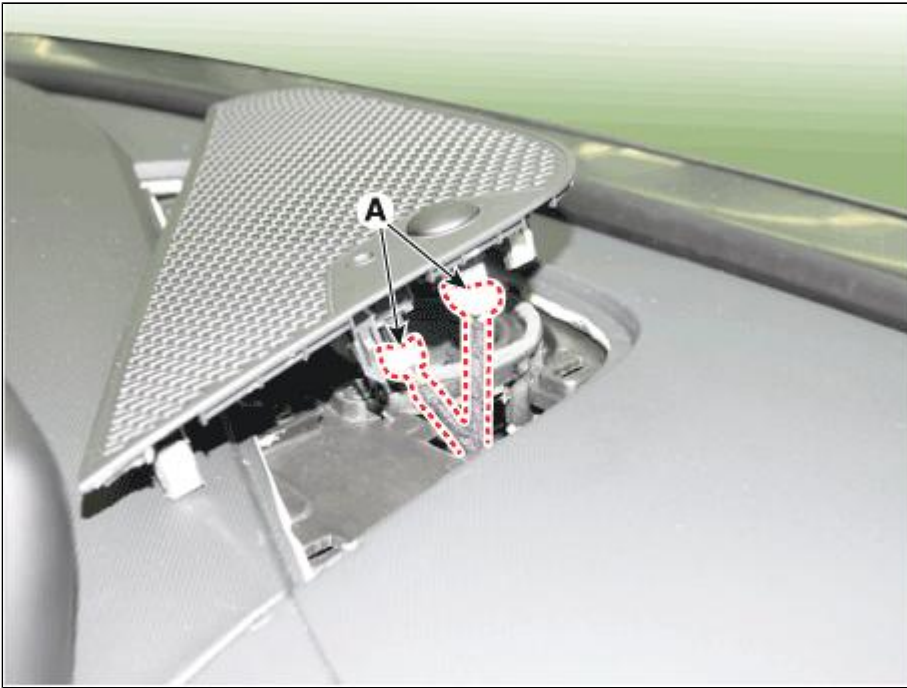

4. Using a flat-tip screwdriver or remover, remove the cluster fascia upper garnish (A).

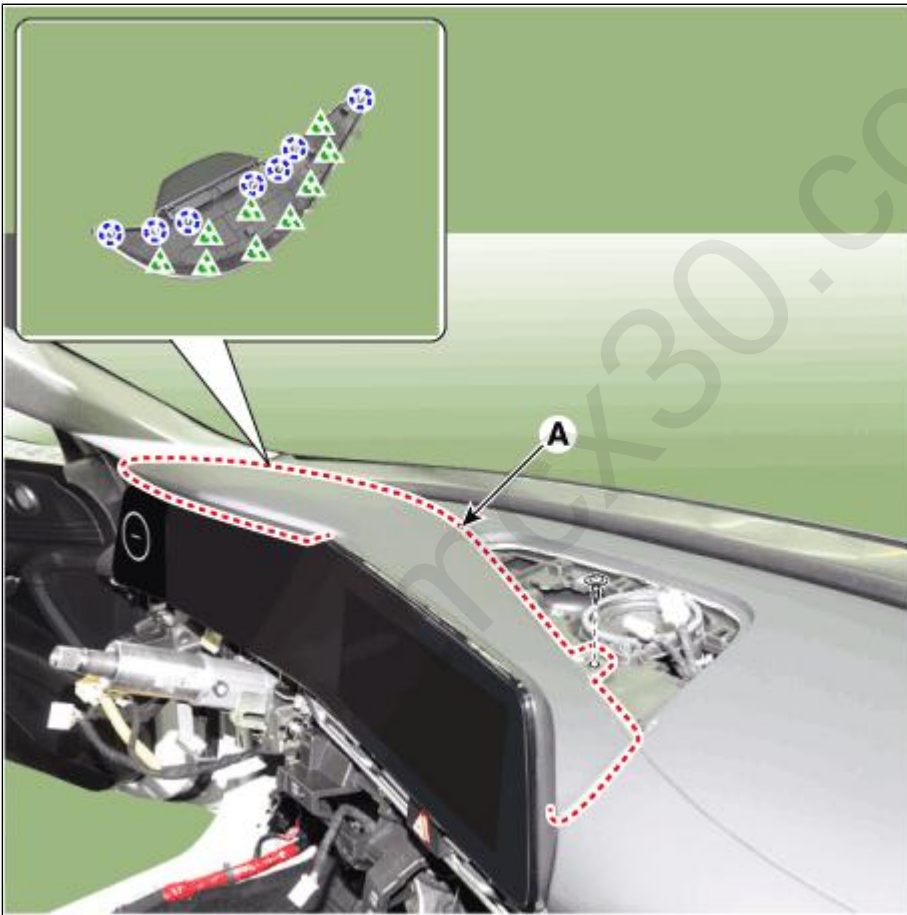

5. Remove the AVN monitor (A) after loosening mounting screws.

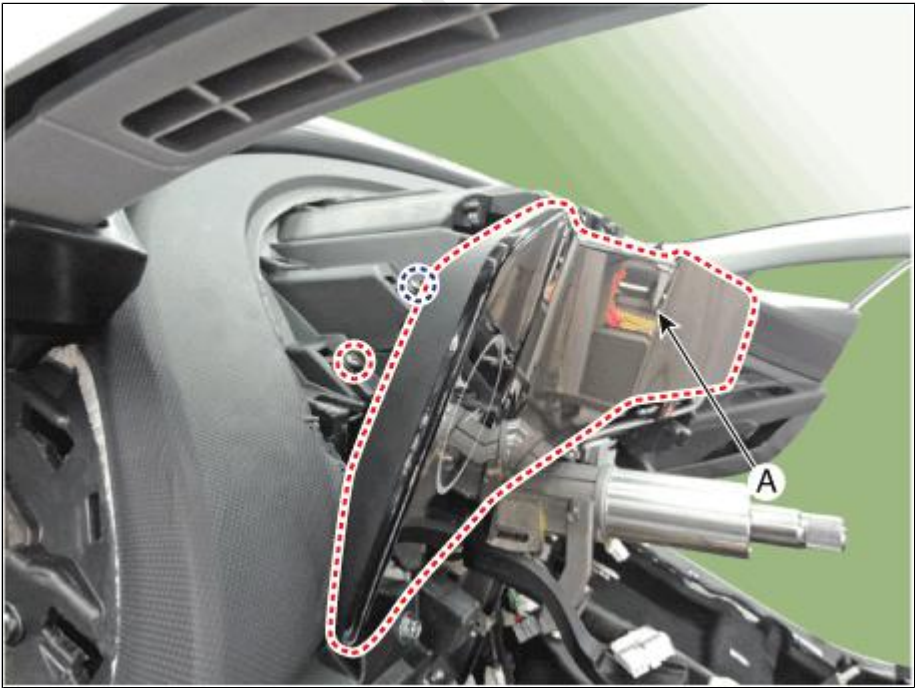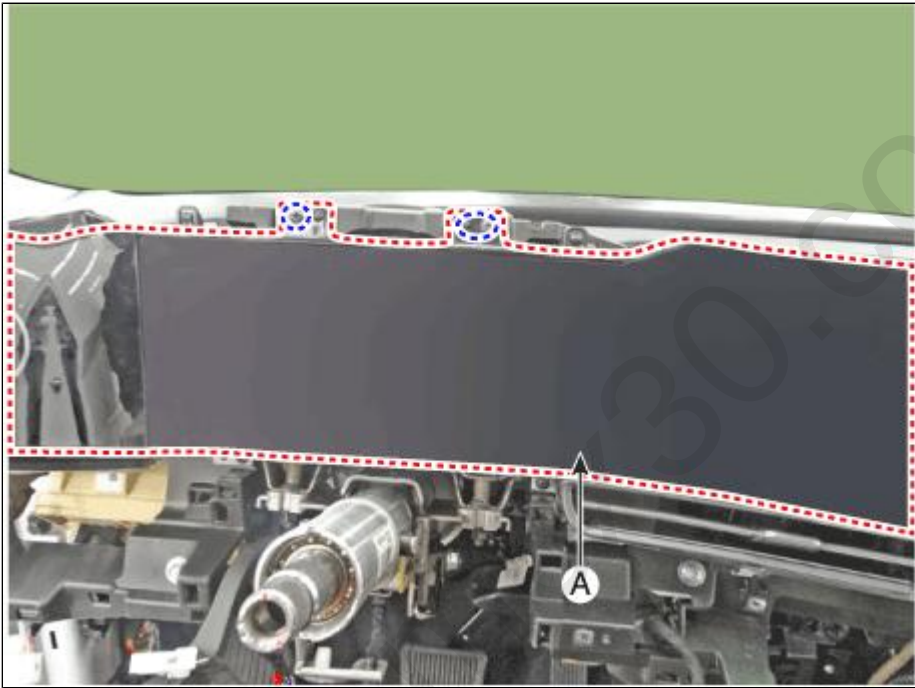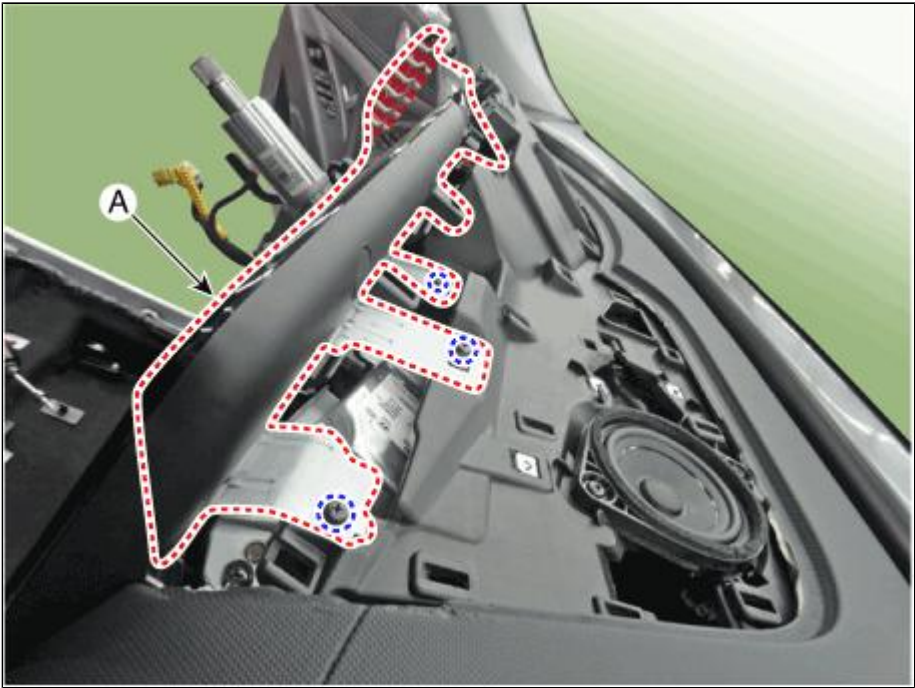


6. Remove the AVN monitor after disconnecting cluster connectors and monitor connectors.




4.25" Cluster + 10.25" Monitor


1. Disconnect the negative (-) battery terminal.
2. Using a flat-tip screwdriver or remover, remove the photo sensor cover (A).

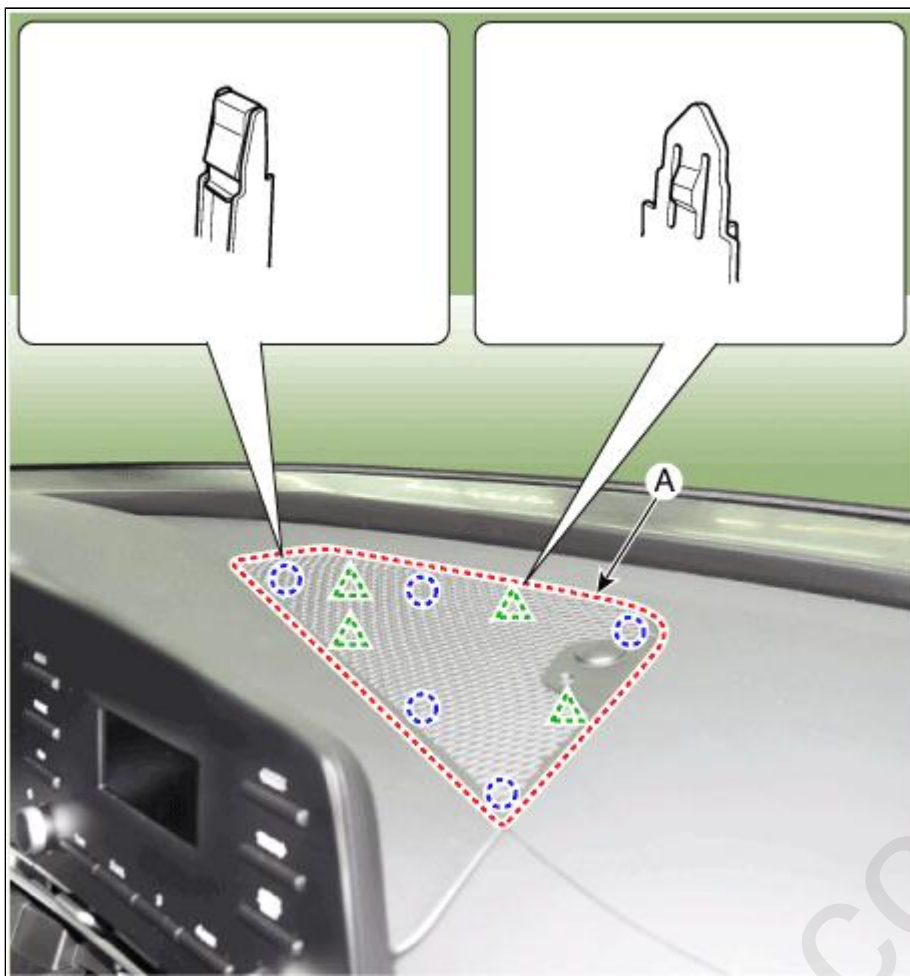

3. Disconnect photo sensor connector and security sensor connector (A).

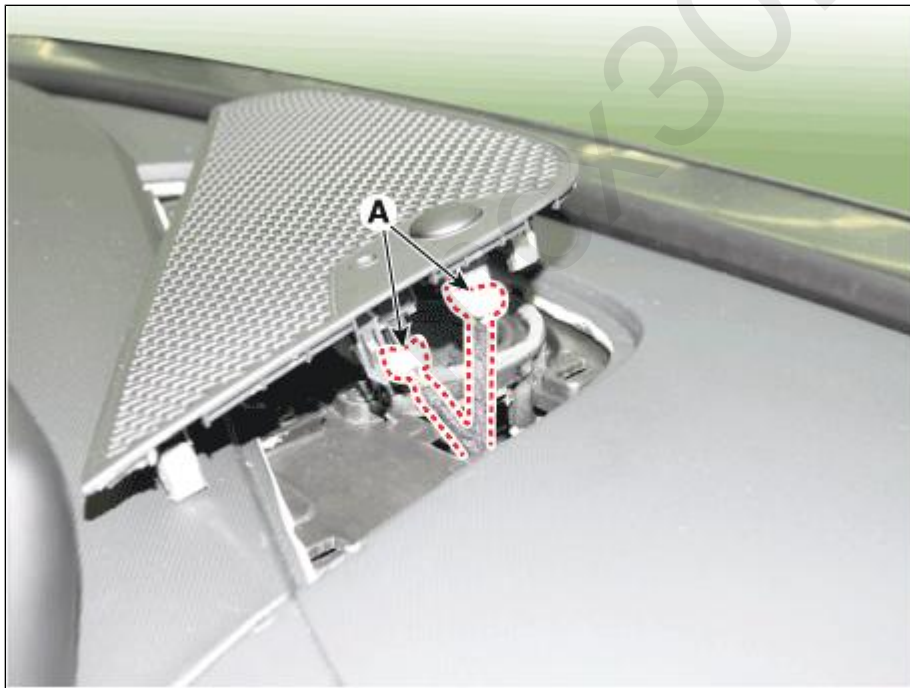


4. Using a flat-tip screwdriver or remover, remove the cluster fascia upper garnish (A).

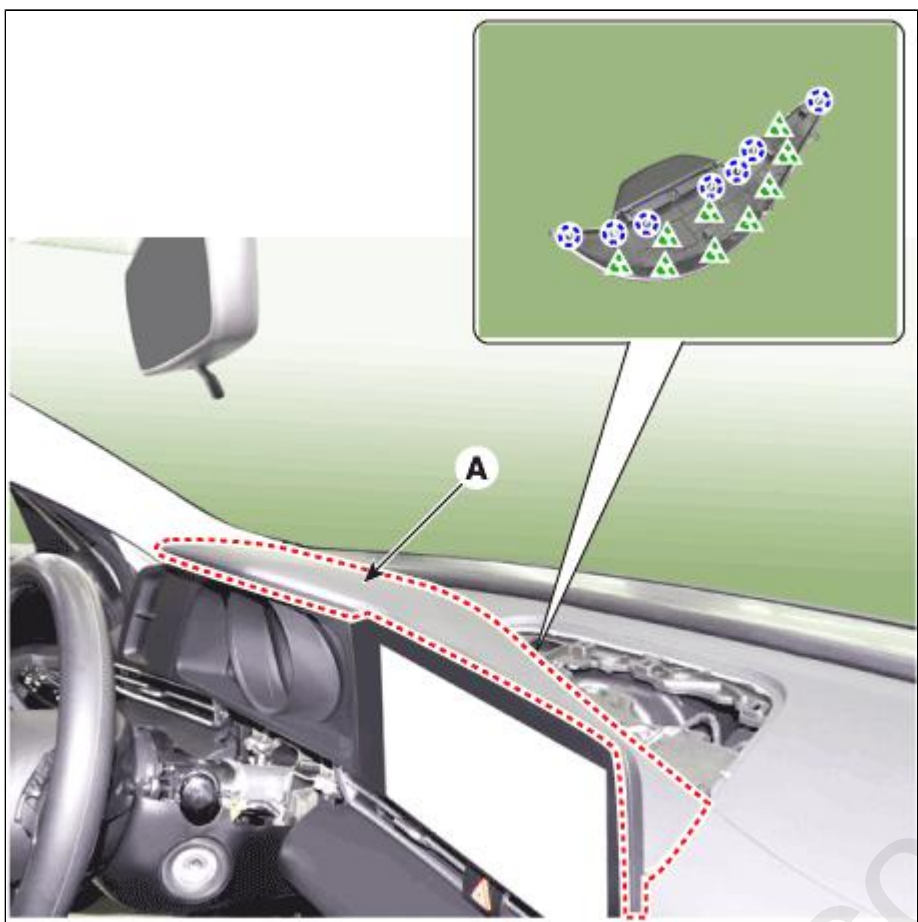


5. Remove the cluster fascia side panel (A).



6. Remove the cluster fascia panel (A) after loosening mounting screws.

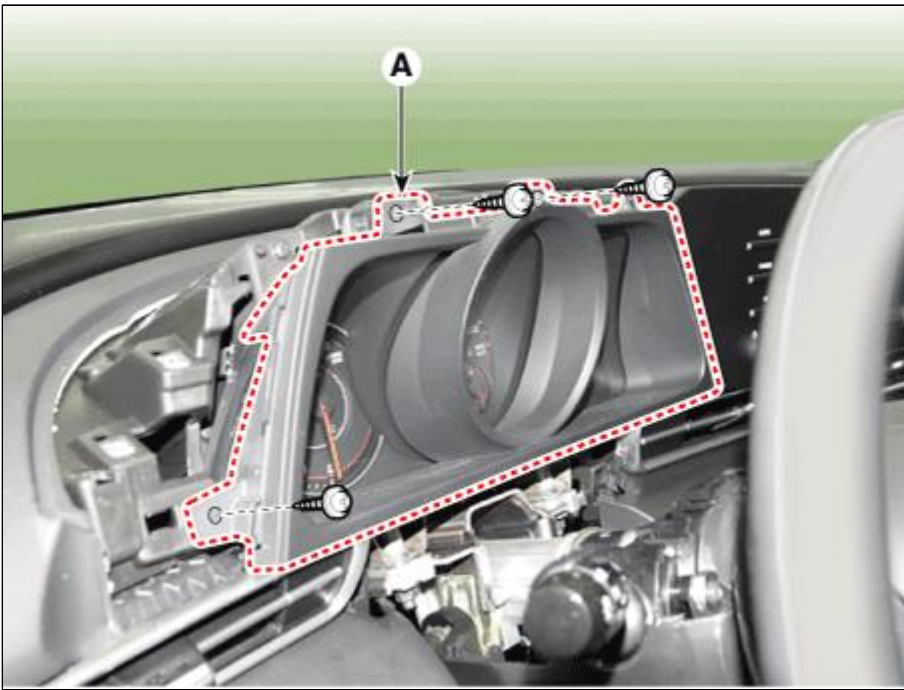

7. Remove the AVN monitor (A) after loosening mounting screws.

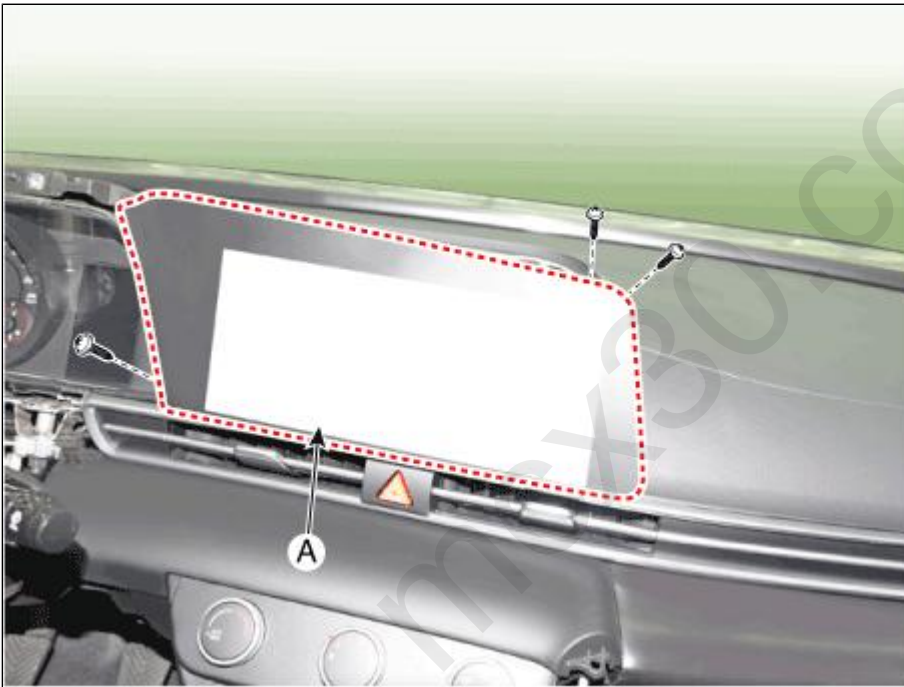

8. Remove the AVN monitor after disconnecting monitor connectors.



Installation

10.25" Cluster + 10.25" Monitor

1. Install the AVN monitor after connecting cluster connectors and monitor connectors.
2. Install the cluster fascia upper garnish.
3. Install photo sensor cover.
4. Connect the negative (-) battery terminal.

NOTICE

- â Make sure that the cables and connectors are plugged in properly.
ç
- â Check the AVN system for normal operation.
ç

4.25" Cluster + 10.25" Monitor

1. Install the AVN monitor after connecting cluster connectors and monitor connectors.
2. Install the cluster fascia panel.
3. Install the cluster fascia side panel.
4. Install the cluster fascia upper garnish.
5. Install photo sensor cover.
6. Connect the negative (-) battery terminal.

NOTICE

- â Make sure that the cables and connectors are plugged in properly.
ç
- â Check the AVN system for normal operation.
ç

Rate this Document

- ☐ Document Type : SHOP
- ☐ Document Rating :

Please rate the above contents on a scale of 1 to 5.

Little Value 1 2 3 4 5 Excellent Value

mcx30.com