

EVAPORATIVE EMISSIONS – INGENIUM I6 3.0L PETROL

EVAPORATIVE EMISSION CANISTER – VEHICLES WITH: ROW SPECIFICATION (G2424802)

REMOVAL AND INSTALLATION

17.15.13	EVAPORATIVE EMISSION CANISTER – RENEW	2000 CC, INGENIUM PETROL	0.60	USED WITHINS	
17.15.13	EVAPORATIVE EMISSION CANISTER – RENEW	3000 CC, INGENIUM PETROL	0.60	USED WITHINS	

REMOVAL



NOTES:


- This procedure contains illustrations showing certain components removed to provide extra clarity.
- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.

1. Raise and support the vehicle on a suitable 2-post lift.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2. Disconnect the startup battery ground cable.
Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

3. Remove the rear left wheel arch liner.
Refer to: [Rear Wheel Arch Liner](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

4.

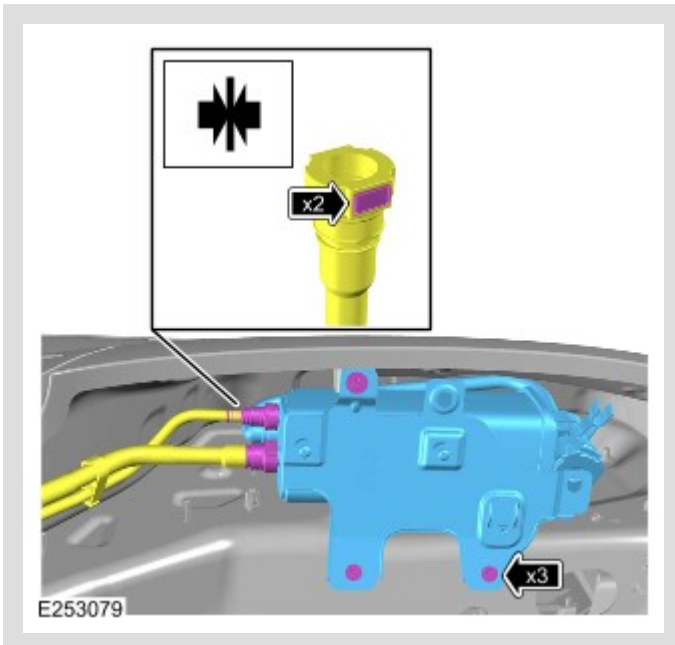


- Disconnect the 2 evaporative emission canister pipes.
- Remove the 3 bolts.
- Remove the evaporative emission canister assembly.

5.

NOTE:

Only do the following step(s) if a new component is to be installed.

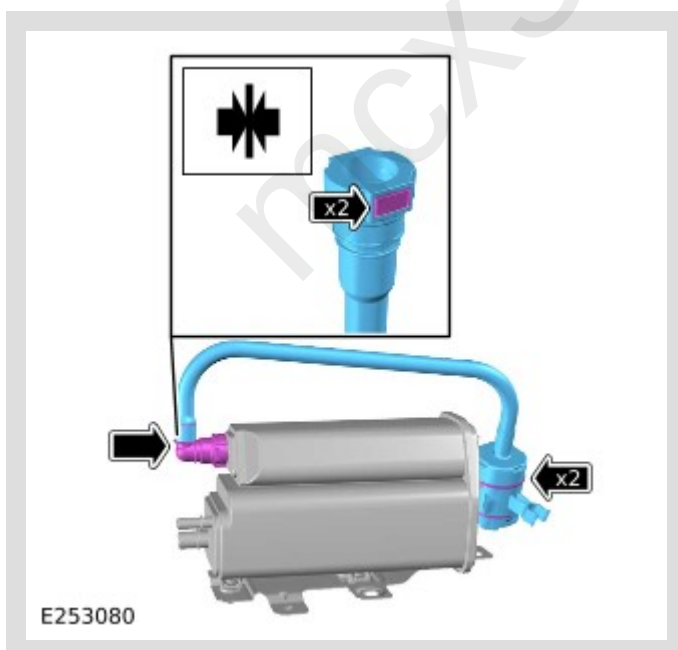

- Disconnect the evaporative emission canister dust filter pipe.
- Cut and remove the 2 cable ties.
- Remove the evaporative emission canister dust filter.

6.



- Remove the 3 bolts.
- Remove the evaporative emission canister from the bracket.

INSTALLATION

1.



NOTE:

Only do the following step(s) if the component was previously removed.

- Install the evaporative emission canister to the bracket.
- Install and tighten the 3 bolts.

Torque: 7Nm

2.

- Install the evaporative emission canister dust filter.
- Install 2 new cable ties.
- Connect the evaporative emission canister dust filter pipe.

3.

- Install the evaporative emission canister assembly.
 - Install and tighten the 3 bolts.
- Torque: 10Nm*
- Connect the 2 evaporative emission canister pipes.

4.

Install the rear left wheel arch liner.

Refer to: [Rear Wheel Arch Liner](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).

5.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).