

PUBLISHED: 25-OCT-2019
2020.0 DEFENDER (LE), 414-01B

BATTERY, MOUNTING AND CABLES – VEHICLES WITH: MHEV

MHEV PASS THROUGH ASSEMBLY (G2422550)

mcx30.com

REMOVAL

**NOTE:**

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

The following step(s) applies to:

All vehicles

1. Disconnect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

The following step(s) applies to:

Vehicles with occasional rear seats

2. Remove the third row seats.

Refer to: [Third Row Seat](#) (501-10 Seating, Removal and Installation).

The following step(s) applies to:

Vehicles without occasional rear seats


3. Remove the loadspace right side trim panel.

Refer to: [Right Loadspace Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4. Remove the loadspace left side trim panel.

Refer to: [Left Loadspace Trim Panel - 110, Vehicles With: 5 Seats](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

5.

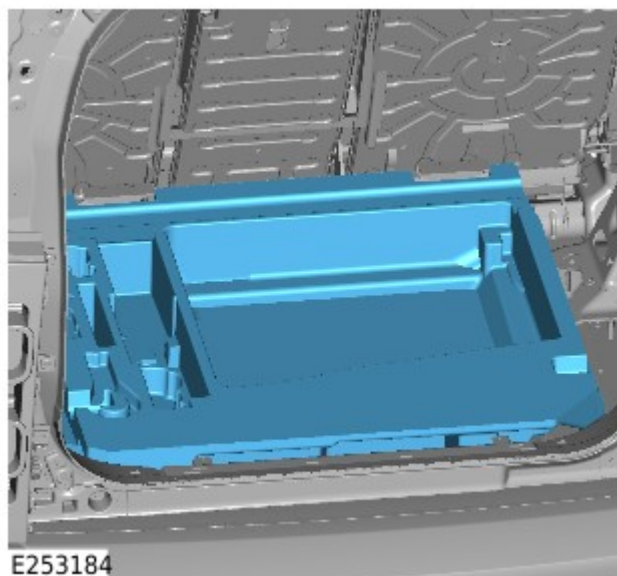

Remove the stowage compartment.

The following step(s) applies to:


All vehicles

6.

Remove the rear subframe.


Refer to: [Rear Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).

7.

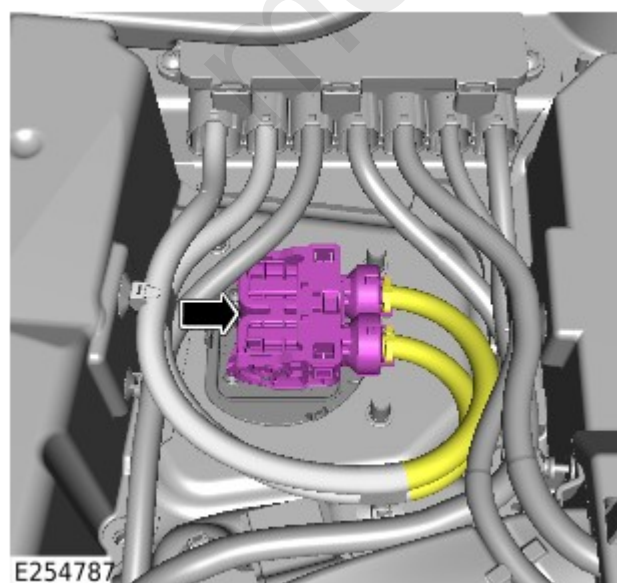


Disconnect the loadspace electrical connector.

8.

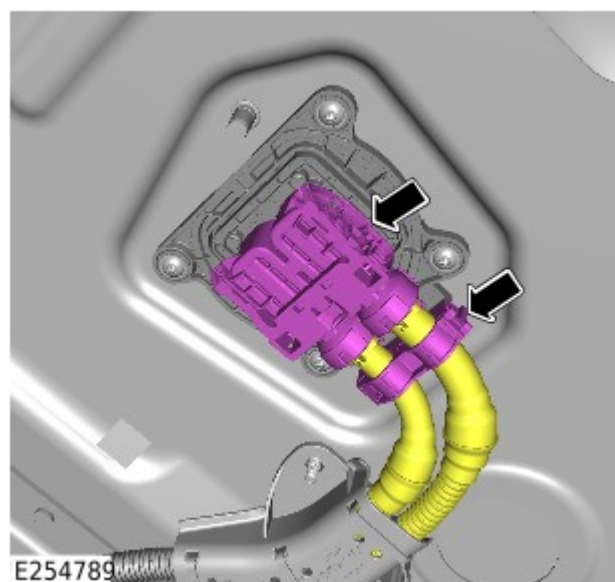

- Release the wiring harness from the clip.
- Disconnect the underside electrical connector.

9.

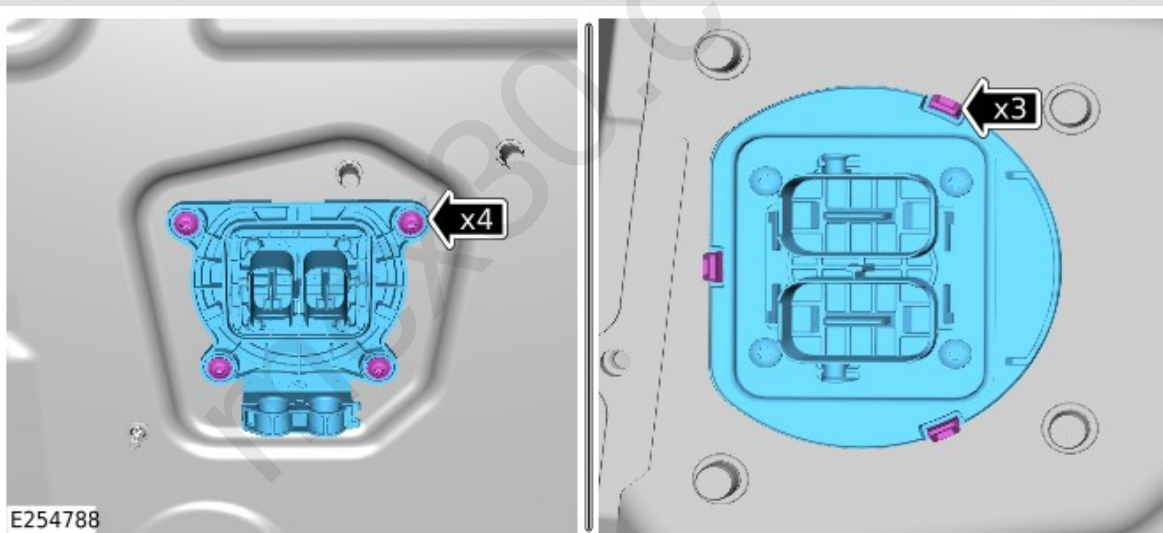

- Remove the 4 bolts.
- Release the 3 clips and remove the MHEV pass through assembly.

INSTALLATION

The following step(s) applies to:
All vehicles

1.

- Install the MHEV pass through assembly.
- Install and tighten the 4 bolts.

Torque: 10Nm

2.

- Connect the underside electrical connector.
- Install the wiring harness into the clip.

3.

Connect the loadspace electrical connector.

4.

Install the rear subframe.

Refer to: [Rear Subframe](#) (502-00 Uni-Body, Subframe and Mounting System, Removal and Installation).

The following step(s) applies to:

Vehicles without occasional rear seats

5.

Install the stowage compartment.

6.

Install the loadspace left side trim panel.

Refer to: [Left Loadspace Trim Panel - 110, Vehicles With: 5 Seats](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

7.

Install the loadspace right side trim panel.

Refer to: [Right Loadspace Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

The following step(s) applies to:

Vehicles with occasional rear seats

8.

Install the third row seat.

Refer to: [Third Row Seat](#) (501-10 Seating, Removal and Installation).

The following step(s) applies to:

All vehicles

9.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

cmjjaGFyZG1vcnRvbjsyMDIwLTASLTE4VDA5OjlyOjA0LjA3OV67OTluNDAuMTg5LjUzOw==

mcx30.com