

PUBLISHED: 21-JAN-2020
2020.0 DEFENDER (LE), 501-05

INTERIOR TRIM AND ORNAMENTATION

LEFT LOADSPACE TRIM PANEL - [+] 7 SEAT CONFIGURATION, 110 (G2416429)

mcx30.com

REMOVAL


 NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Disconnect the startup battery ground cable.


Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

- 2.

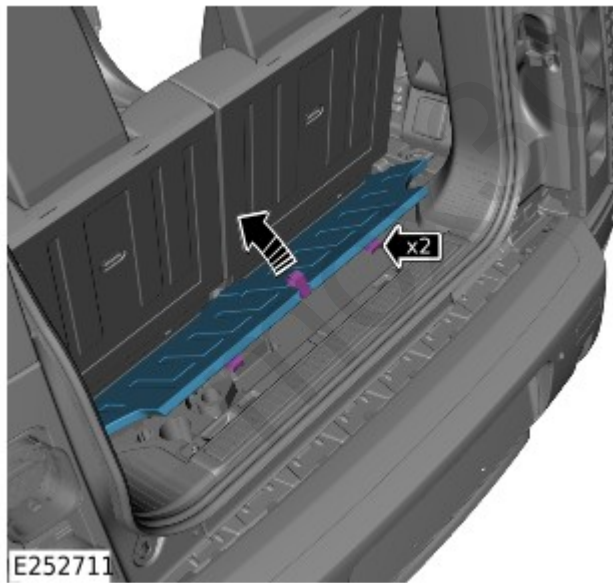


Remove the loadspace floor trim.

3.

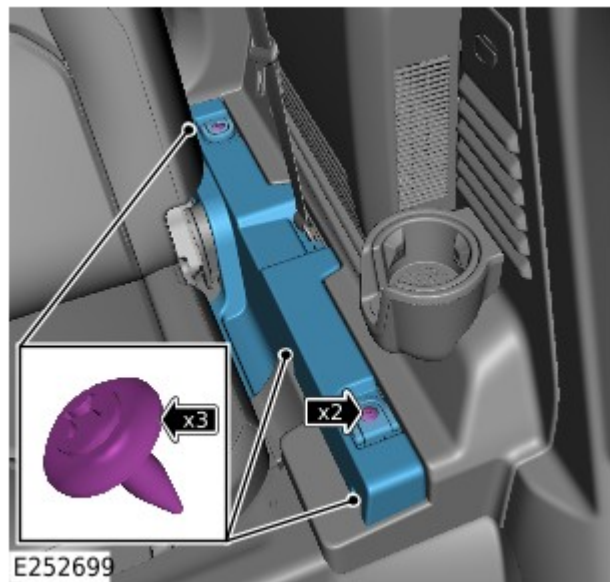


- Remove the 2 bolts.
- Release the 3 clips.
- Remove the loadspace lower side trim.

4.

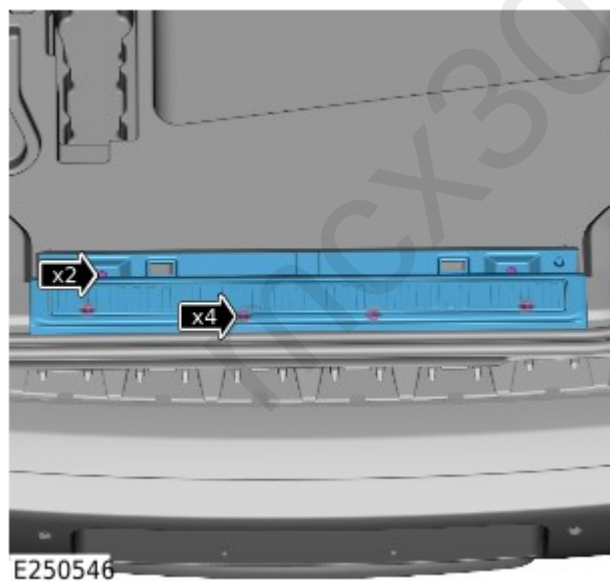

- Remove the 2 bolts.
- Release the 4 clips.
- Remove the loadspace treadplate.

5.

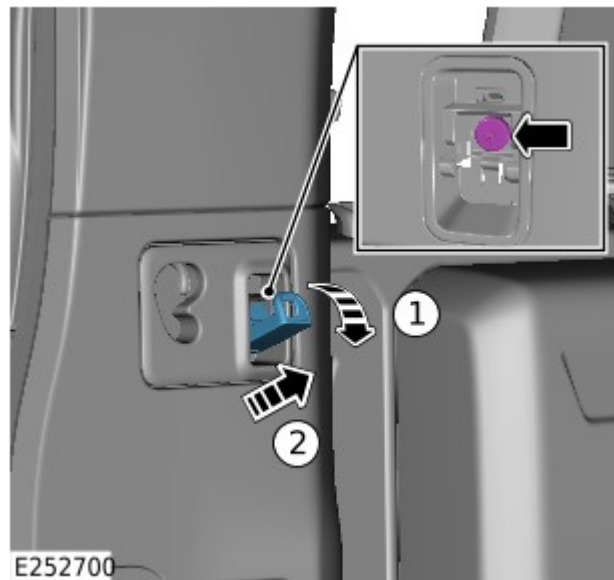

- Remove the coat hanger in the sequence shown.
- Remove the bolt.

6.

Remove the C-pillar upper trim panel.

Refer to: [C-Pillar Upper Trim Panel - 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

7.



- Remove the 2 bolts.
- Remove the tailgate striker.

8.




- Release the 3 clips.
- Remove the tailgate latch guide trim.


9.



- Remove the 2 bolts.
- Remove the tailgate latch guide.

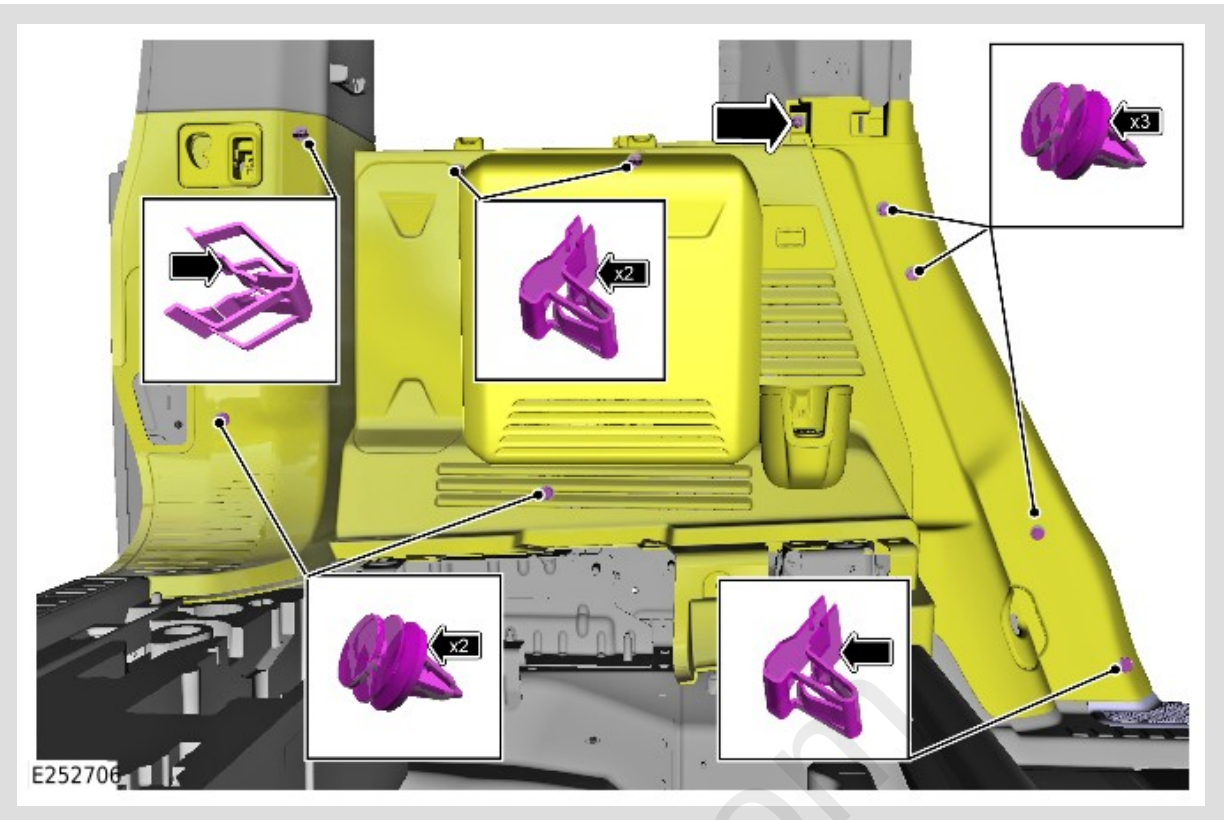

- Remove the nut.
- Release the 9 clips.
- Release the loadspace side trim panel.

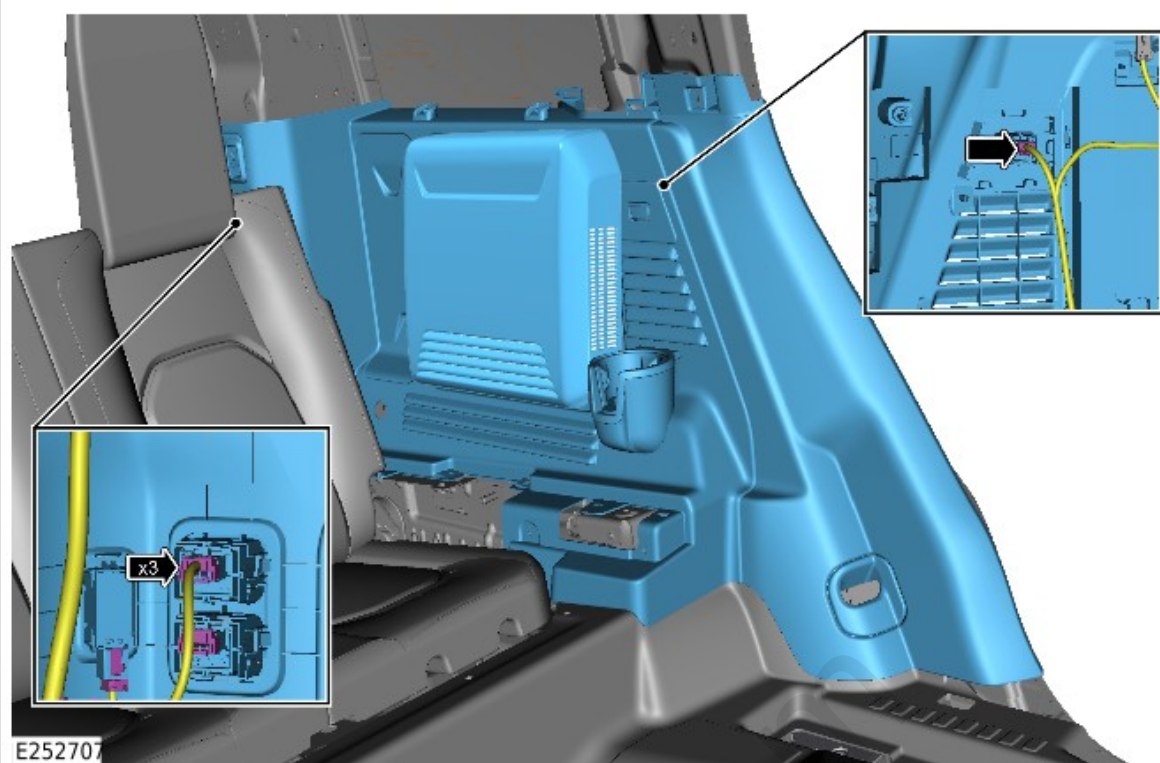

- Disconnect the 4 electrical connectors.
- Remove the loadspace side trim panel.

INSTALLATION

1.



NOTE:

Make sure that the trim is correctly installed to the clips.

- Connect the 3 electrical connectors to the loadspace trim panel.
- Install the 9 clips.
- Install the loadspace side trim panel.
- Install and tighten the nut.

Torque: 4.1Nm

2.

- Install the tailgate latch guide.
- Install and tighten the 2 bolts.

Torque: 24Nm

3.

Install the tailgate latch guide trim.

4.

- Install the tailgate striker.
- Install and tighten the 2 bolts.

Torque: 24Nm

5.

Install the C-pillar upper trim panel.

Refer to: [C-Pillar Upper Trim Panel - 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

6.

- Install the coat hanger.
- Install and tighten the coat hanger bolt.

Torque: 4.1Nm

7.

- Install the loadspace treadplate.
- Install the 4 clips.
- Install and tighten the 2 bolts.

Torque: 4.1Nm

8.

 CAUTION:

Make sure that the weatherstrip is not stretched on installation.

Reposition the tailgate aperture seal into the correct location.

9.

- Install the loadspace lower side trim.
- Install and tighten the 2 bolts.
Torque: 24Nm
- Install the 3 lower clips.

10.

Install the loadspace floor trim.

11.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).