

PUBLISHED: 20-JAN-2020
2020.0 DEFENDER (LE), 501-05

INTERIOR TRIM AND ORNAMENTATION

RIGHT LOADSPACE TRIM PANEL (G2344734)

mcx30.com

REMOVAL


 NOTE:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Disconnect the startup battery ground cable.


Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

- 2.

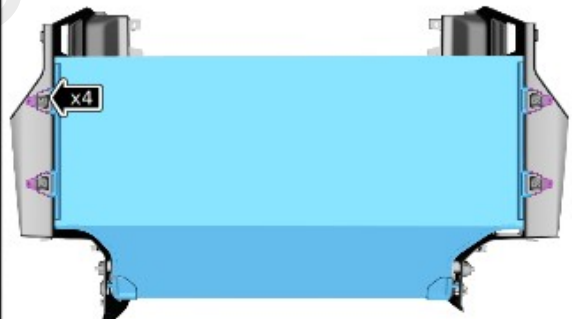


Remove the loadspace cover.

3.

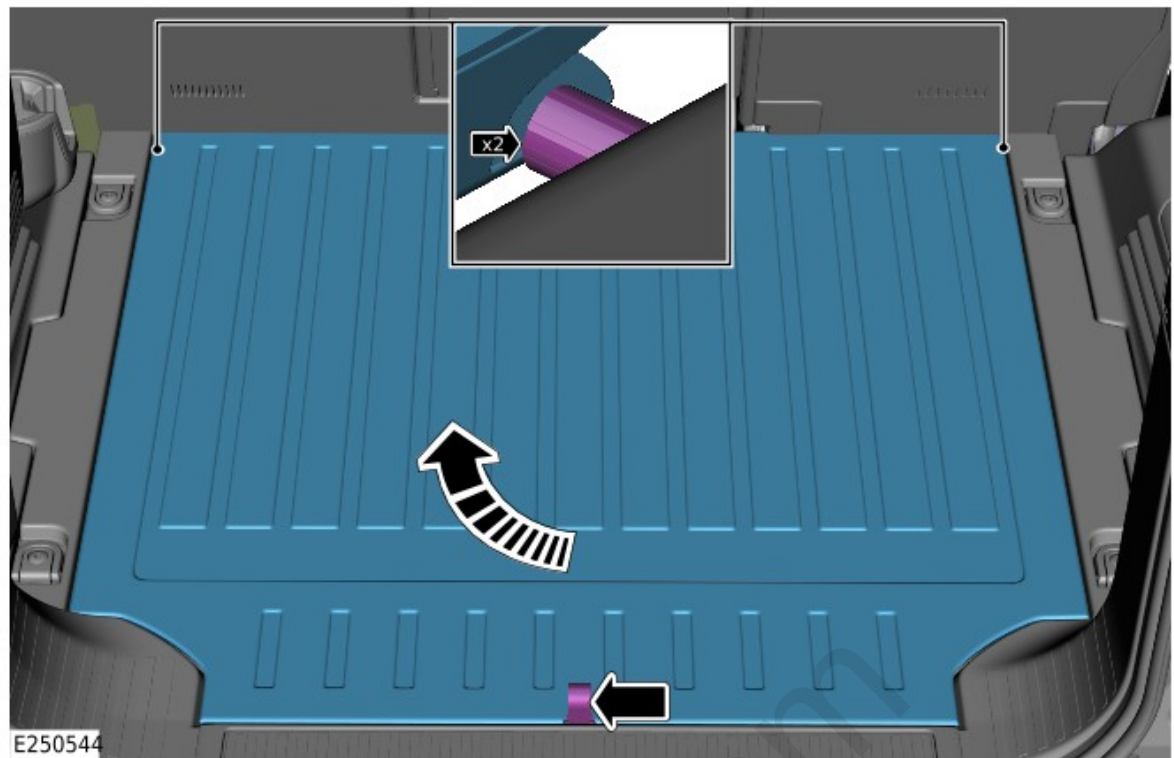


Remove the loadspace floor trim.

4.

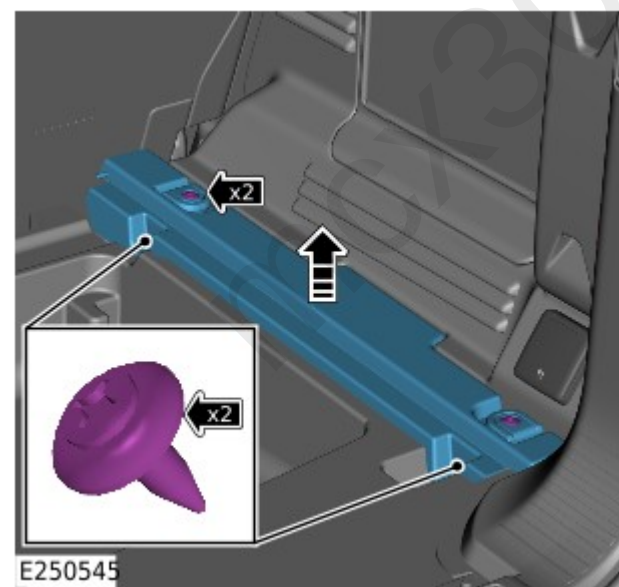


- Remove the 2 bolts.
- Remove the 2 clips.
- Remove the loadspace lower side trim.

5.

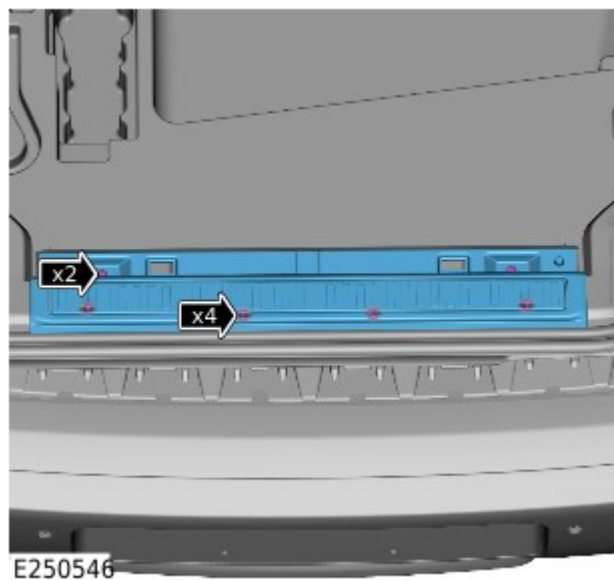

- Remove the 2 bolts.
- Release the 4 clips.
- Remove the loadspace treadplate.

6.

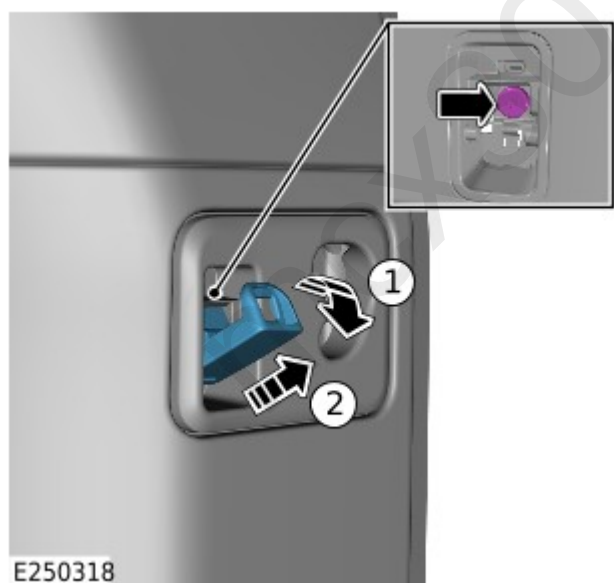

- Remove the coat hanger in the sequence shown.
- Remove the bolt.

7.




- Release the clips.
- Release the domestic voltage socket trim panel.

8.

Remove the C-pillar upper trim panel.


Refer to: [C-Pillar Upper Trim Panel - 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

9.

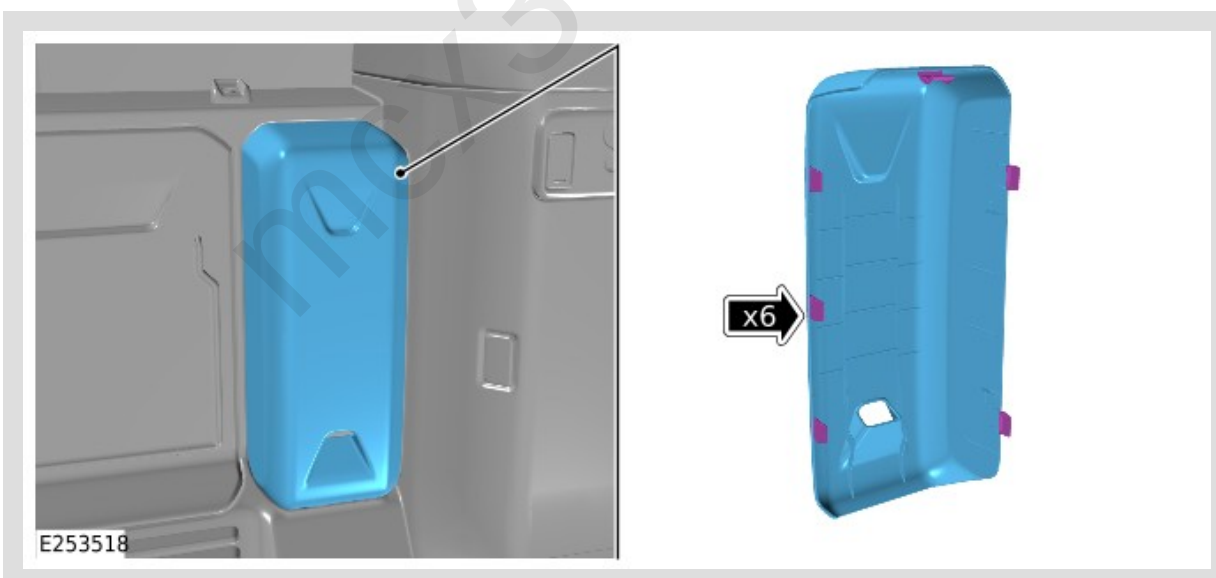


- Release the 6 clips.
- Remove the Rear Junction Box (RJB) access cover.

10.

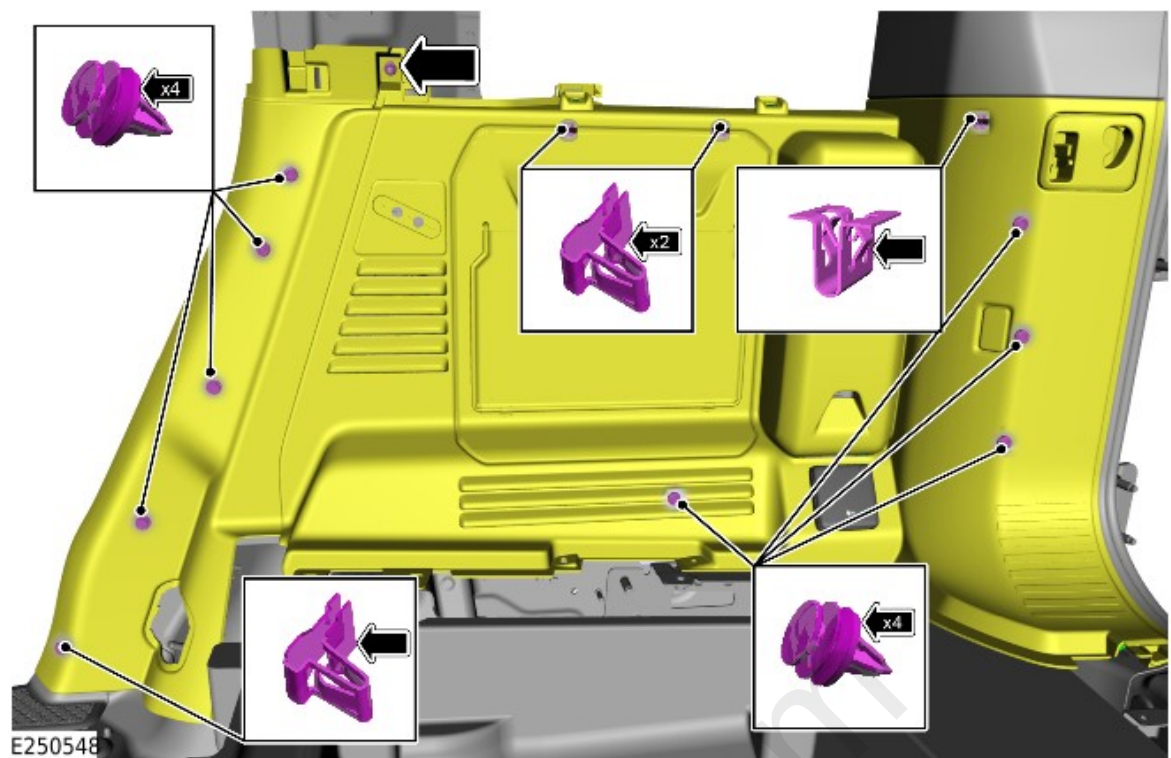

- Remove the nut.
- Release the 12 clips.
- Release the loadspace side trim panel.

11.

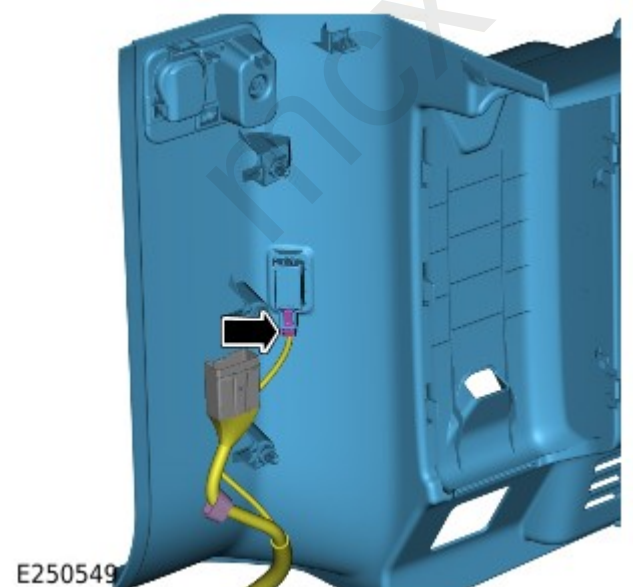

- Disconnect the electrical connector.
- Remove the loadspace side trim panel.

INSTALLATION

1.



NOTE:

Make sure that the trim is correctly installed to the clips.

- Connect the loadspace lamp electrical connector.
- Install the loadspace side trim panel.
- Install the 12 clips.
- Install and tighten the nut.

Torque: 4.1Nm

2.

- Install the RJB access cover.
- Install the 6 clips.

3.

Install the C-pillar upper trim panel.

Refer to: [C-Pillar Upper Trim Panel - 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4.

- Install and tighten the coat hanger bolt.
Torque: 1.7Nm
- Install the coat hanger.

5.

- Install the domestic voltage socket trim panel.
- Install the 2 clips.

6.

- Install the loadspace treadplate.
- Install the 4 clips.
- Install and tighten the 2 bolts.

Torque: 4.1Nm

7.



CAUTION:

Make sure that the weatherstrip is not stretched on installation.

Reposition the tailgate aperture seal into the correct location.

8.

- Install the loadspace lower side trim.
- Install and tighten the 2 bolts.
Torque: 24Nm
- Install the 2 lower clips.

9.

Install the loadspace floor trim.

10.

Install the loadspace cover.

11.

Connect the startup battery ground cable.

Refer to: [Startup Battery Disconnect and Connect](#) (414-00 Battery and Charging System - General Information, General Procedures).

cmIjaGFyZG1vcnRvbjsyMDIwLTA5LTE4VDEyOjA0OjE2LjI5MVVo7OTluNDAmMTg5LjUwOw==

mcx30.com