

PUBLISHED: 06-SEP-2019
2020.0 DEFENDER (LE), 501-11

GLASS, FRAMES AND MECHANISMS

WINDSHIELD MOULDING CARRIER (G2413048)

mcx30.com

REMOVAL

⚠ CAUTION:

Always protect paintwork and windows when removing exterior components.


△ NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.

1. Remove the windshield moulding.

Refer to: [Windshield Moulding](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).

- 2.

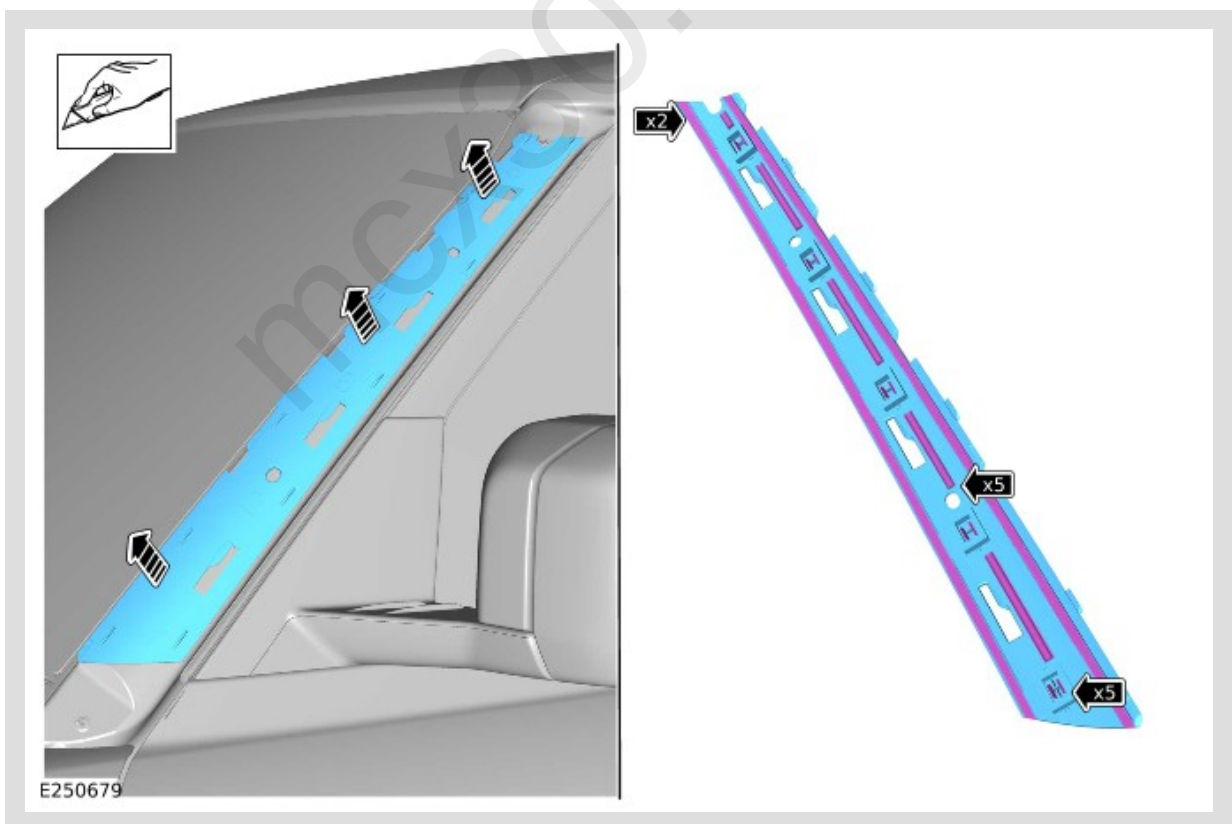

- Use a suitable tool to cut through the adhesive.
- Release the 5 clips.
- Remove the windshield moulding carrier.

INSTALLATION

1.

⚠ CAUTION:


Make sure that all residual sealant material is removed from the body.

Clean the mating surfaces with a suitable cleaner.

2.

⚠ CAUTIONS:

- Make sure the area is clean and free from foreign material.
- Make sure that the sealant is allowed to dry in accordance with the instructions included with the PU adhesive kit.

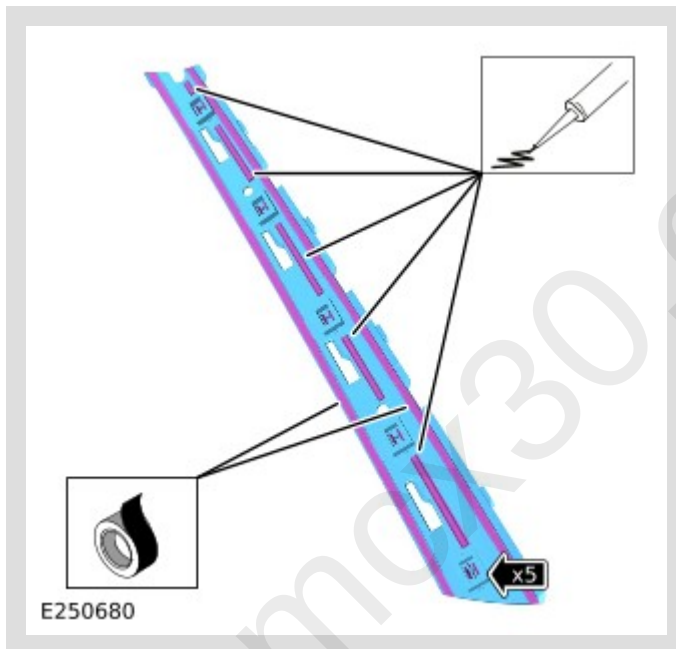

- Apply the double sided adhesive tape to the 2 edges of the component as illustrated.
- Use the Jaguar Land Rover (JLR) approved adhesive Sikaflex 552 between the 5 clips as illustrated.
- Install the windshield moulding carrier to the vehicle at the 5 clips.

3.

Install the windshield moulding.

Refer to: [Windshield Moulding](#) (501-11 Glass, Frames and Mechanisms, Removal and Installation).