

PUBLISHED: 23-MAR-2020
2020.0 DEFENDER (LE), 501-11

GLASS, FRAMES AND MECHANISMS

ROOF BLIND (G2309338)

mcx30.com

GENERAL EQUIPMENT

EQUIPMENT NAME
LandRoverapproved diagnostic tool

REMOVAL

 NOTES:

- This procedure contains some variation in the illustrations depending on the vehicle specification, but the essential information is always correct.
- This procedure contains illustrations showing certain components removed to provide extra clarity.


1. Remove the headliner.

Refer to: [Headliner - 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

2.

 NOTE:

If equipped.

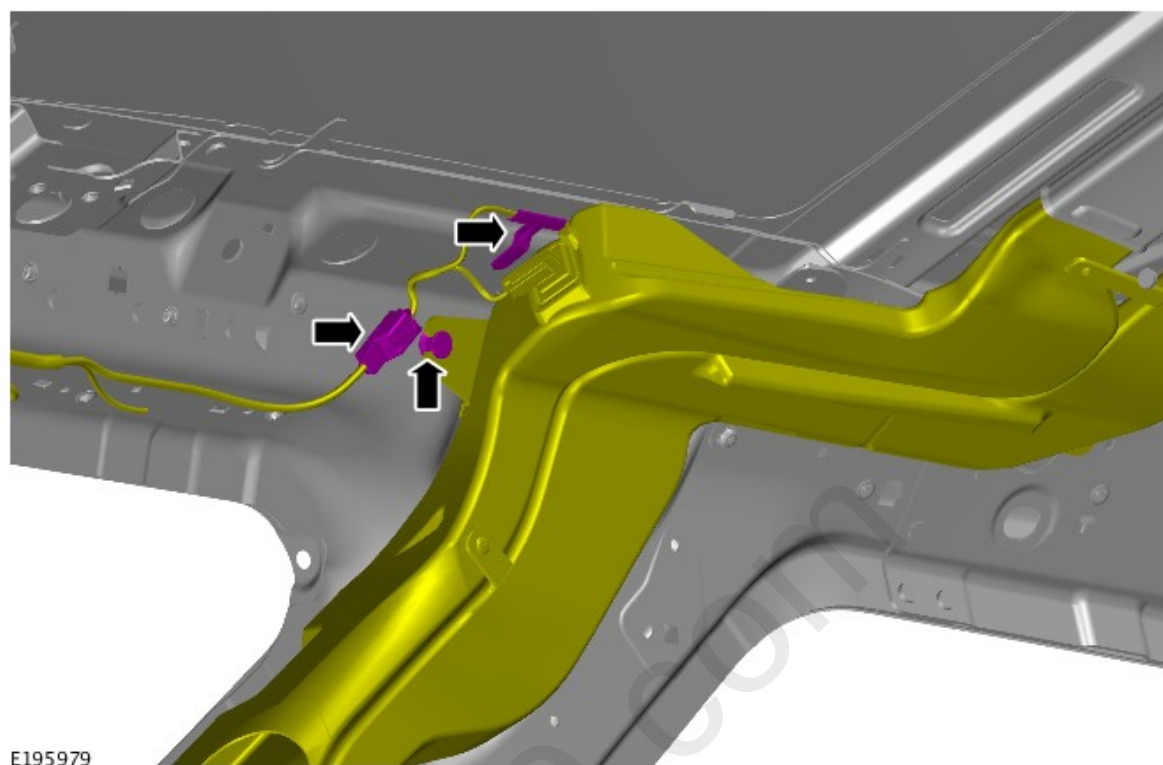


- Disconnect the in-vehicle temperature sensor electrical connector.
- Release the 2 retaining clips.

3.

 NOTE:

If equipped.

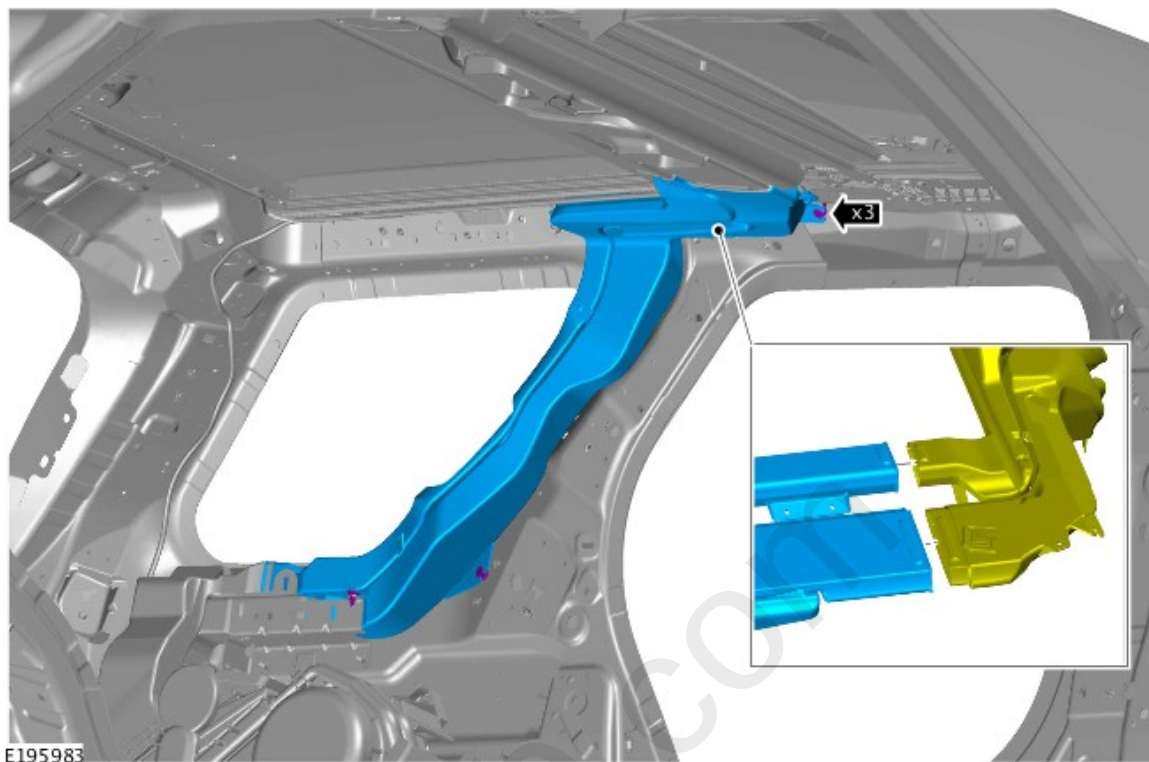


- Release the 3 retaining clips.
- Remove the left air duct.

4.

 **NOTE:**

If equipped.

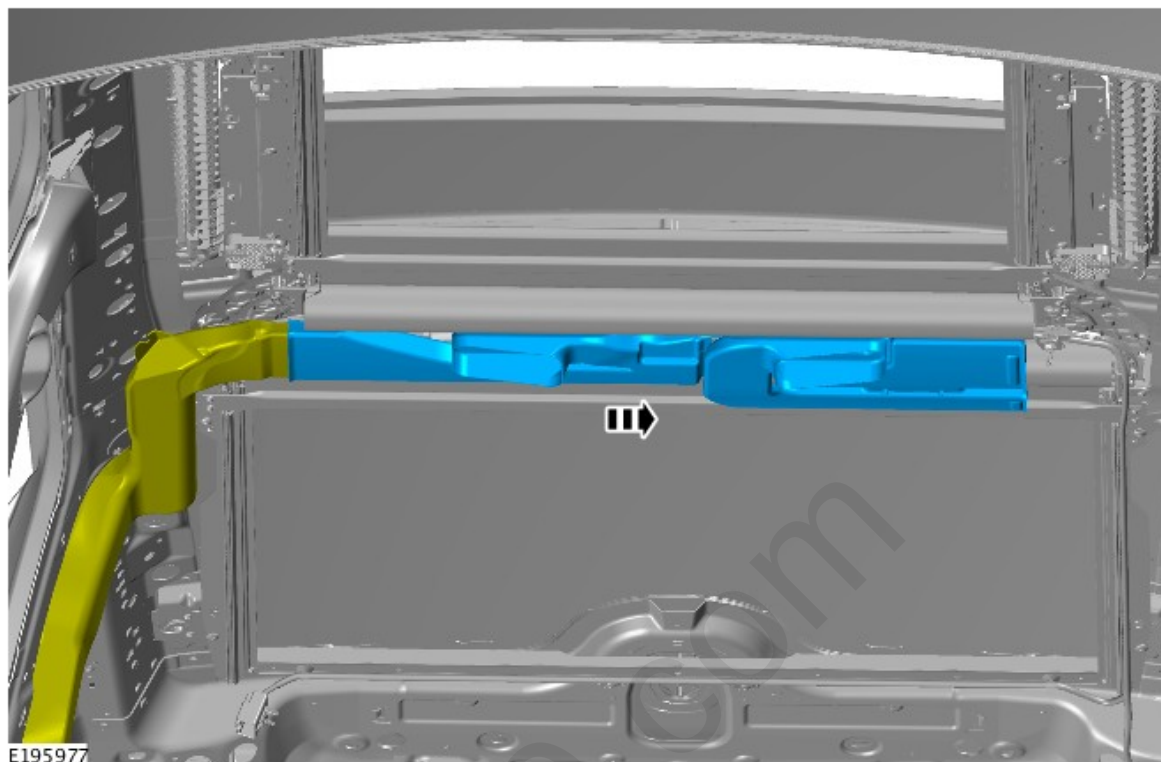


Remove the air duct.

5.

 NOTE:


If equipped.

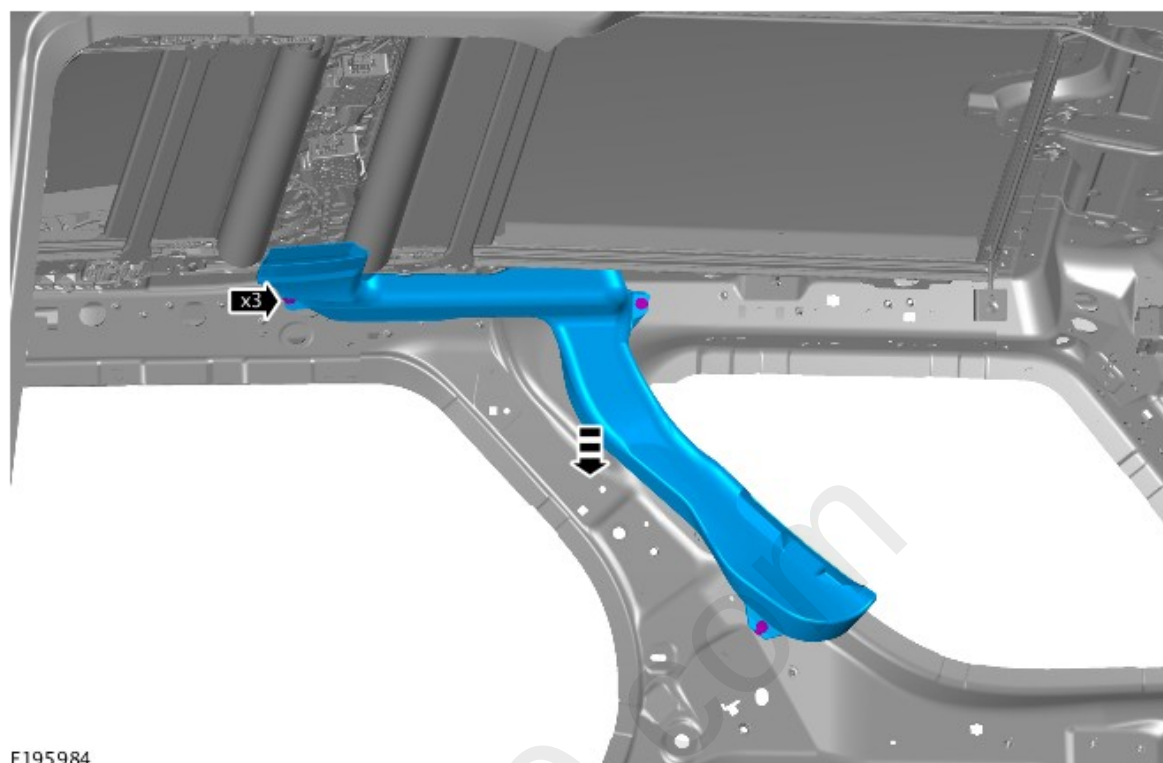


- Release the 3 retaining clips.
- Remove the right air duct.

 NOTE:

Using a suitable tool.

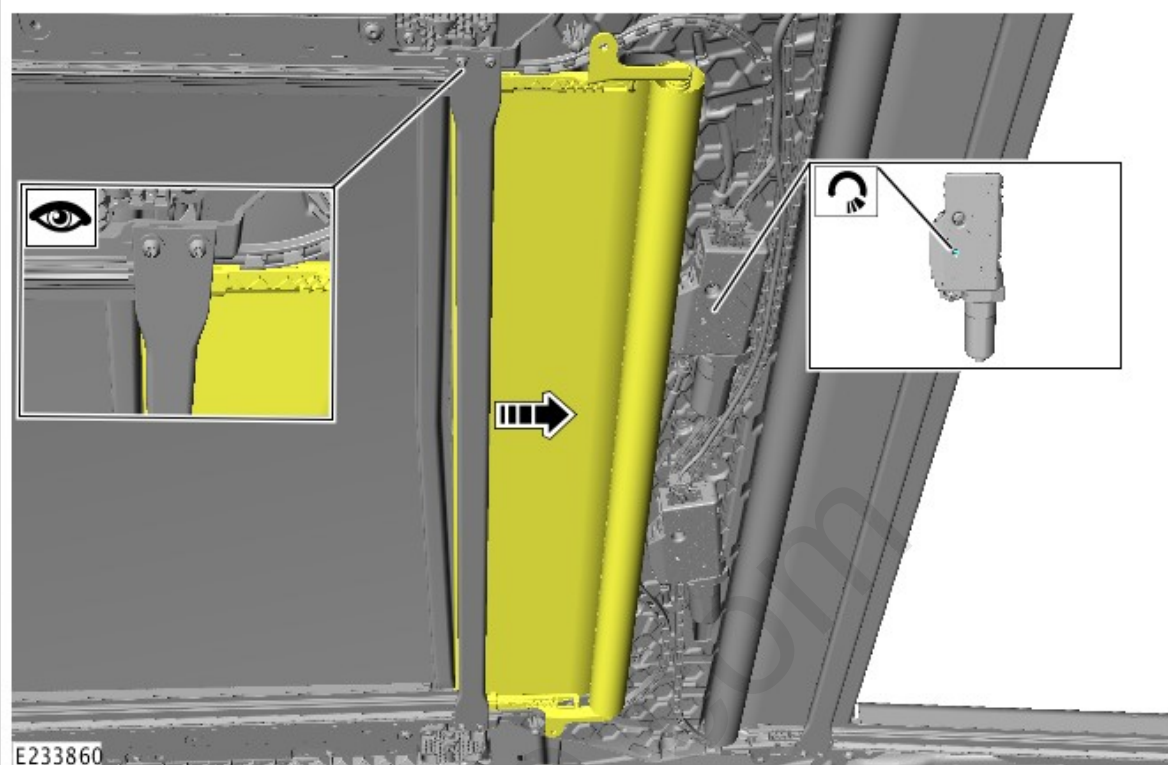

- Manually wind back the roof blind motor.
- Stop when the roof blind is located under the roof blind cross brace.

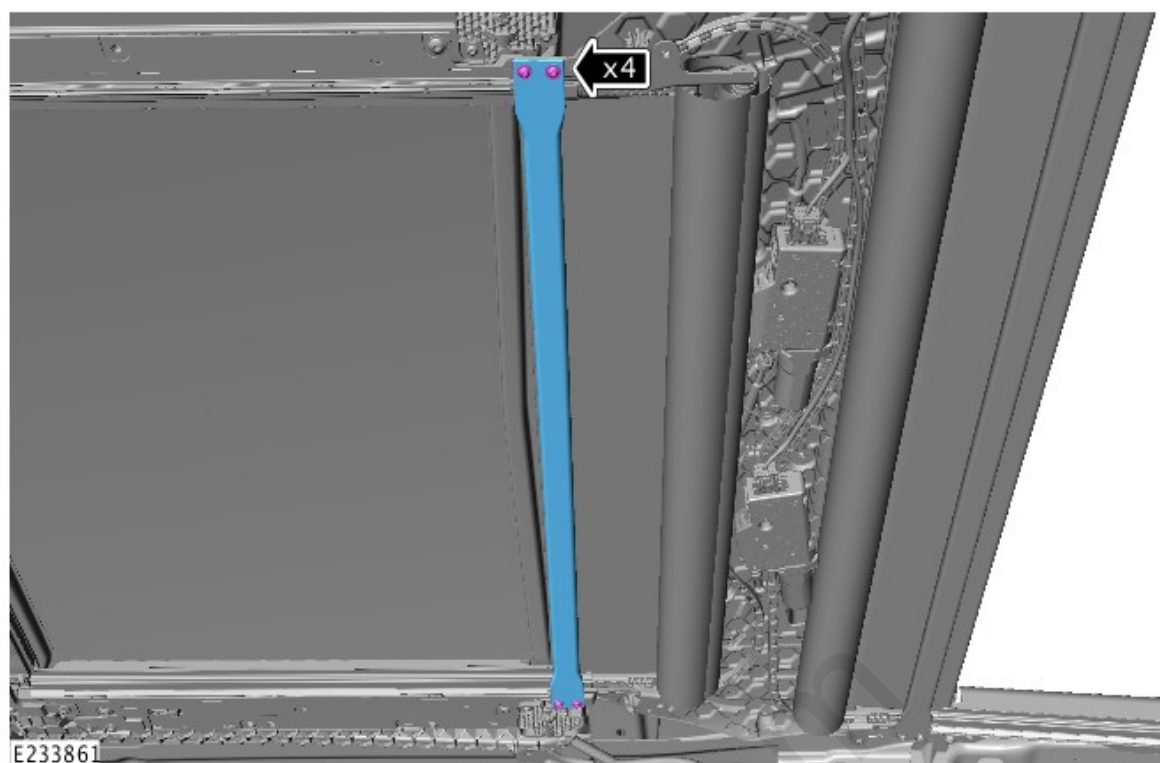


- Remove the 4 retaining bolts.
- Remove the roof blind cross brace.


8.

 NOTE:

This procedure must be completed on both sides.

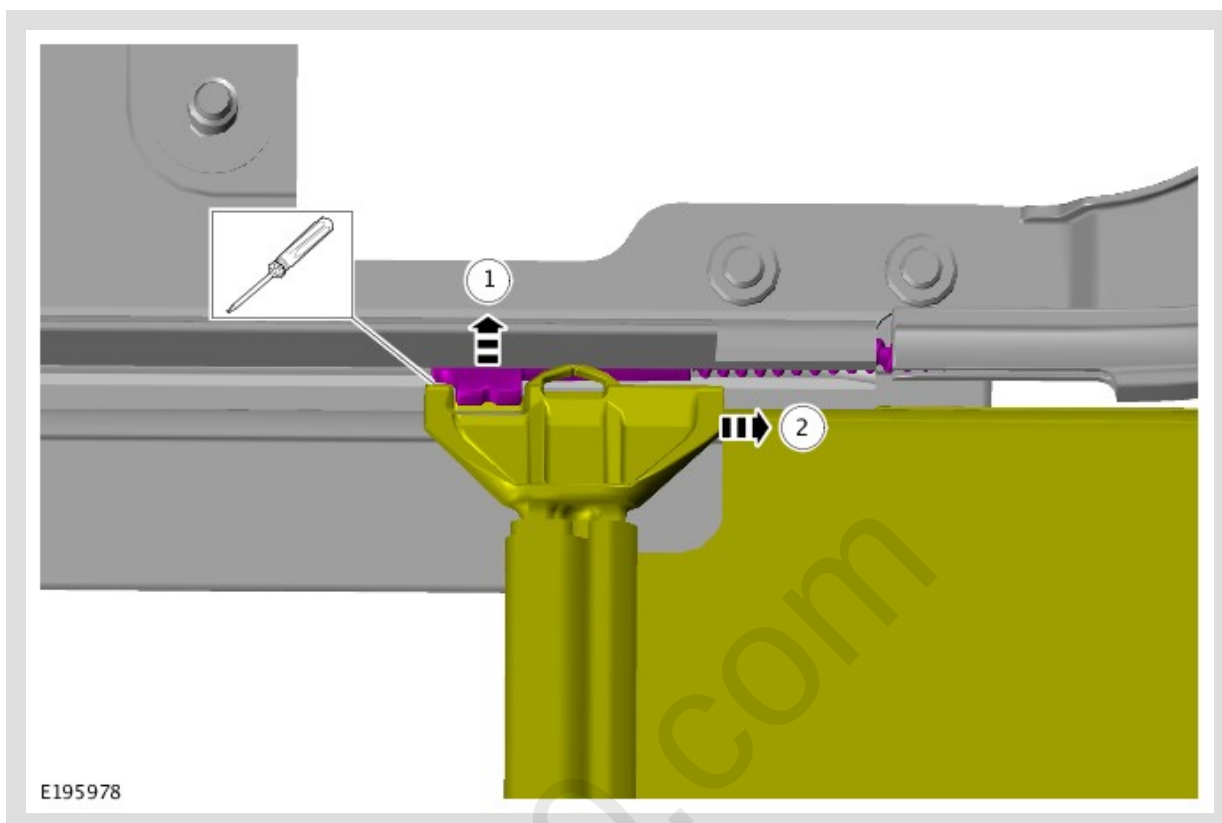

Release the operating cable from the roof blind.

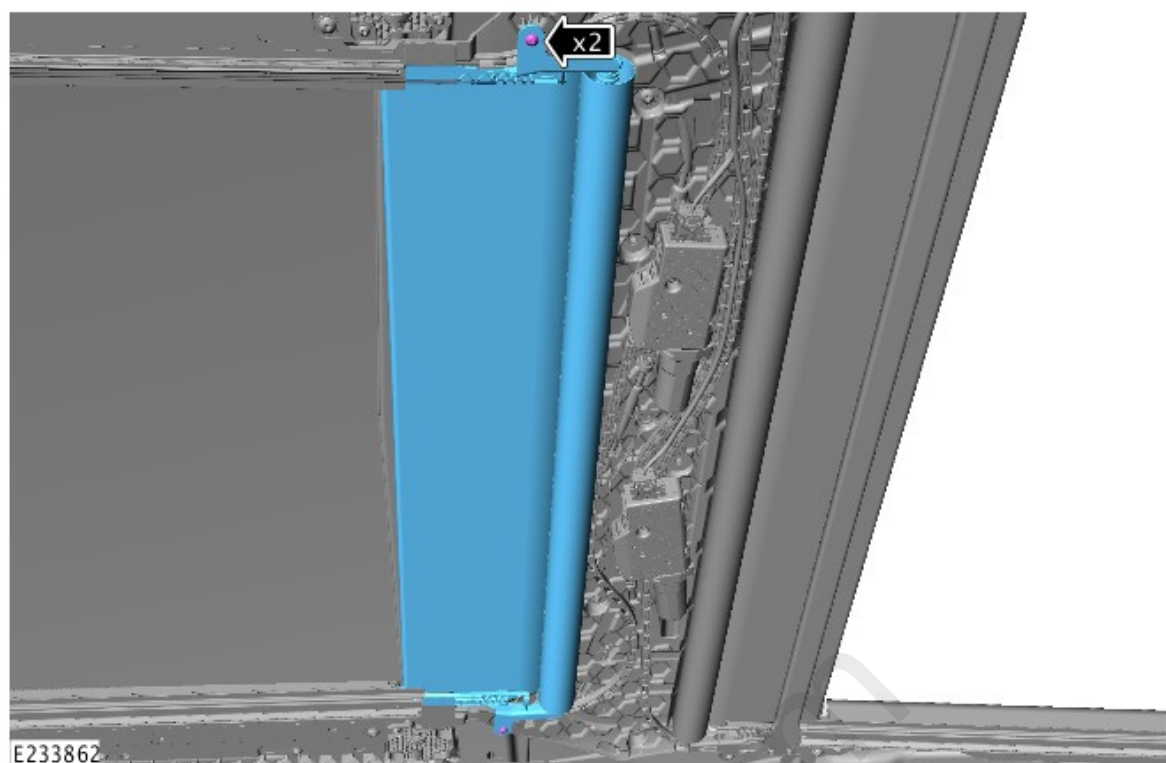

- Remove the 2 retaining screws.
- Remove the roof blind.

1.

 NOTE:

Make sure the roof blind is correctly installed as shown above.




Position the roof blind into the roof blind rail.


2.

 NOTE:

Make sure the operating cable is correctly installed.

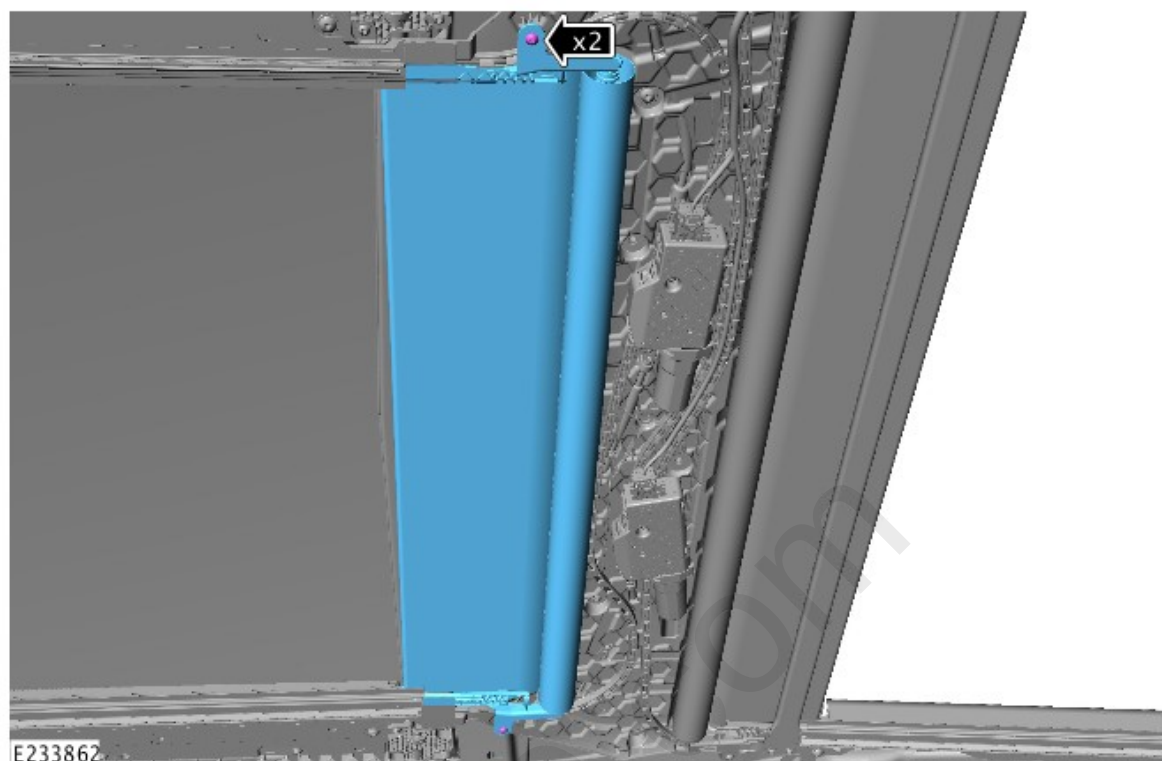

- Connect the operating cable to the roof blind.
- Install the roof blind and secure the 2 retaining screws.
Torque: 4Nm

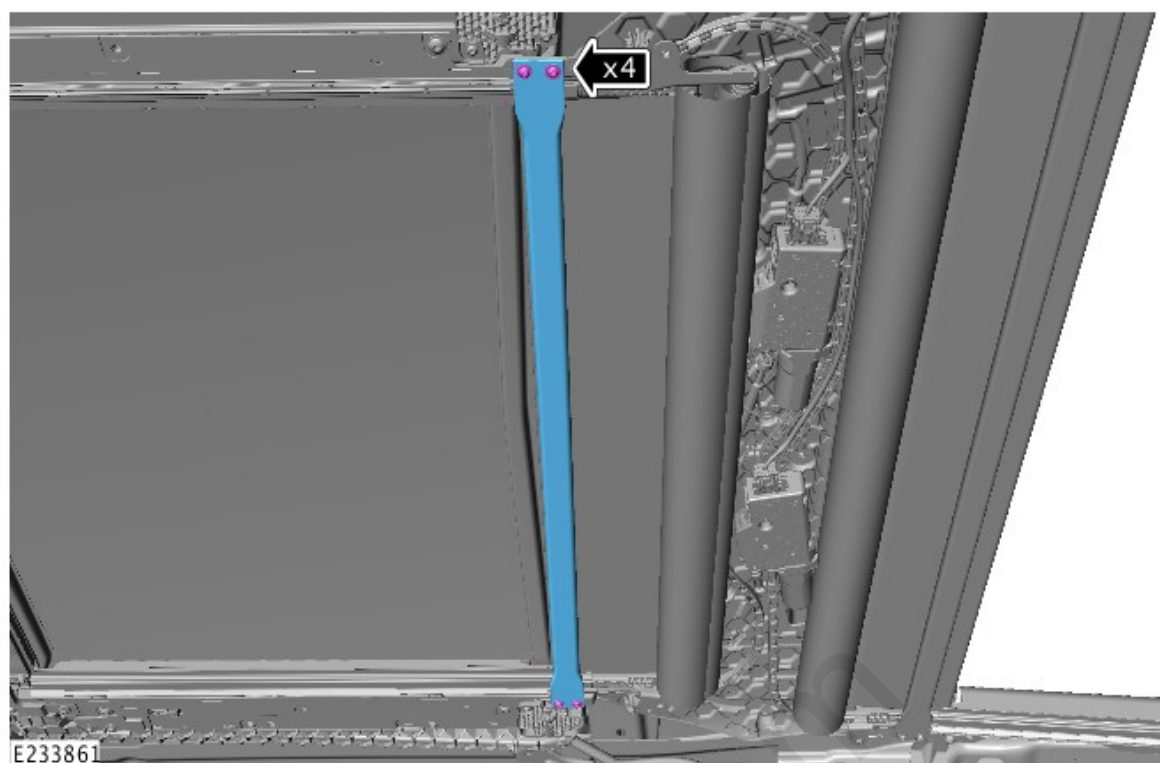


- Install the roof blind cross brace.
- Install the 4 retaining bolts.

Torque: 4Nm

4.

NOTE:

Using a suitable tool.

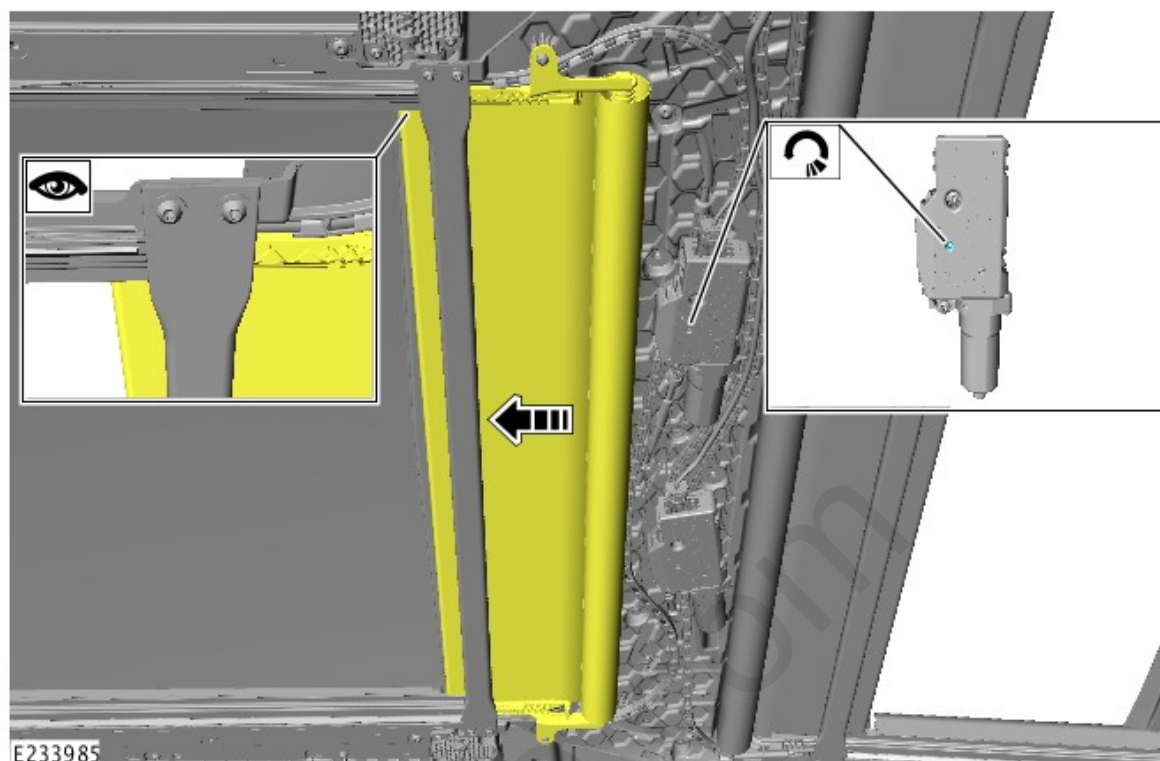

- 1) Manually wind the roof blind motor.
- 2) Stop when the roof blind has passed the roof cross bar.

5.

NOTE:

If equipped.

- Install the 3 air ducts.
- Install the 8 retaining clips.
- Connect the electrical connector.

6.

Install the headliner.

Refer to: [Headliner - 110](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

7.

Use the approved Jaguar Land Rover diagnostic equipment to configure the roof blind.

General Equipment: [LandRoverapproved diagnostic tool](#)

