


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

- 1. Body Hardware and Trim
- 2. Exterior Trim
- 3. Repair Instructions
- 4.

Rear End Spoiler Replacement

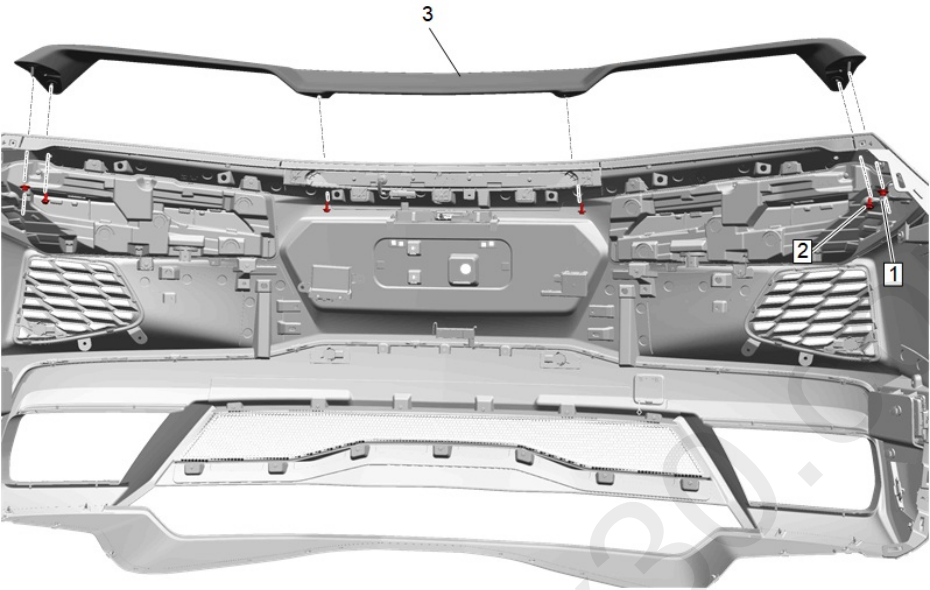

[Click here for full size](#)
Rear Bumper Fascia Removal and Installation

- Remove the left and right side rear body structure stop lamps.

Rear Body Structure Stop Lamp Replacement

-

High Mount Stop Lamp Replacement

Fastener Caution.

Tighten

6 N-m (53 lb in)

Callout	Component Name
Preliminary Procedures	
1.	
1	Rear End Spoiler Nut [2x]
	Caution:
	Refer to

Callout	Component Name
2	Rear End Spoiler Bolt [4x] Tighten 9 N-m (80 lb in)
3	Rear End Spoiler Note: Ensure all adhesive tape backing is removed prior to the installation of the rear end spoiler. Procedure 1. Apply two layers of masking tape around the rear end spoiler to prevent any paint surface damage. 2. Using a suitable flat bladed plastic trim tool, remove the rear end spoiler. 3. Using a 50/50 mixture of isopropyl alcohol and clean drinkable water and a clean towel, remove the left over adhesive residue from the masking tape. 4. Apply new adhesive tape.