


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

- 1. Body Hardware and Trim
- 2. Exterior Trim
- 3. Repair Instructions
- 4.

Windshield Upper Applique Replacement

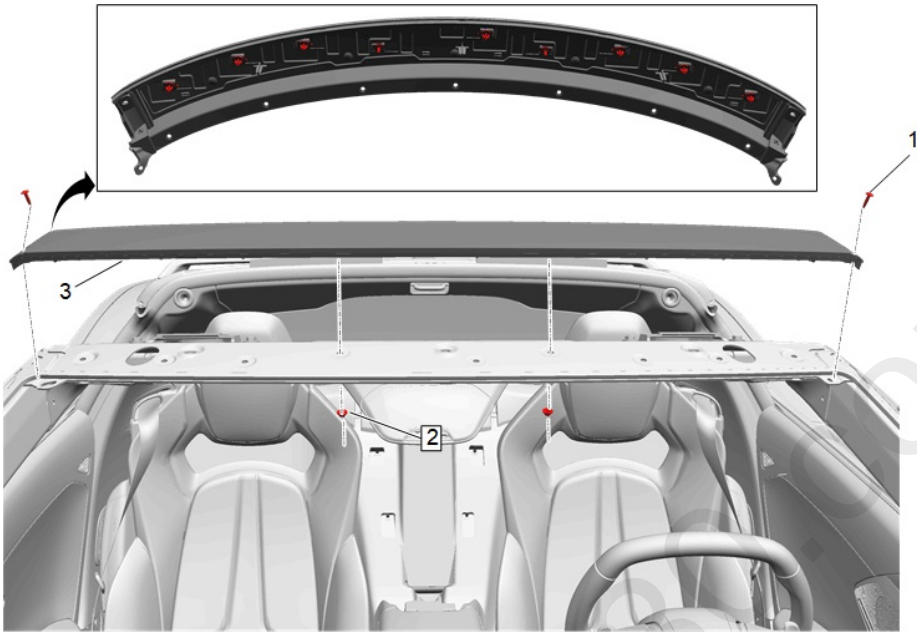

Click here for full size
Windshield Frame Weatherstrip Retainer Replacement

Fastener Caution.

Tighten

2.5 N-m (22 lb in)

Callout	Component Name
Preliminary Procedure	
1	Windshield Upper Applique Bolt [2x] Caution: Refer to
2	Windshield Upper Applique Nut [2x] Tighten 4.7 N-m (42 lb in)

Callout	Component Name
3	Windshield Upper Applique Procedure 1. Release the retainers. 2. Remove any broke retainers or loose pieces to prevent a rattles.

mcx30.com