


# 2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**


1. **Body Hardware and Trim**
2. **Interior Trim and Paneling**
3. **Repair Instructions**
- 4.

## **Front Side Door Trim Replacement**


### **Removal Procedure**

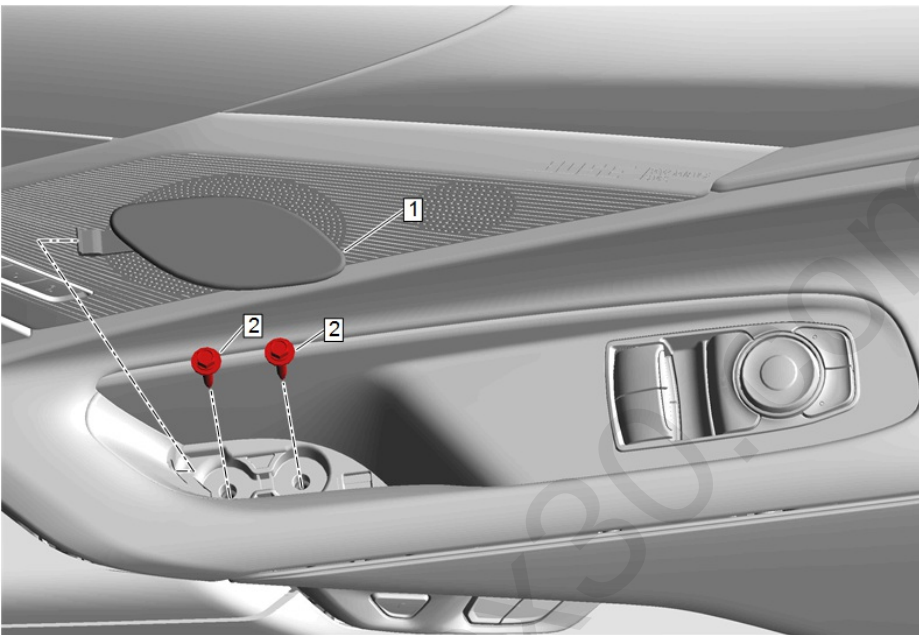

1. [Click here for full size](#)
2. Front Side Door Armrest Pull Cup Bolt Cap (1) >> Remove
3. Front Side Door Armrest Pull Cup Bolt (2>) >> Remove [2>x]

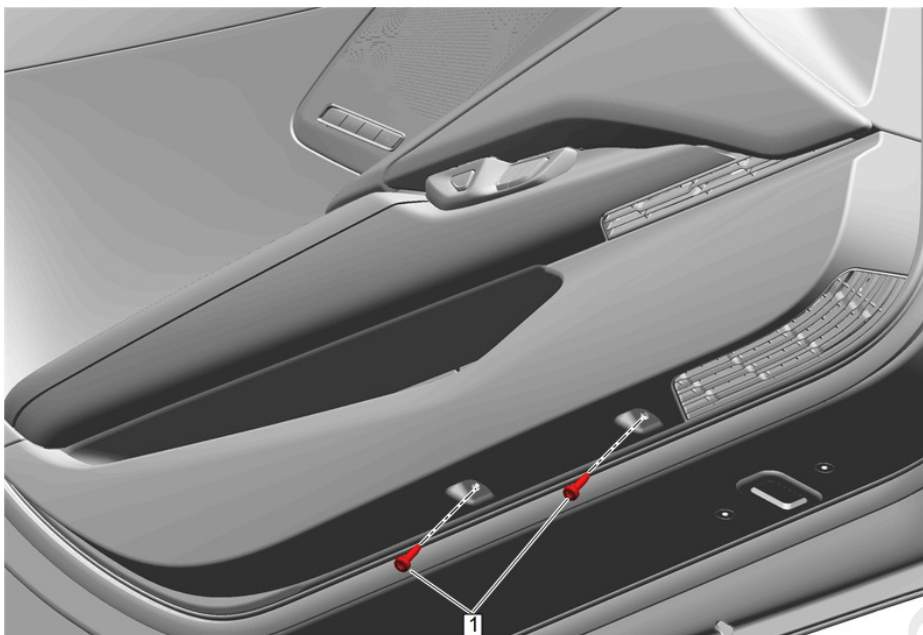

4. [Click here for full size](#)
5. Front Side Door Trim Panel Bolt (1) >> Remove [2>x]

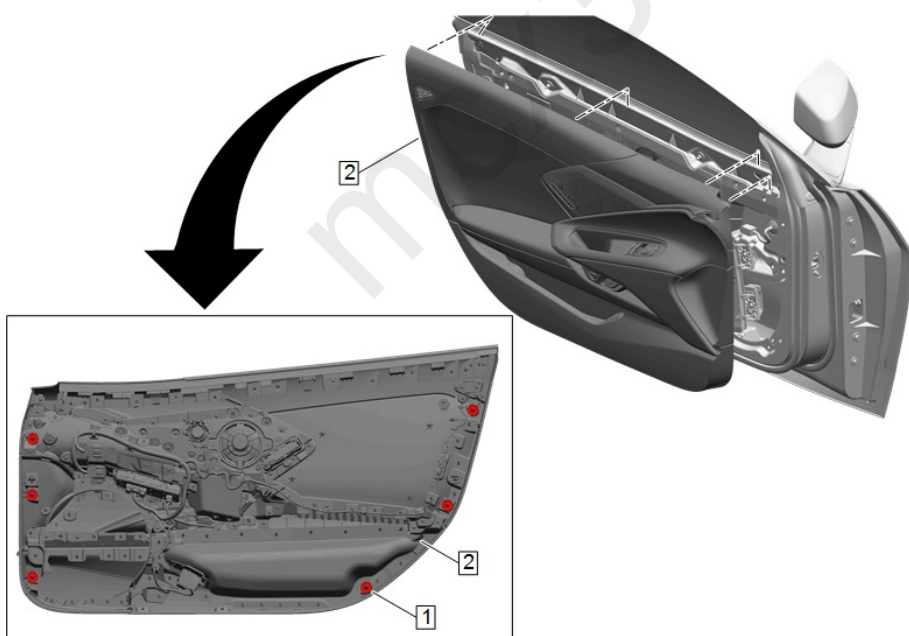


6. [Click here for full size](#)
7. Note:  
The front side door trim has an integral front side door trim assembly belt bracket that hooks over the front side door window inner sealing strip.
8. Using an appropriate tool, start from the rear bottom corner and pull the front side door trim (2>) from the sheet metal towards you to

disengage perimeter retainers (1>) .

9. When the front side door trim (2>) is sufficiently loosened, place an appropriate tool at the rear portion of the door trim to disengage the remaining retainers (1>).
10. Unhook the front side door trim (2>) from the belt line, pulling the door trim upwards using both hands.
11. Disconnect the electrical connector.
12. Front Side Door Trim (2>) >> Remove
13. Place the front side door trim (2>) on a clean flat surface.

## Installation Procedure

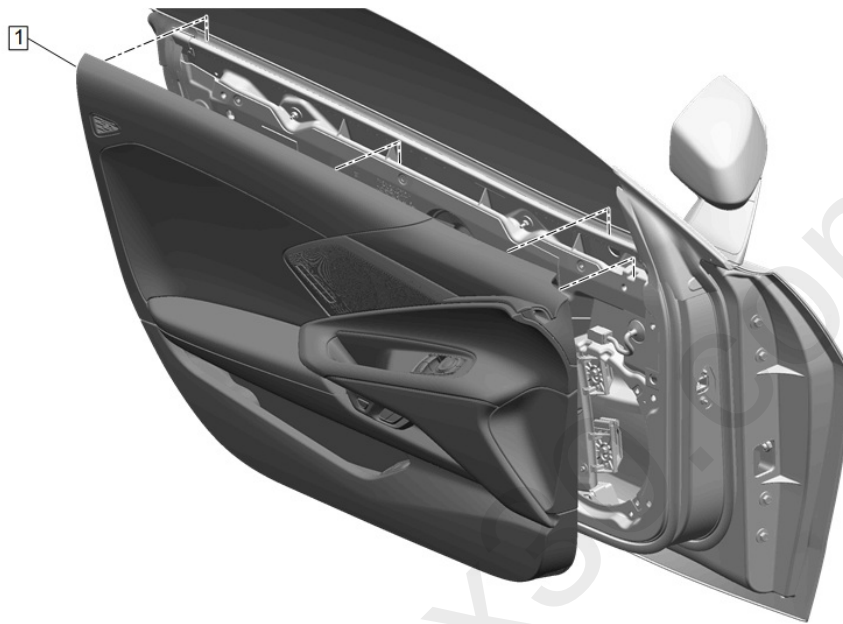

1.  
[Click here for full size](#)

2. Note:

Door trim installation is hook and swing. Install integral trim belt bracket to door seal.

3. Front Side Door Trim (1>) >> Install


- 4.

1. Connect the electrical connector.

2. Hook the integral front side door trim belt bracket to the front side door window inner sealing strip and swing in to install.

5. Engage most forward locator pin.

6. Engage remaining retainers starting from the bottom to the front and rear.

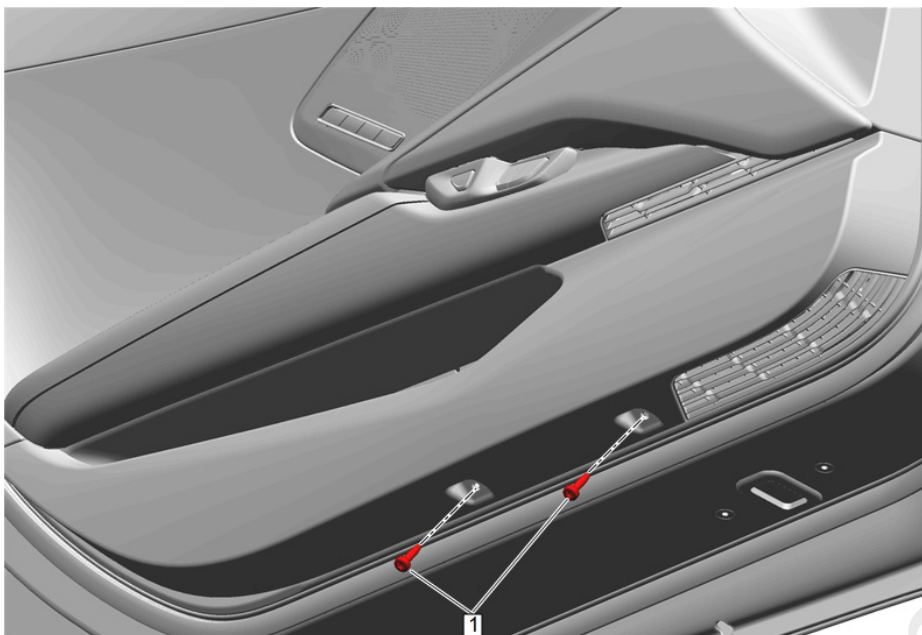


7. [Click here for full size](#)

8. Caution:

Refer to Fastener Caution.

9. Front Side Door Trim Panel Bolt (1) >> Install and tighten [2>x]3 N-m (27 lb in)

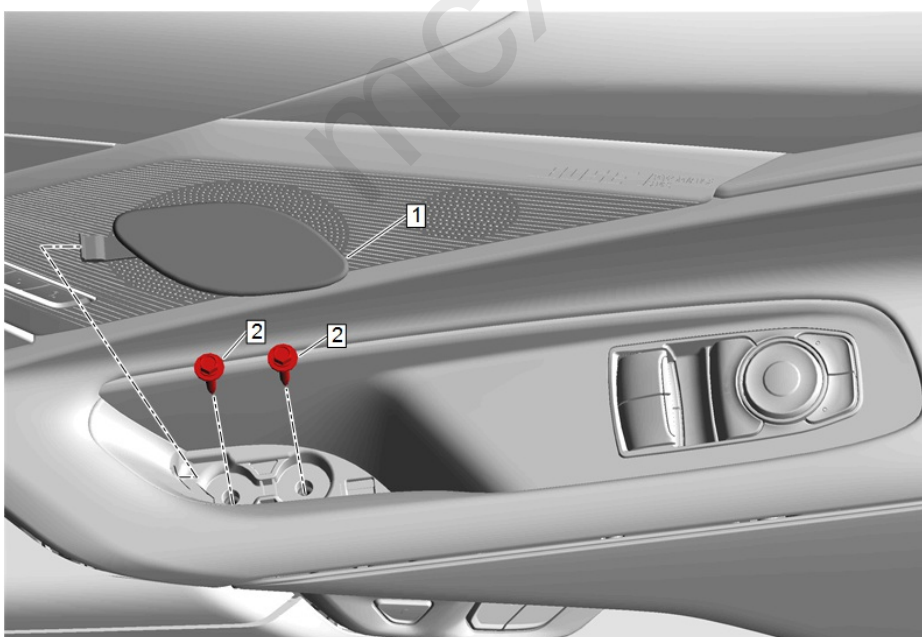

10. [Click here for full size](#)

11. Front Side Door Armrest Pull Cup Bolt (2>) >> Install and tighten [2>x]2.5 N-m (22 lb in)

12. Front Side Door Armrest Pull Cup Bolt Cap (1) >> Install

mcx30.com