


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

- 1. Body Hardware and Trim
- 2. Interior Trim and Paneling
- 3. Repair Instructions
- 4.

Sunshade Replacement

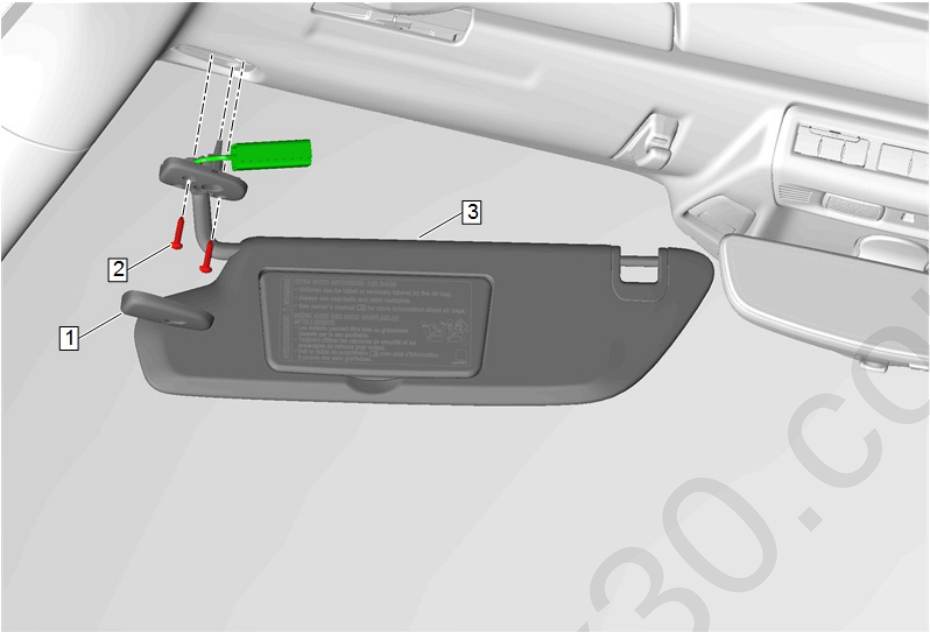

[Click here for full size](#)
Windshield Upper Garnish Molding Replacement

Fastener Caution.

Tighten

2.5 N-m (22 lb in)

Callout	Component Name
Preliminary Procedure	
Note:	
It is only necessary to reposition the front of the windshield upper garnish molding to gain access to the sunshade electrical connector. Only do those steps in the windshield upper garnish molding replacement procedure that lets you gain access to the part.	
1	Sunshade Retainer Bolt Cover
2	Sunshade Bolt [2x]
	Caution: Refer to
3	Sunshade
	Procedure Disconnect the electrical connector.