

2022 CHEVROLET CORVETTE SERVICE MANUAL

- [SEARCH](#)

1. [Power and Signal Distribution](#)

2. [Wire and Connector Repair](#)

3. [Repair Instructions](#)

- 4.

150 MX Sealed Series Connectors (Female)

Special Tools

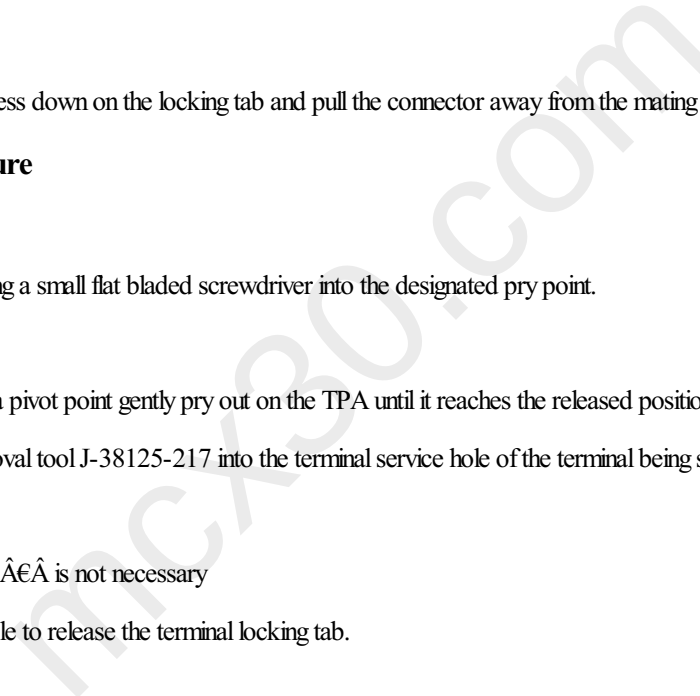
- J-38125-217

For equivalent regional tools, refer to Special Tools.

Connector Removal Procedure

1. [Click here for full size](#)
2. Release the CPA, by sliding it away from the locking tab.
3. [Click here for full size](#)
4. Once the CPA is released, press down on the locking tab and pull the connector away from the mating component.

Terminal Removal Procedure

1. [Click here for full size](#)
2. Disengage the TPA by inserting a small flat bladed screwdriver into the designated pry point.
3. [Click here for full size](#)
4. Using the connector body as a pivot point gently pry out on the TPA until it reaches the released position.
5. Gently insert the terminal removal tool J-38125-217 into the terminal service hole of the terminal being serviced.
6. Note:
Prying or  picking is not necessary
7. Push straight down into the hole to release the terminal locking tab.
8. [Click here for full size](#)
9. Once the locking tab is released, gently pull on the wire to remove the terminal from the connector.

Terminal Installation Procedure

Other List:graphic

- Correct

- [Click here for full size](#)

- Incorrect

1. Use the figures below to verify the terminal is properly positioned to the connector body.
2. [Click here for full size](#)
3. Once the correct terminal position has been determined, insert the terminal into the connector body until it is fully seated, an audible click will be heard or felt when seated. Gently pull on the wire to ensure the locking tab is fully engaged.
4. [Click here for full size](#)
5. Use your finger to push the TPA in until its fully seated in the locked position, an audible click should be heard or felt.

