


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH


1. [Body Repair](#)
2. [Bolted Exterior Body Panels and Closures](#)
3. [Repair Instructions](#)
- 4.

Front Fender Replacement - Right Side

Removal Procedure

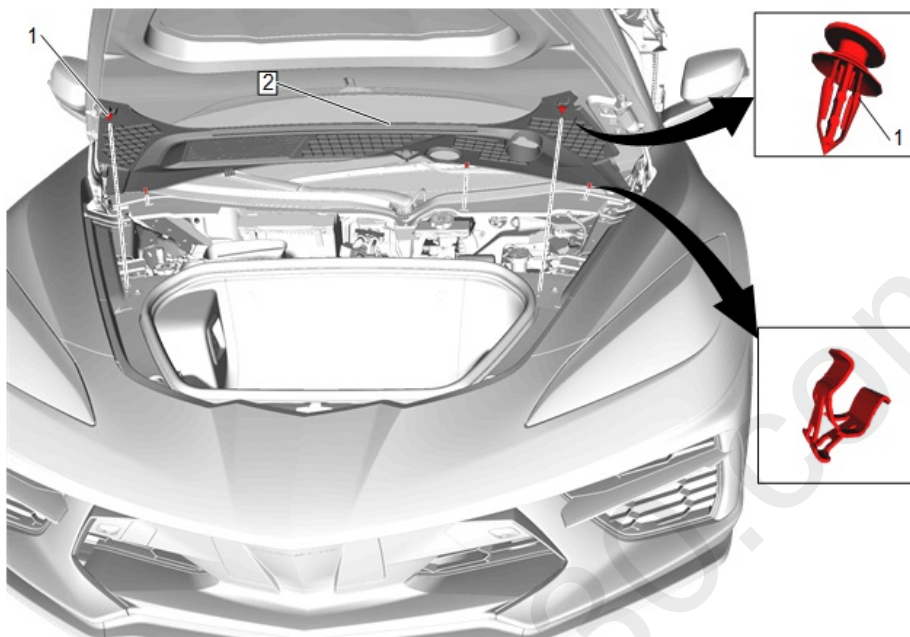

1. [Click here for full size](#)
2. Front Compartment Rear Access Cover (2) >> Remove - Front Compartment Rear Access Cover Replacement

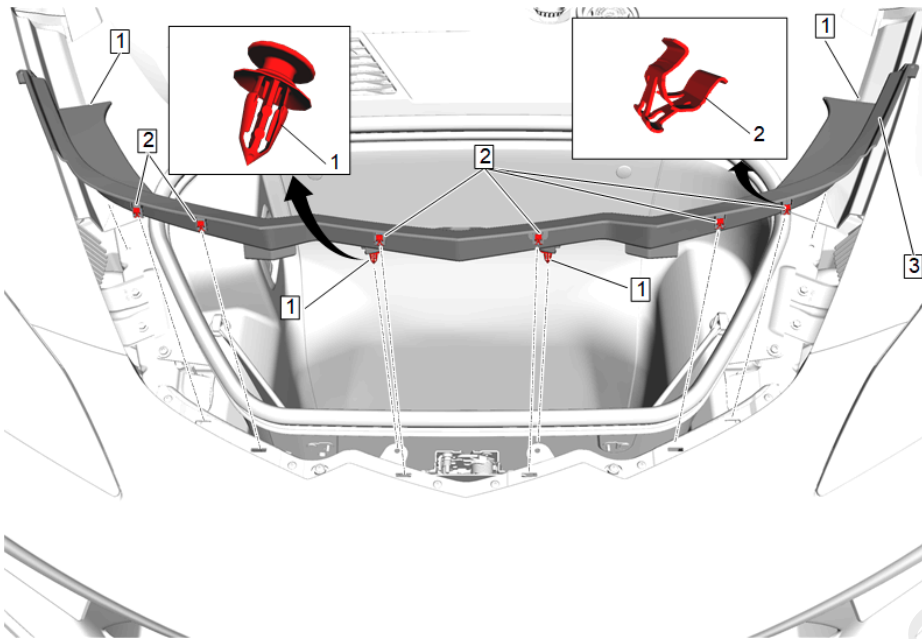


3. [Click here for full size](#)

4. Front Compartment Front Sight Shield (3) >>> Remove - Front Compartment Front Sight Shield Replacement

5. Air Inlet Grille Panel Extension >>> Remove - Air Inlet Grille Panel Extension Replacement

6. Front Wheelhouse Liner - Right Side >>> Remove - Front Wheelhouse Liner Replacement - Right Side

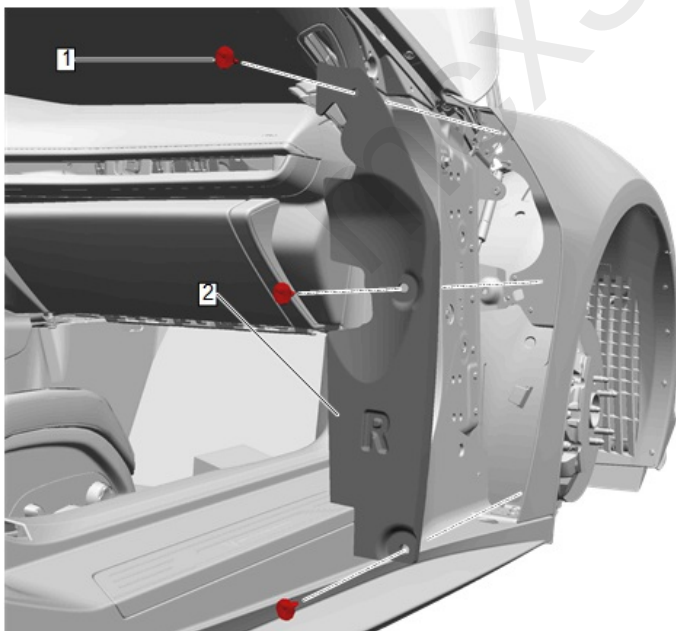


7. [Click here for full size](#)


8. Front Fender Insulator - Right Side (2) >>> Remove - Front Fender Insulator Replacement - Right Side

9. [Click here for full size](#)


10. Front Bumper Fascia Bolt (1) >>> Remove [2x]

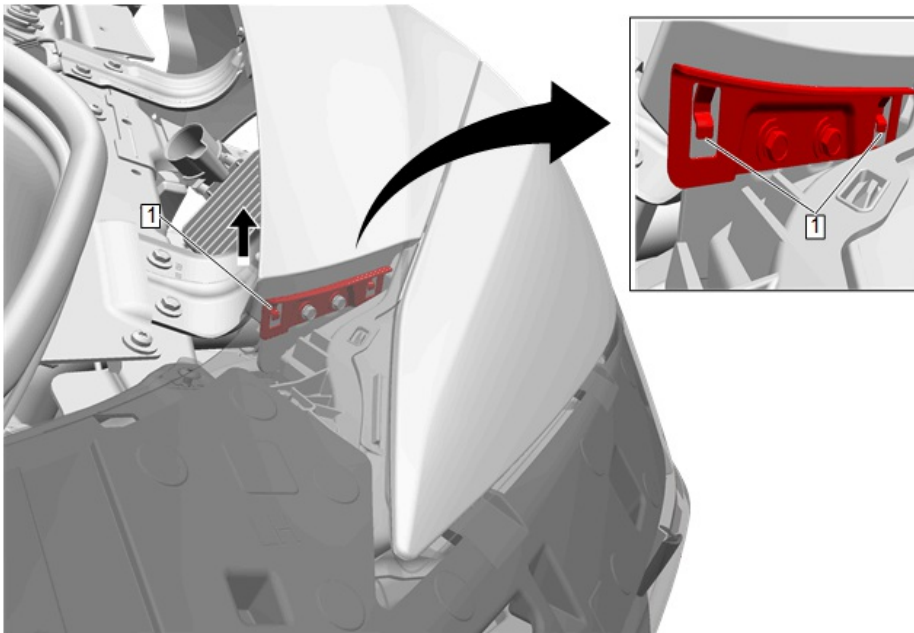

11. [Click here for full size](#)
12. Release the 2 front bumper fascia guide inner retainer tabs (1) on the left and right side and pull the front bumper fascia up from the front bumper fascia guide inner.
13. [Click here for full size](#)
14. Front Bumper Fascia Bolt (1) >> Remove [3x]

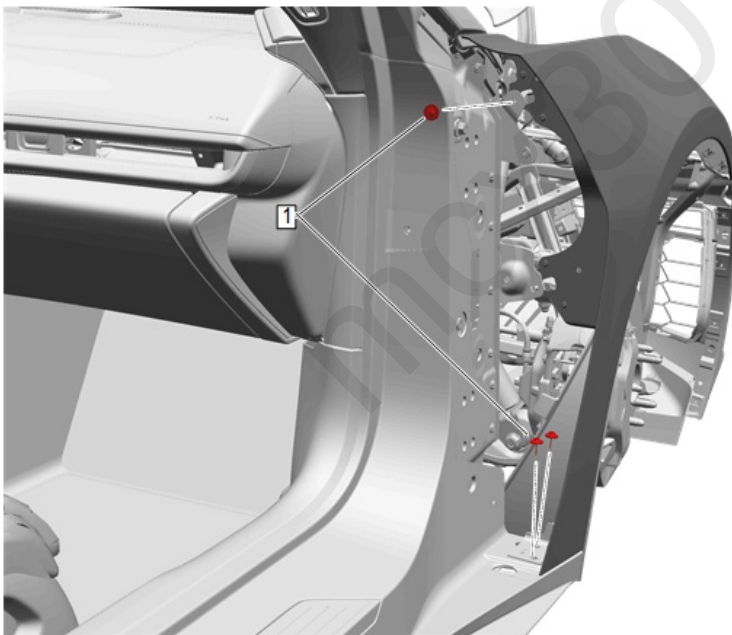


15. [Click here for full size](#)
16. Front Fender Bolt (1) >> Remove [3x]

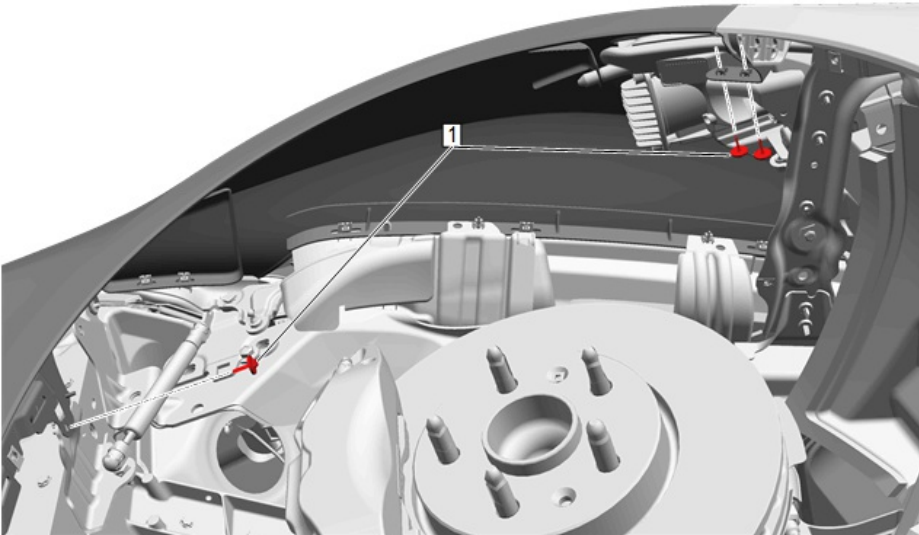


17.
[Click here for full size](#)

18. Front Fender Bolt (1) >> Remove [3x]

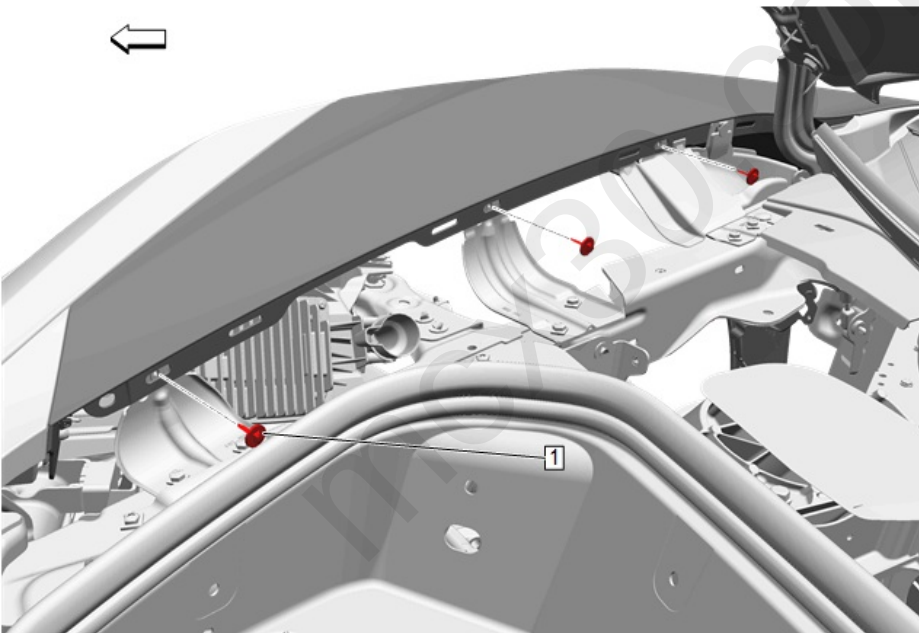


19.
[Click here for full size](#)

20. Front Fender Bolt (1) >> Remove [3x]

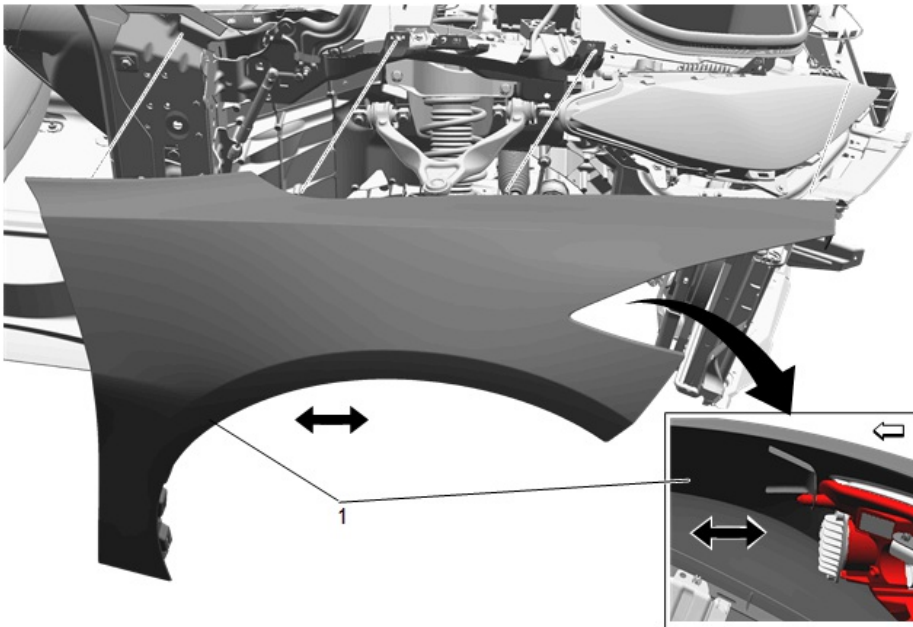


21. [Click here for full size](#)
22. Slide the front fender (1) rearward to release the headlamp guide pin and remove.
23. Transfer components as necessary.


Installation Procedure

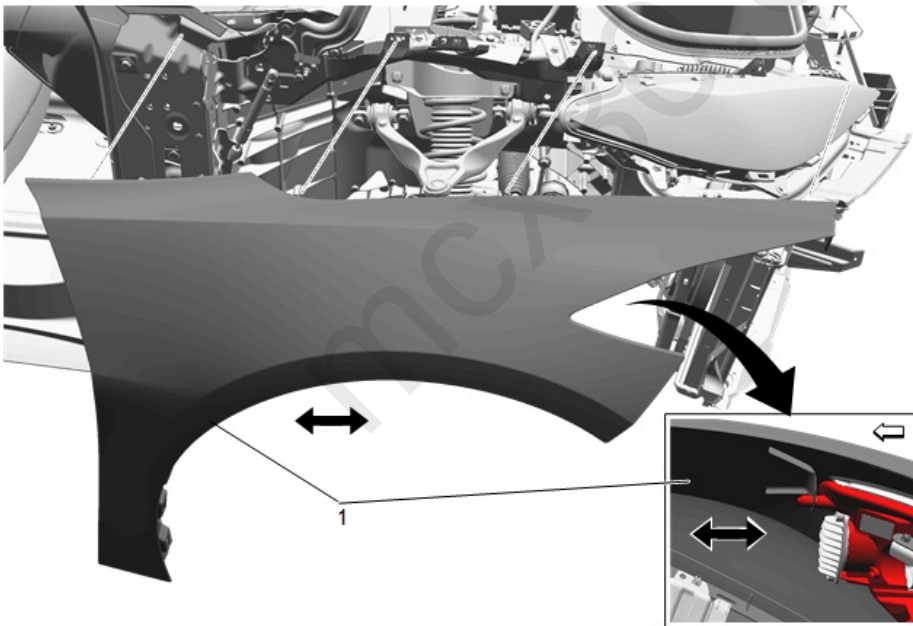


1. [Click here for full size](#)
2. Front Fender - Right Side (1) >> Install

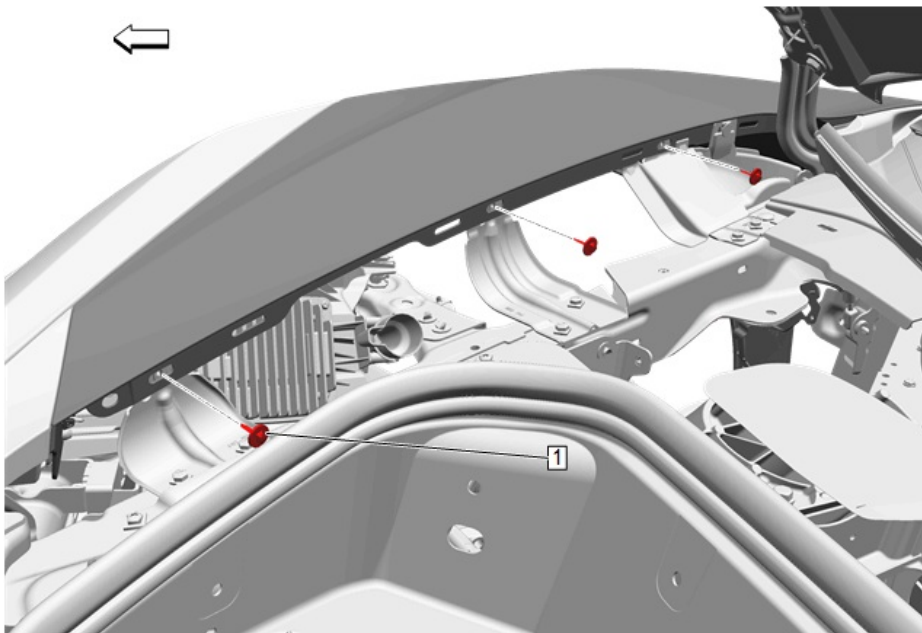


3. [Click here for full size](#)
4. Caution:
Refer to Fastener Caution.
5. Front Fender Bolt (1) >> Install and tighten [3x]9>N-m (80 lb in)

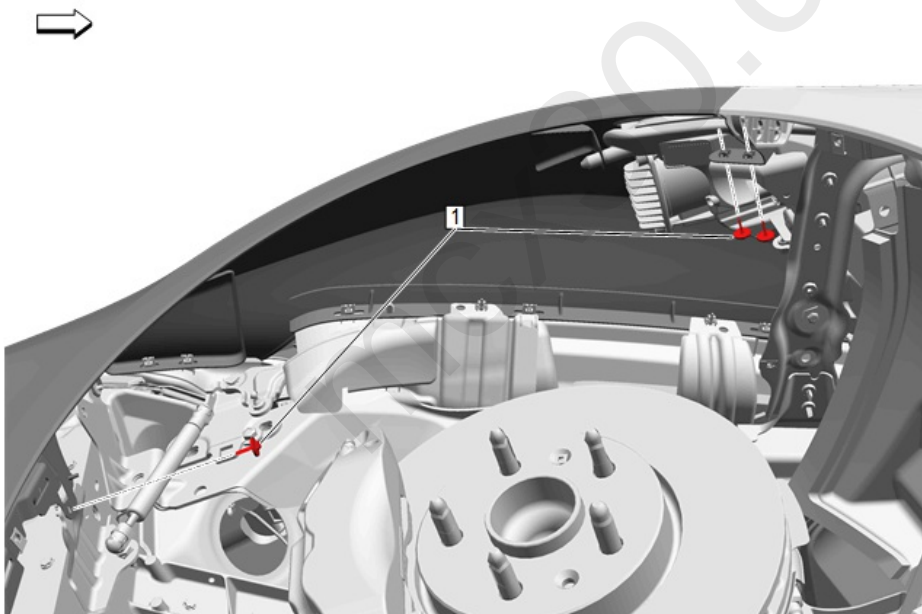


6. [Click here for full size](#)
7. Front Fender Bolt (1) >> Install and tighten [3x]9>N-m (80 lb in)

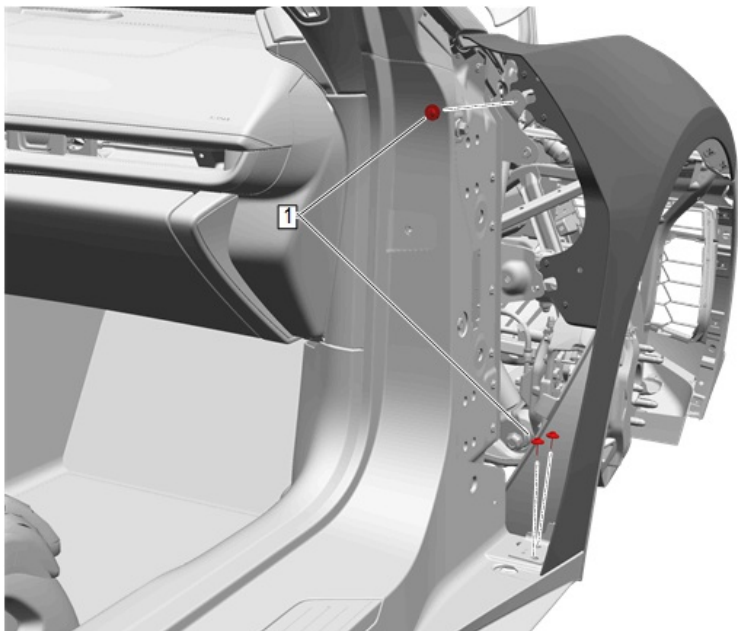

8. [Click here for full size](#)
9. Front Fender Bolt (1) >> Install and tighten [3x]9>N-m (80 lb in)
10. [Click here for full size](#)
11. Front Bumper Fascia Bolt (1) >> Install and tighten [3x]2.5N-m (22 lb in)
12. [Click here for full size](#)
13. Front Bumper Fascia Bolt (1) >> Install and tighten [2x]2.5N-m (22 lb in)

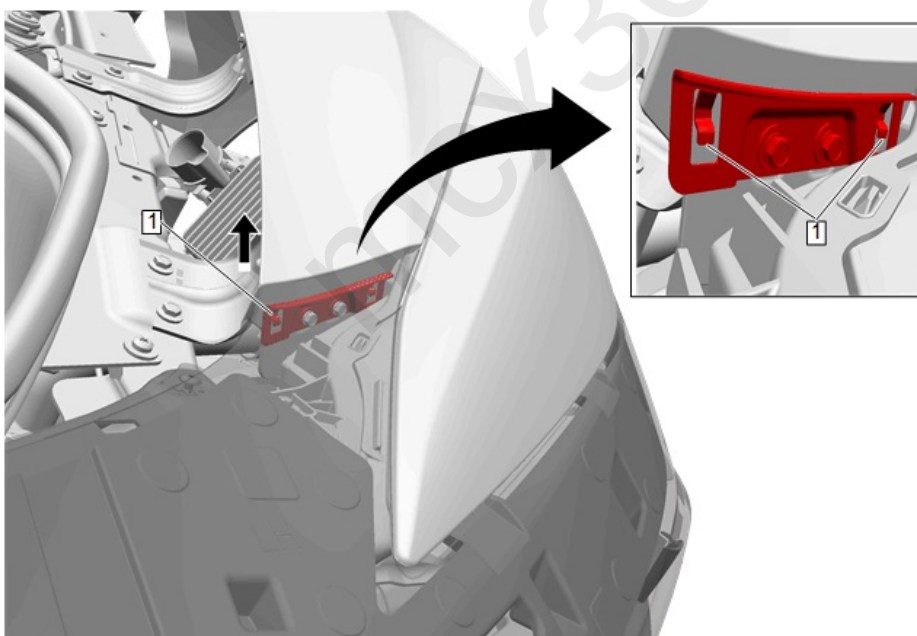

14. [Click here for full size](#)
15. Secure the front bumper fascia guide inner retainer tabs (1) to the front bumper fascia guide inner.

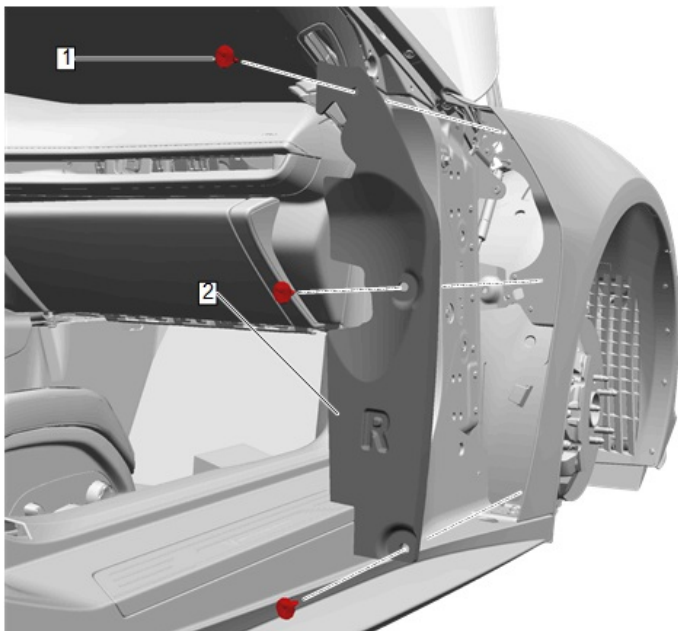


16.
[Click here for full size](#)

17. Front Fender Insulator - Right Side (2) >>> Install - Front Fender Insulator Replacement - Right Side


18. Front Wheelhouse Liner - Right Side >> Install - Front Wheelhouse Liner Replacement - Right Side

19. Air Inlet Grille Panel Extension >> Install - Air Inlet Grille Panel Extension Replacement

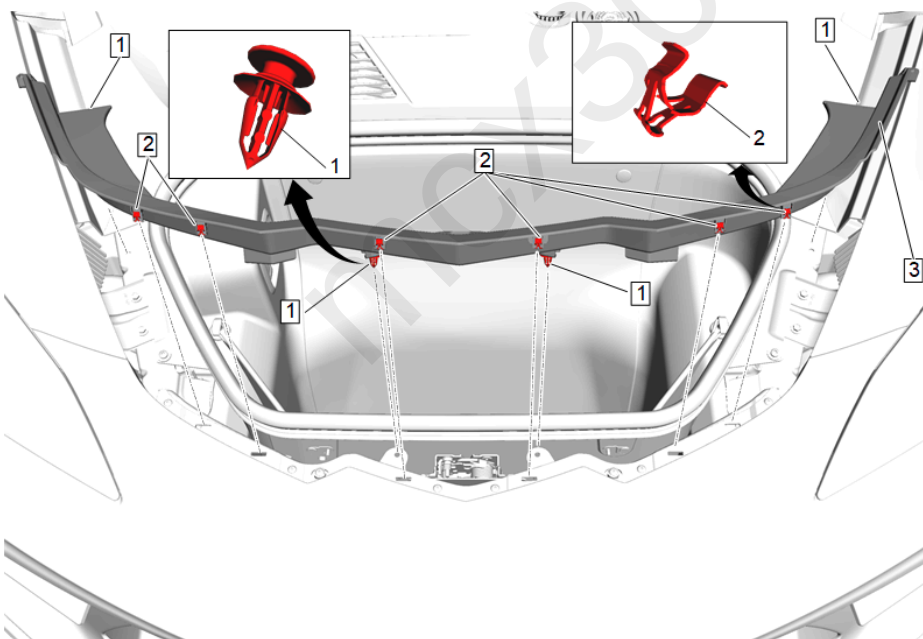

20.
[Click here for full size](#)

21. Front Compartment Front Sight Shield (3) >>> Install - Front Compartment Front Sight Shield Replacement

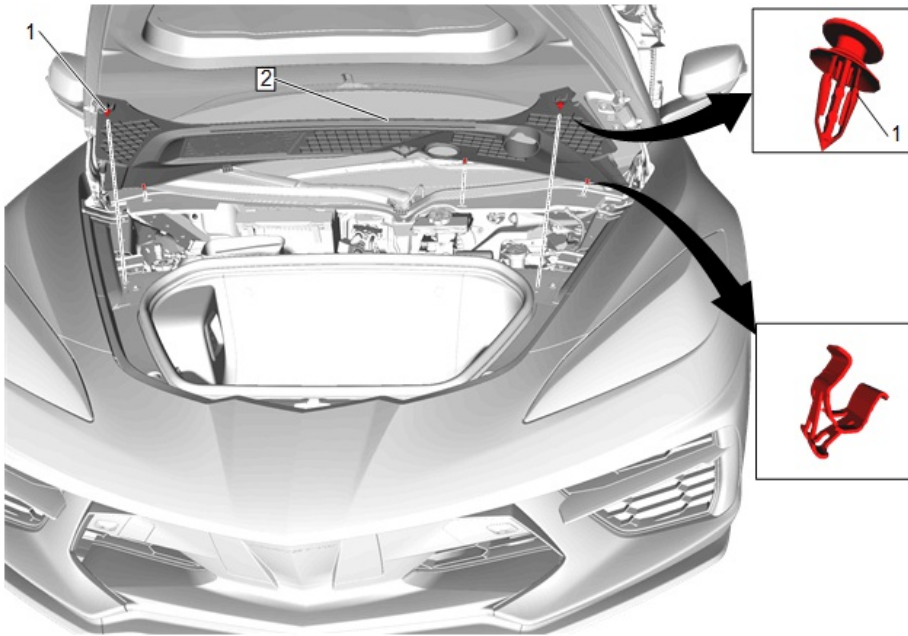

22.
[Click here for full size](#)

23. Front Compartment Rear Access Cover (2) >>> Install - Front Compartment Rear Access Cover Replacement

mcx30.com