

2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Body Repair**

2. **Bolted Exterior Body Panels and Closures**


3. **Repair Instructions**

- 4.

Front Side Door Replacement

Removal Procedure

1. Apply a double layer of masking tape around the perimeter of the painted surfaces.

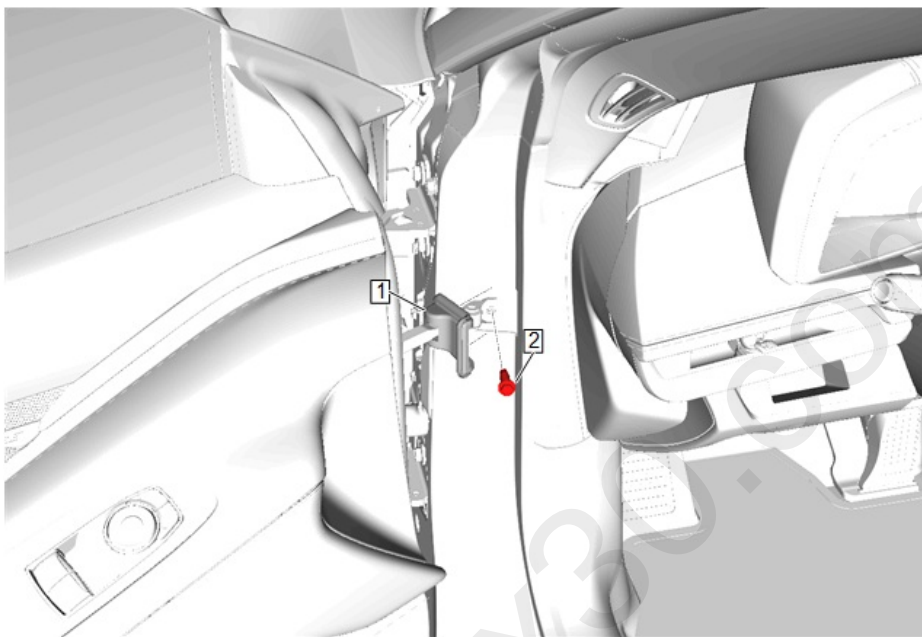


2. [Click here for full size](#)
3. Front Side Door Check Link Cover (1) >> Release
4. Front Side Door Check Link Bolt (2) >> Remove - Front Side Door Check Link Replacement
5. Mark the location of the front side door hinges with a grease pencil to aid in alignment during installation.
6. Support the door before removing the hinge fastener.
7. [Click here for full size](#)
8. Front Side Door Hinge Bolt - Door Side (1) >> Remove [4x] - Front Side Door Upper Hinge and Lower Hinge Replacement
9. [Click here for full size](#)
10. Disconnect the front side door wiring harness (1) electrical connector. Front Side Door Wiring Harness Replacement
11. [Click here for full size](#)
12. With the aid of an assistant, remove the front side door (1).
13. Transfer components as necessary.

Installation Procedure

1. [Click here for full size](#)
2. With the aid of an assistant, install the front side door (1).

3. [Click here for full size](#)
4. Connect the front side door wiring harness electrical connector (1). [Front Side Door Wiring Harness Replacement](#)
5. [Click here for full size](#)
6. Align the door hinges with the markings made with the grease pencil.
7. [Front Side Door Hinge Bolt - Door Side \(1\) >>> Install \[4x\] - Front Side Door Upper Hinge and Lower Hinge Replacement](#)

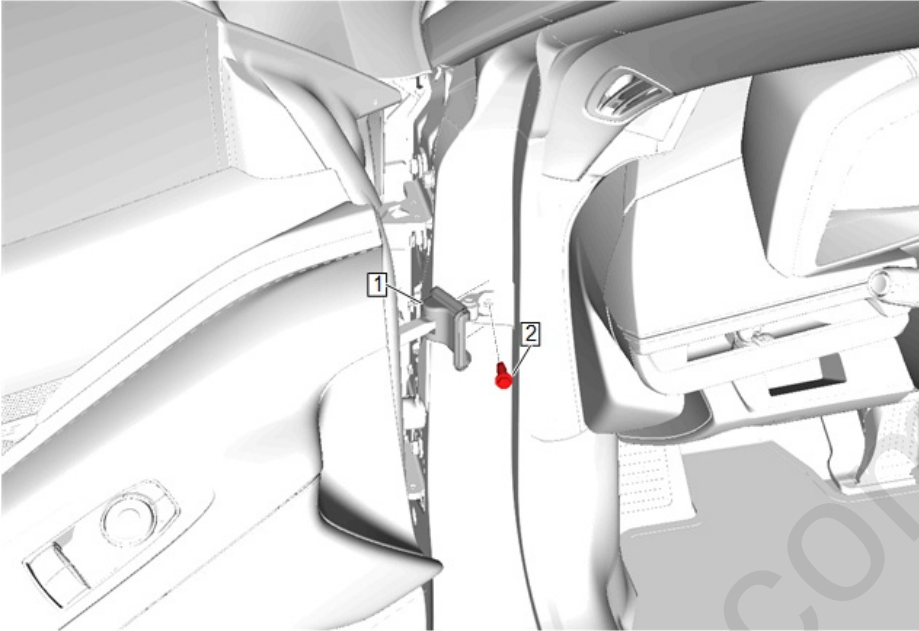

8. [Click here for full size](#)
9. [Front Side Door Check Link Bolt \(2\) >>> Install - Front Side Door Check Link Replacement](#)
10. [Front Side Door Check Link Cover \(1\) >>> Install](#)
11. Inspect the door for proper operation and alignment.
12. If necessary, adjust the front side door. [Front Side Door Adjustment](#)
13. Remove the tape.
14. Remove any remaining adhesive residue with a 50/50 mixture by volume of isopropyl alcohol and clean drinkable water. Wipe the surface dry with a clean lint-free towel.