

# 2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**

1. **Steering**
2. **Power Steering**
3. **Repair Instructions**
- 4.


## **Steering Gear Boot Replacement**

Special Tools


CH-22610, Keystone Clamp Pliers

Equivalent regional tools: Special Tools


## **Removal Procedure**

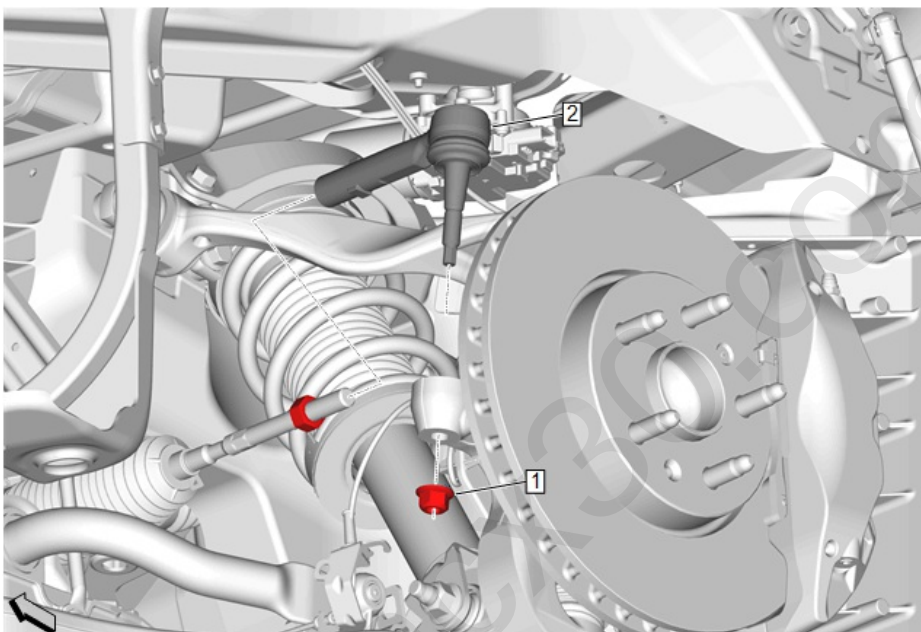

1. [Click here for full size](#)
2. Steering Linkage Outer Tie Rod (2) >>> Remove - Steering Linkage Outer Tie Rod Replacement

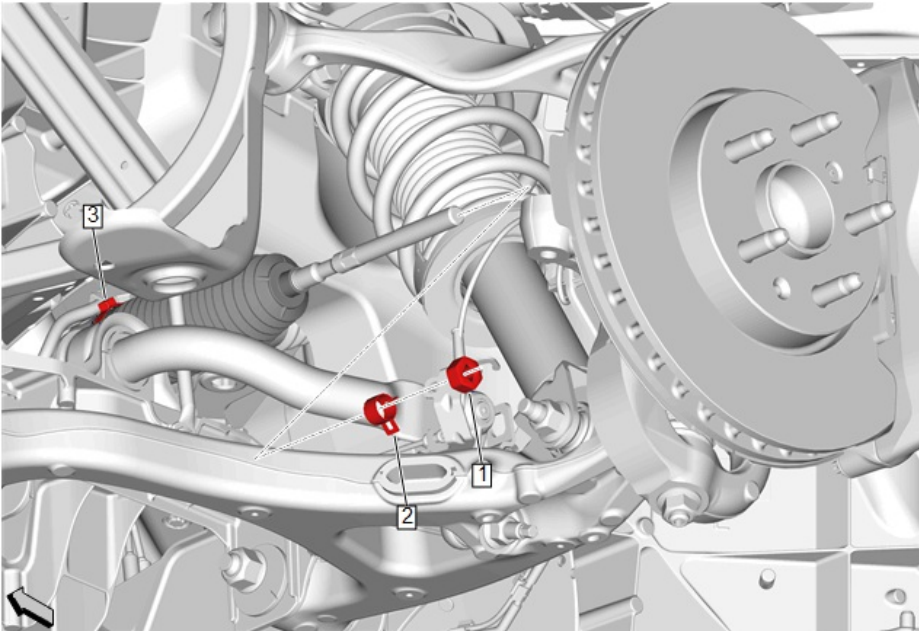


3. [Click here for full size](#)
4. Note:  
Place match marks on the steering linkage inner tie rod nut and the steering linkage inner tie rod.
5. Steering Linkage Inner Tie Rod Nut (1) >> Remove
6. Steering Gear Boot Outer Clamp (2) >> Remove
7. Steering Gear Boot Inner Clamp (3) >> Remove and DISCARD

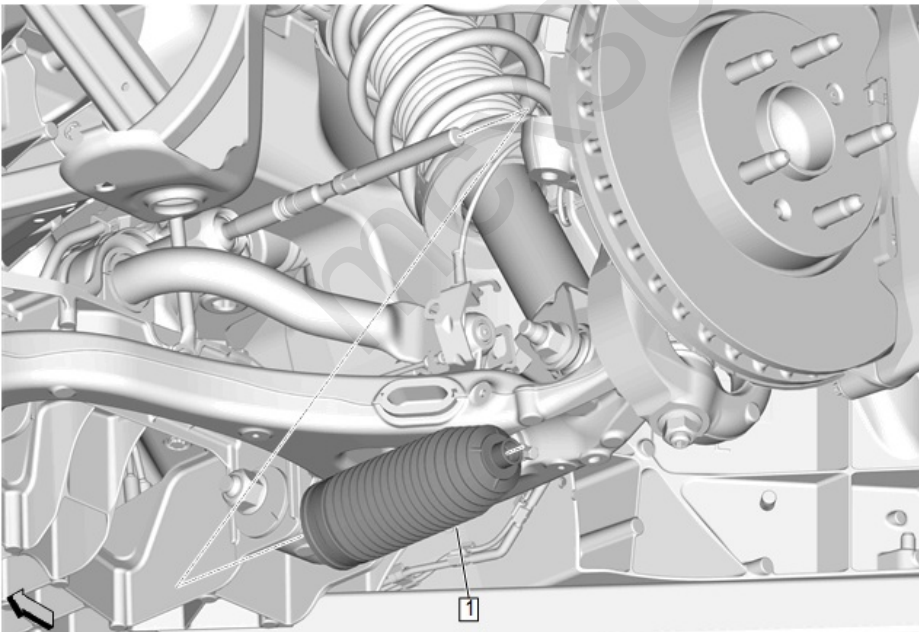


8. [Click here for full size](#)
9. Steering Gear Boot (1) >> Remove


## Installation Procedure

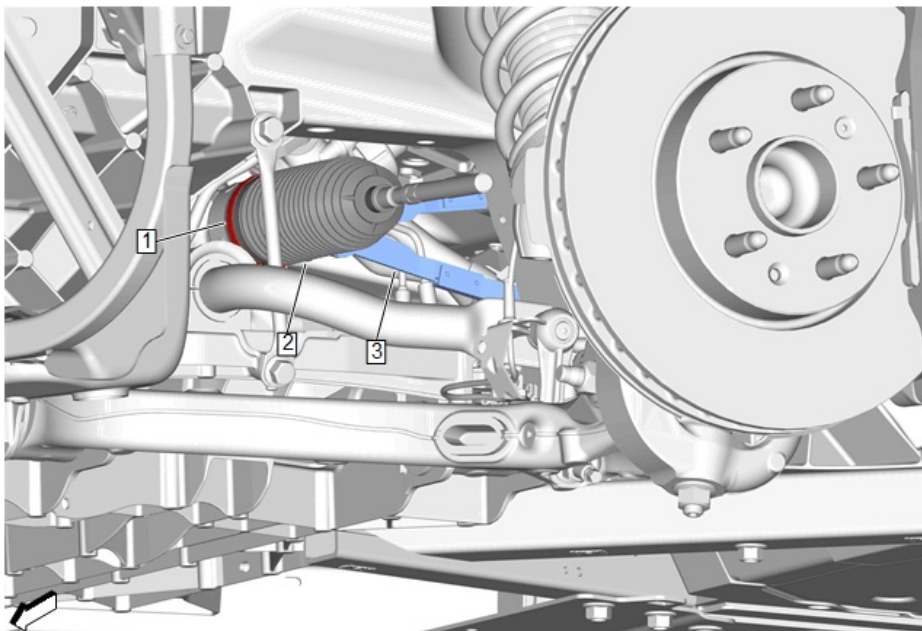

1. [Click here for full size](#)
2. Position a NEW steering gear boot inner clamp (1) on the steering gear boot (2).
3. Steering Gear Boot (2) >> Install
4. Steering Gear Boot Inner Clamp (1) >> Tighten - use CH-22610, Keystone Clamp Pliers (3)

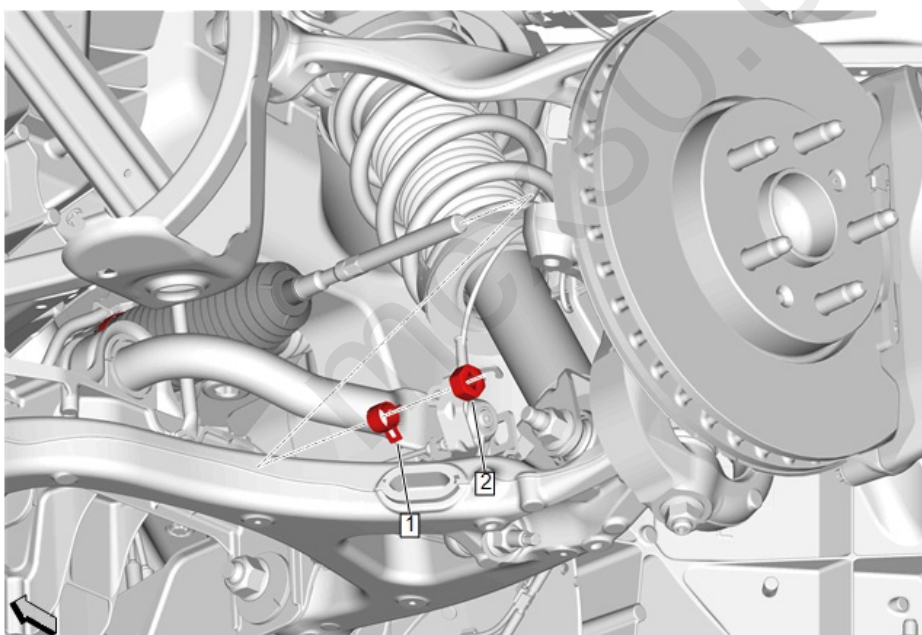

5. [Click here for full size](#)
6. Steering Gear Boot Outer Clamp (1) >> Install
7. Steering Linkage Inner Tie Rod Nut (2) >> Install

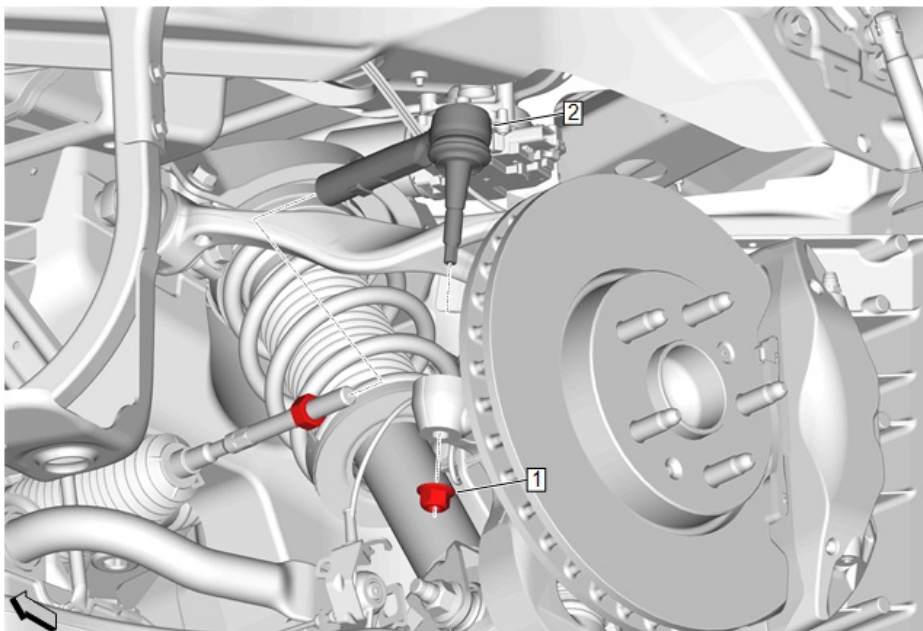

8. [Click here for full size](#)
9. Steering Linkage Outer Tie Rod (2) >>> Install - Steering Linkage Outer Tie Rod Replacement
10. Measure and adjust the front toe. Wheel Alignment - Steering Wheel Angle and/or Front Toe Adjustment