


2022 CHEVROLET CORVETTE SERVICE MANUAL

- **SEARCH**


1. **Body Repair**
2. **Bumpers and Fascias**
3. **Repair Instructions**
- 4.

Front Bumper Fascia Removal and Installation

Removal Procedure

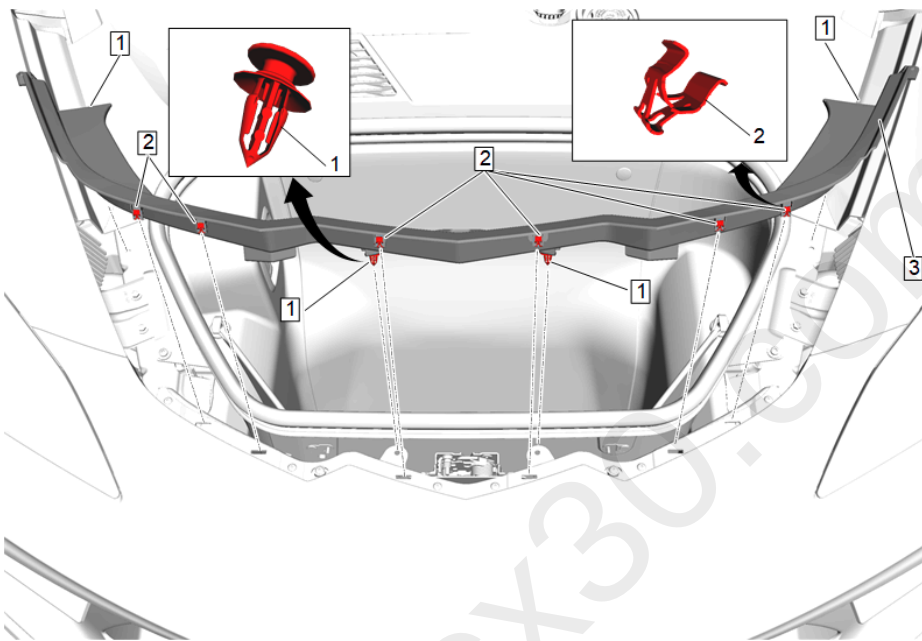


1. [Click here for full size](#)
2. Front Compartment Front Sight Shield (2) >> Remove - Front Compartment Front Sight Shield Replacement
3. Front Tire Front Air Deflector >> Remove - Front Tire Front Air Deflector Replacement

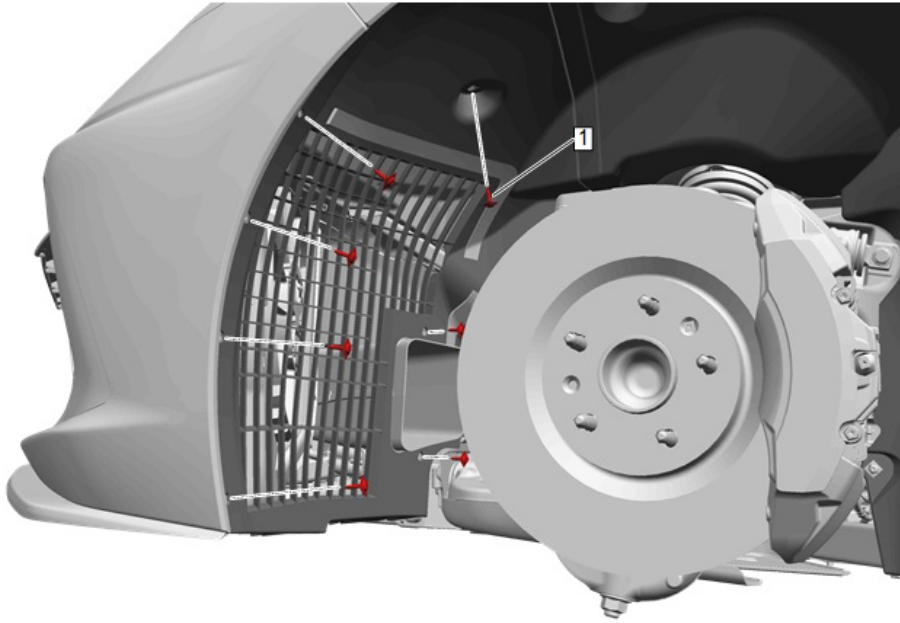


4.
[Click here for full size](#)

5. Remove the 8 front wheelhouse liner bolts (1) from left side front wheelhouse liner to access the front bumper fascia bolts.

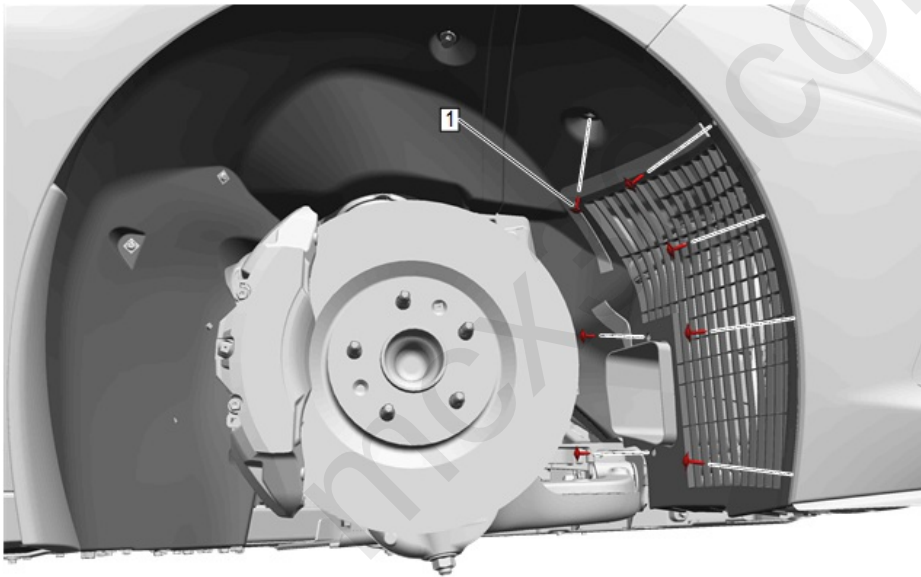


6.
[Click here for full size](#)

7. Remove the 8 front wheelhouse liner bolts (1) from right side front wheelhouse liner to access the front bumper fascia bolts.

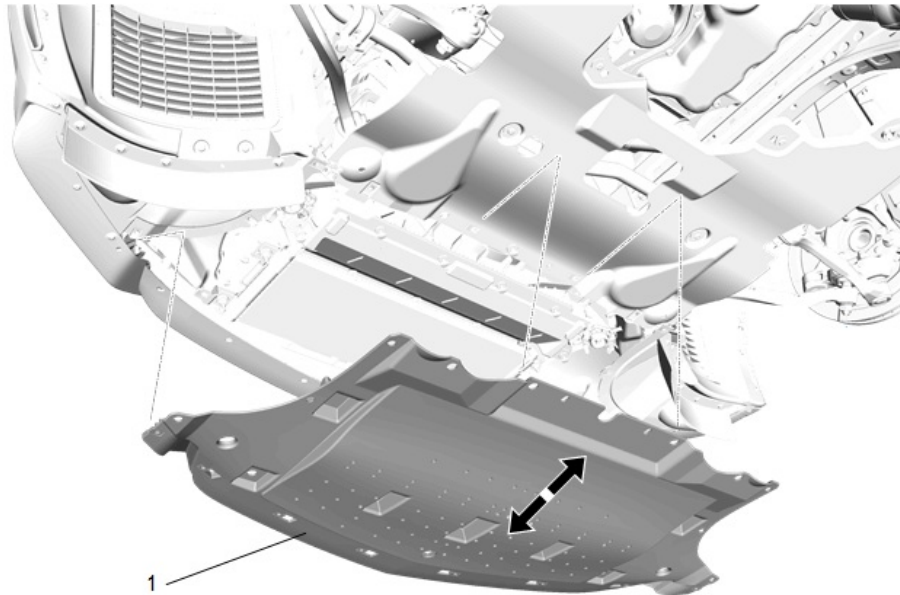


8.
[Click here for full size](#)

9. Front Bumper Fascia Lower Stiffener (1) >> Remove - Front Bumper Fascia Lower Stiffener Replacement

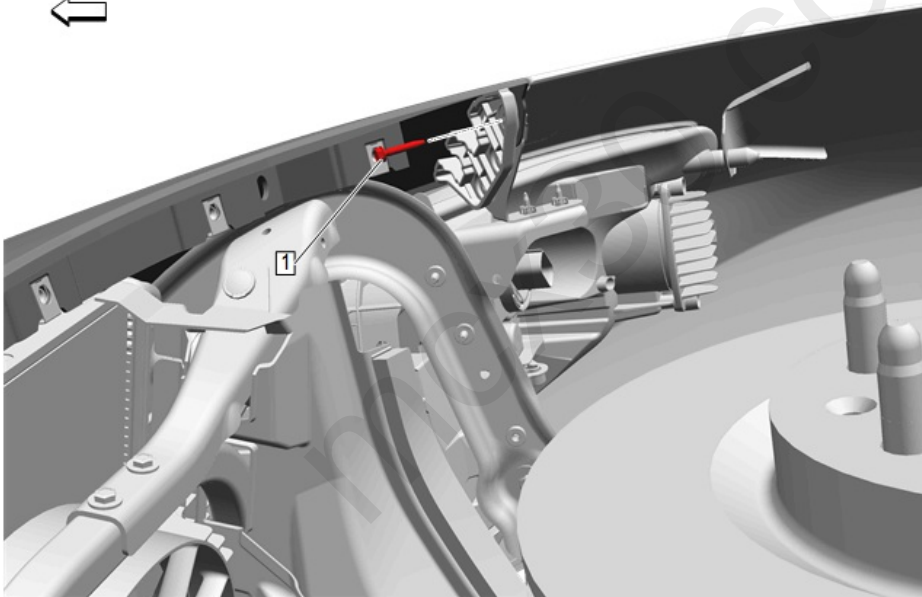


10.
[Click here for full size](#)

11. Remove the front bumper fascia bolt (1) from the left and right side.

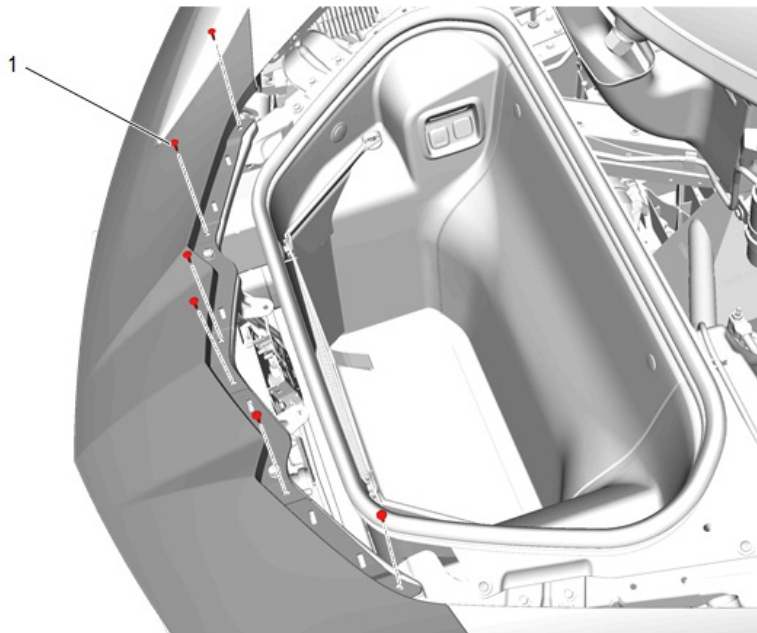

12.
[Click here for full size](#)


13. Front Bumper Fascia Bolt >> Remove [6x]

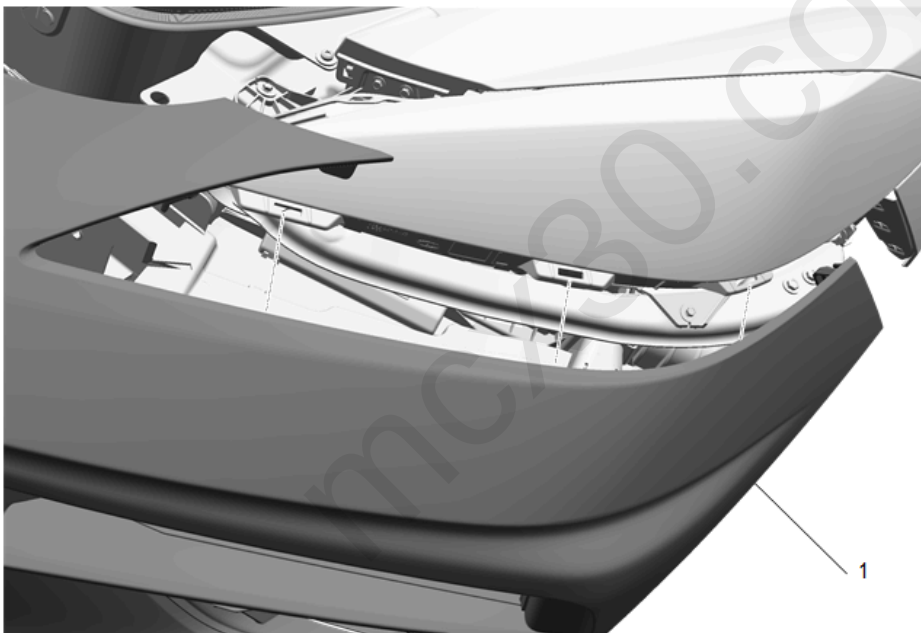


14.
[Click here for full size](#)

15. Carefully push a small nylon wedge between the fascia (1) and the fascia guide on both sides. Insert a small flat-bladed tool into the fascia slot and depress the snaps one at a time and pull on the fascia at the same time to gradually remove the fascia.

16. Release the tabs on the fascia (1) from the headlamp on both sides.

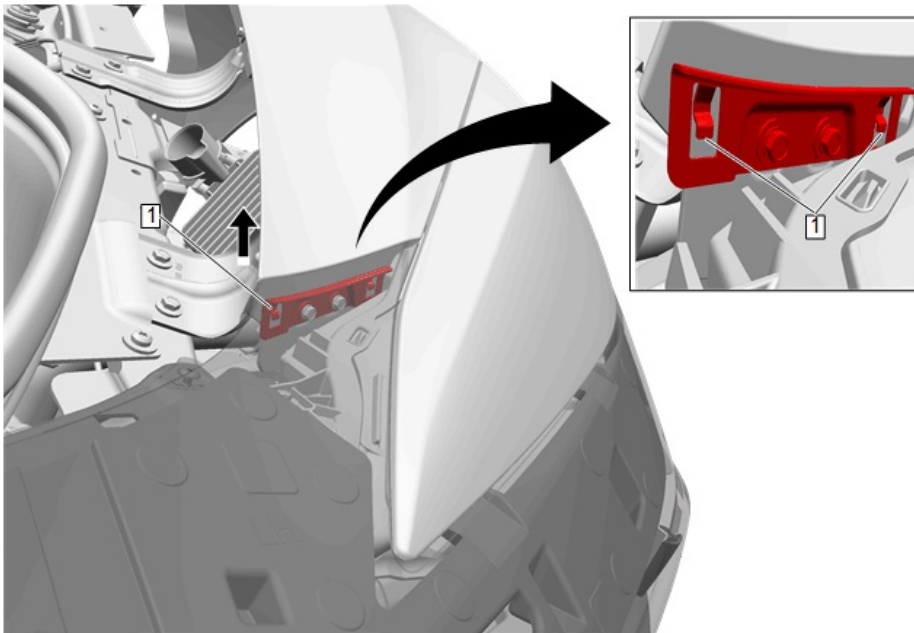

17. [Click here for full size](#)
18. Release the 2 front bumper fascia guide inner retainer tabs (1) on the left and right side and pull the front bumper fascia up from the front bumper fascia guide inner.

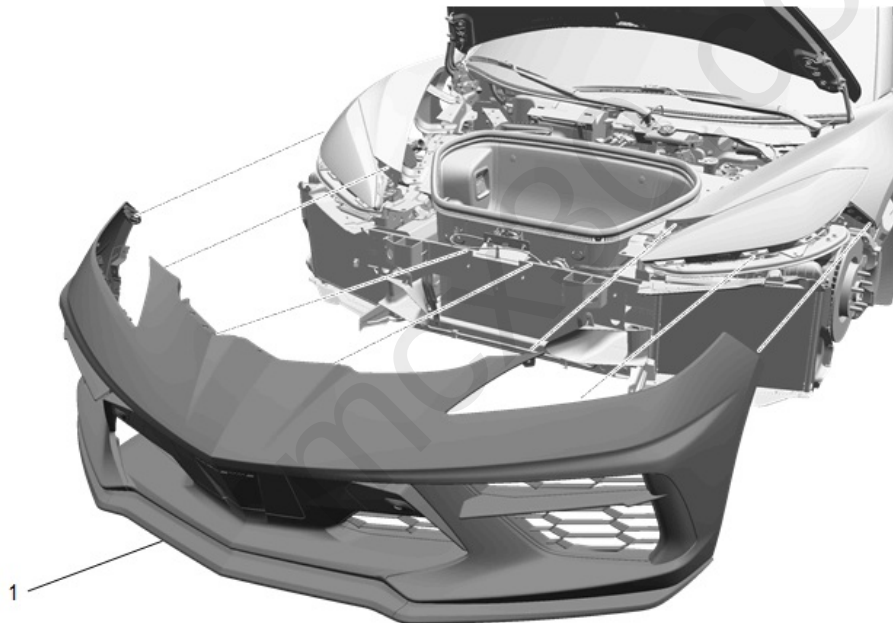


19. [Click here for full size](#)
20. With the aid of an assistant, remove the fascia. (1)
21. Disconnect all electrical connectors.


Installation Procedure

Other List:graphic


1. With the aid of an assistant, install the front bumper fascia (1).
2. Connect the electrical connectors.

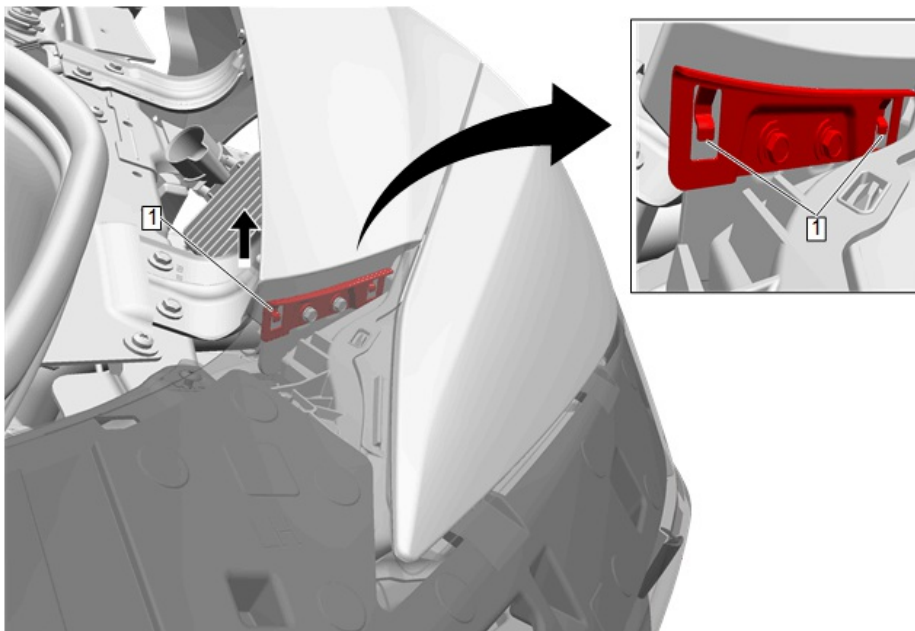

3. [Click here for full size](#)
4. Secure the 2 front bumper fascia guide inner retainer tabs (1) on the left and right side to the front bumper fascia.

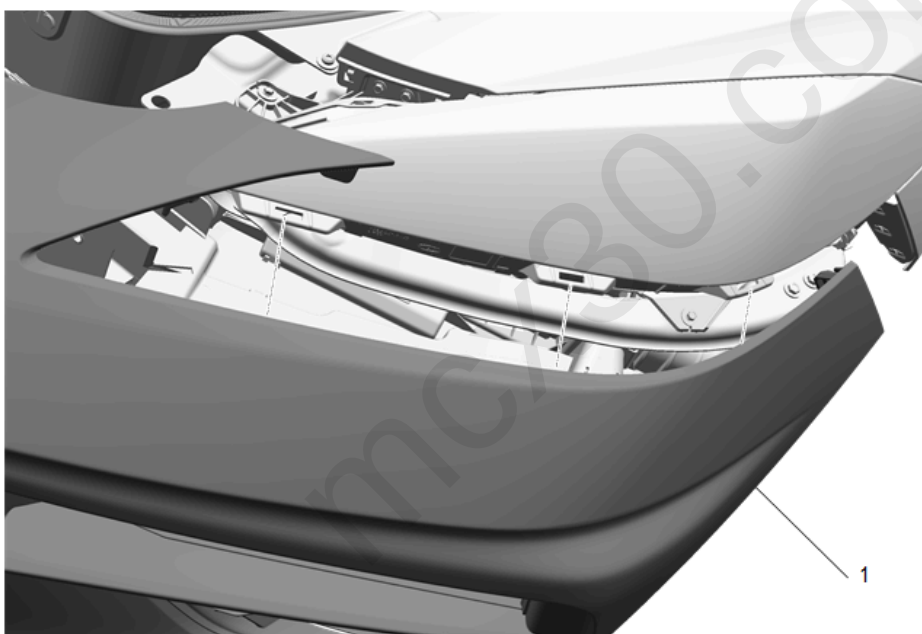

5. [Click here for full size](#)
6. Install the front bumper fascia (1) to the headlamp and front bumper fascia guide on both sides.

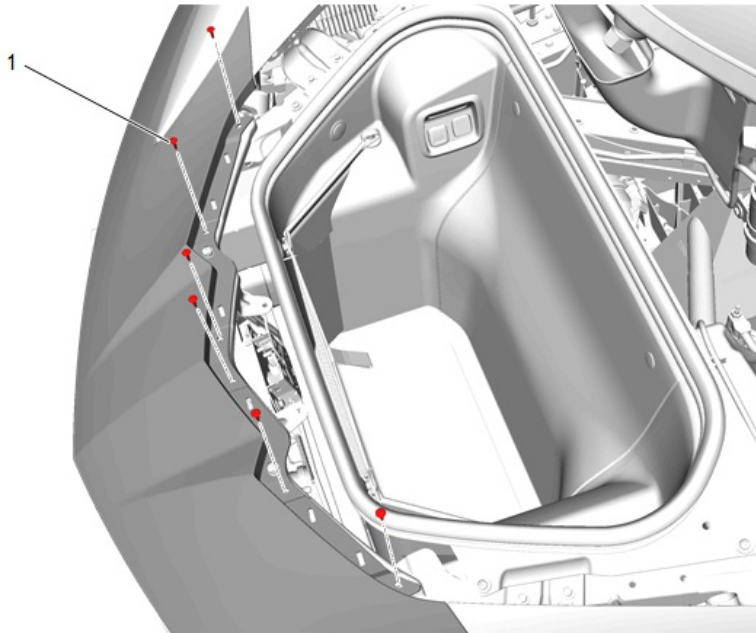


7. [Click here for full size](#)

8. **Caution:**


Refer to Fastener Caution.

9. Front Bumper Fascia Bolt (1) >> Install and tighten [6x]2.5N-m (22 lb in)

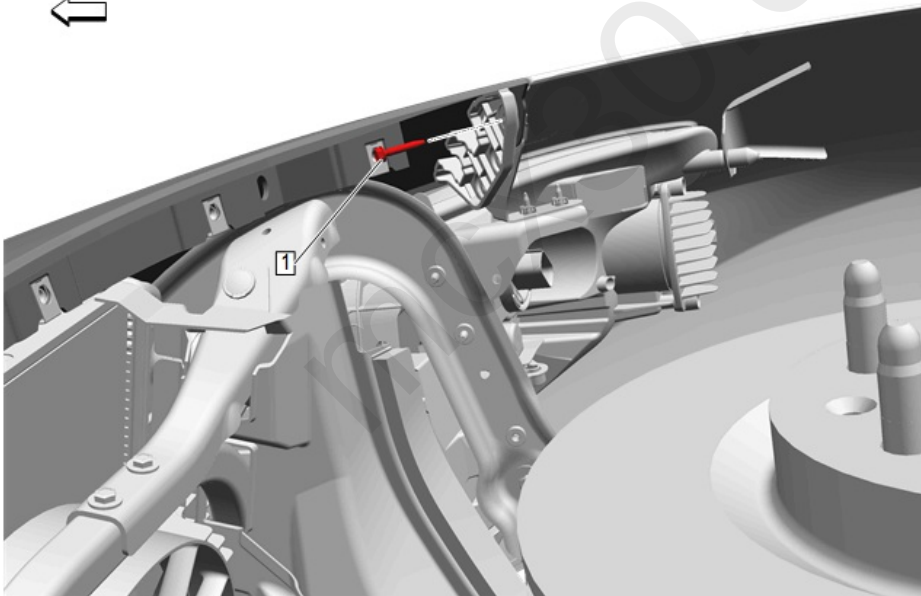


10. [Click here for full size](#)

11. Install the front bumper fascia bolt (1) to the left and right side and tighten to 2.5N-m (22 lb in).

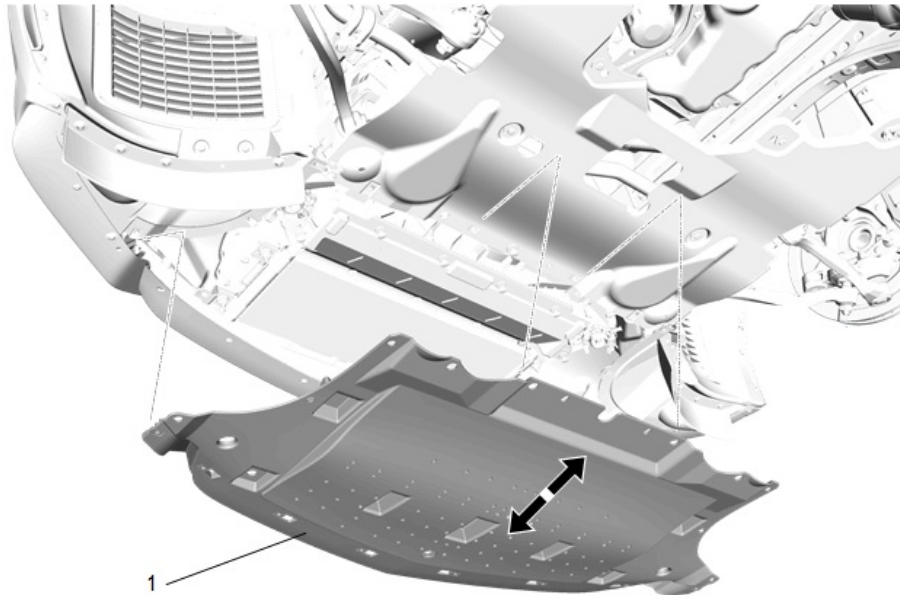


12.
[Click here for full size](#)

13. Front Bumper Fascia Lower Stiffener (1) >> Install - Front Bumper Fascia Lower Stiffener Replacement

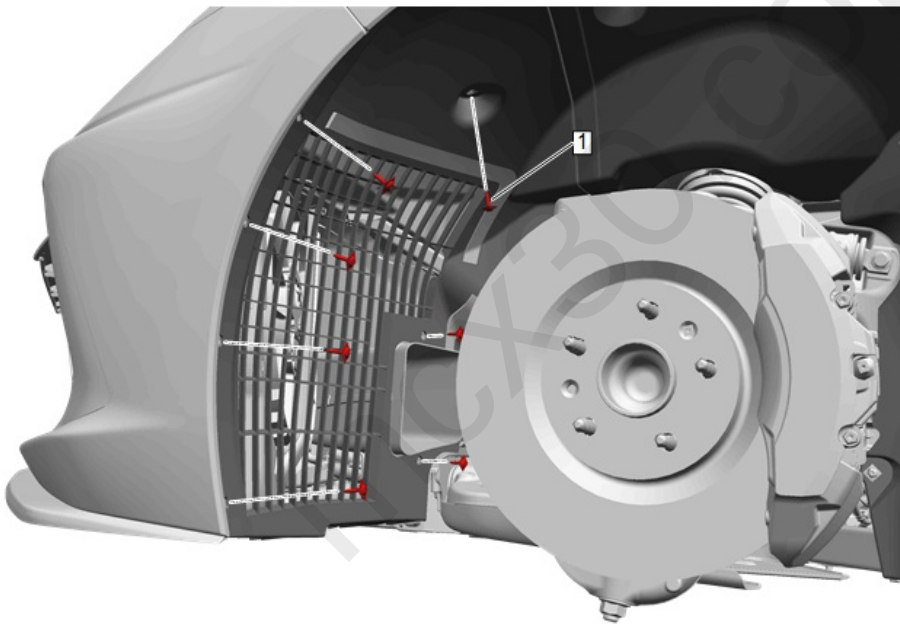


14.
[Click here for full size](#)

15. Install the 8 front wheelhouse liner bolts (1) to the left side front wheelhouse liner. Front Wheelhouse Liner Replacement - Left Side

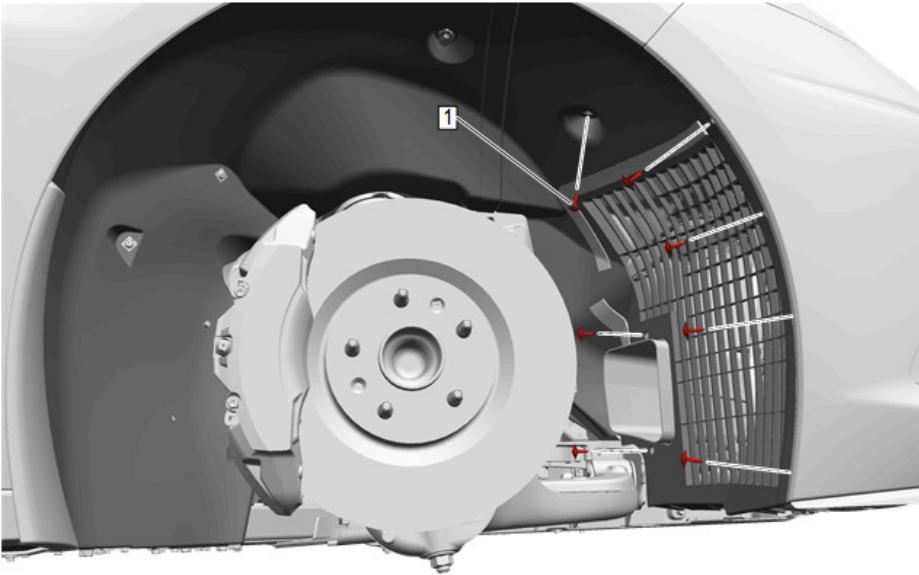

16. [Click here for full size](#)
17. Install the 8 front wheelhouse liner bolts (1) to the right side front wheelhouse liner. Front Wheelhouse Liner Replacement - Right Side
18. Front Tire Front Air Deflector >> Install - Front Tire Front Air Deflector Replacement

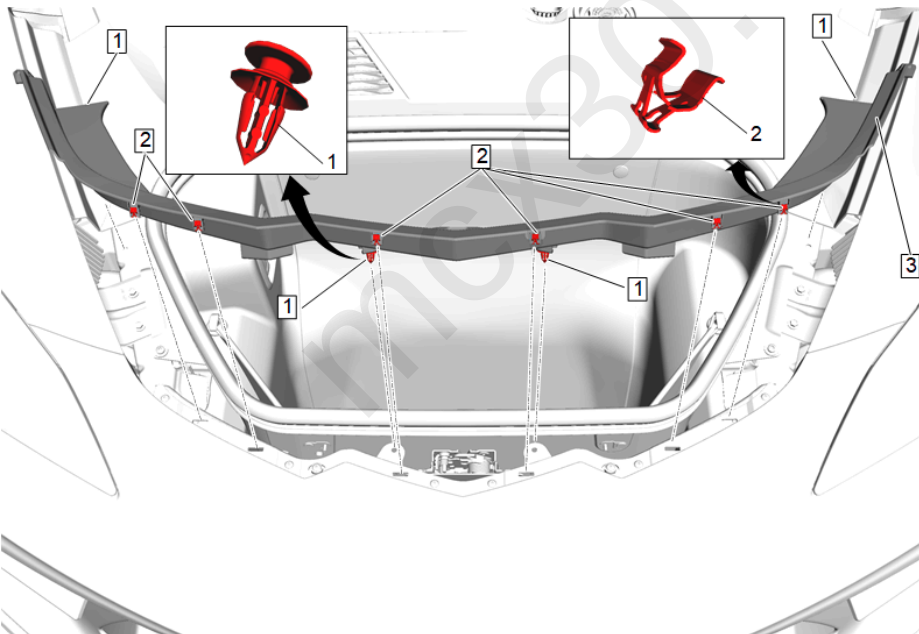

19. [Click here for full size](#)
20. Front Compartment Front Sight Shield (3) >>> Install - Front Compartment Front Sight Shield Replacement