


2022 CHEVROLET CORVETTE SERVICE MANUAL

- SEARCH

- 1. Body Repair
- 2. Bumpers and Fascias
- 3. Repair Instructions
- 4.

Rear Bumper Upper Fascia Replacement

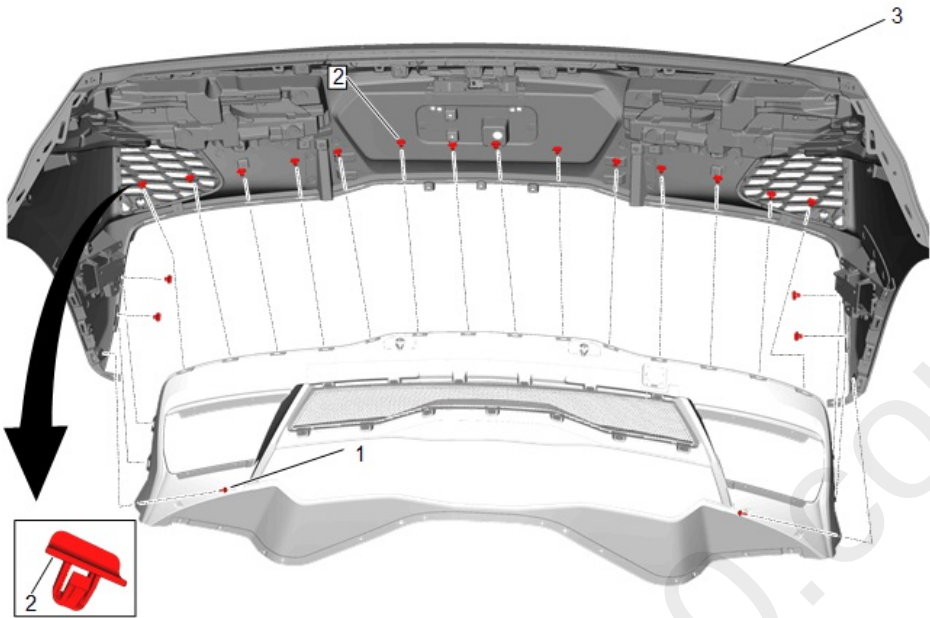

Click here for full size
Rear Bumper Fascia Energy Absorber Replacement

- Reposition the wiring harness.
- Apply a double layer of masking tape around the perimeter of the painted surfaces.

Fastener Caution.

Tighten

2.5 N-m (22 lb in)

Callout	Component Name
Preliminary Procedures	
1.	
1	Rear Bumper Fascia Bolt [2x] Caution: Refer to
2	Rear Bumper Fascia Clip [18x]

Callout	Component Name
3	Rear Bumper Upper Fascia Procedure 1. Transfer components as necessary. 2. Remove the double layer of masking tape around the perimeter of the painted surfaces. 3. Remove any remaining adhesive residue with a 50/50 mixture by volume of isopropyl alcohol and clean drinkable water. Wipe the surface dry with a clean lint-free towel.

mcx30.com