

2022 CHEVROLET CORVETTE SERVICE MANUAL


- **SEARCH**

1. **Body Repair**
2. **Frame and Underbody**
3. **Repair Instructions**
- 4.


Underbody Rear Air Deflector Replacement

Removal Procedure

1. Raise and support the vehicle. Lifting and Jacking the Vehicle

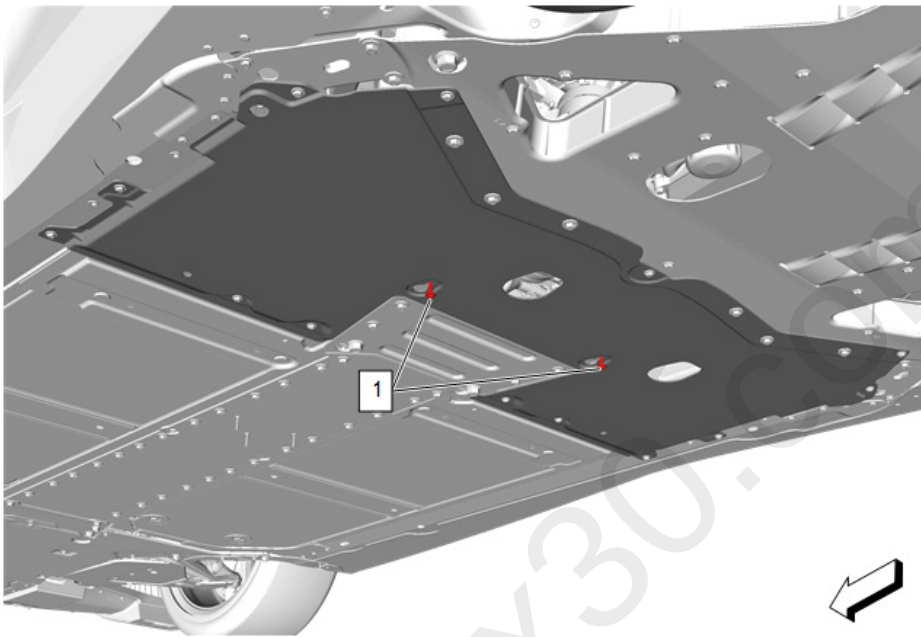


2. [Click here for full size](#)
3. Underbody Rear Air Deflector Bolt (1) >> Loosen [2>x]
4. [Click here for full size](#)
5. Underbody Rear Air Deflector Bolt (1) >> Remove [6>x]
6. Underbody Rear Air Deflector Bolt (2>) >> Remove [11x]

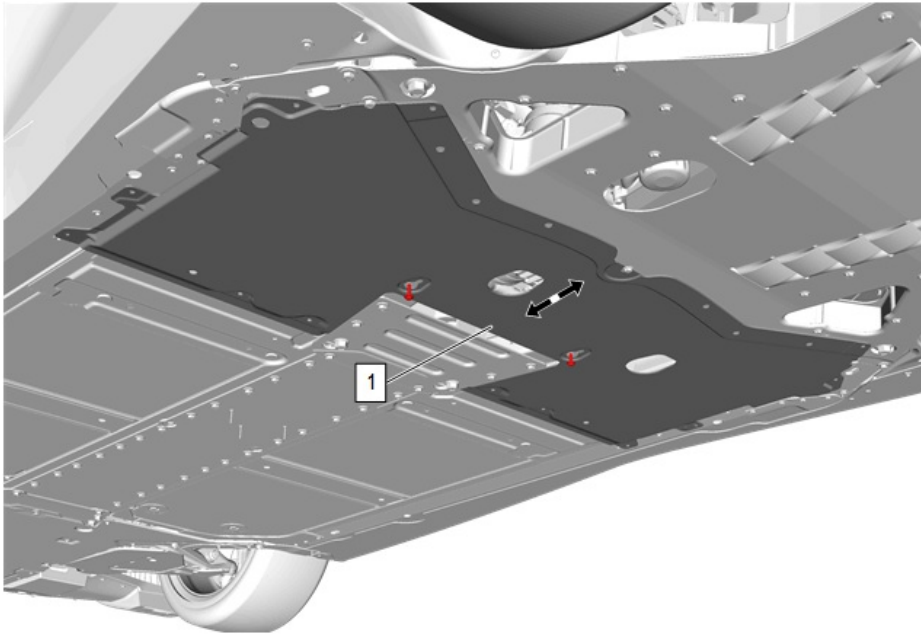


7. [Click here for full size](#)
8. Slide the underbody rear air deflector (1) rearward, and lower through the opening.

Installation Procedure

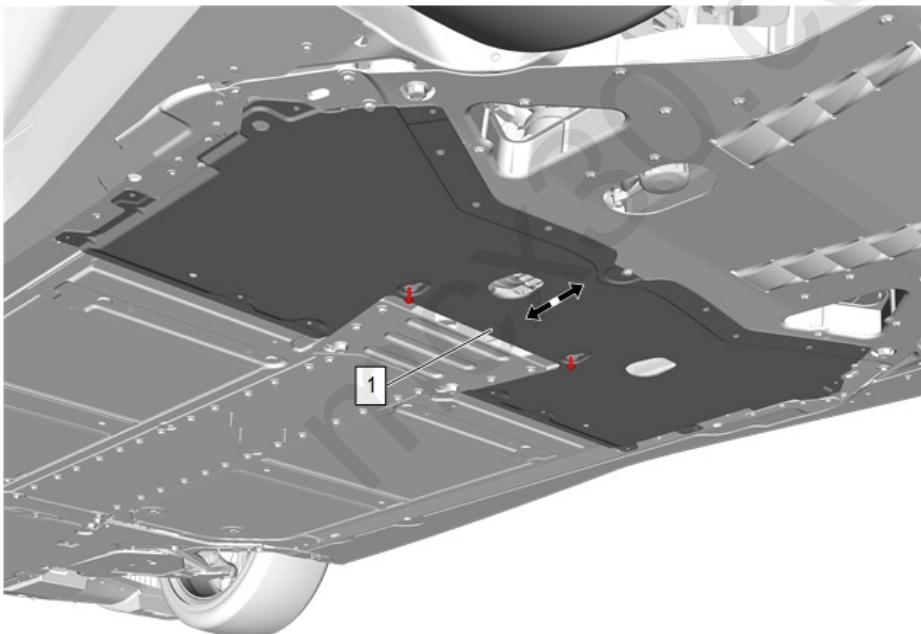

1. [Click here for full size](#)
2. Install the underbody rear air deflector (1), through the opening and slide forward.
3. [Click here for full size](#)
4. **Caution:**
 Refer to Fastener Caution
5. Underbody Rear Air Deflector Bolt M6 (2) >> Install and tighten [11x]9>N-m (80 lb in)
6. Underbody Rear Air Deflector Bolt M8 (1) >> Install and tighten [6>x]22N-m (16 lb ft)

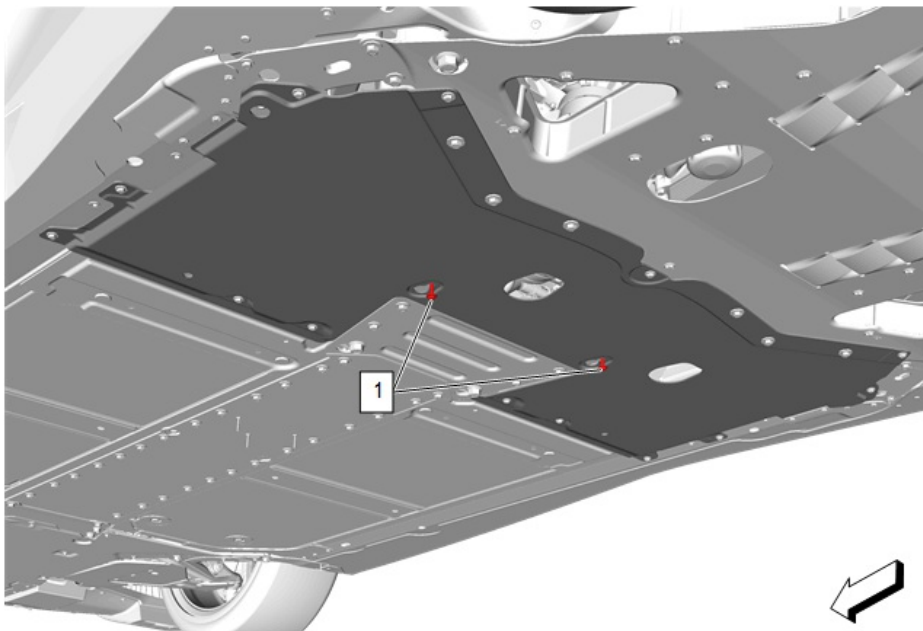

7. [Click here for full size](#)
8. Underbody Rear Air Deflector Bolt M6 (1) >> Tighten [2>x]9>N-m (80 lb in)
9. Lower the vehicle.

mcx30.com