

2022 CHEVROLET CORVETTE SERVICE MANUAL


- SEARCH

1. Engine/Propulsion
2. 12 V Starting and Charging
3. Repair Instructions
- 4.


Starter Solenoid Cable Replacement

Removal Procedure

1. Disconnect the battery negative cable. Battery Negative Cable Disconnection and Connection

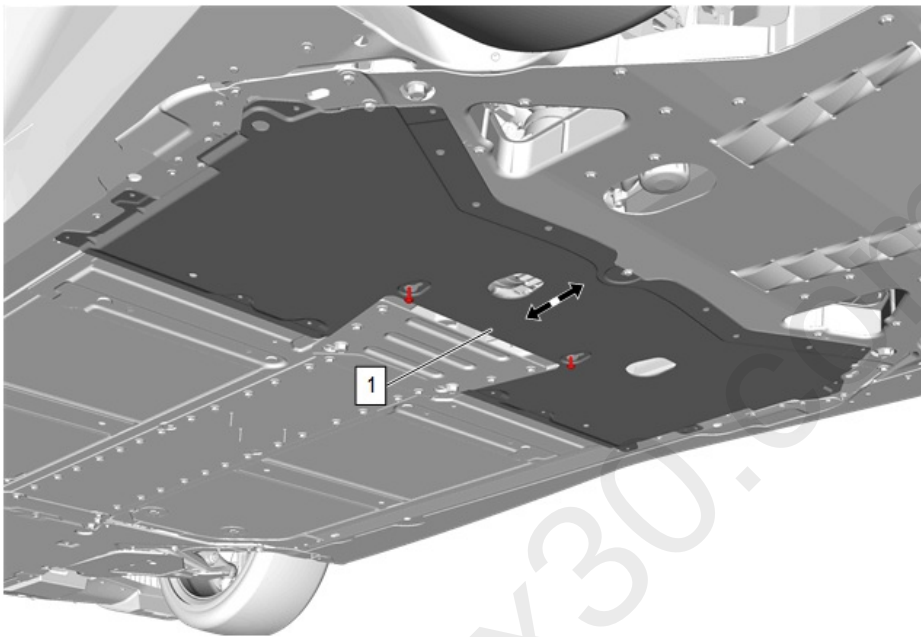


2. [Click here for full size](#)
3. Underbody Rear Air Deflector (1) >> Remove - Underbody Rear Air Deflector Replacement

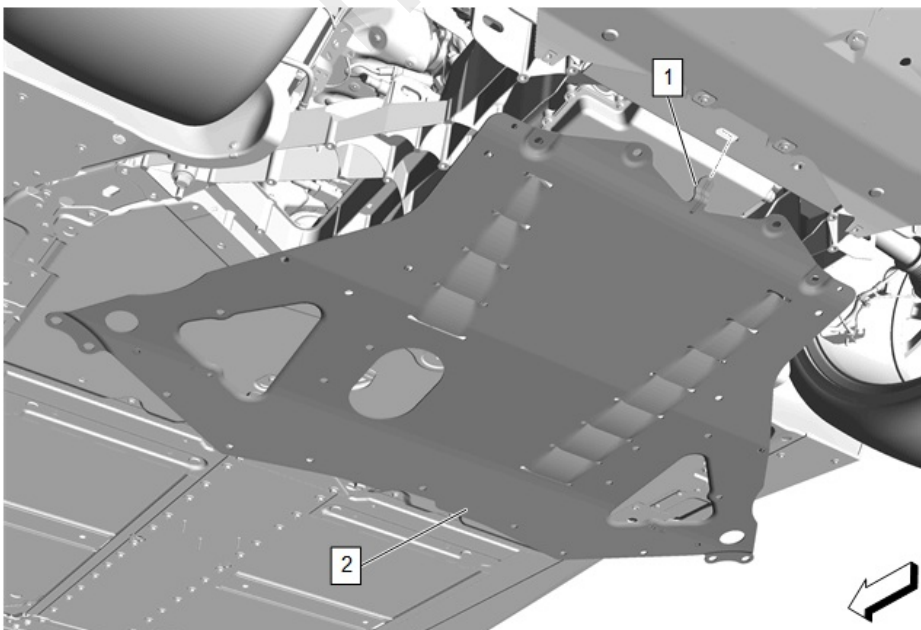

4. [Click here for full size](#)

5. Rear Cradle Shear Plate (2) >> Remove - Rear Cradle Shear Plate Replacement

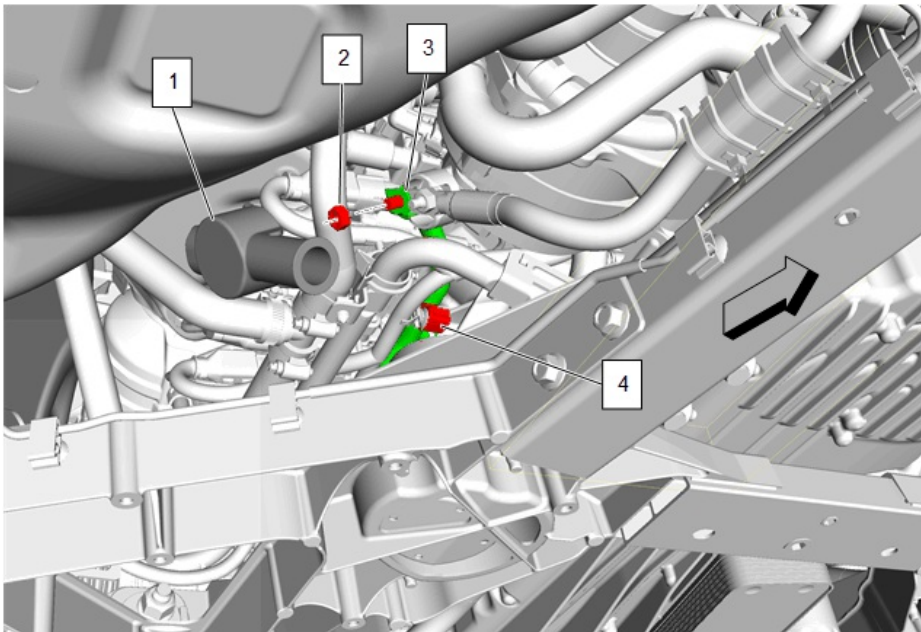


6.
[Click here for full size](#)

7. Protective Boot (1) >> Reposition away

8. Battery Positive Cable Nut (2) @ Battery Positive Cable Terminal >> Remove

9. Starter Solenoid Cable (3) >> Remove

10. Retainer (4) >> Disengage

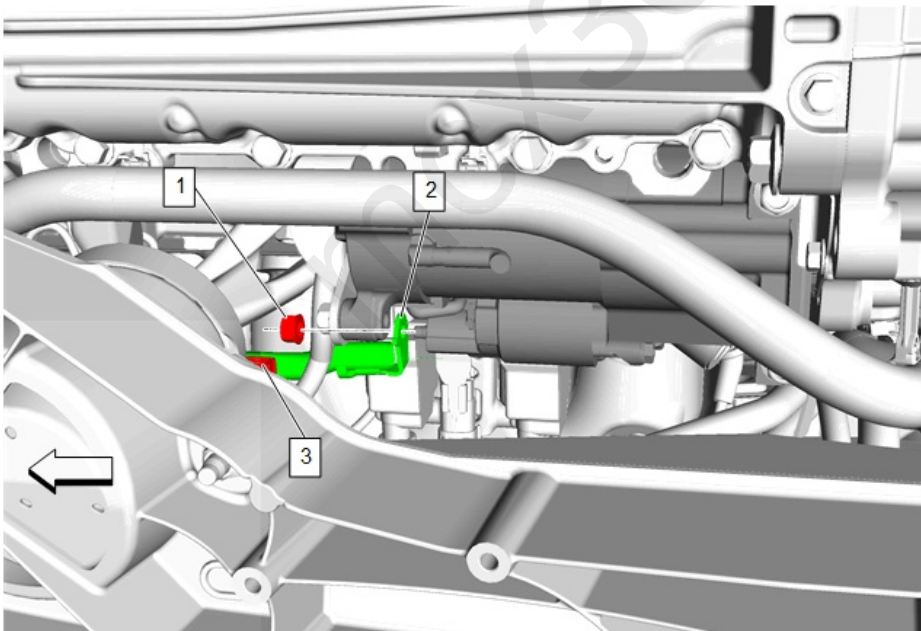


11.
[Click here for full size](#)

12. Retainer (3) >> Disengage


13. Battery Positive Cable Nut (1) @ Starter Solenoid >> Remove

14. Starter Solenoid Cable (2) >> Remove


Installation Procedure

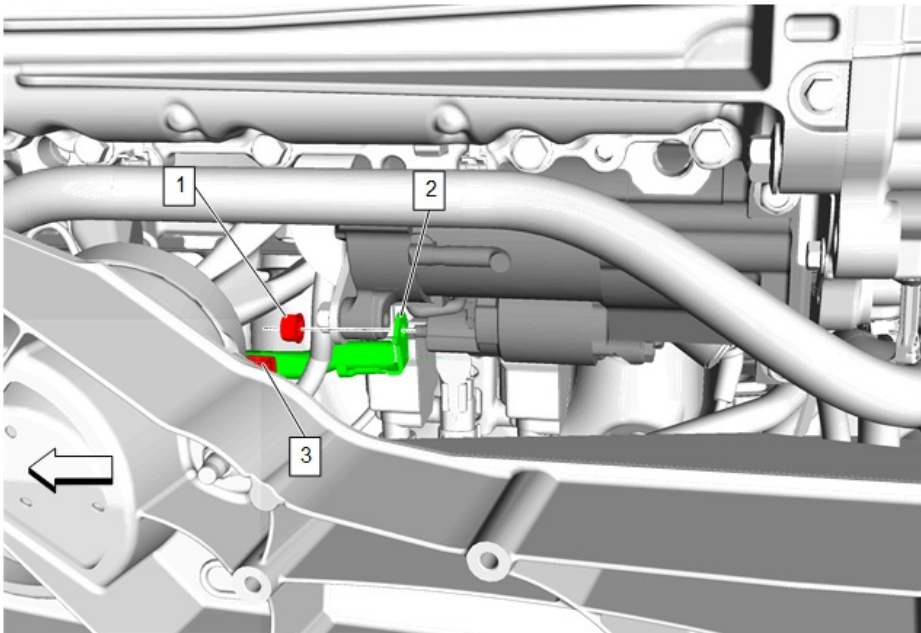


1. [Click here for full size](#)
2. Starter Solenoid Cable (2) >> Install
3. Battery Positive Cable Nut (1) @ Starter Solenoid >> Install - Starter Replacement
4. Retainer (3) >> Engage

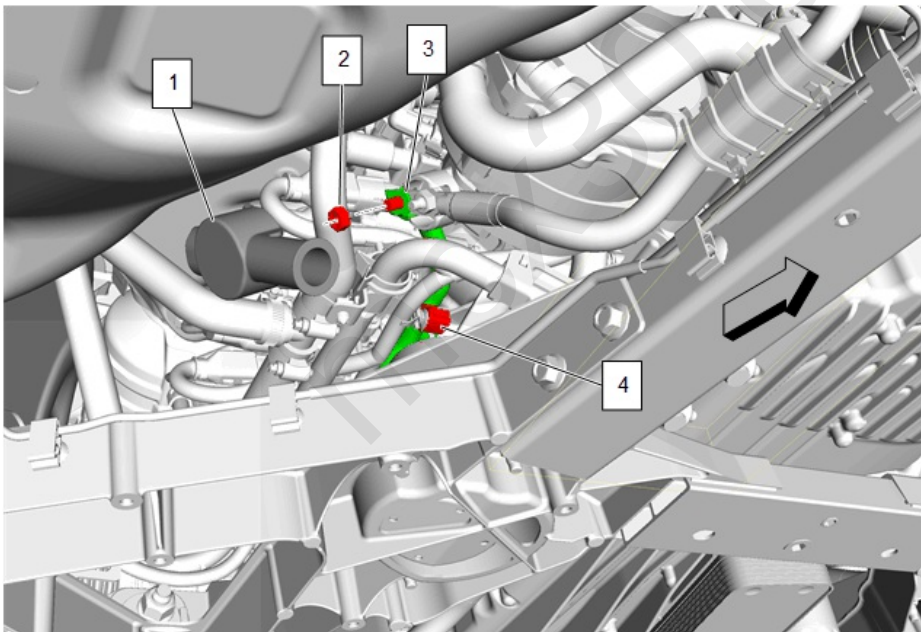

5. [Click here for full size](#)
6. Retainer (4) >> Engage
7. Starter Solenoid Cable (3) >> Install
8. Caution:
Refer to Fastener Caution
9. Battery Positive Cable Nut (2) @ Battery Positive Cable Terminal >> Install and tighten 15N-m (11 lb ft)
10. Protective Boot (1) >> Install

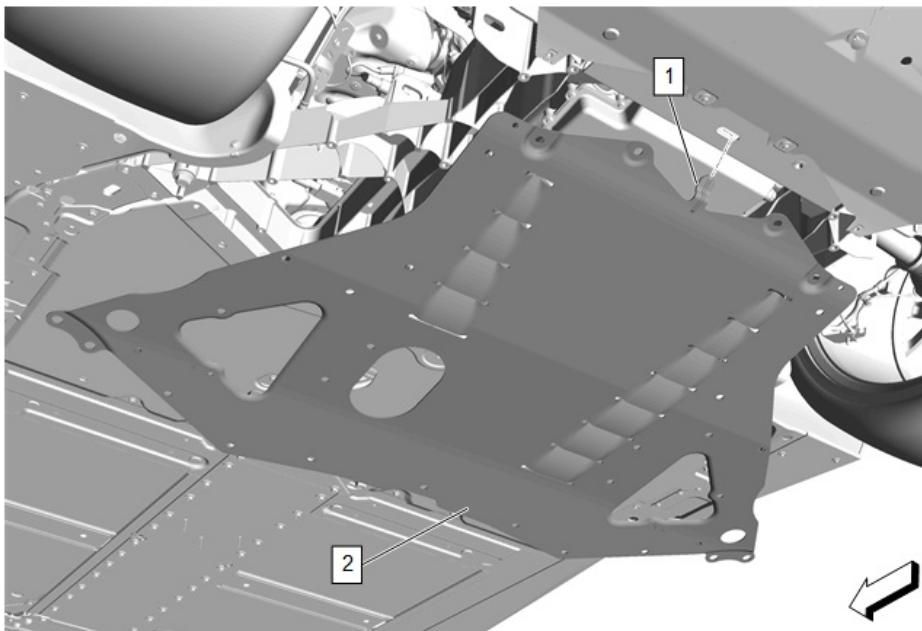

11. [Click here for full size](#)
12. Rear Cradle Shear Plate (2) >> Install - Rear Cradle Shear Plate Replacement

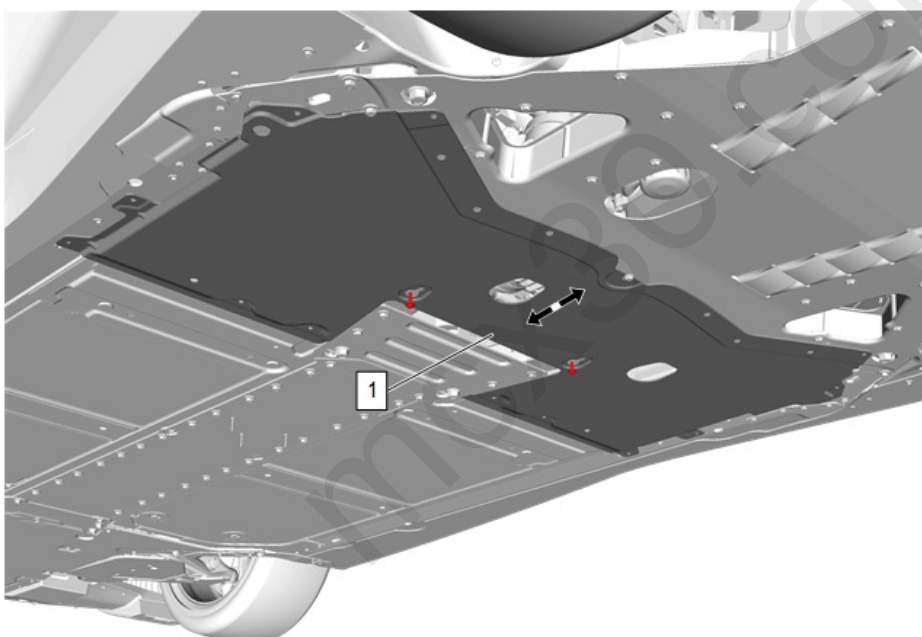

13. [Click here for full size](#)
14. Underbody Rear Air Deflector (1) >> Install - Underbody Rear Air Deflector Replacement
15. Connect the battery negative cable. Battery Negative Cable Disconnection and Connection