

2022 CHEVROLET CORVETTE SERVICE MANUAL


- SEARCH

1. [Engine/Propulsion](#)
2. [Engine Heating and Cooling](#)
3. [Repair Instructions](#)
- 4.


Radiator Lower Bracket Replacement - Left Side (with V09)

Removal Procedure

1. Rear Wheelhouse Liner - Left Side >> Reposition - Rear Wheelhouse Liner Replacement - Left Side

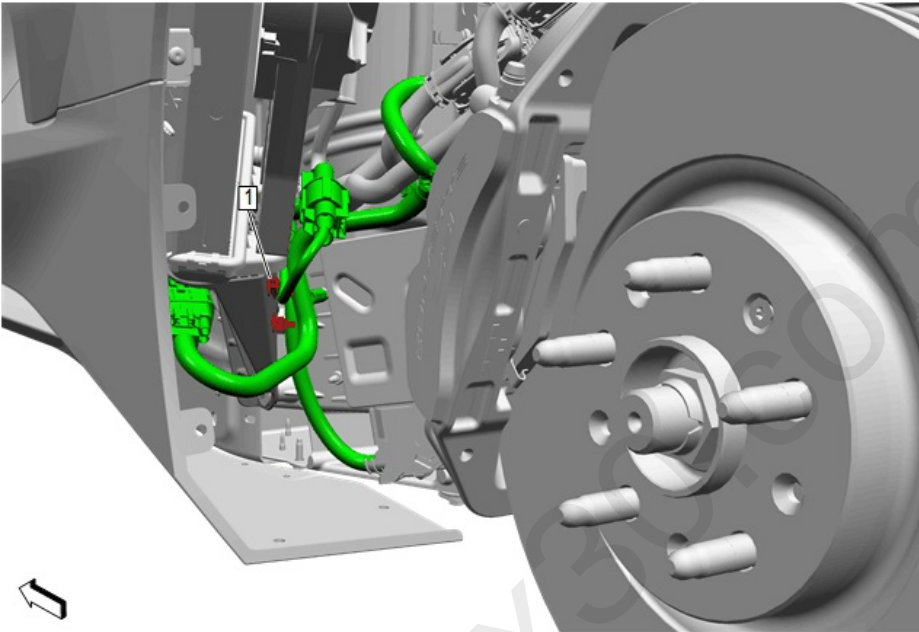

2.
[Click here for full size](#)
3. Wiring Harness Clip (1) @ Radiator Lower Bracket >> Remove [2x]

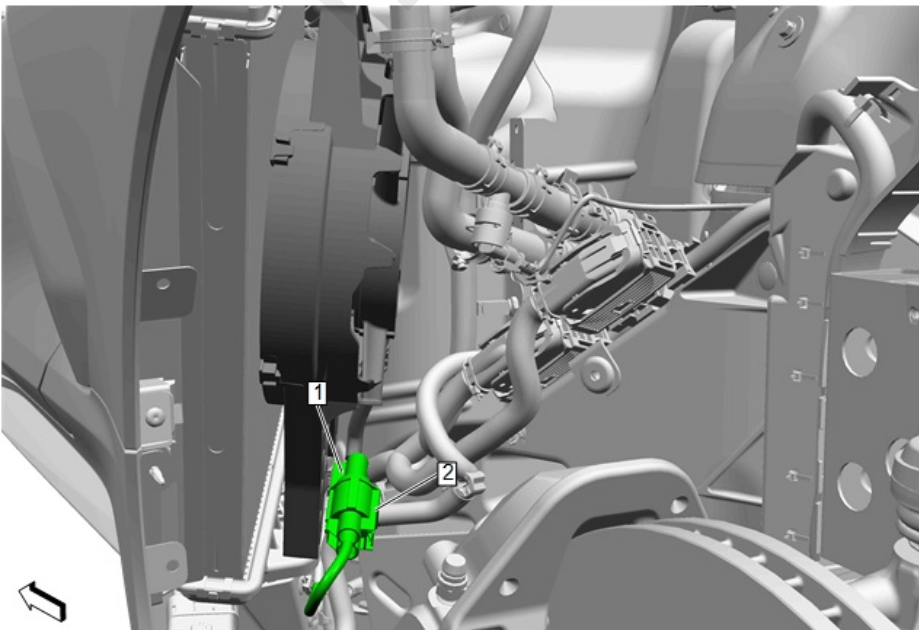


4.
[Click here for full size](#)

5. Note:

Some components not shown for graphic clarity.


6. Disconnect the electrical connector (1) from the auxiliary engine cooler fan electrical connector (2).

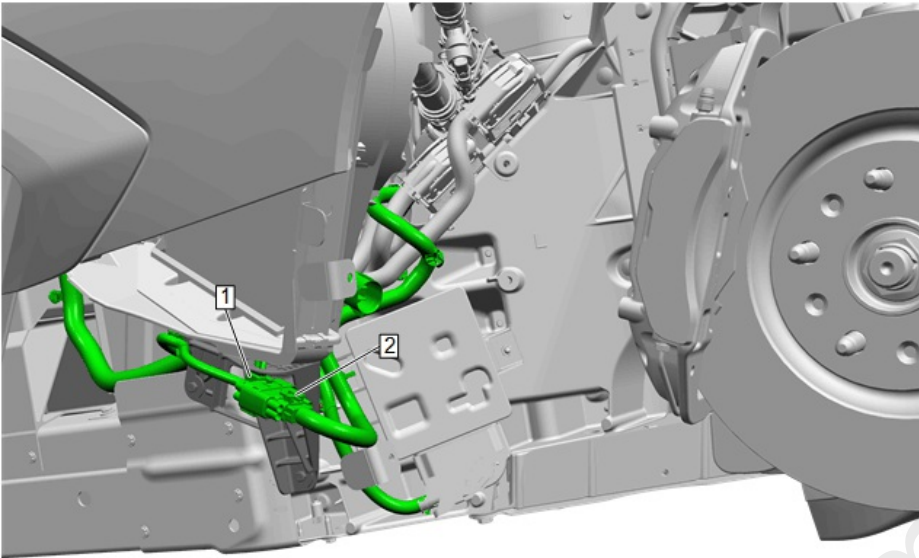

7.

[Click here for full size](#)

8. Fuel Sender Wiring Harness (1) @ Body Wiring Harness (2) >> Disconnect

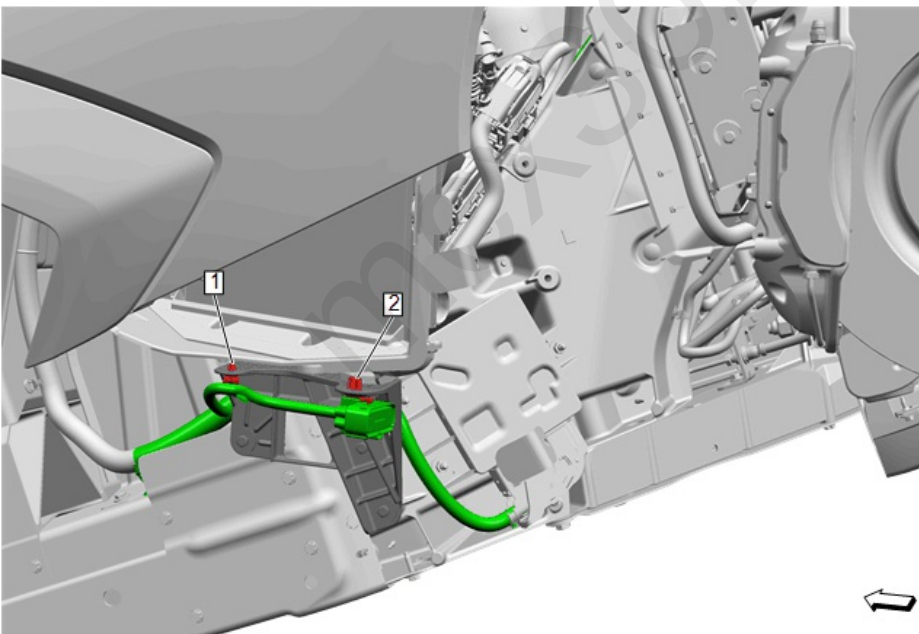


9.

[Click here for full size](#)

10. Wiring Harness Clip (1) @ Radiator Lower Bracket >> Remove


11. Wiring Harness Retainer (2) @ Radiator Lower Bracket >> Remove

12. Support the engine auxiliary radiator, auxiliary engine cooler fan and the auxiliary radiator front duct assembly.

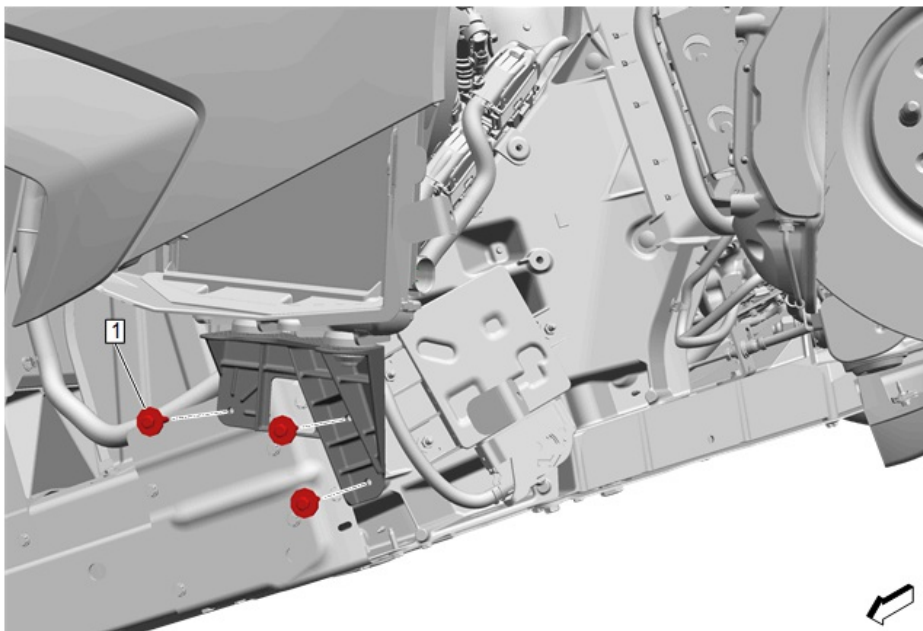

13.
[Click here for full size](#)


14. Radiator Lower Bracket Bolt (1) >> Remove [3x]

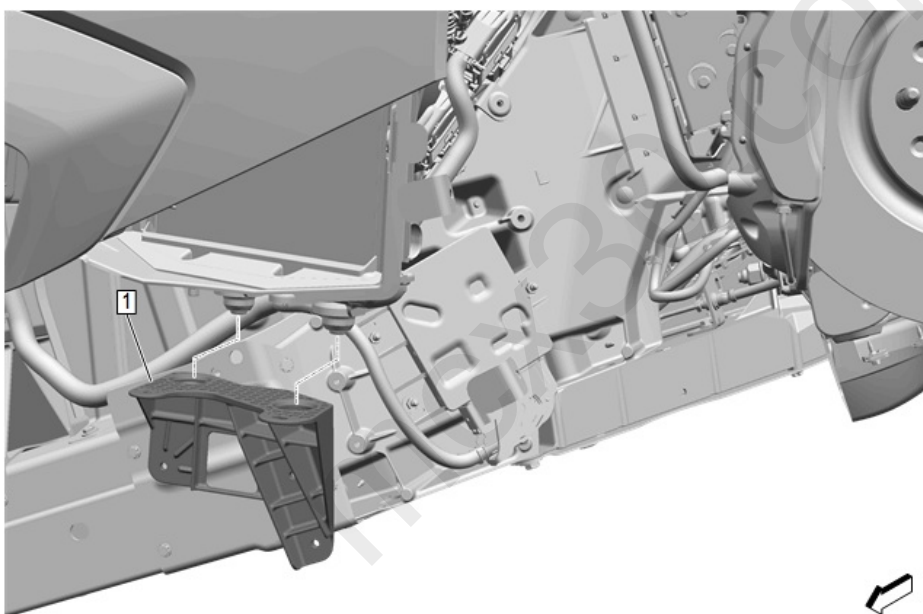


15.
[Click here for full size](#)

16. Radiator Lower Bracket (1) >> Remove


Installation Procedure

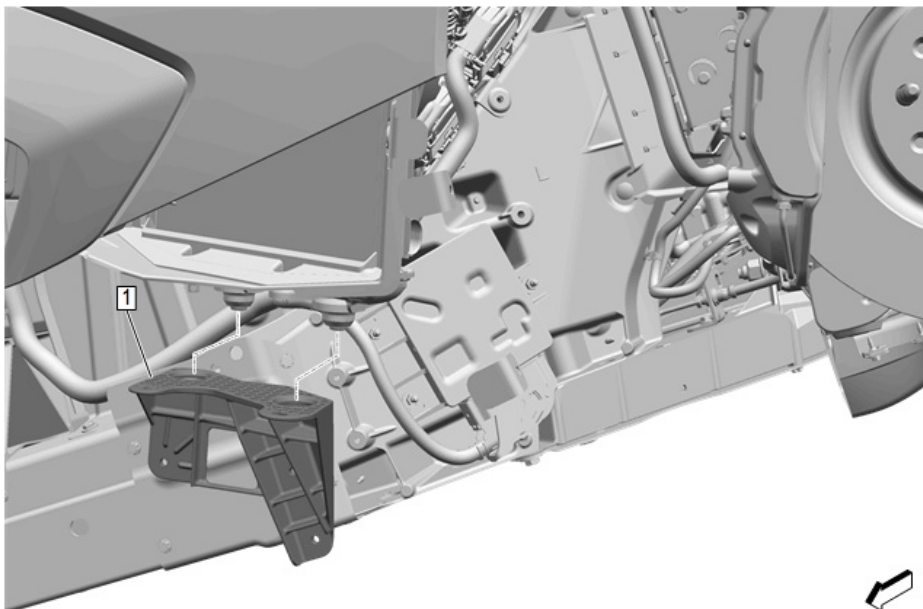


1. [Click here for full size](#)
2. Note:
Some components not shown for graphic clarity.
3. Radiator Lower Bracket (1) >> Install

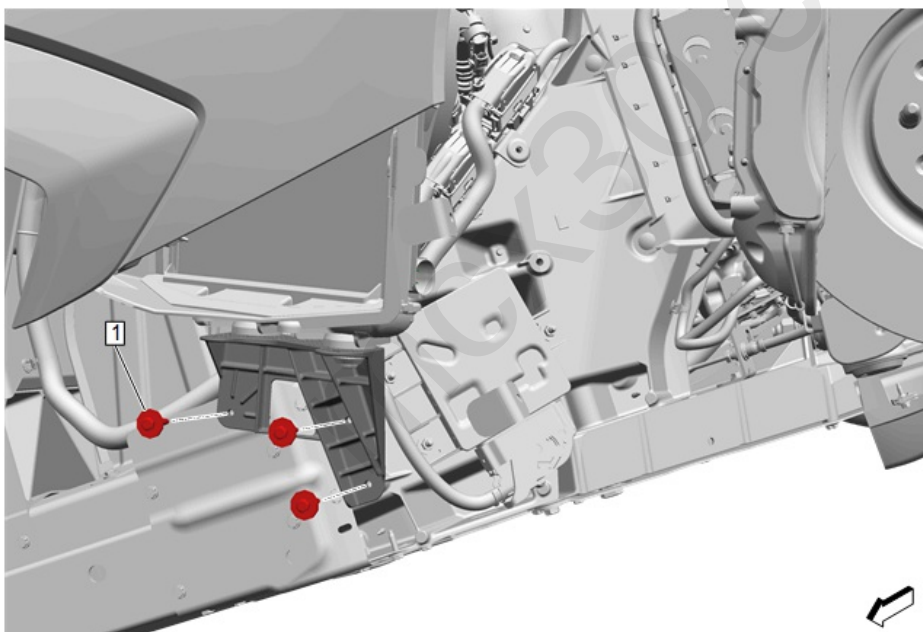


4. [Click here for full size](#)
5. Caution:
Refer to Fastener Caution
6. Radiator Lower Bracket Bolt (1) >> Install and tighten [3x]7 N-m (62 lb in)
7. Remove the support from the engine auxiliary radiator, auxiliary engine cooler fan and the auxiliary radiator front duct assembly.

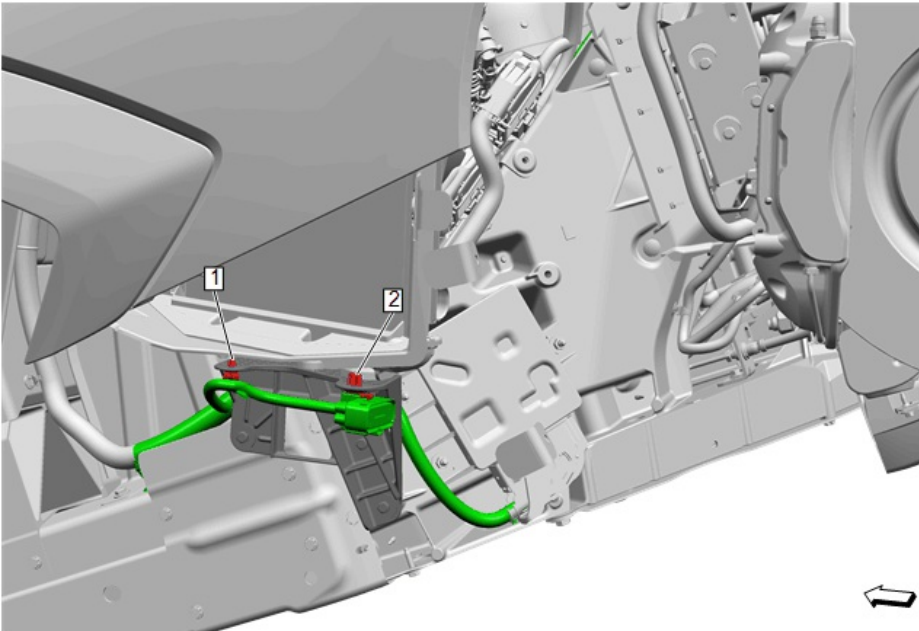

8. [Click here for full size](#)
9. Wiring Harness Retainer (2) @ Radiator Lower Bracket >> Install
10. Wiring Harness Clip (1) @ Radiator Lower Bracket >> Install

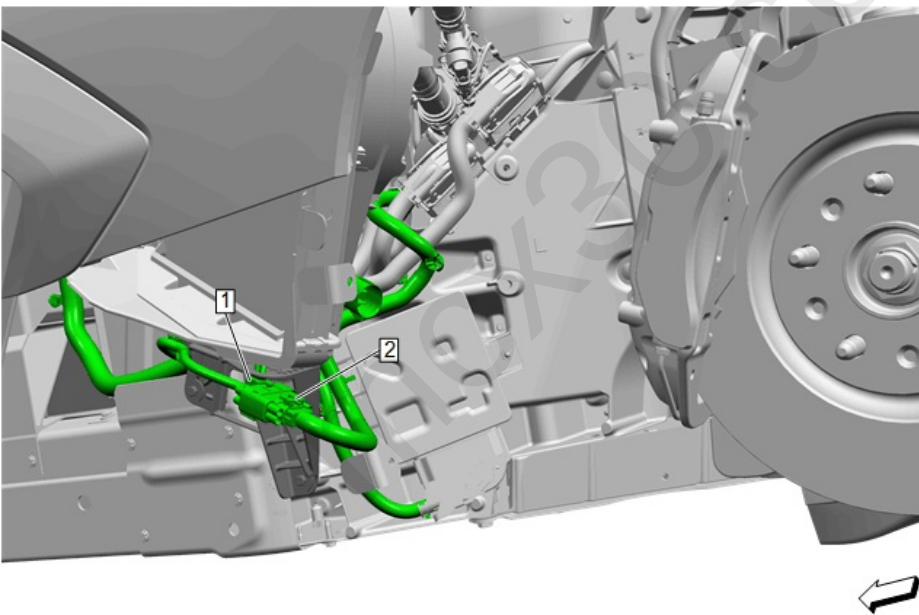


11. [Click here for full size](#)
12. Fuel Sender Wiring Harness (1) @ Body Wiring Harness (2) >> Connect

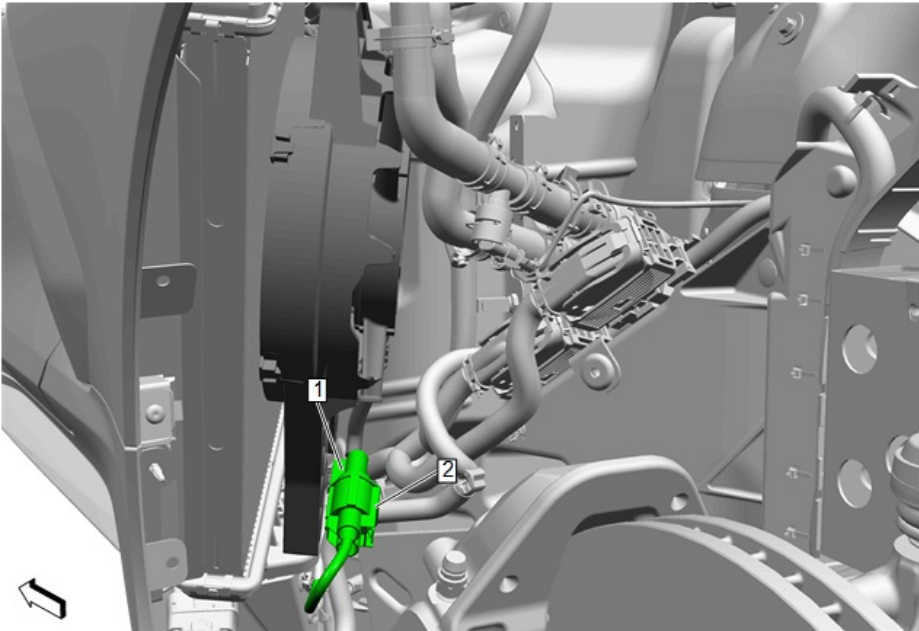

13.
[Click here for full size](#)

14. Connect the electrical connector (1) to the auxiliary engine cooler fan electrical connector (2).

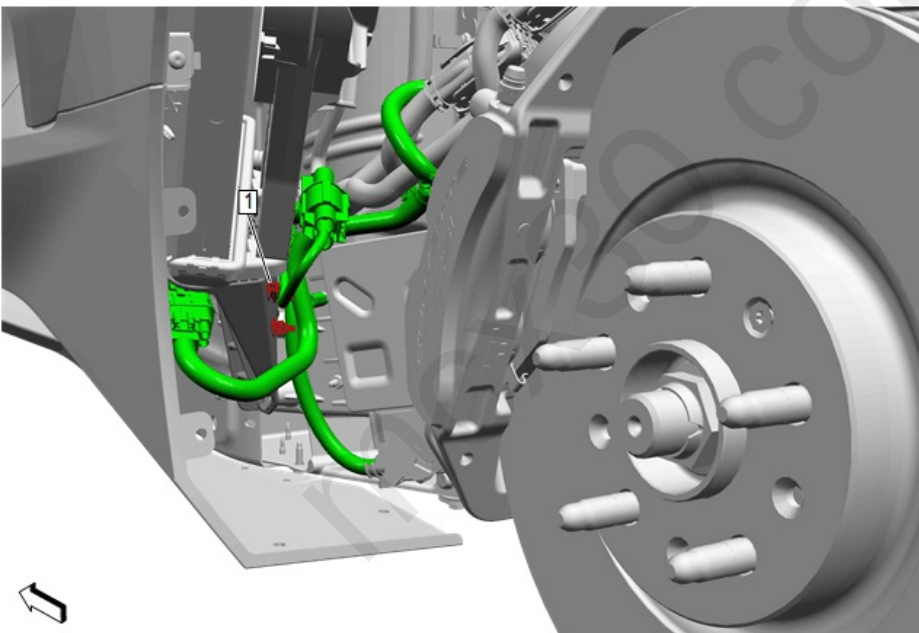

15.
[Click here for full size](#)

16. Wiring Harness Clip (1) @ Radiator Lower Bracket >> Install [2x]

17. Rear Wheelhouse Liner - Left Side >> Install - Rear Wheelhouse Liner Replacement - Left Side