



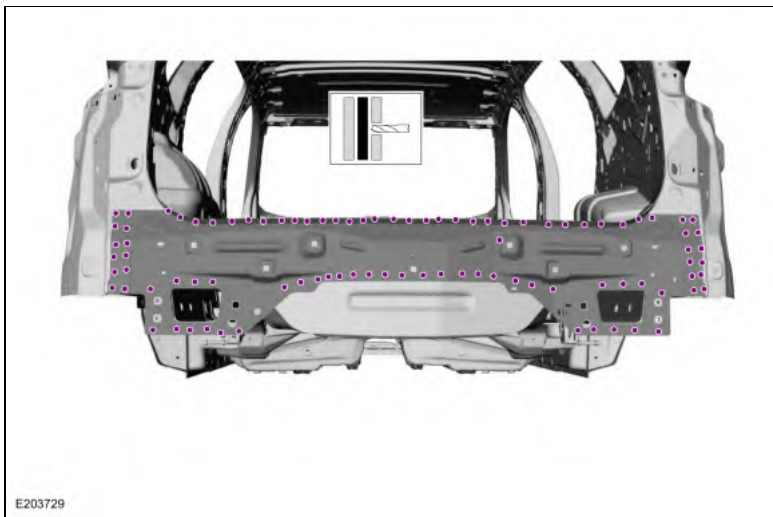

6. **NOTE:** Use of a heat gun may aid in softening the adhesive.

Remove the back panel reinforcement.
Use the General Equipment: Hot Air Gun

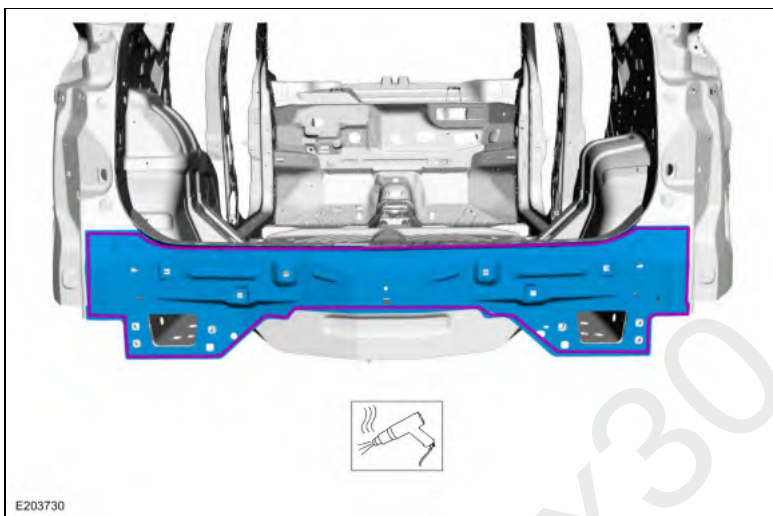

Installation

1. Drill holes in the replacement part for plug welding.
Use the General Equipment: 8 mm Drill Bit