


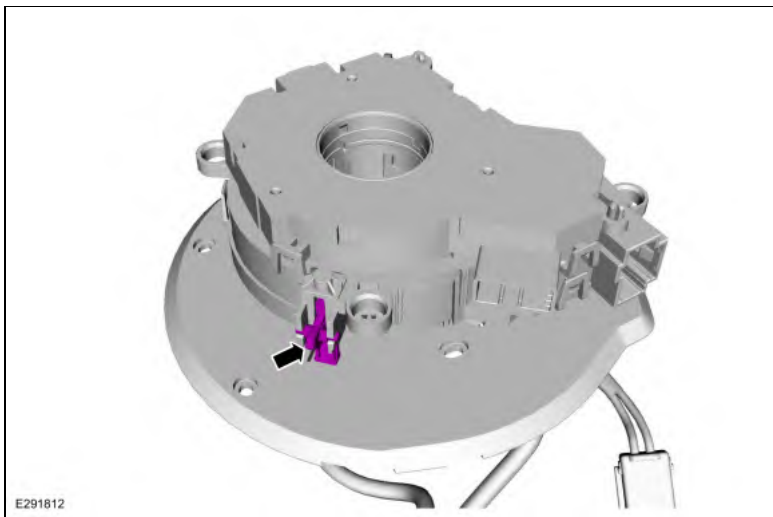

11. Set the ignition ON, engine off.
12. **NOTE:** *Make sure the front wheels are in the straight ahead position during the trim procedure.*

Using a diagnostic scan tool, carry out the steering motor angle trim routine. Follow all on-screen instructions.
13. Carry out the front toe adjustment procedure.
Refer to: Front Toe Adjustment - Vehicles With: Active Steering (204-00 Suspension System - General Information, General Procedures).
14. Start the engine.
15. Confirm correct steering wheel clear vision, turn signal operation and equal steering wheel rotation from lock-to-lock.