



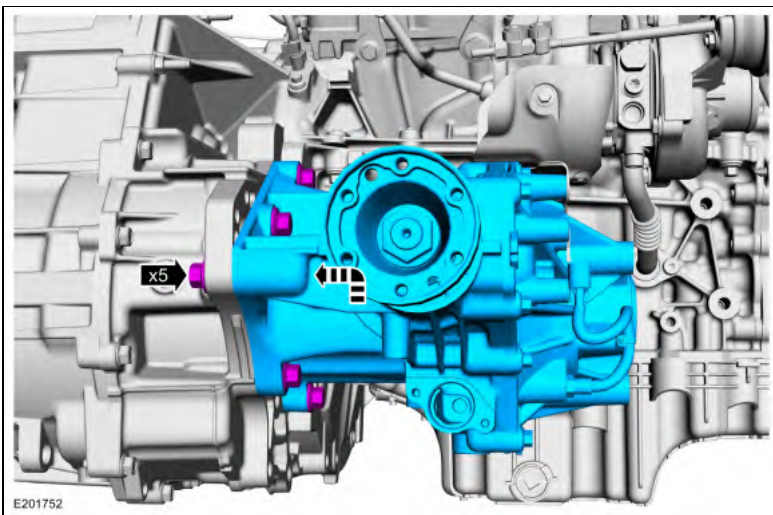

4. Install the PTU support bracket and bolts.
Torque: 35 lb.ft (48 Nm)

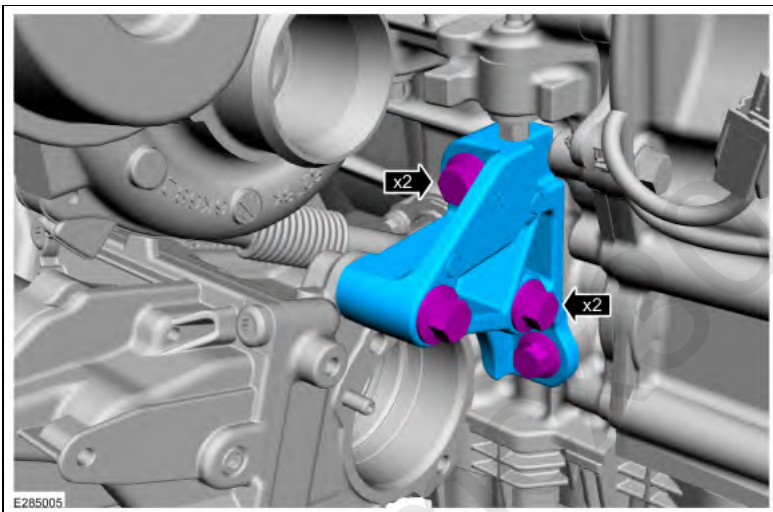

A horizontal bar chart consisting of six equally long bars stacked vertically. The bars are colored cyan, green, brown, yellow, magenta, and light blue from top to bottom. Each bar has a thin black outline.

5. Install the intermediate shaft.
Refer to: Intermediate Shaft (205-04 Front Drive Halfshafts, Removal and Installation).
6. Install the vent hose retainer.