



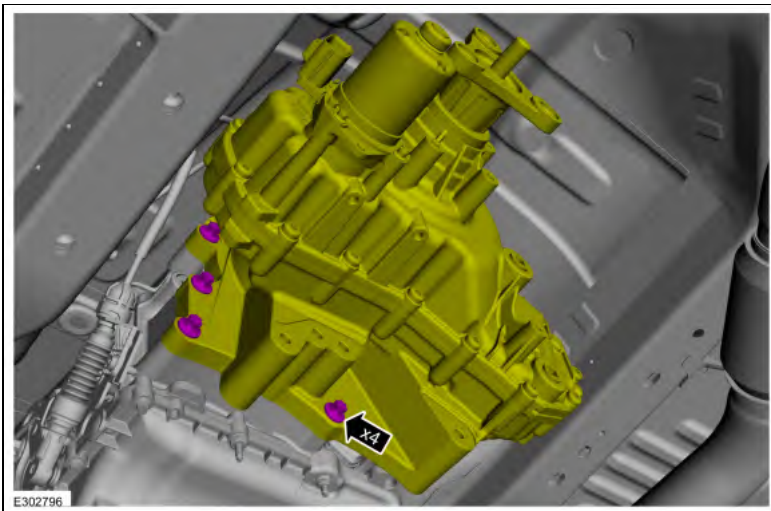

4. Install the new transfer case mounting bolts.
Torque: 159 lb.in (18 Nm)

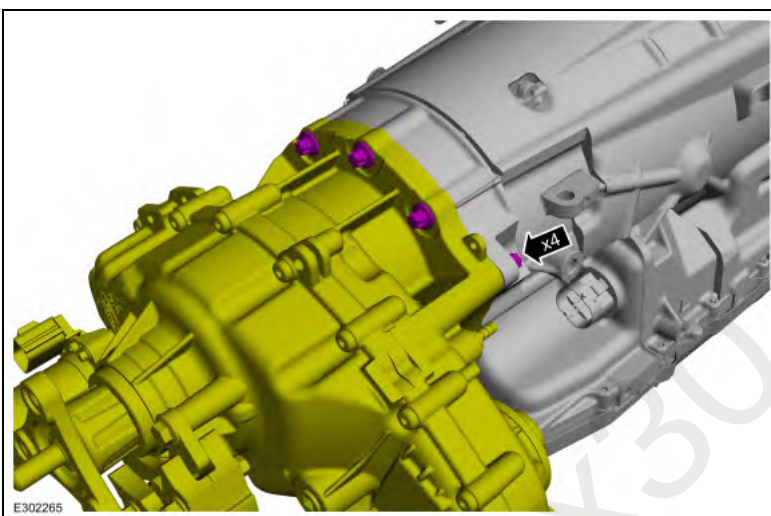

5. Connect the transfer case wiring connector.