



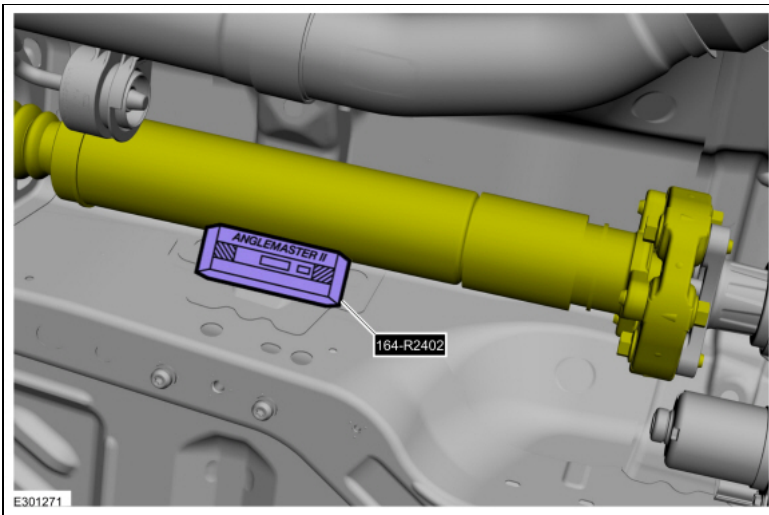

4. Calibrate the anglemaster by placing it on the clean, flat surface of the rear driveshaft front tube and press the ALT-ZERO button.

- Special Tool(s): Anglemaster II Driveline Inclinator/Protractor 164-R2402.

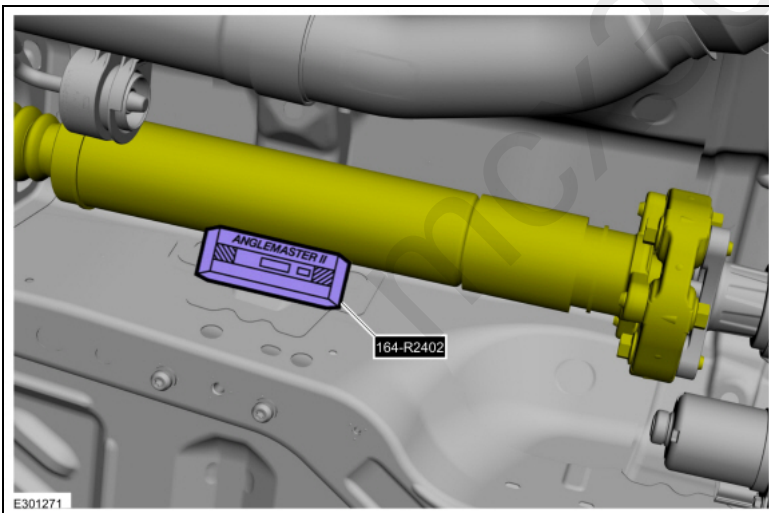

5. Measure the slope of the rear tube of the rear driveshaft. The measured angle will be the center joint operating angle.

- Special Tool(s): Anglemaster II Driveline Inclinator/Protractor 164-R2402.