




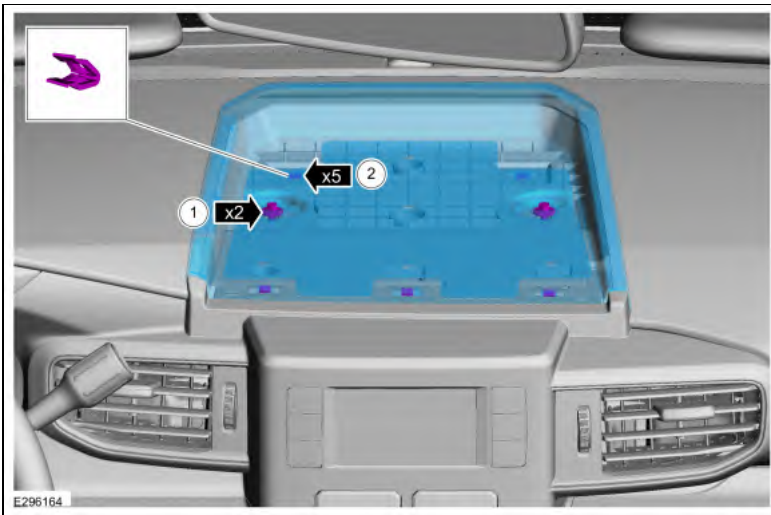

6. Release the clips and position the FCDIM and center instrument panel vents forward as an assembly.

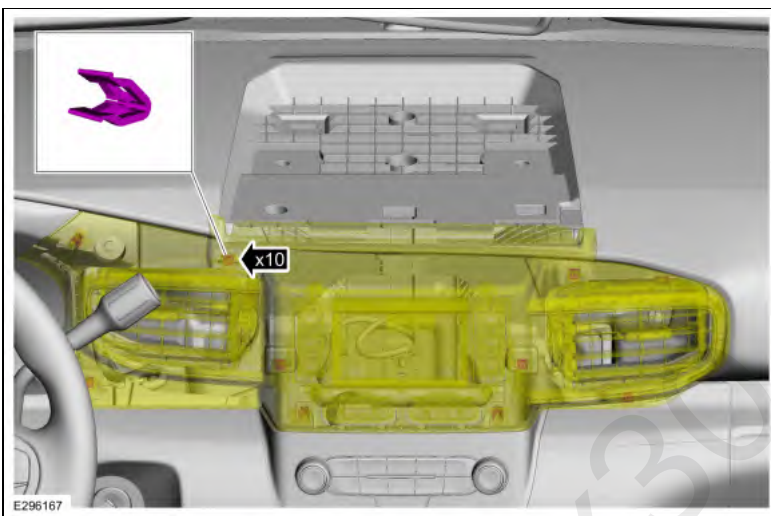


7. Disconnect the electrical connectors and remove the FCDIM and center instrument panel vents as an assembly.

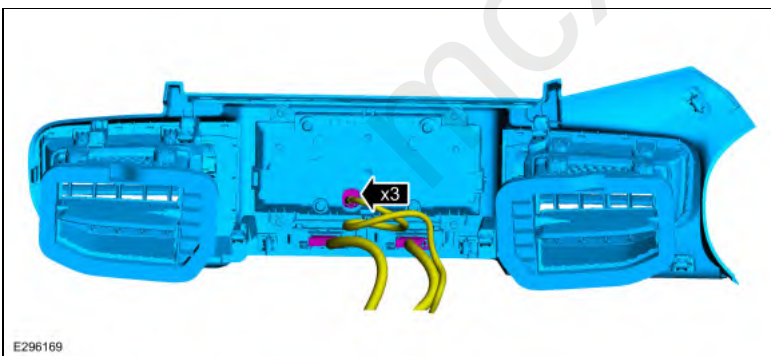


All vehicles


8. Position the steering wheel to the full downward and outward position.

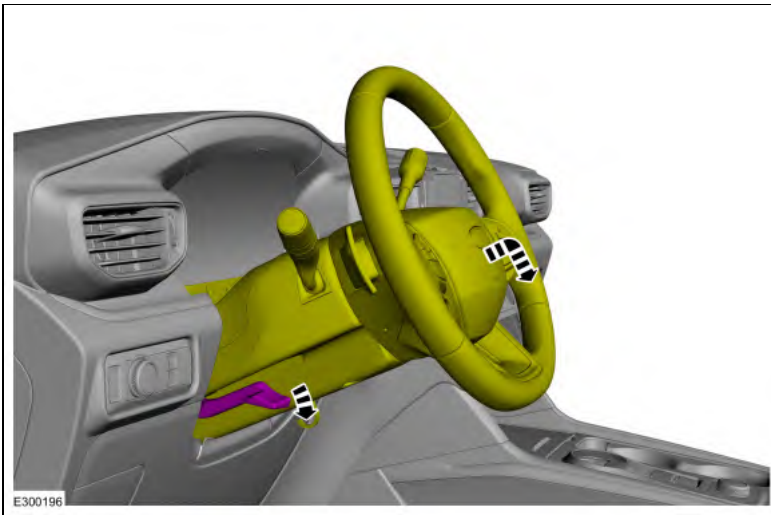

9. Remove the bolt, release the clips and remove the IPC bezel and upper steering column trim panel.
Use the General Equipment: Interior Trim Remover

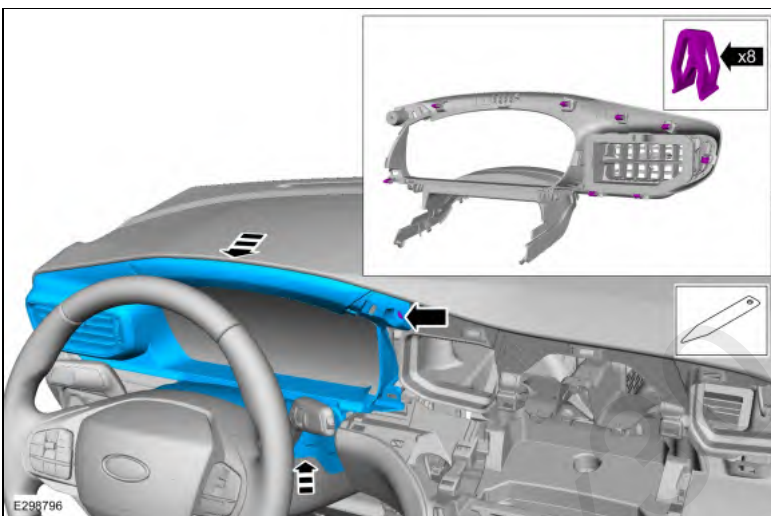

10. Remove the bolts and the IPC.
 - Disconnect the electrical connector.*Torque: 22 lb.in (2.5 Nm)*

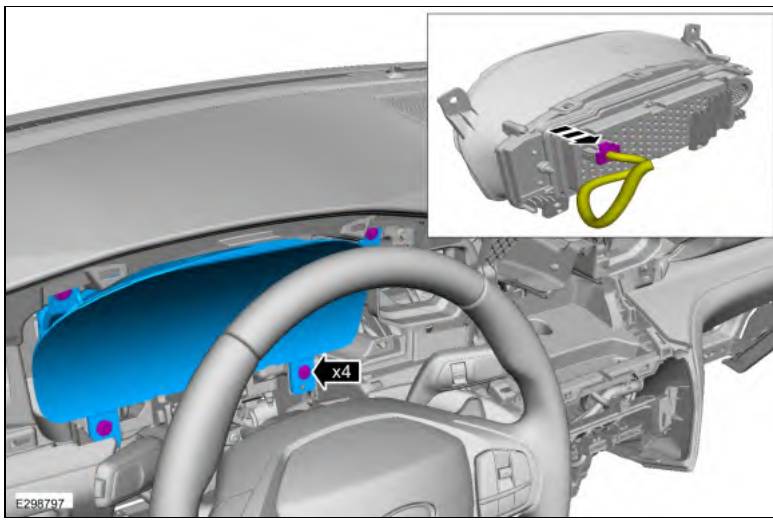

Installation

1. To install, reverse the removal procedure.
2. Using a diagnostic scan tool, complete the PMI process for the IPC following the on-screen instructions.

413-06 Horn

Description and Operation